




COSTWAY[®]

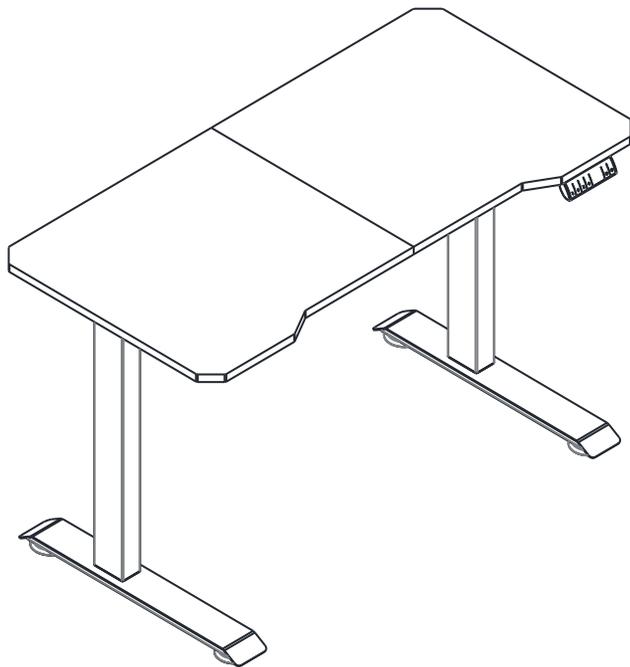

USER'S MANUAL

Lift Gaming Desk

HW67584

THIS INSTRUCTION BOOKLET CONTAINS **IMPORTANT** SAFETY INFORMATION. PLEASE READ AND KEEP FOR FUTURE REFERENCE.

Please give us a chance to make it right and do better!

Contact our friendly customer service department for help first.

Replacements for missing or damaged parts will be shipped ASAP!

Follow Costway

Visit us: www.costway.com



Contact Us!

Do NOT return this item.

Contact our friendly customer service department for help first.



Before You Start

- ⚠ Please read all instructions carefully.
- ⚠ Retain instructions for future reference.
- ⚠ Separate and count all parts and hardware.
- ⚠ Read through each step carefully and follow the proper order.
- ⚠ We recommend that, where possible, all items are assembled near to the area in which they will be placed in use, to avoid moving the product unnecessarily once assembled.
- ⚠ Always place the product on a flat, steady and stable surface.
- ⚠ Keep all small parts and packaging materials for this product away from babies and children as they potentially pose a serious choking hazard.

IMPORTANT SAFEGUARDS

Read these instructions carefully and retain them for future use.


When using the product, basic safety precautions should always be followed to reduce the risk of injury including the following:

- Unpack all hardware bags and components to ensure you have all the parts.
- Use the tools included to assemble the desk, don't use the incorrect tools to assemble.
- Do not climb, stand or sit on the desk.
- Do not place objects on the desk when moving.
- Check to ensure all bolts, screws and brackets are tightened on a regular basis.
- Do not place the table in a humid environment.
- Do not place heavy objects on the table when storing.


There is potential risk of personal injury not to follow the instructions when in use.

Parts List


(A) Lift column*1

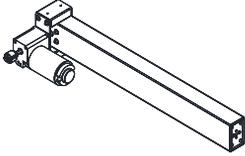


(B) Lift column*1

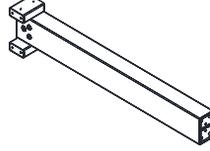


(C) Base*2

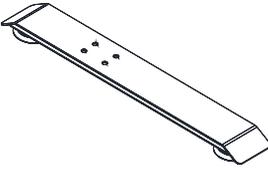


(D) Frame*2

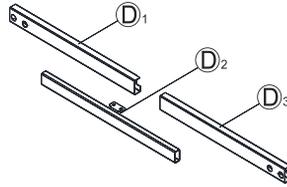


(E) Side bracket*2

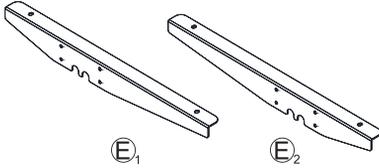


(F) Motor Rod*1

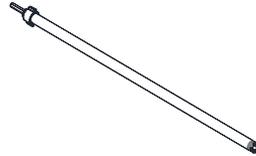


(G) Desk top*2 + Wooden pin*4

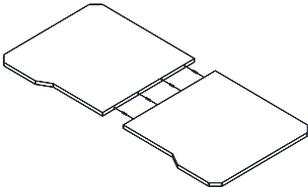

(H) Desktop connection block*2

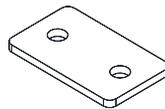

(I) Handset + Power supply
Power cord

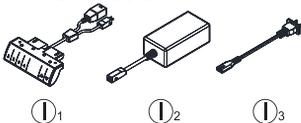

(J) M6 screws*18



(K) M4 screws*1



(L) Tapping screws*4



(M) M10 screws*8




(N) 5# wrench*1
6# wrench*1
cross screwdriver*1



Assembly steps

Step 1:

- 1.1 Connect the ① board and the ② board with wooden pins.
- 1.2 Fasten connecting blocks with ③M6 screws as shown in the figure. M6 screws use the supplied spanner ④.
- 1.3 The hand controller is fastened to the table with ⑤self-tapping screws. Self-tapping screws use the supplied screwdriver ⑥.

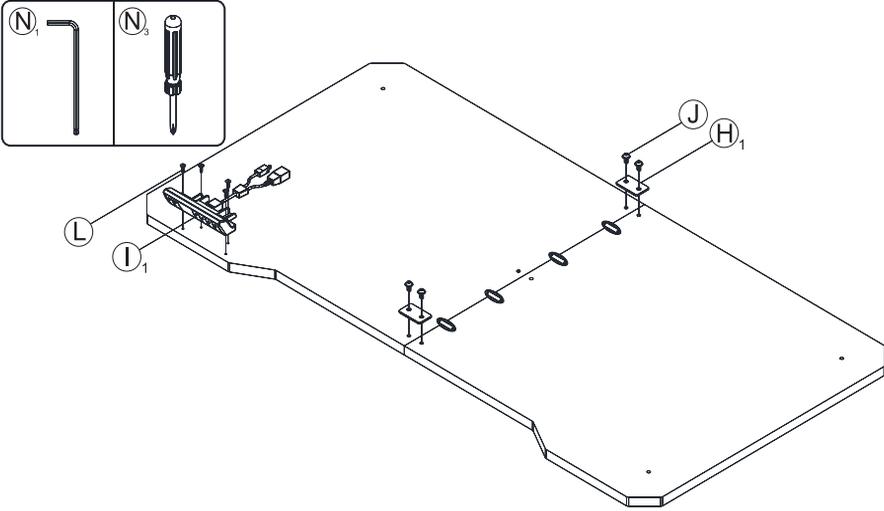


Step 2:

Assembles the 2 sets of beam components as shown in the figure before use;



Note: 1. Pay attention to the card slot direction.

2. The Jimmy screws at the bottom of D1 and D3 cannot be tightened.

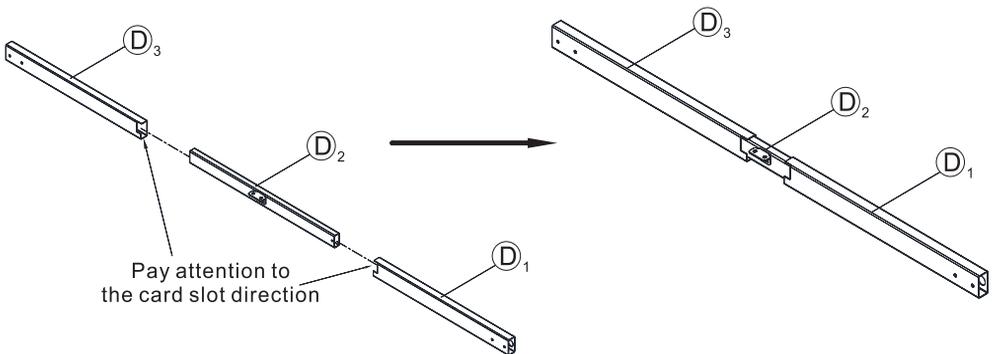

Step 3:


Fixing **A** lift column and **B** lift column to the table leg with **M**M10 screws. M10 screws use the supplied spanner[®].

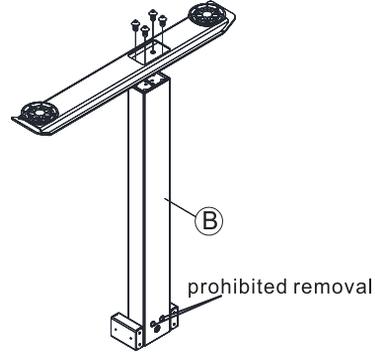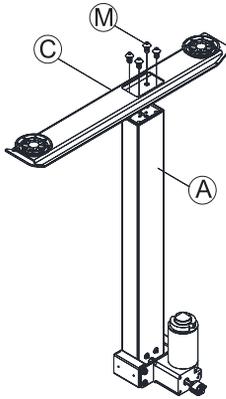

Step 4:

4.1 Assembling frame tightened with **Q**M6 screws. M6 screws use the supplied spanner[®].

4.2 Then install the two side bracket with **Q**M6 screws. M6 screws use the supplied spanner[®].

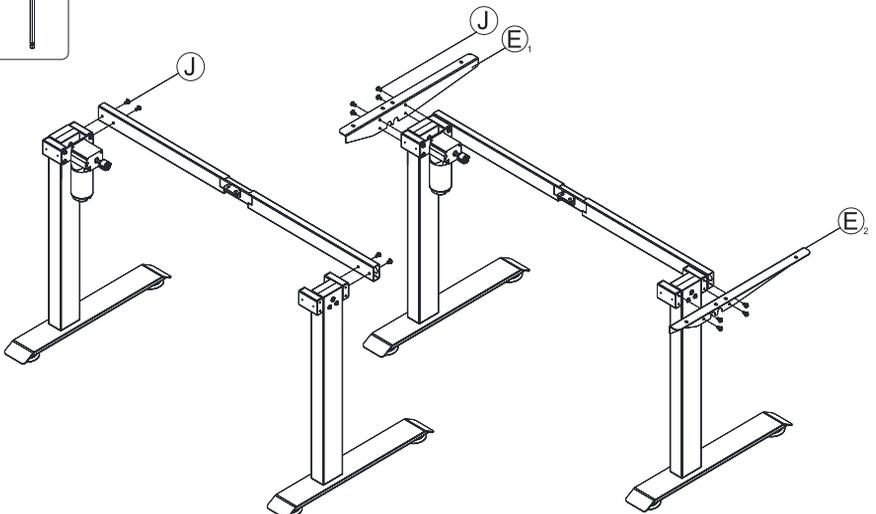


Step 5:

5.1 Lay the table board flat and put the table shelf on it.

5.2 Stretch the table frame to both sides. Align the screw holes and lock them with \varnothing M6 screws.

5.3 Fasten the socket set screws on the middle beam.

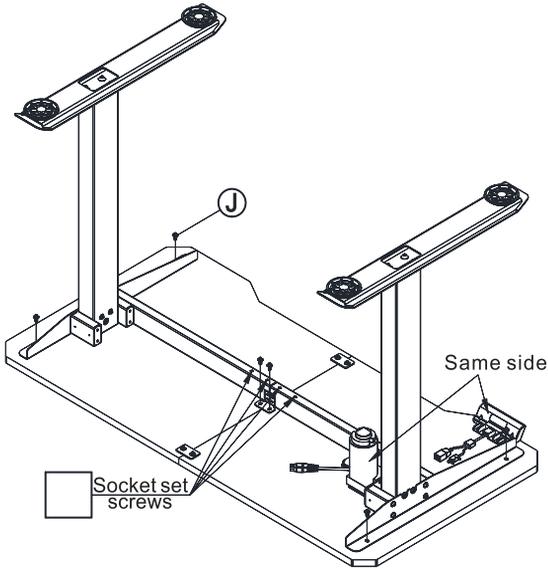

Step 6:

6.1 As shown in Figure 1, insert the hexagonal bar into the table leg B until the buckle is not visible.


6.2 Assemble the other end of the connecting rod to the table leg A and screw on the handle. The handle does not need to be tightened.

Note: As shown in Figure 2 below, it needs to be aligned with the card slot.


6.3 Pull the connecting rod with the handle to the bottom end of the table leg A in the direction of the arrow as follows.

6.4 Tighten the handle and install the \varnothing M4 screws. M4 screws use the supplied screwdriver.

6.5 Connect the power cord and motor of the power supply handset as shown in the figure.

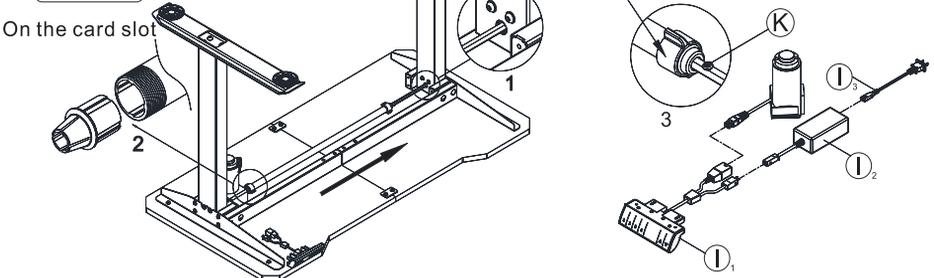

Operational instructions

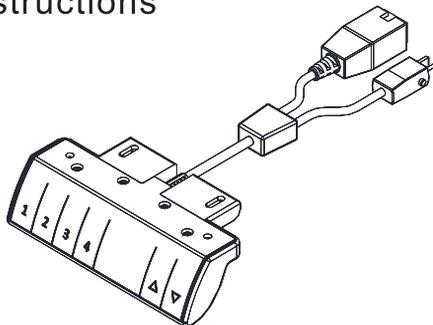

1. Lift Column

Press the  button or  button to control the lift column up or down. Press the button to control the lifting column to rise, you can see the height (displayed number) on the screen; press the button to control the descending of the lifting column, you can see the height (displayed number) on the screen. .

2. Set memory height

Press  button for 2 seconds, set the current height to the memory height, When flashing display "H1~H4" for 2 seconds, and then display the real-time height after 2 seconds.

3. recall memory height

Press the number button  can recall its corresponding height, lift column will automatically run to the right position.

4. stroke reset

"E10、E20" alarm state or running to the lowest height position, press the button  3 seconds, after the display (E Reset) is released, the lifting column starts to run down to the bottom of the frame and rebound to a certain height, the reset is completed to display the lowest height.

5. protection and alarm

①Block Protection: Display "E02." During the movement of the desktop, a vibrating, colliding or tilting desktop will sound an alarm and stop the movement immediately. After the automatic release, it will move in the reverse direction to set the distance, you can press any key to stop and release during the reverse operation. Check and make sure that the desktop will not vibrate significantly, hit obstacles or re-tilt during operation.

②Overheating protection: Display "Hot ." Continuous operating may initiate this protection and should be recharged or waited for at least 18 minutes before use.

③Motor abnormal protection: Display "E10." Should be powered off, re-check and ensure that the connection of the motor to the controller is reliable and then reconnect. ,

④Overload protection: Display "E20." This alarm should be removed from the desk top when it's operating up; if this alarm occurs when it's operating down, cut off the power and the heavy objects should be removed, and the power should be re-charged.

⑤Under-voltage protection: Display "E31." Should be powered off, recheck and make sure the connection between the power supply and the handset is reliable, then connect the power.

⑥Over-voltage protection: Display "E32." Should be powered off, recheck and make sure the connection between the power supply and the handset is reliable, then connect the power.

Welcome to visit our website and purchase our quality products!

With your inspiring rating, COSTWAY will be more consistent to offer you
EASY SHOPPING EXPERIENCE, GOOD PRODUCTS and EFFICIENT SERVICE!

US office: Fontana, California

UK office: Ipswich



- * Reward Points
- * Exclusive Customer Service
- * Personalized Recommendations
- * Permanent Shopping Cart
- * Order History

5 Star Rating



We would like to extend our heartfelt thanks to
all of our customers for taking time to assemble
this product and giving us valuable feedbacks.

*THANK
you*
☺