



INSIGNIA

QUICK SETUP GUIDE

350 Lumen
LED Flashlight


NS-CFL100A

PACKAGE CONTENTS

- LED Flashlight
- Carrying case
- Carrying strap
- Insignia AAA batteries (3)
- Quick Setup Guide

FEATURES

- 350 lumen output makes your flashlight ideal for general indoor and outdoor use.
- Premium metal construction provides durability and dependability.
- IPX4 rating provides protection in dusty and damp environments (not waterproof).
- Three brightness levels plus a strobe (flashing) mode provide a wide range of lighting options.
- Carrying case and strap makes it easy to carry and keep track of your flashlight.

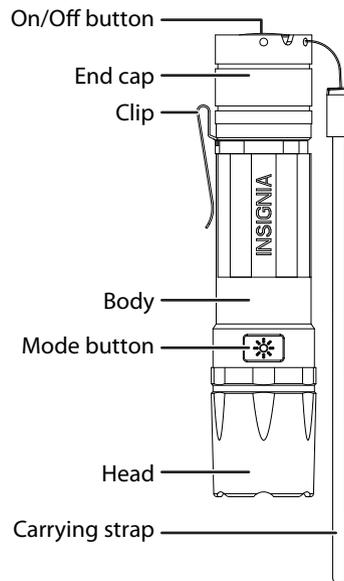

Flat size (W×H): 12 × 6 (304.8 × 152.4 mm)
Final folded size: 3 × 6 (76.2 × 152.4 mm)

INSTALLING THE BATTERIES

- 1 Turn the end cap on the bottom of your flashlight counterclockwise to open the battery compartment, then remove the battery holder.
- 2 Insert three AAA batteries (included) into the battery holder. Make sure that you insert the batteries so that the + and – match the graphic to the right.
- 3 Insert the battery holder into the flashlight body with the spring-loaded point facing the front of the flashlight. Replace the end cap, then turn the cap clockwise to tighten.

Notes:


- Do not mix batteries of different types because the batteries might leak.
- Do not mix old and new batteries.
- Remove batteries when the charge is depleted.
- If your flashlight is not going to be used for an extended period of time, remove the batteries.

Tip: Using non-rechargeable lithium or premium rechargeable batteries extend the run time of your flashlight.

USING YOUR FLASHLIGHT

- 1 Press the On/Off button.
- 2 Quickly press and release the Mode (*) button one or more times to select a brightness level (high, medium, or low), or press and hold the button for about 1.5 seconds to select strobe mode.

Note: To exit strobe mode, press and hold the Mode (*) button again. Your flashlight returns to the last brightness level you selected.
- 3 To turn off your flashlight, press the On/Off button.

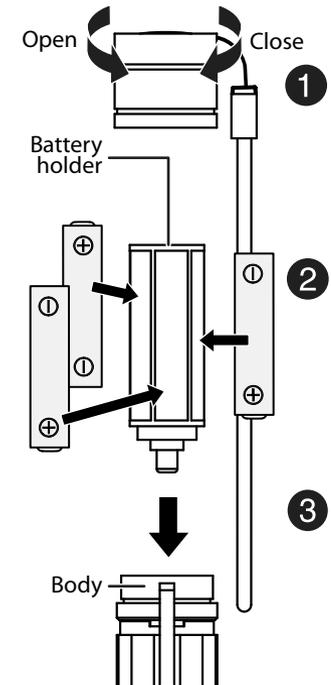



TROUBLESHOOTING

My flashlight does not turn on or I cannot select a brightness level.

- Make sure that you installed the batteries correctly.
- Make sure that your flashlight is turned on.
- Replace the batteries.

The flashlight body is overheating.

If you set the brightness level to high, the LED generates a moderate amount of heat. This is normal. If your flashlight is too hot to hold, turn it off and wait 10 minutes for it to cool.

SPECIFICATIONS

Dimensions (H x W): 5.5 x 1.3 in. (13.8 x 3.2 cm)

Weight (with batteries): 5.2 oz.

Battery: AAA size (3)

IP rating: IPX4 (rain and splash resistant)

Impact resistance: 3 ft. (1 m)

Beam selection modes	Output	Max. beam distance	Runtime (on fresh batteries)
Low	35LM	170 ft. (52 m)	25 hrs.
Medium	120LM	328 ft. (100 m)	8 hrs.
High	350LM	541 ft. (165 m)	4 hrs.

SAFETY INFORMATION

Battery cautions:

- Do not mix batteries of different types or mix old and new batteries because the batteries might leak.
- Remove batteries when the charge is depleted.
- If your flashlight is not going to be used for an extended period of time, remove the batteries.
- Battery chemicals can cause a rash. If the batteries leak, clean the battery compartment with a cloth. If chemicals touch your skin, wash immediately.
- Make sure that batteries are disposed of correctly. Do not burn or incinerate.

Flashlight cautions:

- Do not shine the flashlight into a person's eyes. This might damage the person's eyesight.
- When your flashlight is on, do not touch the flashlight head. The head may be hot enough to burn your skin.
- Keep your flashlight away from children under 18 years of age.



ONE-YEAR LIMITED WARRANTY

Visit www.insigniaproducts.com for details.

CONTACT INSIGNIA:

For customer service, call 1-877-467-4289 (U.S. and Canada) or 01-800-926-3000 (Mexico) www.insigniaproducts.com

