

# Linxura Bluetooth Low Energy Mode Guides

## Guide Navigation

1. Introduction to Linxura BLE controller mode.
2. How does Linxura BLE controller Mode work?
3. How to exit Linxura BLE controller Mode?

## 1. Introduction to Linxura Bluetooth Low Energy (BLE) controller mode.

The Linxura Bluetooth Low Energy (BLE) Controller Mode enables the Linxura device to connect to Bluetooth host devices, including Windows, macOS, iOS, and Android devices. Once connected, Linxura can control multiple applications on the host device. Please note, you don't need to add Linxura to the Linxura app to use this mode.

## Supported BLE controller modes:



**PRES:** Presentation mode. Allows control of presentation apps on Windows, macOS, iOS, and Android devices.

**MEDIA:** Media player mode. Allows control of media player apps on Windows, macOS, iOS, and Android devices.

**CAM:** Allows control of camera apps on iOS and Android devices.

## Supported Features in Linxura BLE Controller Mode

Supported System	Supported Mode		
	Presentation Mode	Media Player Mode	Camera Shutter Mode
Windows	Yes	Yes	No

Mac OS	Yes	Yes	No
iOS Device	Yes	Yes	Yes
Android Device	Yes	Yes	Yes

2. How does Linxura BLE Controller Mode work?

Step 1:

Press the left and right buttons simultaneously and hold for 3 seconds to enter Bluetooth pairing mode.



Step 2:

The Linxura device displays the Bluetooth name on the screen.



### Step 3:

Pair Linxura with your phone or computer.

#### Pairing Linxura with Windows PC

1. Ensure your Linxura is in Bluetooth pairing mode as described in Step 1
2. On your PC, go to Settings > Devices > Bluetooth & other devices.
3. Ensure Bluetooth is turned on.
4. Click on Add Bluetooth or other devices.
5. Select **Bluetooth** from the list.
6. Find and select your Linxura device from the list of available devices.
7. Follow any additional on-screen instructions to complete the pairing process.

#### Pairing Linxura with Mac

1. Ensure your Linxura is in Bluetooth pairing mode as described in Step 1
2. On your Mac, click on the **Apple menu** and select **System Preferences**.
3. Click on **Bluetooth**.
4. Ensure Bluetooth is turned on.
5. Find and select your Linxura device from the list of available devices.
6. Click **Connect**.
7. Follow any additional on-screen instructions to complete the pairing process.

#### Pairing Linxura with iOS (iPhone/iPad)

1. Ensure your Linxura is in Bluetooth pairing mode as described in Step 1
2. On your iOS device, go to **Settings > Bluetooth**.
3. Ensure Bluetooth is turned on.

4. Find and select your Linxura device from the list of available devices.
5. Follow any additional on-screen instructions to complete the pairing process.

#### Pairing Linxura with Android

1. Ensure your Linxura is in Bluetooth pairing mode as described in Step 1
2. On your Android device, go to **Settings > Connected devices > Bluetooth**.
3. Ensure Bluetooth is turned on.
4. Tap on Pair new device.
5. Find and select your Linxura device from the list of available devices.
6. Follow any additional on-screen instructions to complete the pairing process.

#### Step 4:

After pairing, Linxura will display the options below. Choose a mode to start controlling.




**Presentation mode button definition:**



**Media player mode button definition:**



### Camera mode button definition:

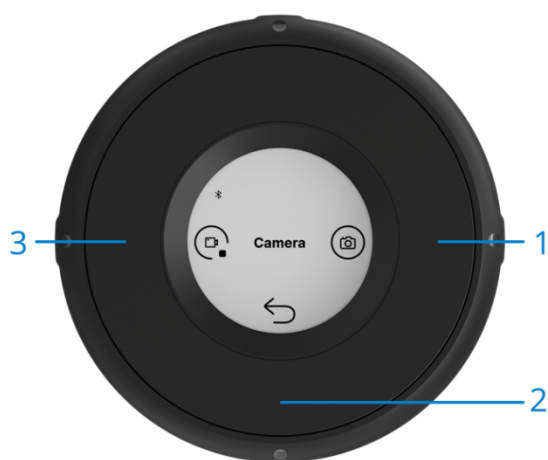

- 1 - Click: Take photo
- 2 - Click: Return to mode selection page
- 3 - Click: Record start/stop

### Supported App and Features in Presentation Mode (Windows)

Buttons	PowerPoint	Google Slides	Keynote	Prezi
Top button Click	Slideshow	N/A	N/A	Slideshow
Top button Double Click	Black screen	Black screen	N/A	N/A
Left button	Previous page	Previous page	N/A	Previous page
Right button	Next page	Next page	N/A	Next page
Bottom button	Return to the mode selection page	Return to the mode selection page	N/A	Return to the mode selection page
Rotate CW*	Volume up	Volume up	N/A	Volume up
Rotate CCW*	Volume down	Volume down	N/A	Volume down

CW means Clockwise. CCW means Counterclockwise.

### Supported App and Features in Presentation Mode (MacOS)

Buttons	PowerPoint	Google Slides	Keynote	Prezi
Top button Click	Slideshow	N/A	Slideshow	N/A
Top button Double Click	Black screen	Black screen	Black screen	N/A
Left button	Previous page	Previous page	Previous page	Previous page
Right button	Next page	Next page	Next page	Next page
Bottom button	Return to the mode	Return to the mode	Return to the mode	Return to the mode

	selection page	selection page	selection page	selection page
Rotate CW	Volume up	Volume up	Volume up	Volume up
Rotate CCW	Volume down	Volume down	Volume down	Volume down

#### Supported App and Features in Presentation Mode (iOS Device)

Buttons	PowerPoint	Google Slides	Keynote	Prezi
Top button Click	Slideshow	N/A	Slideshow	N/A
Top button Double Click	N/A	Black screen	Black screen	N/A
Left button	Previous page	Previous page	Previous page	N/A
Right button	Next page	Next page	Next page	N/A
Bottom button	Return to the mode selection page	Return to the mode selection page	Return to the mode selection page	N/A
Rotate CW	Volume up	Volume up	Volume up	N/A
Rotate CCW	Volume down	Volume down	Volume down	N/A

#### Supported App and Features in Presentation Mode (Android Device)

Buttons	PowerPoint	Google Slides	Keynote	Prezi
Top button Click	Slideshow	N/A	N/A	N/A
Top button Double Click	Black screen	Black screen	N/A	N/A
Left button	Previous page	Previous page	N/A	N/A
Right button	Next page	Next page	N/A	N/A
Bottom button	Return to the mode selection page	Return to the mode selection page	N/A	N/A
Rotate CW	N/A	Volume up	N/A	N/A
Rotate CCW	N/A	Volume down	N/A	N/A

#### Button functions in Media player mode (Windows, Mac OS, iOS, Android)

Buttons	Media player mode*
Top button	Play/Pause
Left button	Previous
Right button	Next
Bottom button	Return to the mode selection page
Rotate CW	Volume up
Rotate CCW	Volume down

\*Media Player mode in Windows only supports selected music apps such as Media Player and Media Player Legacy.

**Button functions in Camera shutter mode (Windows, Mac OS, iOS, Android)**

Buttons	Camera shutter mode*
Top button	N/A
Left button	Record start/stop
Right button	Take photo
Bottom button	Return to the mode selection page
Rotate CW	Volume up
Rotate CCW	Volume down

\*If video recording doesn't work on a specific Android phone, you can manually switch the camera mode to video and then press the "take photo" button on Linxura to start recording.

**3. How to exit Linxura BLE Controller mode?**

Step 1:

Click the 'Return' Button.



Step 2:



Click the 'Yes' Button to exit BLE Controller Mode.

