

小本子形式    A5大小    双面黑色印刷





**USER'S MANUAL**  
Shoe&Boot Dryer  
Item no.EP24217

THIS INSTRUCTION BOOKLET CONTAINS IMPORTANT SAFETY INFORMATION. PLEASE READ AND KEEP FOR FUTURE REFERENCE.

**Please give us a chance to make it right and do better!**  
Contact our friendly customer service department for help first.  
Replacements for missing or damaged parts will be shipped ASAP!

**Follow Costway**  
Visit us: [www.costway.com](http://www.costway.com)  


**Costway**  
[www.costway.com](http://www.costway.com)

**Contact Us!**  
**Do NOT return this item.**  
Contact our friendly customer service department for help first.

**E-mail**  
[US\\_CS@costway.com](mailto:US_CS@costway.com)  
[UK\\_CS@costway.com](mailto:UK_CS@costway.com)

**Before You Start**

- Ⓢ Please read all instructions carefully.
- Ⓢ Retain instructions for future reference.
- Ⓢ Separate and count all parts and hardware.
- Ⓢ Read through each step carefully and follow the proper order.
- Ⓢ We recommend that, where possible, all items are assembled near to the area in which they will be placed in use, to avoid moving the product unnecessarily once assembled.
- Ⓢ Always place the product on a flat, steady and stable surface.
- Ⓢ Keep all small parts and packaging materials for this product away from babies and children as they potentially pose a serious choking hazard.

**ASSEMBLY:**  
1.Unfold front base from the rear base,uncoil the power cord inside the rear base,and expose your wanted length and keep remaining length coiled inside the rear base.  
2.Assemble the two brackets/shoe stretchers by pressing them into each upper air tubes' top until they are in its place stably and firmly.  
3.To stretch the upper air tubes for drying long boots by pulling them up till them stuck in its place by Shrink&release tubes buttons.  
4.To shrink the upper air tubes for easier storage by pressing two sides' buttons and pulling down tubes until reach the bottom.  
5.To release the upper air tubes by pressing two sides' buttons and pulling up tubes until fully being pulled out.  
6.To adjust the brackets' angles by pressing brackets' upper parts in up or down direction.higher drying efficiency by adjusting to upright position after putting shoe or boots into brackets to allow warm air easier and faster reach the toe parts of shoe and boots.

**MAIN PARTS**  
Adjustable brackets  
Brackets  
Upper air tube  
Shrink&Release tubes buttons  
Lower air tube  
Power indicator  
Timer switch  
Rear Base  
Front base  
Fold to storage front base into rear base


2

3

**Costway**  
[www.costway.com](http://www.costway.com)

**OPERATING INSTRUCTIONS:**  
1.Place dryer on solid, flat surface.  
2.Place footwear onto tubes,making certain there is a minimum of 6-8 inches from the top of the boot to the base of the appliance.  
3.Plug the power cord into a standard 120V household electrical outlet and turn ON the timer switch(max 3h) on the upper base to intended time,the power indicator lamp will be ON,then the unit will begin working.The unit operates silently and warm air will begin to circulate through the tubes in approximately 10 minutes,and will auto OFF after settled timer up.  
4.Monitor your footwear carefully and remove when dry in continual ON working mode,donot dry continual ON way over 10h each time to avoid overdry ,and turn OFF the timer switch.

**EXTRA FUNCTION:**  
1.Power cord can be coiled under the base and fixed the plug for easier storage and usefriendly,or you can expose any length of cord out of the base as per the distance between machine and power socket,and keep remaining length coiled under the base.

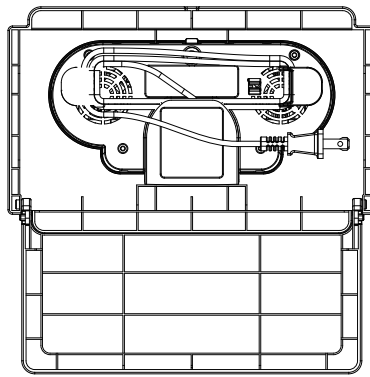

**Costway**  
[www.costway.com](http://www.costway.com)

**IMPORTANT INSTRUCTIONS:**

- When using this product or any electrical appliance,basic safety precautions should always be followed - especially when children are present.This product is not intend for use for children.
- Do not place "soaked"or "dripping wet" footwear or gloves on the dryer.
- Do not expose the dryer to rain ,spray,or liquids.Do not immerse in water.Do not use outdoors.
- Never drop or insert any object into any opening of this appliance.Keep air intake vents clear for proper circulation.
- Do not use near flammable substances.
- Keep dryer away from other heat sources.
- Do not leave dryer on unattended for long periods of time.
- Do not turn on unit or leave on without footwear in place.
- Do not disassemble unit or attempt to repair.Doing so may void your warranty and cause damage to the product or may cause personal injury.
- This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electrical shock,this plug is intended to fit in a polarized outlet only one way;if the plug does not fit fully in the outlet, reverse the plug.If it still does not fit,call a qualified electrician.Do not modify the plug in any way.
- A short power-supply cord is provided to reduce the risks resulting from becoming entangled in or tripping over a longer cord.
- Extension cords are available and may be used if care is exercised in their use.
- If an extension cord is used:  
1)The marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance.  
2)The longer cord should be arranged so that it will not drape over the countertop or tabletop where it can be tripped over,snagged,or pulled on unintentionally (especially by children).

4

5

**Costway**  
[www.costway.com](http://www.costway.com)

**SAVE THESE INSTRUCTIONS!**

**MAINTENANCE:**  
**WARNING:ALWAYS UNPLUG THE CORD BEFORE MOVING OR SERVICING.DO NOT IMMERSE HEATER IN WATER!**  
**CLEANING:IMPORTANT!DO NOT IMMERSE DRYER IN WATER!**  
Clean the dryer grills with the vacuum brush attachment on your vacuum cleaner.This will remove lint and dirt from the inside of the dryer.  
DO NOT ATTEMPT TO TAKE DRYER APART.  
Clean the body of the heater with soft cloth.  
**CAUTION:**Do not use gasoline,benzine,thinner,harsh cleaner,etc.as they will damage the dryer.  
**NEVER USE ALCOHOL OR SOLVENTS.**  
**STORAGE:**Store the dryer with these instructions in th original carton in a cool,dry place.

**SPECIFICATIONS:**  
120V AC,60Hz, 36W


**Costway**  
[www.costway.com](http://www.costway.com)

Welcome to visit our website and purchase our quality products!

Your suggestions and comments for COSTWAY are really important to us. We sincerely solicit you to go back to our shop and leave a good rating in just a simple click. It would be quite encouraging if you could kindly do so like below:

★★★★★ Our products are for February 24, 2019.  
Great products we for Fast delivery, easy setup, and working without any issues.

With your inspiring rating, COSTWAY will be more consistent to offer you **EASY SHOPPING EXPERIENCE, GOOD PRODUCTS and EFFICIENT SERVICE!**  
US office: Fontana, California  
UK office: Ipswich



- Reward Points
- Exclusive Customer Service
- Personalized Recommendations
- Permanent Shopping Cart
- Order History

**5 Star Rating**  
★★★★★

We would like to extend our heartfelt thanks to all of our customers for taking time to assemble this product and giving us valuable feedbacks.

**THANK YOU**

6

7