


INSIGNIA™

30" Square Fire Table - Black

NS-PFT30BK03

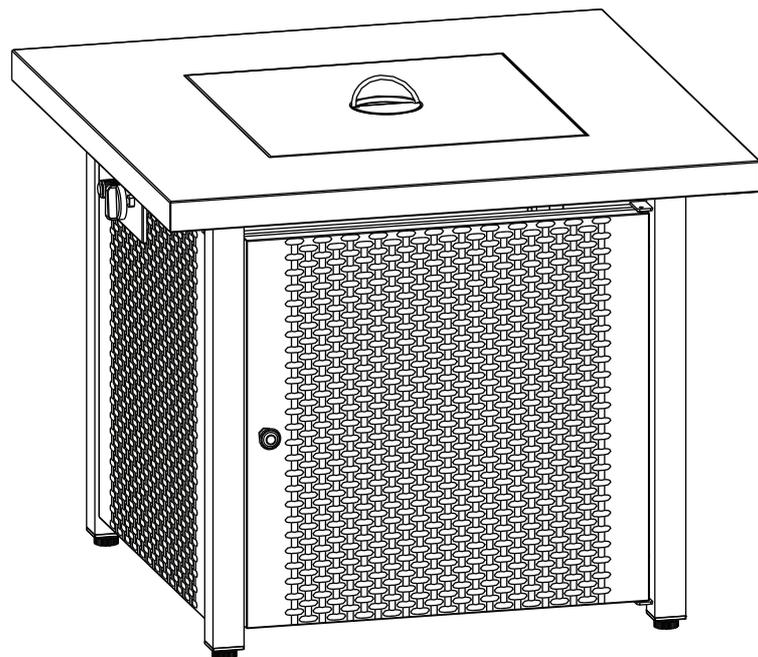

Before using your new product, please read these instructions to prevent any damage.

Contents

IMPORTANT SAFETY INSTRUCTIONS	3
Features	7
Dimensions.....	7
Package contents.....	7
Assembly.....	10
Assembling your fire table	11
STEP 1: Attaching the bracket posts to the table top	11
STEP 2: Installing the bottom plate	12
STEP 3: Installing the gas cylinder block.....	13
STEP 4: Installing the left side panel	14
STEP 5: Installing the door pane assembly	15
STEP 6: Installing the side panels	16
STEP 7: Preparing and installing the burner assembly	17
STEP 8: Adding the lava rocks and table lid (optional)	19
STEP 9: Installing the propane tank	20
STEP 10: Testing for gas leaks.....	22
Usage	23
Before you begin using your fire table.....	24
Operation checklist	24
Before turning on the gas	24
Before lighting your fire table	24
Using your fire table	25
Lighting your fire table.....	25
Adjusting the flame.....	26
Turning off your fire table.....	26
Maintenance	27
Maintaining your fire table.....	28
Cleaning your fire table	28
Inspecting your fire table.....	28
Storing your fire table.....	28
Transporting your fire table	28
Troubleshooting your fire table	29
Specifications	30
ONE-YEAR LIMITED WARRANTY	31

IMPORTANT SAFETY INSTRUCTIONS

DANGER

If you smell gas:

- 1 Shut off gas to the appliance.
- 2 Extinguish any open flame.
- 3 If odor continues, keep away from the appliance and immediately call your gas supplier or fire department.

WARNING

Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this, or any other appliance. An LP-tank not connected for use shall not be stored in the vicinity of this, or any other appliance.

WARNING: For Outdoor Use Only



CARBON MONOXIDE HAZARD

This appliance can produce carbon monoxide which has no odor. Using it in an enclosed space can kill you.

Never use this appliance in an enclosed space such as a camper, tent, car, or home.

WARNING

Improper installation, adjustment, alteration, service, or maintenance can cause property damage, injury, or death. Read the installation, operation, and maintenance instructions thoroughly before installing or servicing this equipment.



ANS Z21.97-2017 • CSA 2.41-2017 Outdoor Decorative Gas Appliances

SAFETY INFORMATION

Please read and understand this entire manual before attempting to assemble, operate, or install the product.

This manual contains important information about the assembly, operation, and maintenance of this fire table. General safety information is presented in these first few pages and is also located throughout the manual. Keep this manual for future reference and to educate new users of this product. This manual should be read in conjunction with the labeling on the product. Safety precautions are essential when any mechanical or propane fueled equipment is involved. These precautions are necessary when using, storing, and servicing. Using this equipment with the respect and caution demanded will reduce the possibilities of personal injury or property damage.

The following symbols shown below are used extensively throughout this manual. Always heed these precautions, as they are essential when using any mechanical or fueled equipment.

DANGER

DANGER indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.

DANGER

Failure to comply with the precautions and instructions provided with this fire table can result in death, serious bodily injury, and property loss or damage from hazards of fire, explosion, burn, asphyxiation, and/or carbon monoxide poisoning. Only persons who can understand and follow the instructions should use or service this fire table.

EXPLOSION - FIRE HAZARD

- Keep solid combustibles, such as building materials, paper, or cardboard, a safe distance away from the fire table as recommended by the instructions.
- Provide adequate clearances around air openings into the combustion chamber.
- Never use the fire table in spaces which do or may contain volatile or airborne combustibles, or products such as gasoline, solvents, paint thinner, dust particles, or unknown chemicals.
- During operation, this product can be a source of ignition. Keep fire table area clear and free from combustible materials, gasoline, paint thinner, cleaning solvents, and other flammable vapors and liquids. Do not use fire table in areas with high dust content.
Minimum fire table clearances from combustible materials: three (3) feet (one (1) meter) from the sides and three (3) feet (one (1) meter) from the top.
- Never store propane near high heat, open flames, direct sunlight, other ignition sources, or where temperatures exceed 120 degrees F (49° C).
- Propane vapors are heavier than air and can accumulate in low places. If you smell gas, leave the area immediately.
- Never install or remove propane tank while the fire table is lit, near flame, other ignition sources, or while the fire table is hot to touch.
- This fire table is red hot during use and can ignite flammables too close to the burner. Keep flammables at least three (3) feet (one (1) meter) from sides and three (3) feet (one (1) meter) from top. Keep gasoline and other flammable liquids and vapors well away from the fire table.
- Store the propane tank outdoors in a well ventilated space out of reach of children. Never store the propane tank in an enclosed area (house, garage, etc.). If the fire table is to be stored indoors, disconnect the propane tank for outdoor storage.

CARBON MONOXIDE HAZARD

- This fire table is a combustion appliance. All combustion appliances produce carbon monoxide (CO) during the combustion process. This product is designed to produce extremely minute, non-hazardous amounts of CO, if used and maintained in accordance with all warnings and instructions. Do not block air flow into or out of the fire table.
- Carbon Monoxide (CO) poisoning produces flu-like symptoms, watery eyes, headaches, dizziness, fatigue, and possibly death. You can't see it and you can't smell it. It's an invisible killer. If these symptoms are present during operation of this product get fresh air immediately!
- For outdoor use only.
- Never use inside house, or other unventilated or enclosed areas.
- This fire table consumes air (oxygen). Do not use in unventilated or enclosed areas to avoid endangering your life.

WARNING

WARNING indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.

WARNING

We cannot foresee every use which may be made of our fire tables.

Check with your local fire safety authority if you have questions about fire table use.

Other standards govern the use of fuel gases and heat producing products for specific uses. Your local authorities can advise you about these.

If no local codes exist, follow National Fuel Gas Code, ANS Z223.1. In Canada, installation must conform to local codes. If no local codes exist, follow the current National standards of CANADA CAN/CGA-B 149.2.

WARNING

Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance.
An LP-tank not connected for use shall not be stored in the vicinity of this or any other appliance.

 **WARNING: For Outdoor Use Only** **WARNING**

Improper installation, adjustment, alteration, service, or maintenance can cause property damage, injury, or death. Read the installation, operation, and maintenance instructions thoroughly before installing or servicing this equipment.

 **WARNING****California Proposition 65**

Combustion by-products produced when using this product contain chemicals known to the State of California to cause cancer, birth defects, and other reproductive harm.

 **WARNING****BURN HAZARD**

- Never leave the fire table unattended when hot or in use.
- Keep out of reach of children.

 **WARNING**

Certain materials or items, when stored under the fire table, will be subjected to radiant heat and could be seriously damaged.

 **CAUTION**

CAUTION indicates an imminently hazardous situation which, if not avoided, may result in minor or moderate personal injury, or property damage.

 **CAUTION****SERVICE SAFETY**

- Keep all connections and fittings clean. Make sure propane tank valve outlet is clean.
- During set up, check all connections and fittings for leaks using soapy water. Never use a flame.
- Use as a heating appliance only. Never alter in any way or use with any device.

 **WARNING**

- This product is fueled by propane gas. Propane gas is invisible, odorless, and flammable. An odorant is normally added to help detect leaks and can be described as a "rotten egg" smell. The odorant can fade over time so leaking gas is not always detectable by smell alone.
- Propane gas is heavier than air and leaking propane will sink to the lowest level possible. It can ignite by ignition sources including matches, lighters, sparks, or open flames of any kind many feet away from the original leak. Use only propane gas set up for vapor withdrawal.
- Store or use propane gas in compliance with local ordinances and codes or with ANS/NFPA 58. Turn off propane when not in use.

 **WARNING**

- Alert children and adults to the hazards of high surface temperatures. Stay away from these surfaces to avoid burning skin or igniting clothing.
- Carefully supervise young children when in the vicinity of the fire table.
- Do not hang clothing or any other flammable materials from the fire table, or place on or near the fire table.
- Replace any guard or protective device removed for servicing the appliance prior to placing back in service.
- Installation and repair should be done by a qualified service person. The fire table should be inspected before use and annually by a qualified service person. More frequent cleaning may be required as necessary. It is imperative that the control compartment, burners, and circulating air passageway of the appliance be kept clean.

IMPORTANT PROPANE TANK INFORMATION

The propane gas and tank are sold separately. The fire table should be securely assembled and shall be constructed to maintain a fixed relationship between essential parts under normal and reasonable conditions of handling and usage. Parts not permanently secured shall be designed so they cannot be incorrectly assembled and cannot be improperly located or misaligned in removing or replacing during cleaning or other servicing.

Use a standard 20 lb. (9 kg) propane tank only (approximately 12.2 in. (31cm) in diameter and 17.9 in. (45.5cm high)).

Use this fire table only with a propane vapor withdrawal supply system. See chapter 5 of the standard for storage and handling of liquefied petroleum gas, ANS/NFPA 58. Your local library or fire department should have this book.


Storage of an appliance indoors is permissible only if the tank is disconnected and removed from the appliance. A tank must be stored outdoors in a well-ventilated area out of the reach of children.

A disconnected tank must have dust caps tightly installed and must not be stored in a building, garage, or any other enclosed area. The maximum inlet gas supply pressure: 250 psi/1750 kPa. The minimum inlet gas supply pressure: 25 psi/172 kPa. Manifold pressure with regulator provided: 11 inch W.C/ 2.74 kPa. The minimum hourly of 19500 Btu / 5.71 kW is required input rating for an appliance for automatic operation at ratings less than full input rating. The pressure regulator and hose assembly supplied with the appliance must be used. The installation must conform with local codes, or in the absence of local codes, with national fuel gas code, ANS Z223.1/NFPA54, natural gas and propane Installation Code, CSA B149.1, or propane storage and handling code, B149.2.

The propane tank must be constructed and marked in accordance with the specifications for LP gas tanks of the U.S. Department of Transportation (DOT) or the standard for tanks, spheres, and tubes for transportation of dangerous goods and commission, CAN/CSA-B339.

- The tank must have a listed overfilling prevention device.
- The tank must have a connection device compatible with the connection for the appliance.
- The tank used must include a collar to protect the tank valve.
- Never connect an unregulated propane tank to the fire table.

Standard 20 lb. tank size

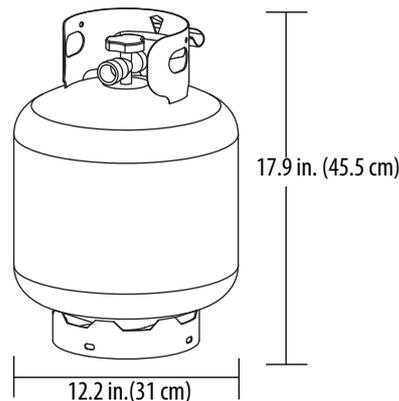

WARNING

A dented, rusted or damaged propane tank may be hazardous and should be checked by your local tank supplier. Never use a propane tank with a damaged valve connection.


Features

- 50,000 BTU creates a heat radius of 16.4 ft. (5 m) to keep everyone warm
- Propane fuel source with 20 lb. (9 kg) capacity burns clean and avoids releasing harmful emissions
- Adjustable power control lets you choose a higher or lower level of heat
- Lava rocks efficiently trap heat while adding a decorative touch
- Fence-style steel tabletop with lid holds up to 441 lbs. (200 kg)
- Electric igniter turns your fire table on or off at the push of a button
- Auto-shutoff detects when there is no gas in the tank and turns your fire table off
- 13.7 in. (35 cm) hose gives you flexible placement options

Package contents


- Fire table
- Lava rocks
- *User Guide*

Dimensions

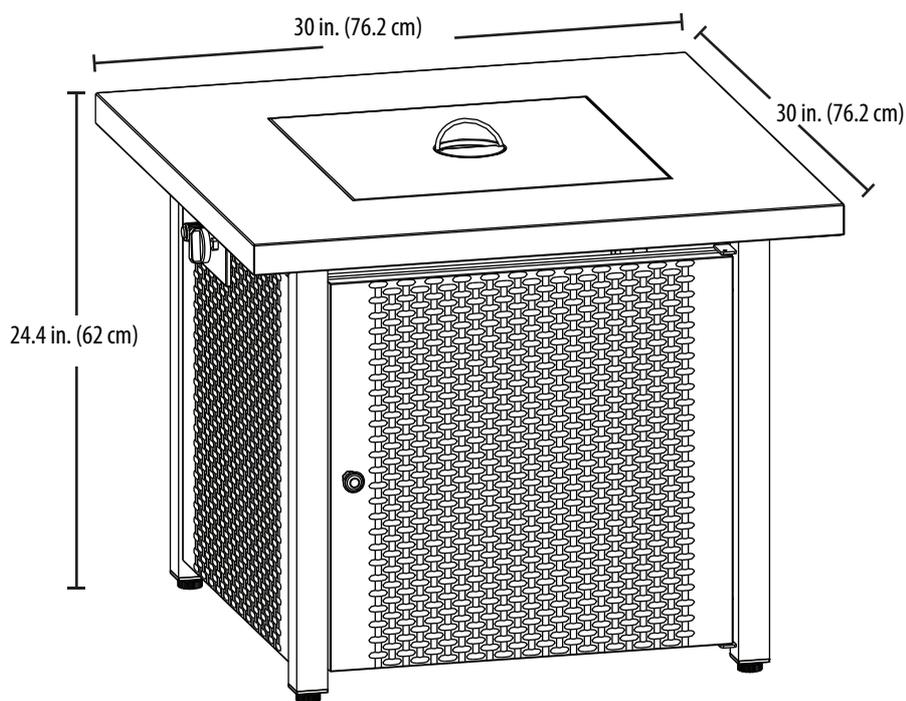

Parts


Make sure that you have all the hardware necessary to assemble your new fire table:


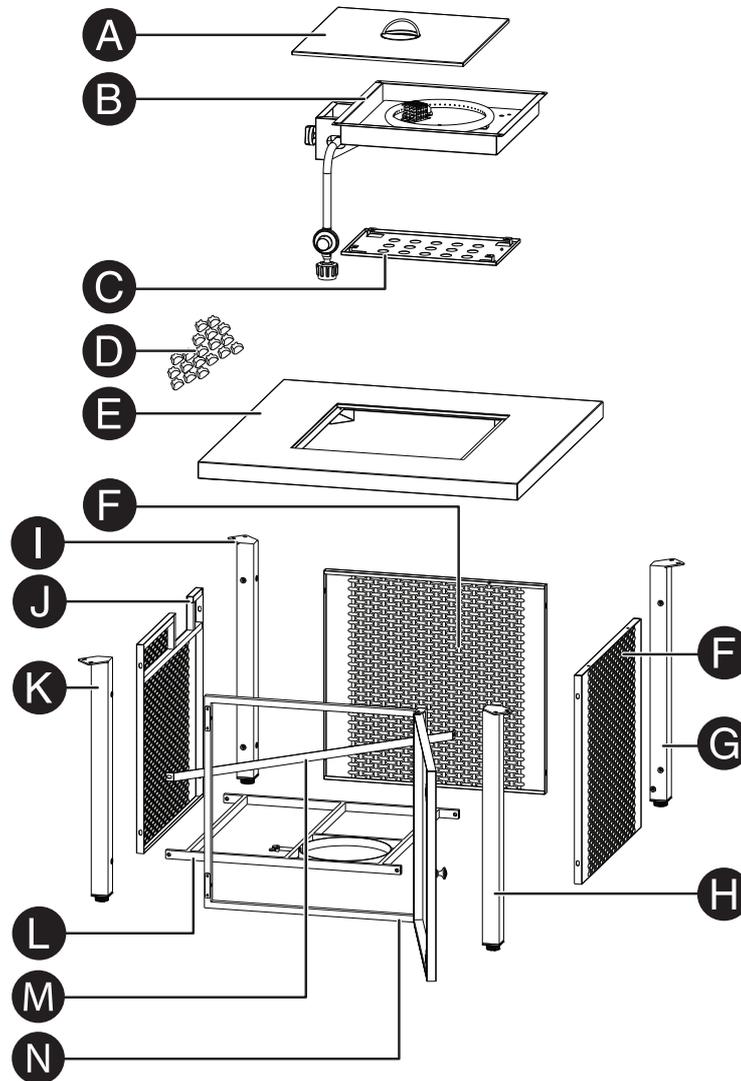


PART	DESCRIPTION	QUANTITY
A	Table Lid	1
B	Burner Assembly	1
C	Thermal Baffle	1
D	Lava Rocks	1 bag
E	Table Top	1
F	Back and Side Panels	2
G	Back Bracket Post (Right)	1
H	Front Bracket Post (Right)	1
I	Back Bracket Post (Left)	1
J	Side Panel (Left)	1
K	Front Bracket Post (Left)	1
L	Bottom Plate	1
M	Gas Cylinder Block	1
N	Front Door Assembly	1

Hardware

Note: You may not use all the included hardware.

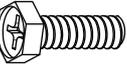LABEL	HARDWARE	QTY.
AA	 ST4.2 x 9.5 mm Screw	8
BB	 M6 x12 mm Bolt	22
CC	 M6 x 25 mm Bolt	8
DD	 M4 x 5 mm Screw	1

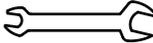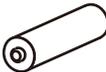LABEL	HARDWARE	QTY.
EE	 Knob	1
FF	 Phillips screwdriver	1
GG	 Wrench	1
HH	 AA Battery (1.5 V)	1

Assembly

Fire Table

Assembling your fire table.....	11
STEP 1: Attaching the bracket posts to the table top.....	11
STEP 2: Installing the bottom plate.....	12
STEP 3: Installing the gas cylinder block.....	13
STEP 4: Installing the left side panel.....	14
STEP 5: Installing the door pane assembly.....	15
STEP 6: Installing the side panels.....	16
STEP 7: Preparing and installing the burner assembly.....	17
STEP 8: Adding the lava rocks and table lid (optional).....	19
STEP 9: Installing the propane tank	20
STEP 10: Testing for gas leaks	22


Assembling your fire table

CAUTION: Assembling your fire table involves moving heavy and awkward parts and assemblies. We recommend that you get assistance during the assembly process to avoid strains or injury, or damage to the fire table parts.


Note: Before you begin to assemble your fire table, make sure that all parts are present. Compare the parts with the package contents list and hardware contents above. If any part is missing or damaged, do not attempt to assemble your fire table. Contact customer service for replacement parts.

STEP 1: Attaching the bracket posts to the table top

You need:

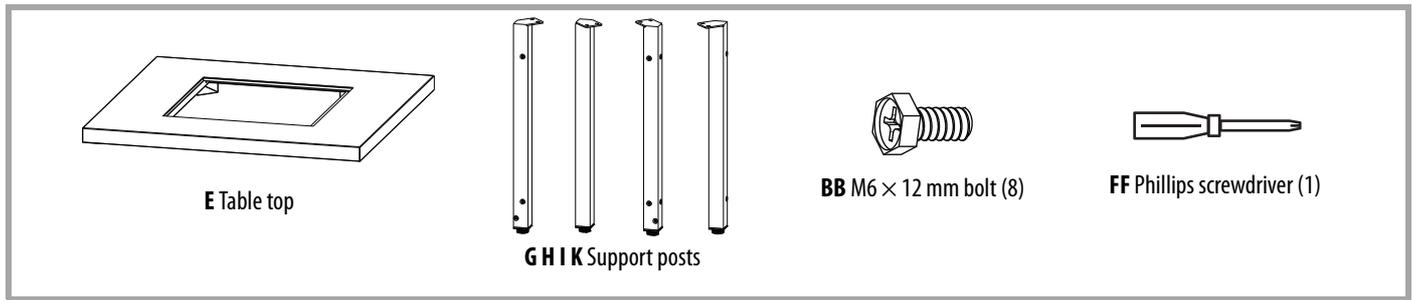


- 1 Lay the table top (**E**) on the floor, face down, on a soft cloth or piece of cardboard (to prevent scratches).
- 2 Secure the support posts (**G**, **H**, **I**, and **K**) to the table top with eight M6 x 12 mm bolts (**BB**) using the Phillips screwdriver (**FF**). Note the direction of the table top and position the support posts as indicated. Do not tighten the bolts yet.

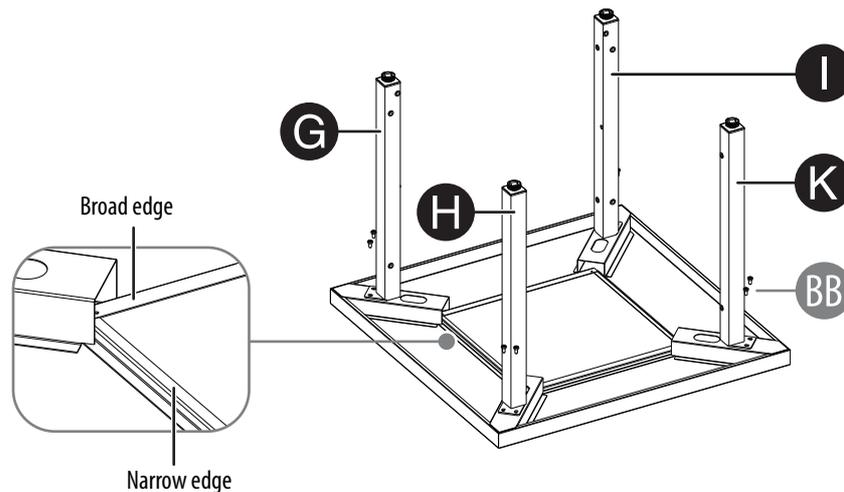


STEP 2: Installing the bottom plate

You need:

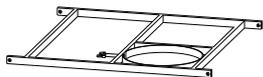

L Bottom plate

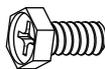


CC M6 x 25 mm bolt (4)




FF Phillips screwdriver (1)


- 1 Install the bottom plate (**L**) with four M6 x 25 mm bolts (**CC**) using the Phillips screwdriver (**FF**), then tighten the bolts.

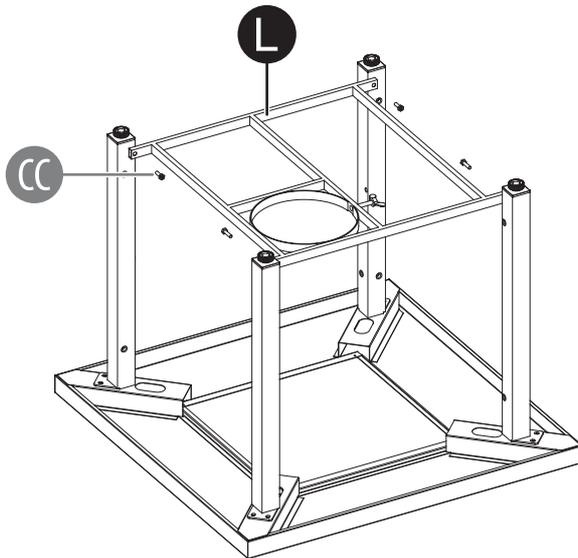

- 2 Tighten the bolts securing the support posts to the table top with the Phillips screwdriver (**FF**).

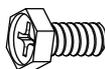
STEP 3: Installing the gas cylinder block**You need:****M** Gas cylinder block**BB** M6 × 12 mm bolt (2)**FF** Phillips screwdriver (1)

- Install the gas cylinder block (**M**) with two M6 x 12 mm bolts (**BB**) using the Phillips screwdriver (**FF**), then tighten the bolts.

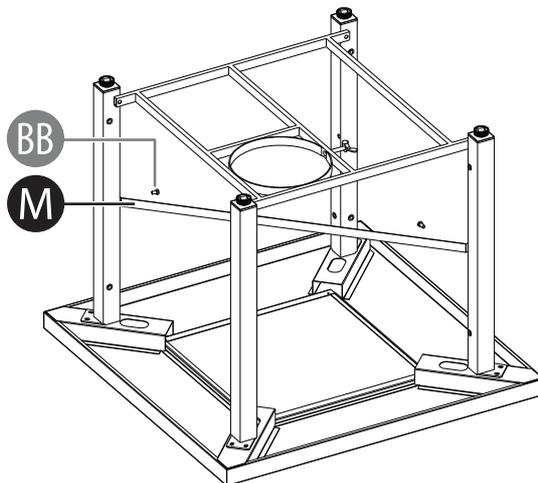


STEP 4: Installing the left side panel

You need:

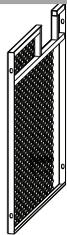

J Left side panel

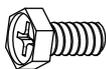



BB M6 × 12 mm bolt (4)




FF Phillips screwdriver (1)

- Install the left side panel (**J**) on the side support posts (**I** and **K**) with four M6 x 12 mm bolts (**BB**) using the Phillips screwdriver (**FF**), then tighten the bolts.

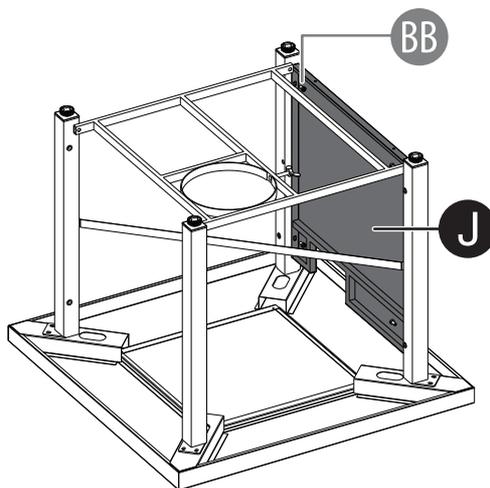


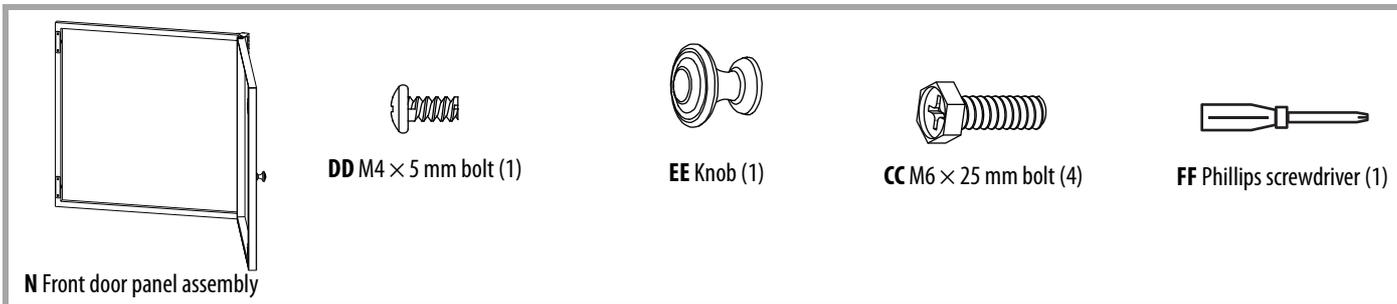STEP 5: Installing the door pane assembly**You need:**

- 1 Place the M4 x 5 mm screw (**DD**) through the hole in the right-center of the door, then screw the knob (**EE**) onto the screw until tight.

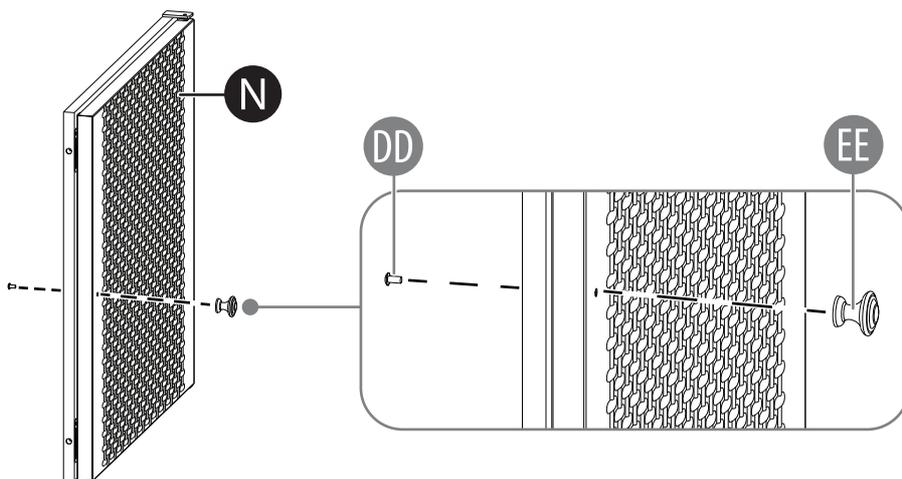


- 2 Using four M6 x 25 mm bolts (**CC**), install the front door panel assembly (**N**) to the support posts on the front of the table with the Phillips screwdriver (**FF**), then tighten the bolts.

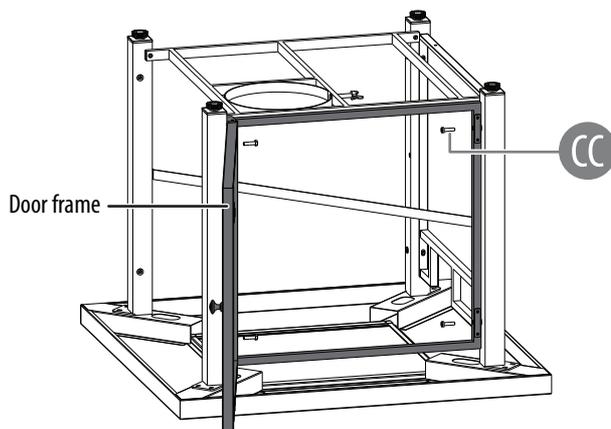



STEP 6: Installing the side panels

You need:

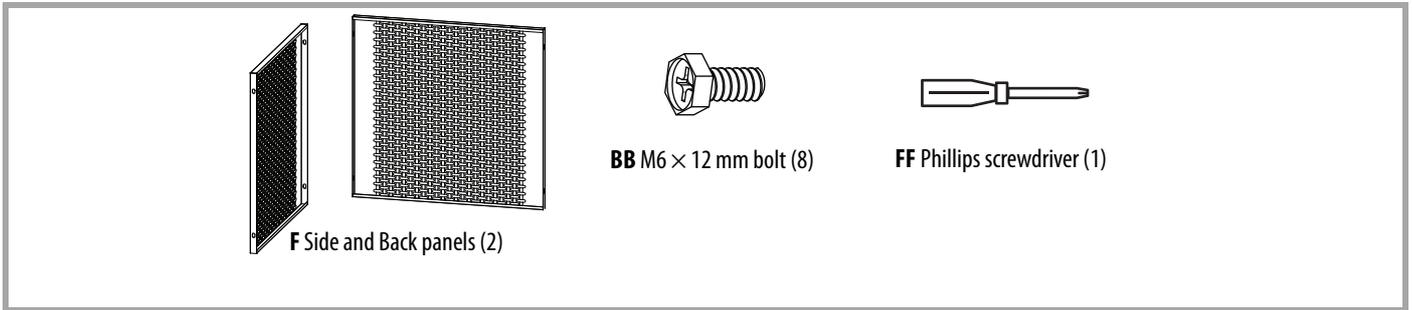


- Using eight M6 x 12 mm bolts (**BB**), install the side and back panels (**F**) to the support brackets on the right and back sides of the table with the Phillips screwdriver (**FF**), then tighten the bolts.

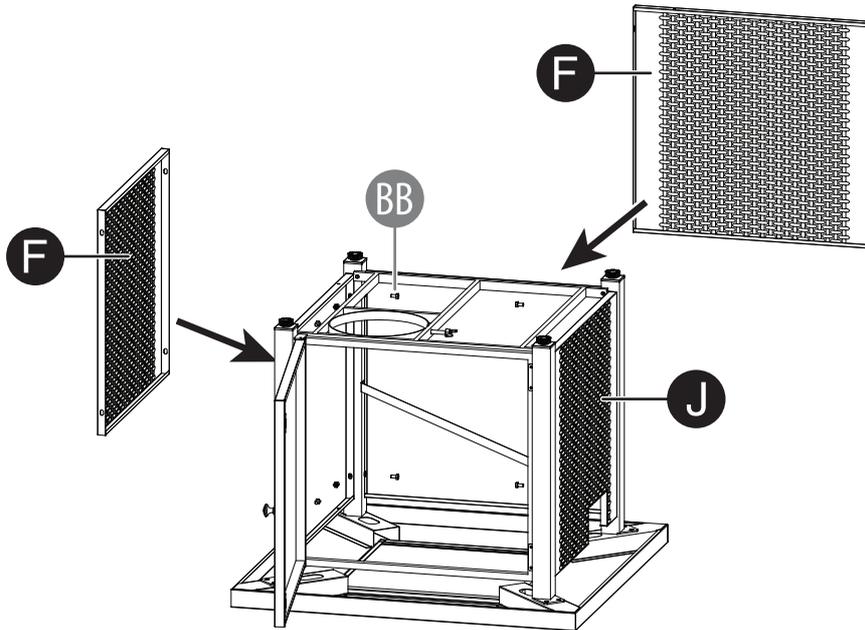


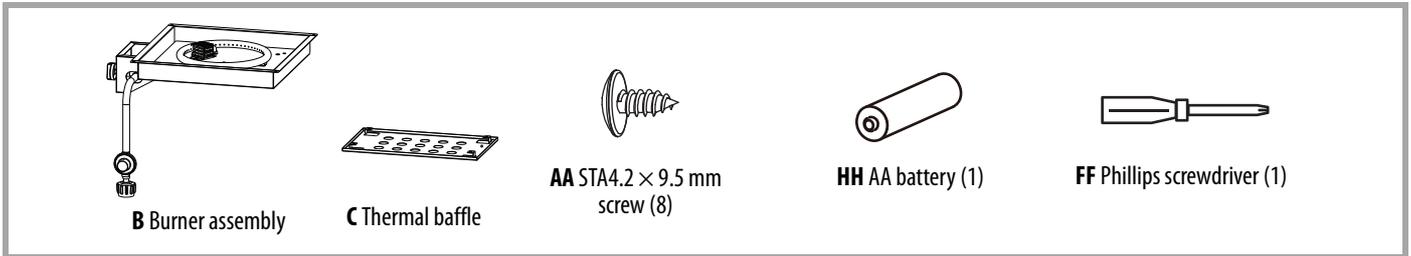STEP 7: Preparing and installing the burner assembly**You need:**


- 1 Turn the table assembly upright.
- 2 Using four STA4.2 x 9.5 mm screws (**AA**), attach the thermal baffle (**C**) to the bottom of the burner assembly (**B**) with the Phillips screwdriver (**FF**), then tighten the screws.

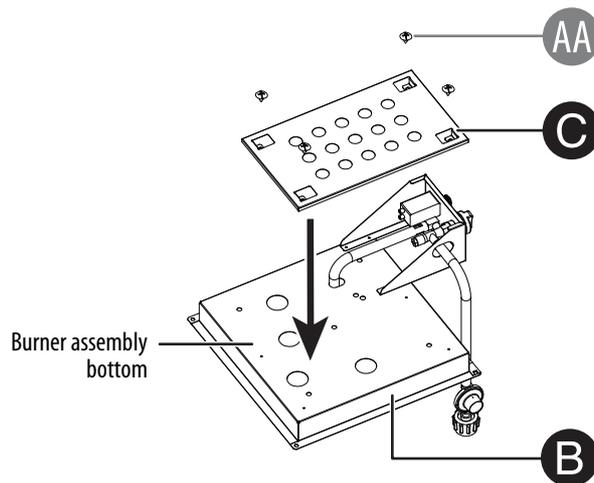


- 3 Unscrew the switch button on the control panel of the burner assembly, then insert the AA battery (**HH**) into the switch (- end first), then screw the switch button back into the control panel.

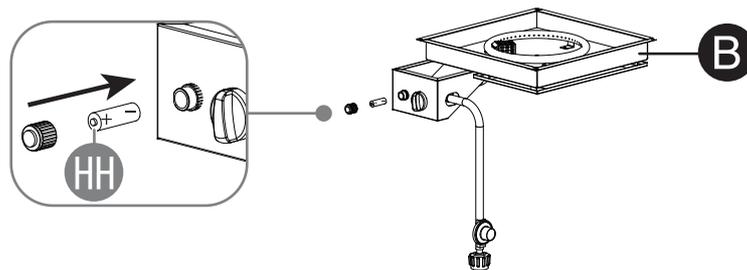


- 4 Place the burner assembly (**B**) into the square cutout in the table so that the four screw holes in the burner assembly align with the holes in the square cutout in the table and the control panel fits in the square opening in the side of the table.

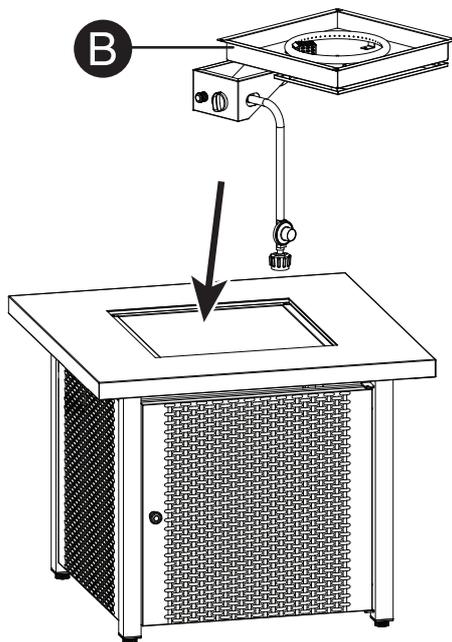


- 5 Secure the burner assembly (**B**) to the table with four STA4.2 x 9.5 mm screws (**AA**), then tighten the screws with the Phillips screwdriver (**FF**).

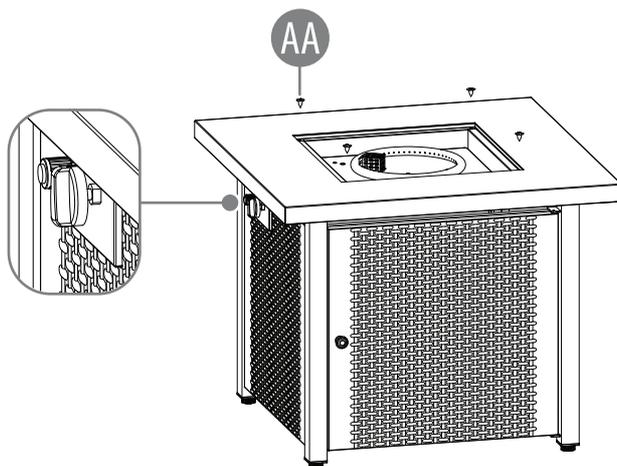


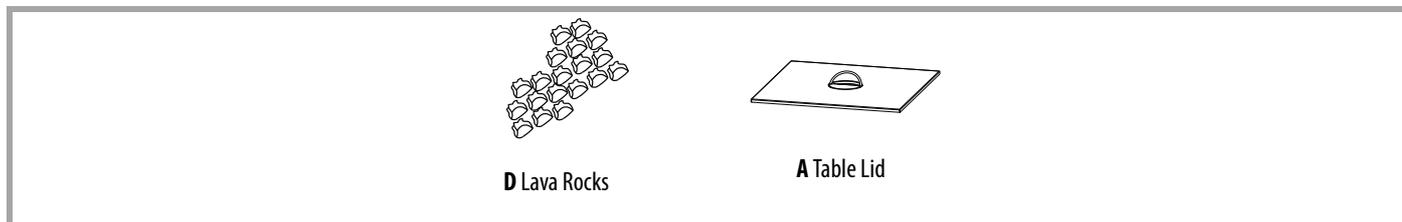STEP 8: Adding the lava rocks and table lid (optional)**You need:**

- 1 Add one bag of lava rocks (**D**) evenly to the burner tray. Do not cover the ignition parts.

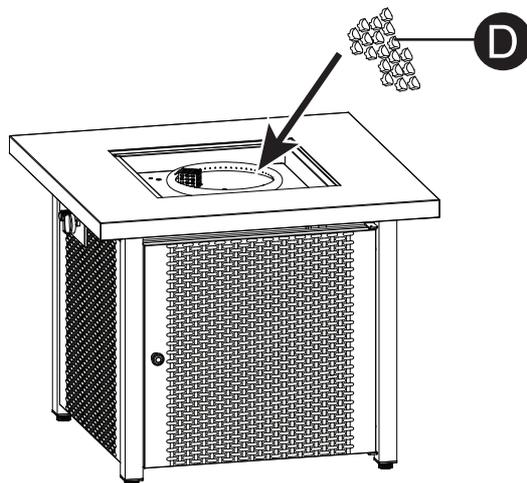

- 2 (Optional) put the table lid (**A**) on the burner assembly to keep the burner assembly clean.

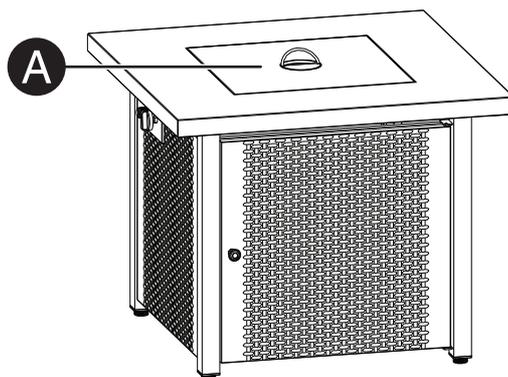


STEP 9: Installing the propane tank

To make sure that the propane tank is installed correctly, see [IMPORTANT PROPANE TANK INFORMATION](#) on page 6.


WARNING:

- Do not store a spare LP-gas tank under or near this appliance.
- Never fill the tank beyond 80 percent full.
- Place the dust cap on the tank valve outlet whenever the tank is not in use. Use the dust cap that is provided with the tank valve. Other types of caps or plugs may result in leakage of propane.
- Turn the cylinder valve OFF and replace the cylinder when the gas pressure is low.


- 1 Hold the regulator in one hand and insert the nipple into the valve outlet. Make sure that the nipple is centered in the valve outlet. The coupling nut connects to the large outside threads on the valve outlet.

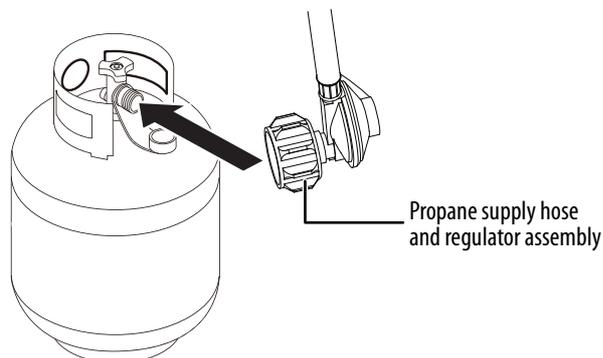

- 2 Hand-tighten the coupling nut clockwise until it comes to a full stop. Firmly tighten by hand only.

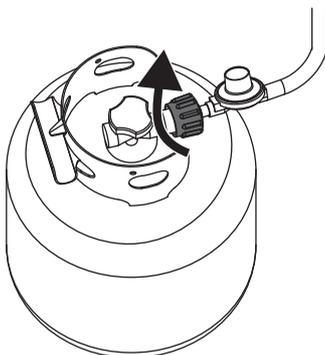


- 3 Slide the propane tank into your fire table and position it in the round tray in the base, then tighten the wing nut that secures the tank in the tray.

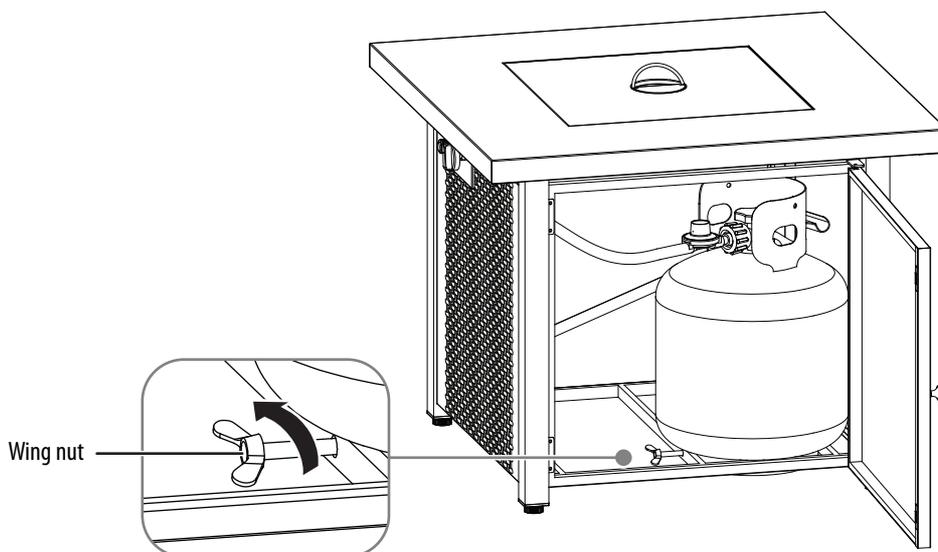


- 4 Close the door.

To disconnect the tank

- 1 Open the door in the front of your fire table, then loosen the wing nut that secures the tank in the tray.
- 2 Fully close the tank valve by turning it clockwise.

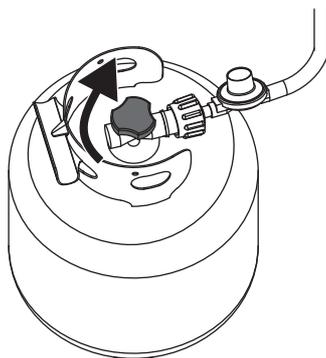

- 3 Turn the coupling nut counterclockwise until the regulator assembly detaches, then remove the tank.

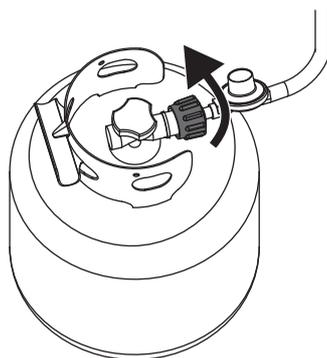


STEP 10: Testing for gas leaks


WARNING:

- Perform all leak tests outdoors.
- Extinguish all open flames.
- NEVER leak test when smoking.
- Do not use your fire table until all connections have been leak tested and do not leak.


- 1 Use a leak detection solution.
OR
Make a two to three ounce leak detection solution (one part liquid dish washing detergent and three parts water).
- 2 Make sure that your fire table valve is OFF.
- 3 Apply several drops of the solution where the hose attaches to your fire table.

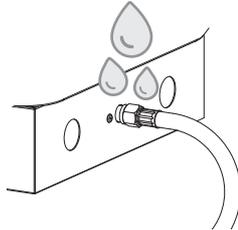

- 4 Apply several drops of the solution where the hose attaches to the regulator and where the regulator connects to the tank.

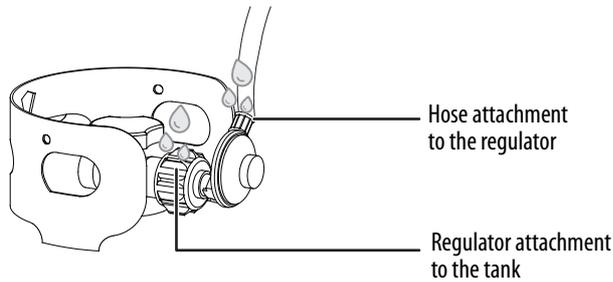

- 5 Turn the tank valve ON.

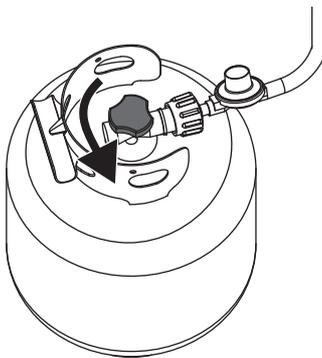

- 6 If bubbles occur, turn OFF the tank valve, then:
 - If the leak is at the hose/regulator connection, tighten the connection and perform another leak test. If you continue to see bubbles, the hose should be returned to the place of purchase.
 - If the leak is at the regulator/tank valve connection, disconnect, reconnect, and perform another leak check. If you continue to see bubbles after several attempts, the tank valve is defective and should be returned to the tank's place of purchase.

WARNING: Whenever gas connections are loosened or removed, you must perform a complete leak test.

Usage

Fire Table

Before you begin using your fire table24
Operation checklist..... 24
Before turning on the gas..... 24
Before lighting your fire table..... 24
Using your fire table.....25
Lighting your fire table 25
Adjusting the flame 26
Turning off your fire table 26

Before you begin using your fire table

WARNING: CARBON MONOXIDE HAZARD

For outdoor use only. Never use inside a house, or other unventilated or enclosed areas. Your fire table consumes air (oxygen). Do not use in unventilated or enclosed areas to avoid endangering your life.

WARNINGS:

- **Very hot while in operation!**
- Never lean over your fire table while in use.
- Do not touch the tile of the spark guard while your fire table is in operation. Wait until your fire table has cooled down after use.
- **Failure to comply with these instructions may result in serious bodily injury.**

CAUTION:

- Do not attempt to operate until you have read and understand all Important Safety Information in this manual, all assembly is complete, and leak checks have been performed.
- This appliance shall be used only in a well-ventilated space and shall not be used in a building, garage, or any other enclosed area.
- An appliance may be installed with shelter no more inclusive than:
 - With walls on all sides, but with no overhead cover.
 - Within a partial enclosure which includes an overhead cover and no more than two side walls. These side walls may be parallel, as in a breezeway, or at right angles to each other.
 - Within a partial enclosure which includes an overhead cover and three side walls, as long as 30% or more of the horizontal periphery of the enclosure is permanently open.

Operation checklist

For a safe and pleasant experience with your fire table, we suggest that you review this checklist whenever you use it.

- 1 I am familiar with this entire *User Guide* and understand all precautions noted.
- 2 All components are properly assembled, intact, and operate normally.
- 3 No alterations have been made to your fire table.
- 4 All gas connections are secure and leak free.
- 5 There is no excessive wind in the area of your fire table.
- 6 Your fire table is outdoors (outside any enclosure) and stable, on a hard and level surface.
- 7 There is adequate fresh air ventilation.
- 8 There is no gasoline or other flammable liquids or vapors in close proximity to your fire table.
- 9 Your fire table is located away from windows, air intake openings, sprinklers, and other water sources.
- 10 The sides, back, and front of your fire table are at least 24 in. (61 cm) from any combustible materials.
- 11 All persons in the area have been alerted to the hazards of high surface temperatures and to stay away from your fire table to avoid burns or clothing ignition.
- 12 Young children should be carefully supervised when they are close to your fire table.
- 13 Any guard or other protective device removed for servicing has been replaced prior to operating your fire table.
- 14 The control compartment, burner, and circulating air passageways of your fire table are clean and free of spider webs, insect nests, and other debris.

Before turning on the gas

- Make sure that the surrounding areas are free of combustible materials, gasoline, and other flammable vapors or liquids.
- Make sure that there are no obstructions to air ventilation.
- Make sure that all gas connections are tight and there are no leaks.
- Make sure that the gas tank cover is clear of debris.
- Make sure that any component removed during assembly or servicing is replaced and fastened prior to starting.

Before lighting your fire table

- Inspect your fire table before each use and have a qualified service person check at least annually.
- If you are relighting a hot fire table, always wait at least five minutes.
- Inspect the visible portion of the hose before each use. If the hose leaks, you must replace it prior to operation. Only use the replacement hose assembly specified by the manufacturer.
- You must use the pressure regulator and hose assembly supplied with your fire table. Only use replacement pressure regulators and hose assemblies specified by the manufacturer.

Using your fire table

Lighting your fire table


WARNING: Be careful when attempting to manually ignite your fire table. Pressing the control knob for more than 10 seconds before igniting the gas can cause a ball of flame upon ignition.

WARNING: Avoid inhaling fumes emitted from your fire table's first use. Smoke and odor from the burning of oils used in manufacturing will appear. Both the smoke and odor dissipates after approximately 30 minutes. Your fire table should NOT produce thick black smoke.


WARNING: Incorrect operation can cause injury or property damage. If the burner fails to remain lit, close all the valves and wait at least five minutes before attempting to relight the burner.

Note: The burner may be noisy when initially turned on.


- 1 Turn the control knob to the OFF position.

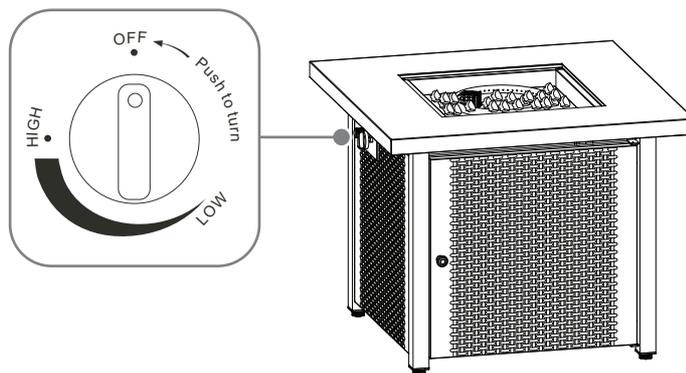

- 2 Turn on the valve on the gas tank.
- 3 Push in and turn the control knob to the HIGH position (counter-clockwise 90°).

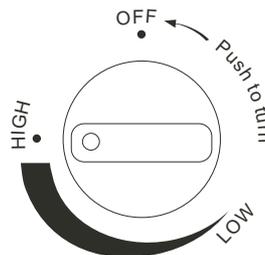

- 4 Holding in the control knob, press the igniter button several times (you should hear a clicking sound) until the flame is ignited. Release the control knob 10 seconds after ignition.
- 5 Turn the control knob to the LOW position and leave it there for five minutes before adjusting the flame to the level you want.

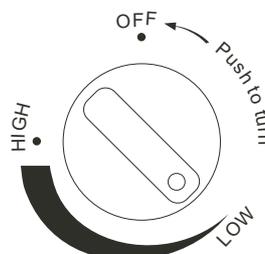


- 6 If the burner flame goes out, turn off your fire table. Wait at least five minutes or more to let the gas dissipate, then repeat steps 3 to 5.

Adjusting the flame

The burner flame should be blue with straight yellow tops. The flames should not be all yellow or produce thick black smoke, indicating an obstruction of airflow through the burners. If your fire table has an all yellow flame, turn it off and consult [Troubleshooting your fire table](#) on page 29.

- Turn the control knob clockwise to increase the flame or counter-clockwise to decrease the flame.

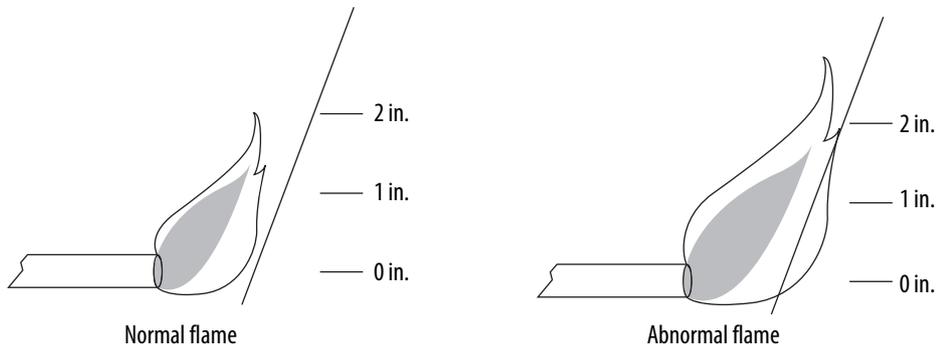

Turning off your fire table

- 1 Push in the control knob and turn it clockwise to the OFF position.
- 2 Turn the gas tank valve clockwise until it stops.

Maintenance

Fire Table

Maintaining your fire table	28
Cleaning your fire table.....	28
Inspecting your fire table	28
Storing your fire table	28
Transporting your fire table.....	28
Troubleshooting your fire table.....	29
Specifications.....	30

Maintaining your fire table

WARNING: Do NOT touch or move your fire table for at least 45 minutes after use.

Cleaning your fire table

Periodically clean the exterior surfaces of your fire table with warm soapy water. Never use flammable or corrosive cleaning agents.

Notes:

- While cleaning your fire table, be sure to keep the area around the burner dry at all times.
- Do not submerge the control valve assembly in water. If the gas control has been submerged in water, do NOT use it. It must be replaced.
- Keep the appliance area clear and free from combustible materials, gasoline, and other flammable vapors and liquids.
- Do not obstruct the flow of air for combustion and ventilation.
- Keep the ventilation opening(s) of the tank enclosure free and clear of debris.
- Keep controls, burner, and circulating air passageways clean.

Inspecting your fire table

- Check the entire hose assembly at least annually. Look for evidence of excessive abrasion, cuts, or wear. Suspected areas should be leak-tested.
- Look for spiders and insects which can nest in the burner or orifices. This condition can be dangerous and can damage your fire table and render it unsafe for use. Clean the burner holes by using a heavy-duty pipe cleaner. Compressed air may help clear away smaller particles.
- Look for excessive carbon deposits which may create a fire hazard. Clean the dome and burner screen with warm soapy water if any carbon deposits develop.

Note: In a salt-air environment (such as near an ocean), corrosion occurs more quickly than normal. Frequently check for corroded areas and repair them promptly.

Tip: Use a high-quality automobile wax to help maintain the appearance of your fire table. Apply to exterior surfaces only. Do not apply to burner.

Storing your fire table

Between uses:

- Turn the Control Knob OFF.
- Disconnect the LP source.
- Store your fire table upright in an area sheltered from direct contact with inclement weather (such as rain, sleet, hail, snow, dust, and debris).
- If desired, cover your fire table to protect the exterior surfaces and to help prevent debris build-up in air passages.

Note: Wait until your fire table is cool before covering.

Transporting your fire table

When transporting:

- Turn the Control Knob OFF.
- Disconnect the LP source and move it to a secure, well-ventilated location, outdoors.

Troubleshooting your fire table

Only a qualified service person should repair gas passages and associated components.

CAUTION: Always allow your fire table to cool before attempting service.

PROBLEM	POSSIBLE CAUSE	SOLUTION
Burner won't light using igniter	The propane tank valve is closed	Make sure that the regulator is securely attached to the propane tank, see STEP 9: Installing the propane tank on page 20 . Open the propane tank valve.
	The propane tank is low or empty	Replace the propane tank.
	The propane tank is leaking	<ul style="list-style-type: none"> • Turn the propane tank valve to "CLOSED." • Wait 5 minutes for gas to clear. • Follow "Checking for Leaks" section.
	The igniter battery needs to be changed	Replace the AA battery in the igniter.
	The igniter electrode and burners are wet	Wipe the igniter and burners dry with a cloth.
	The igniter electrode is cracked or broken	Replace the igniter - contact Customer Service where you purchased your fire table.
	A wire is loose on the igniter	Reconnect the loose wire.
	A wire on the igniter is shorting	Replace the igniter - contact Customer Service where you purchased your fire table.
	Bad igniter	Replace the igniter - contact Customer Service where you purchased your fire table.
	The propane tank is frosted	Wait until the propane tank warms up and becomes unfrosted.
	Blockage in an orifice	Clear blockage.
	The control knob is not in the ON position	Turn the control knob to the ON position.
Burner won't light using a match	The propane tank valve is closed	Make sure that the regulator is securely attached to the propane tank, see STEP 9: Installing the propane tank on page 20 . Open the propane tank valve.
	The propane tank is low or empty	Replace the propane tank.
	The propane tank is leaking	<ul style="list-style-type: none"> • Turn the propane tank valve to "CLOSED." • Wait 5 minutes for gas to clear. • Follow the steps in STEP 10: Testing for gas leaks on page 22.
	Coupling nut and regulator are not securely connected	Turn the coupling nut about one-half to three-quarters additional turn until the connection is solid. Tighten by hand only - do NOT use tools.
	There is an obstruction in the gas flow	<ul style="list-style-type: none"> • Clear burner/valve. • Check for bent or kinked hose.
	The propane tank is frosted	Wait until the propane tank warms up and becomes unfrosted.
	The control knob is not in the ON position	Turn the control knob to the ON position.
The burner flame is low	The gas pressure is low	Turn the tank valve OFF and replace the tank.
	The outdoor temperature is less than 40° F (4° C) and the tank is less than 1/4 full	Use a full tank.
	Control knob not fully ON	Push the knob in and rotate it to your desired heat level.

PROBLEM	POSSIBLE CAUSE	SOLUTION
Carbon build-up or thick black smoke	Dirt or film on burner	Clean the burner.
	Blockage in the burner	Remove any blockage and clean the burner inside and out.
Gas odor with extreme yellow/orange tipping of flame	A new burner may have residual oil/solvent from manufacturing	Burn for 15 minutes, then try again.
	Spider webs or insect nest in the burner/valve	Clean burner/valve and try again.
	Poor alignment of valve to burner/valve tube	Make sure that the burner/valve is properly aligned.
Your fire table does not reach the desired temperature	Ice has built up on the outside of the propane tank	Turn off the propane tank valve and replace the tank.
Your fire table flame is irregular or uneven	The burner ports are blocked or clogged	Clean the burner ports.
There is a sudden drop in gas flow or flame height	The overfill prevention device on the propane tank may have been activated	<ol style="list-style-type: none"> 1. Turn control knob to OFF. 2. Wait 30 seconds and relight your fire table. 3. If the flames are still too low, reset the overfill prevention device by: <ol style="list-style-type: none"> a. Turning control knob OFF b. Turning LP gas tank valve to CLOSED c. Disconnecting the regulator d. Turning control knob to HIGH e. Waiting one minute f. Turning control knob to OFF g. Reconnecting the regulator and leak check connections, being careful not to fully open the valve h. Lighting your fire table
The flame goes out	High or gusting winds	Do not use outdoor fire table in high winds.
	Low on LP gas	Exchange, refill, or replace propane tank.
	Excess flow valve tripped	Refer to "Sudden drop in gas flow or reduced flame height" above

Specifications

Dimensions (WxHxD)	30 × 30 × 24.4 in. (76.2 × 76.2 × 62 cm)
Weight	56.87 lbs. (25.8 kg)
Fuel type	Propane
Compatible propane tank (height × diameter)	Standard 20 lbs. 17.9 in. (45.5 cm) × 12.2 in. (31 cm)

ONE-YEAR LIMITED WARRANTY

Definitions:

The Distributor* of Insignia branded products warrants to you, the original purchaser of this new Insignia-branded product ("Product"), that the Product shall be free of defects in the original manufacturer of the material or workmanship for a period of one (1) year from the date of your purchase of the Product ("Warranty Period").

For this warranty to apply, your Product must be purchased in the United States or Canada from a Best Buy branded retail store or online at www.bestbuy.com or www.bestbuy.ca and is packaged with this warranty statement.

How long does the coverage last?

The Warranty Period lasts for 1 year (365 days) from the date you purchased the Product. Your purchase date is printed on the receipt you received with the Product.

What does this warranty cover?

During the Warranty Period, if the original manufacture of the material or workmanship of the Product is determined to be defective by an authorized Insignia repair center or store personnel, Insignia will (at its sole option): (1) repair the Product with new or rebuilt parts; or (2) replace the Product at no charge with new or rebuilt comparable products or parts. Products and parts replaced under this warranty become the property of Insignia and are not returned to you. If service of Products or parts are required after the Warranty Period expires, you must pay all labor and parts charges. This warranty lasts as long as you own your Insignia Product during the Warranty Period. Warranty coverage terminates if you sell or otherwise transfer the Product.

How to obtain warranty service?

If you purchased the Product at a Best Buy retail store location or from a Best Buy online website (www.bestbuy.com or www.bestbuy.ca), please take your original receipt and the Product to any Best Buy store. Make sure that you place the Product in its original packaging or packaging that provides the same amount of protection as the original packaging.

To obtain warranty service, in the United States and Canada call 1-877-467-4289. Call agents may diagnose and correct the issue over the phone.

Where is the warranty valid?

This warranty is valid only in the United States and Canada at Best Buy branded retail stores or websites to the original purchaser of the product in the country where the original purchase was made.

What does the warranty not cover?

This warranty does not cover:

- Food, beverage, and or medicine loss/spoilage.
- Customer instruction/education
- Installation
- Set up adjustments
- Cosmetic damage
- Damage due to weather, lightning, and other acts of God, such as power surges
- Accidental damage
- Misuse
- Abuse
- Negligence
- Commercial purposes/use, including but not limited to use in a place of business or in communal areas of a multiple dwelling condominium or apartment complex, or otherwise used in a place of other than a private home.
- Modification of any part of the Product, including the antenna
- Display panel damaged by static (non-moving) images applied for lengthy periods (burn-in).
- Damage due to incorrect operation or maintenance
- Connection to an incorrect voltage or power supply
- Attempted repair by any person not authorized by Insignia to service the Product
- Products sold "as is" or "with all faults"
- Consumables, including but not limited to batteries (i.e. AA, AAA, C etc.)
- Products where the factory applied serial number has been altered or removed
- Loss or Theft of this product or any part of the product
- Display panels containing up to three (3) pixel failures (dots that are dark or incorrectly illuminated) grouped in an area smaller than one tenth (1/10) of the display size or up to five (5) pixel failures throughout the display. (Pixel based displays may contain a limited number of pixels that may not function normally.)
- Failures or Damage caused by any contact including but not limited to liquids, gels or pastes.

REPAIR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS YOUR EXCLUSIVE REMEDY FOR BREACH OF WARRANTY. INSIGNIA SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR THE BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT, INCLUDING, BUT NOT LIMITED TO, LOST DATA, LOSS OF USE OF YOUR PRODUCT, LOST BUSINESS OR LOST PROFITS. INSIGNIA PRODUCTS MAKES NO OTHER EXPRESS WARRANTIES WITH RESPECT TO THE PRODUCT, ALL EXPRESS AND IMPLIED WARRANTIES FOR THE PRODUCT, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTIES OF AND CONDITIONS OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE WARRANTY PERIOD SET FORTH ABOVE AND NO WARRANTIES, WHETHER EXPRESS OR IMPLIED, WILL APPLY AFTER THE WARRANTY PERIOD. SOME STATES, PROVINCES AND JURISDICTIONS DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS, WHICH VARY FROM STATE TO STATE OR PROVINCE TO PROVINCE.

Contact Insignia:

1-877-467-4289

www.insigniaproducts.com

INSIGNIA is a trademark of Best Buy and its affiliated companies.

*Distributed by Best Buy Purchasing, LLC

7601 Penn Ave South, Richfield, MN 55423 U.S.A

©2022 Best Buy. All rights reserved.

INSIGNIA™

www.insigniaproducts.com
1-877-467-4289 (U.S. and Canada)

INSIGNIA is a trademark of Best Buy and its affiliated companies.
Distributed by Best Buy Purchasing, LLC
7601 Penn Ave South, Richfield, MN 55423 U.S.A.
©2022 Best Buy. All rights reserved.

V2 ENGLISH
22-0442