


HOW TO GUIDE:

HP REVERB VR HEADSET PRO EDITION SET-UP

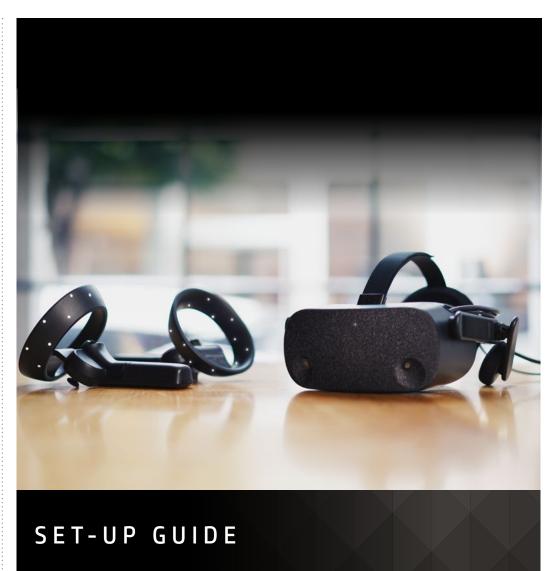

Your guide to setting up the HP Reverb Virtual Reality Headset Professional Edition.

The HP Reverb Virtual Reality Headset - Professional Edition offers stunning immersive computing with significant ease of setup and use in a cost effective solution. This solution is well suited for Engineering Product Dev and design reviews, AEC (Architecture, Engineering & Construction) reviews, location-based entertainment, and MRO (Maintenance, Repair and Overhaul) training use environments.

Take advantage of the complete Windows 10 Mixed Reality and SteamVR ecosystems.

IMPORTANT NOTE: HP Reverb Virtual Reality Headset - Professional Edition is not recommended for children under the age of 13. All users should read the HP Reverb Virtual Reality Headset - Professional Edition User Guide to reduce the risk of personal injury, discomfort, property damage, and other potential hazards and for important information related to your health and safety when using the headset. Windows Mixed Reality requires Windows 10 October 2018 Update installed on the workstation or PC. Features may require software or other 3rd-party applications to provide the described functionality. To minimize the possibility of experiencing discomfort using a VR application, ensure that the PC system is equipped with the appropriate graphics and CPU for the VR application. Learn more about HP workstation VR Ready configurations here.

REFERENCES:

HP Reverb Virtual Reality Headset Professional Edition QuickSpecs
HP Reverb Virtual Reality Headset Professional Edition Datasheet
HP Reverb Virtual Reality Headset Professional Edition FAQ

USING ADAPTERS:

Any display adapter must support 4K resolutions. Any USB adapter must support USB3 0 or higher



RECOMMENDED MINIMUM SYSTEM SPECIFICATIONS

GRAPHICS: DX12 capable graphics. NVIDIA® GTX 1080, NVIDIA® Quadro® P5200,

AMD Radeon™ Pro WX 8200, (update or later); equivalent or better Intel® Core™ i7, Intel® Xeon® E3-1240 v5; equivalent or better

MEMORY: 16GB RAM or more

OS: Windows 10, October 2018 or later

GETTING STARTED

Connect to your computer. The HP Reverb VR Headset - Pro Edition connects to your PC via a DisplayPort 1.3™ and USB 3.0 cable. If you use an adapter, ensure that it supports 4K resolutions.

PROCESSOR:


Begin the initial Mixed Reality Install. Setting up Windows Mixed Reality requires an internet connection. Even if there is nothing to download, Microsoft still requires internet for the initial set-up.

STEP 1

Connect your headset to your host system. It should automatically launch the Mixed Reality Portal. You can also press the Windows key and type "Mixed Reality Portal" - select the app to launch manually.

Follow the on-screen instructions. There may be driver and firmware updates at this point. If so, allow them to install.

If you fail the system check, you may need to update a driver or use a different system.

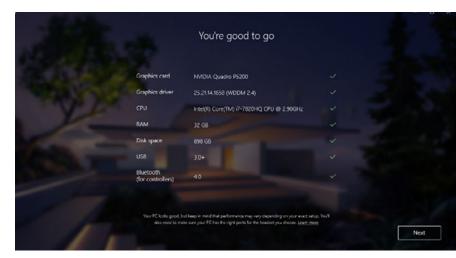

STEP 2

Turn on your Mixed Reality motion controllers by pressing and holding the **Windows button** on each controller for two seconds. The provided controllers are pre-paired to the HMD via Bluetooth®.






STEP 3

Set up your VR space. If you have objects in the room you don't want to collide with, choose **Set me up for all experiences**. This allows you to draw a visible boundary inside your VR experience.

If you don't need a room boundary, you can **choose Set me up for seated** and standing.

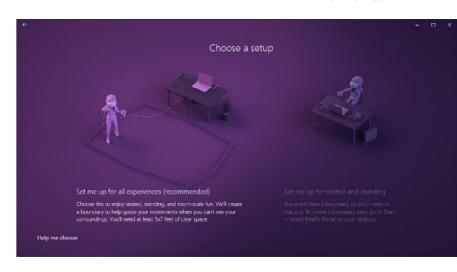

STEP 4


Follow the on-screen instructions to set up your VR space. Select **Center.** This marks the spot and forward-facing direction of the HMD and will be the default position inside VR experiences.



STEP 5

If you chose **all experiences** in Step 3, you will now set up the VR room boundary. Before you click **Trace**, move the HMD away from the center and to where your boundary will be. Then, click **Trace** and use the HMD to trace your boundary.

Keep in mind you'll want a buffer zone between you and any objects you may hit with your hands while using the controllers.

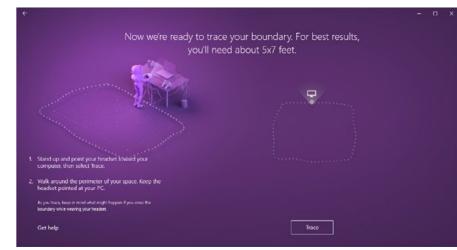




STEP 6

Once you've successfully traced your boundary, you will be asked if you want to use speech in Mixed Reality. The HP Reverb VR Headset - Pro Edition has built-in microphones, so you can take advantage of this option if you like.

For a list of speech commands, visit:

<u>Help - Windows 10 Speech in Windows Mixed Reality</u>

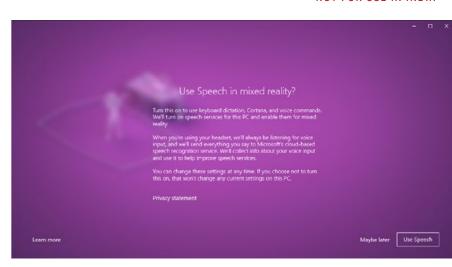

STEP 7

You're almost done! Mixed Reality will finish downloading now and install all necessary components. The full download is several gigabytes, so now might be a good time for a coffee break.



STEP 8

Welcome to the welcome screen. You can access settings through the left navigation pane, as well as mirror the headset display with the play button.

You can complete set-up inside the HMD at this point. Make sure the cameras on the HMD can see the floor while scanning the room. Reflective surfaces (like windows) can confuse it.

Within the portal, you can access a tutorial on how to interact with the VR environment using your motion controllers.

Once inside the Cliff House, your set-up is complete!







MIXED REALITY
PORTAL SETTINGS
MENU:

Press the menu button (3 lines, upper left) to access the settings menu.

BOUNDARY:



Turn on and off through settings. Run setup if you wish to redraw the boundary or discover a new VR space.

WINDOWS MENU:



Access the Windows menu by using the Windows button on your controller. Get mixed reality apps from the Microsoft store. Get help goes to an online help guide. Set-up controllers allows you to unpair and re-pair controllers. Settings takes you to the Windows system setting for mixed reality.

THE HP REVERB VR
HEADSET PRO EDITION
ALSO WORKS WITH
STEAMVR!

WHEN STEAMVR IS
INSTALLED, GO TO
EXPLORE AND SEARCH
FOR "MIXED REALITY
FOR STEAMVR".


Additional information on using SteamVR can be found in the FAQ.

Windows Mixed Reality Settings > Selecting Settings from your Windows menu opens the system dialog box.

Add a device

Bluetooth & other devices

To unpair any devices, select them from the list and choose **Remove Device**. To add Bluetooth® devices, select **Add Bluetooth** or other device.

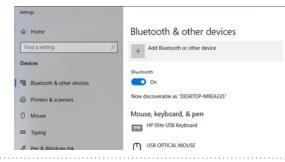

Add a device

To pair a controller with your system's Bluetooth®:

- Turn on the controller by holding down the Windows button on the controller.
- Remove the battery cover.
- Press the small button near the end of the controller (near the wrist strap).
- 4. When the lights begin flashing half on, half off, it's in pairing mode.
- 5. Select Bluetooth® from the list.
- Select the controller from the list of Bluetooth® devices.
- 7. When the controller pairs, it will vibrate.
- 8. Replace the battery cover.

Add a device Choose the kind of device you want to add. Bluetooth Mice, keyboards, pens, or audio and other kinds of Bluetooth devices Wireless display or dock Wireless monitors, TVs, or PCs that use Miracast, or wireless docks

To pair a controller with your HP Reverb Pro:

- . Run HP Reverb VR Headset Setup.
- 2. Follow the on-screen instructions.

Audio and speech

The default works quite well. If you want people outside of the VR experience to hear what the user hears, you will need speakers; enable the option to Mirror headset audio to desktop.

For speech, the HMD has built-in microphones. For a list of speech commands, see Step 6.

Audio and speech Audio Audio and speech Misset readity Audio and speech Windows Mised Reality works best with your header's built-in seeking and mis. or header/one with mit connected to its audio professional service devices are not supposed. Learn more When Mised Reality Portal is nurning, writch to headert wide On When Mised Reality Portal is nurning, misror headert audio in onesting off Speech User speech User speech User speech speech speech to missed the speech to be audio professional speech to be audio professional speech speech speech to be audio professional speech to be audio

Clear environment data

This will delete the accumulated data about your VR space. You may want to rerun set-up after this. You can customize the Cliff House by moving things around and adding new windows or content. **Reset my home** will restore the default.



Headset display

You can set the **Visual quality** if your hardware has difficulty functioning at an acceptable frame rate.

In **Experience options**, you can change the refresh rate of the HMD. Some display technology may not keep up with the 90Hz headset resolution; try 60Hz.

