 


Wii™ Slim Induction Charger Kit with rechargeable battery packs

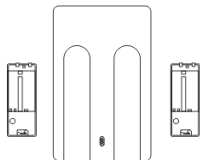

Package contents

- Recharging station (1)
- Rechargeable battery packs for Wii remotes (2)
- AC power adapter (1)
- Quick Start Guide

 
 


Features

- Increases playing time of standard Wii controllers
- 100% compatible with standard Wii controllers
- Recharge Wii controllers without removing the protective skins or Motion Plus™ modules from the controllers
- Recharging status indicator lights


Installing the rechargeable battery packs

- 1 Remove any protective skins from your Wii remotes, then remove the batteries from the battery compartments.

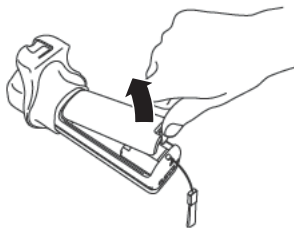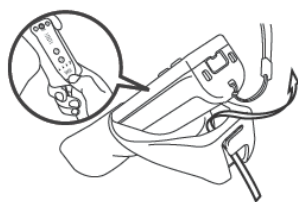


- 2 Insert the new battery packs into the battery compartments, front end first.

 - 3 If using protective skins, slide them back onto the remotes. Your induction charger can recharge the remotes even while the skins are on.

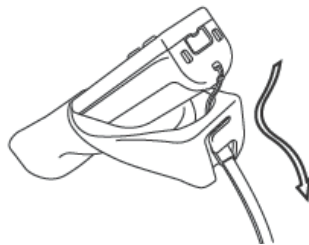


Attaching the AC power adapter

 - 1 Plug the power adapter into an AC power outlet and the back of the recharging station.

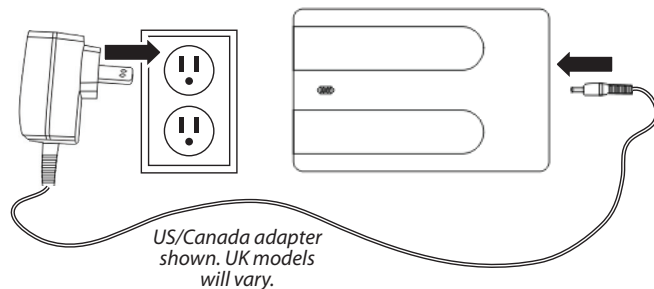


 - 2 Slide the switch on the front of the charger to turn it on.

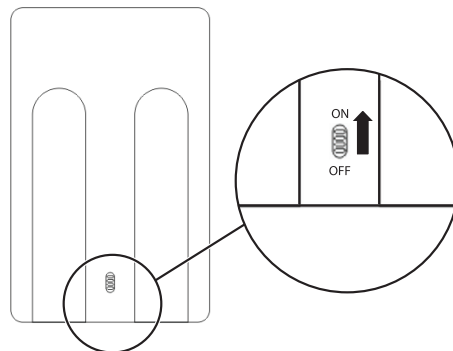


Recharging

 - 1 Place your remotes with the new battery packs onto the induction charger. Make sure that you place them lengthwise and in the center of their holders.

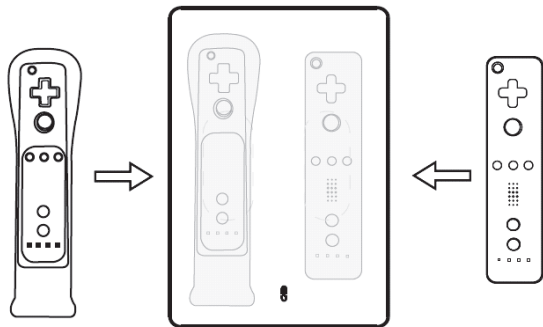

 - 2 As soon as the charger detects your new battery packs, it begins charging them and the charging indicator lights turn red. When charging is complete, the indicators turn green.

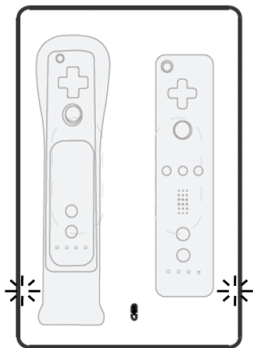

Troubleshooting

Before contacting technical support for help, check the following:

If the remote doesn't work when using the battery pack:

- Re-install the battery pack. Make sure it is locked in place.
- Use another charged battery pack to determine whether the controller is damaged or the battery pack's charge is low.
- Try to recharge the battery pack.
- Make sure that the surrounding temperature is between 41°F and 86°F (5°C~30°C).

If the recharging station doesn't charge the controllers:

- Make sure that the battery pack is correctly installed on the Wii controller.
- Make sure that you have connected the AC power adapter to the recharging station and an AC power outlet.
- If the battery pack has been stored unused for a long time, it may have become over-discharged. The recharging station may not be able to recover the battery.
- Make sure that the surrounding temperature is between 41° and 86°F (5°C~30°C).

If battery life seems short and charging takes a long time:

- Make sure that the surrounding temperature is between 41° and 86°F (5°C~30°C).
- Battery life may decrease over time. After 500 recharges, battery life may be only 70% of the battery life when new.

90-day limited warranty

Visit www.rocketfishproducts.com for details.

Contact Rocketfish: For customer service please call 1-800-620-2790
www.rocketfishproducts.com

Distributed by Best Buy Purchasing, LLC

7601 Penn Avenue South, Richfield, Minnesota, U.S.A. 55423-3645

© 2010 BBY Solutions, Inc.

All rights reserved. ROCKETFISH is a trademark of 2010 BBY Solutions, Inc. Registered in some countries. Wii is a trademark of Nintendo of America, Inc. All other products and brand names are trademarks of their respective owners.

ENGLISH 10-0768