




# Multi-Directional Speaker Mount

RF-HSWM1A18 / RF-HSWM1A18W / RF-HSWM1A18-C / RF-HSWM1A18W-C

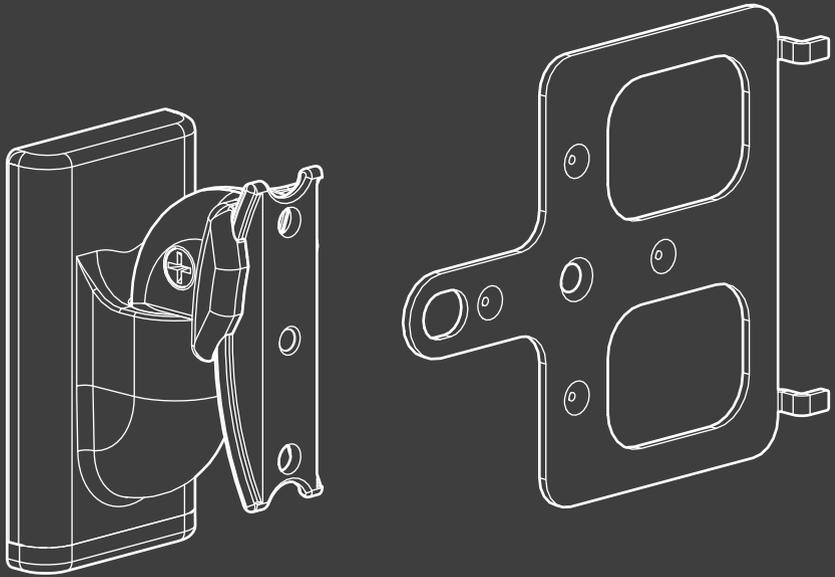

For wood-stud, drywall, and concrete wall installations

Safety information and specifications.....	2
Tools needed .....	3
Package contents: parts .....	4
Package contents: hardware.....	4
Installation instructions .....	5

## ASSEMBLY GUIDE

Before using your new product, please read these instructions to prevent any damage.

# Safety information and specifications



## IMPORTANT SAFETY INSTRUCTIONS - SAVE THESE

### INSTRUCTIONS

Check your speaker's user manual to see if there are any special requirements for mounting your speaker.

Please read through these instructions completely to be sure you're comfortable with this easy installation process.

Do not use this product for any purpose not explicitly specified by the manufacturer.

The manufacturer is not responsible for damage or injury caused by incorrect assembly or use.

The wall must be capable of supporting five times the weight of the speaker and mount combined.

If you do not understand these instructions or have doubts about the safety of the installation, assembly or use of this product, contact Customer Service.

**WARNING:** This product contains small items that could be a choking hazard if swallowed.

Before starting assembly, verify all parts are included and undamaged. If any parts are missing or damaged, do not return the damaged item to your dealer; contact Customer Service. Never use damaged parts!

**Compatible speakers:** Sonos PLAY: 1 or PLAY 3, and other wireless speakers

**Maximum speaker weight:** 10 lbs. (4.5 kg)

**Overall dimensions (H x W x D):**

3.83 x 2 in. (9.73 x 5.08 cm)


**Wall-mount weight:** 0.5 lbs. (0.2 kg)

**We're here for you**

[www.rocketfishproducts.com](http://www.rocketfishproducts.com)

For customer service, call:

1-800-620-2790 (U.S. and Canada) or  
01-800-926-3010 (Mexico)

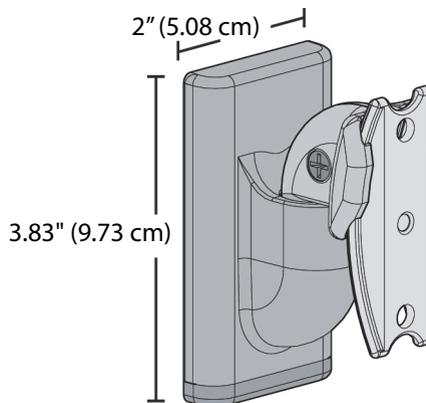

## Tools needed

You will need the following tools to assemble your new speaker mount:



Pencil



Level



Phillips screwdriver



Drill

 


Tape

### Wood stud installation



Edge-to-edge  
stud finder



1/8" (3 mm) wood  
drill bit

### Concrete installation

 


1/4" (6.5 mm)  
masonry drill bit



Hammer

### Drywall installation





1/4" (6.5 mm)  
drywall drill bit



Hammer

## Package contents: parts

Make sure that you have all the parts necessary to assemble your new speaker mount:

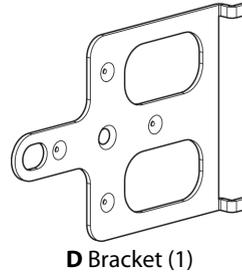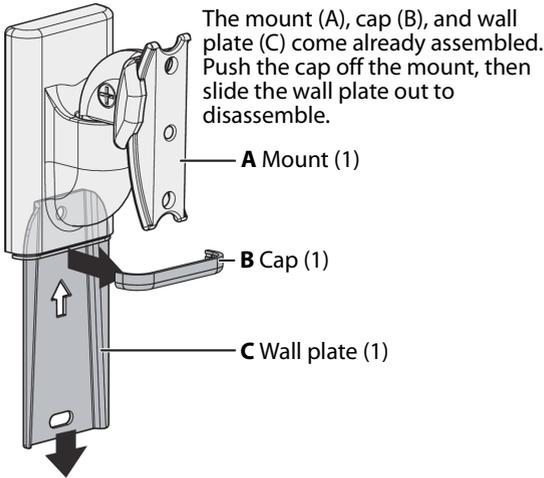

## Package contents: hardware

Make sure that you have all the hardware necessary to assemble your new speaker mount. Not all hardware included will be used.

### Hardware Bag

Label	Hardware	Qty
E	 PLAY: 3 INTERFACE SCREW	1
F	 WALL PLATE SCREW	2
G	 PLAY:1 / PLAY:3 SCREW (also used to mount other wireless speakers)	1
H	 ANCHOR	2

# Installation instructions

## STEP 1 - Select a mounting option

You can mount your speaker to three wall types:



- **Option A:** To mount to a wood stud wall, see “[STEP 2 - Option A: Installing on a wood stud wall](#)” on page 6.
- **Option B:** To mount on drywall, see “[STEP 2 - Option B: Installing on drywall](#)” on page 8.
- **Option C:** To mount on concrete or a concrete block wall, see “[STEP 2 - Option C: Installing on a solid concrete or concrete block wall](#)” on page 10.

## STEP 2 - Option A: Installing on a wood stud wall



### CAUTION

- Drywall covering the wall must not exceed 5/8" (16 mm).
- The wood stud must not be smaller than a nominal 2 x 4 in. (51 x 102 mm) actual 1-1/2 x 3-1/2 in. (38 x 89 mm)
- Make sure that you drill at the center of the stud.

- 1 Locate the stud. Verify the center of the stud with an edge-to-edge stud finder.
- 2 Position the wall plate (C) at your desired height and line up the holes with your stud center line. Level the wall plate and mark the hole locations.

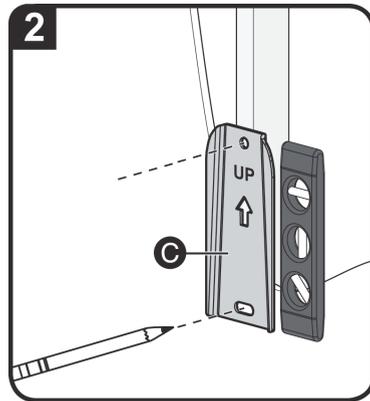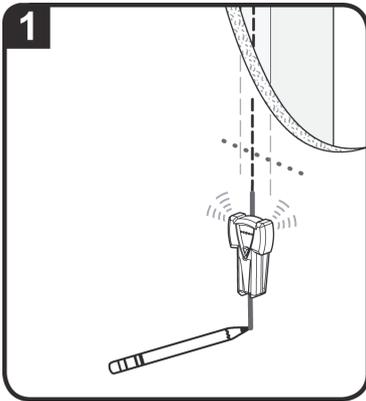


- 3 Drill pilot holes to a depth of 1-3/4 in. (45 mm) using a 1/8 in. (3 mm) diameter drill bit. Make sure that you drill into the center of the stud.
- 4 Attach the wall plate with the two wall plate screws (F). Tighten the screws only until they are flush against the wall plate. If needed, you can make small level adjustments to the wall plate, by loosening the bottom screw and shifting the wall plate until it is level. Tighten the bottom screw when adjustments are complete.

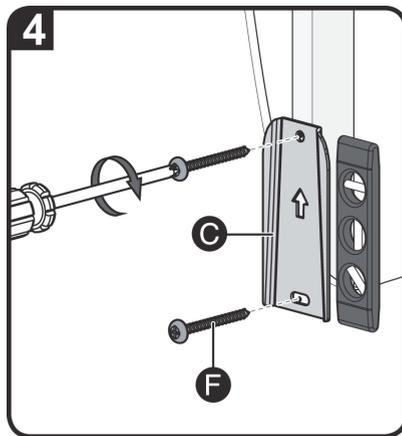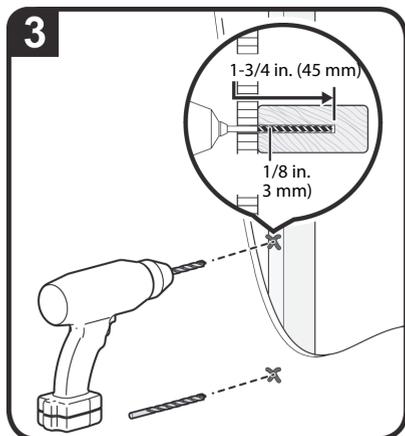

### CAUTION

Both screws must be firmly tightened to prevent unwanted movement of the wall plate. Ensure the wall plate is securely fastened to the wall before continuing on to the next step.

### You'll need

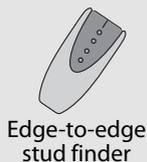


Edge-to-edge stud finder



Pencil



 Drill



1/8" (3 mm) wood drill bit



Phillips screwdriver



(F) Wall plate screw  
(2)





(C) Wall plate

## STEP 2 - Option B: Installing on drywall

### CAUTION

Drywall covering the wall, must not be less than 1/2 in. (12.7 mm)





- 1 Make sure that the placement of the wall plate (C) is not on a stud. Position the wall plate at your desired height and level the wall plate, then mark the hole locations.
- 2 Drill pilot holes to a depth of 1 in. (25 mm) using a 1/4 in. (6.5 mm) diameter drill bit.

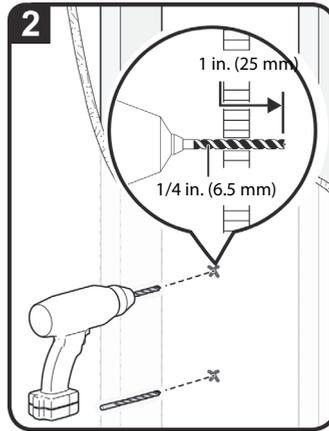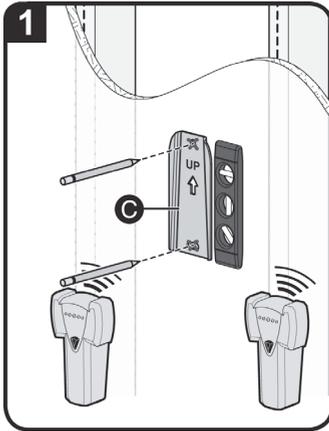

- 3 Install two anchors (H) into the holes making sure that they are flush with the drywall.
- 4 Install the wall plate with the two wall plate screws. If needed, you can make small level adjustments to the wall plate, by loosening the bottom screw and shifting the wall plate until it is level. Tighten the bottom screw when adjustments are complete.

**CAUTION**

 Avoid potential personal injury or property damage! Overtightening could reduce the holding power of the screws. DO NOT over-tighten the screws.

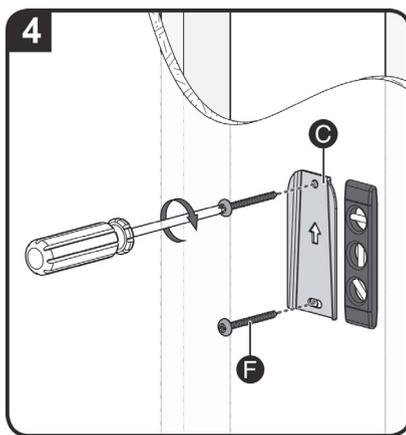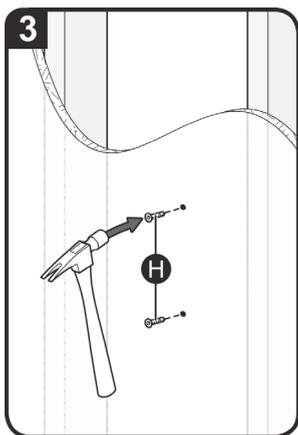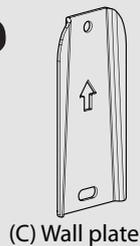

**You'll need**

## STEP 2 - Option C: Installing on a solid concrete or concrete block wall

### CAUTION

- Mount the wall plate directly onto the concrete surface (no wall covering).
- Minimum solid concrete thickness: 8 in. (203 mm)
- Minimum concrete block size: 8 x 8 x 16 in. (203 x 203 x 406 mm)

- 1 Position the wall plate (C) on the wall at your desired height. Level the wall plate and mark the hole locations.
- 2 Drill two pilot holes using a 1/4 in. (6.5 mm) diameter masonry drill bit.  
**Important:** Pilot holes must be drilled to a depth of 2 in. (50 mm). Never drill into the mortar between blocks.

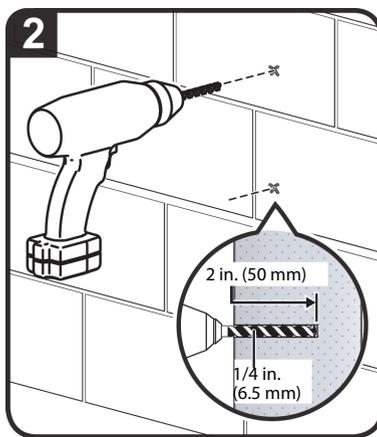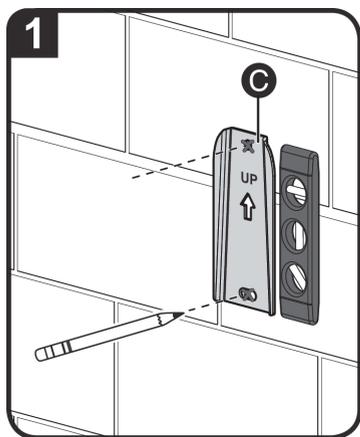

- 3 Insert two anchors (H).



### CAUTION

Be sure the anchors are seated flush with the concrete surface.


- 4 Install the wall plate using two screws (F). Tighten the screws only until they are flush against the wall plate. If needed, you can make small level adjustments to the wall plate, by loosening the bottom screw and shifting the wall plate until level. Tighten the bottom screw when adjustments are complete.

### CAUTION

Avoid potential personal injury or property damage! Overtightening could reduce the holding power of the screws. DO NOT over-tighten the screws.

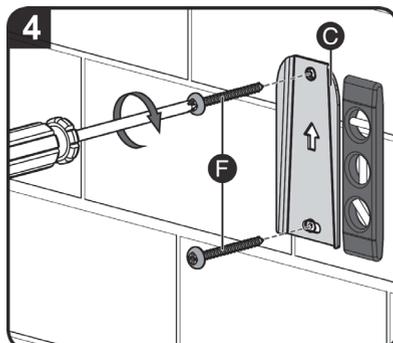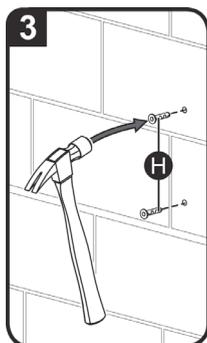

## You'll need

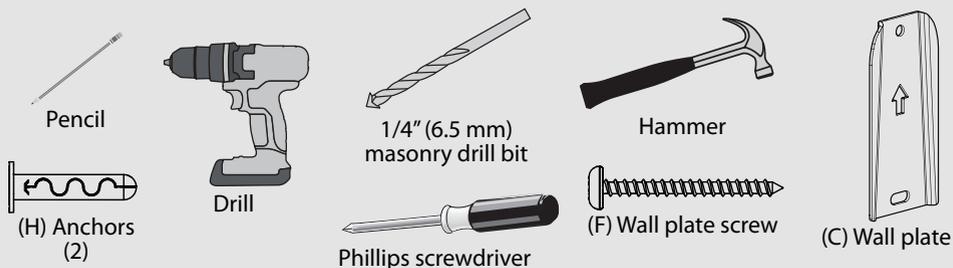


## STEP 3 - Option A: Attach your Sonos PLAY:1 or other wireless speaker

In addition to the Sonos PLAY:1 and PLAY:3, your speaker mount is compatible with other wireless speakers that use 1/4"-20 screws.


**Note:** You can install your speaker right-side-up or up-side-down.

- Attach the mount (A) to the speaker with the Play:1/Play:3 screw (G). Either hole on the mount can be used.


### Right-side-up position

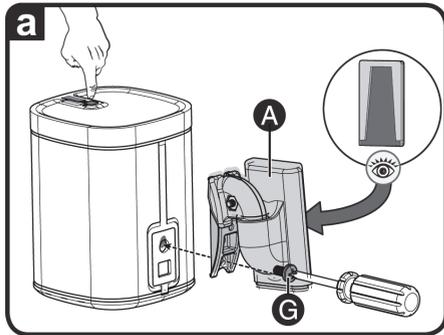

### Up-side-down position

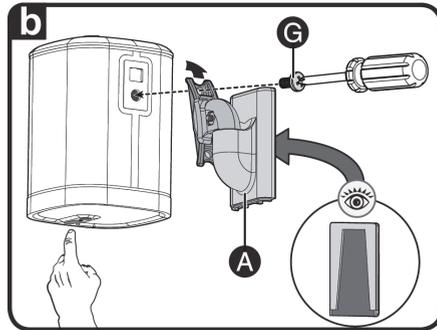

## You'll need

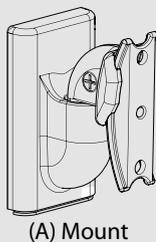


## STEP 3 - Option B: Attach your Sonos PLAY:3 speaker


**Note:** You can mount your speaker vertically or horizontally.

- 1 Attach the interface bracket (D) to the mount (A) with the Play:3 interface screw (E).

**Vertical**

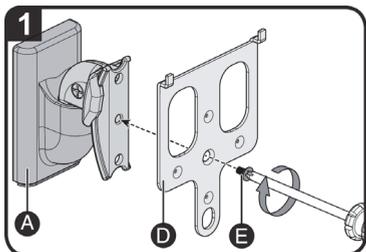


**Horizontal**

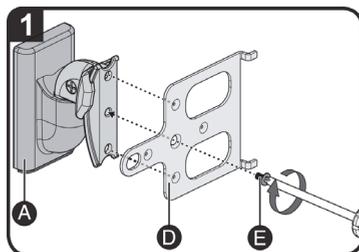


- 2 Fit the assembly onto your Play:3 speaker by inserting the hooks of the Play:3 interface bracket (D) into the 4th row of holes from the end and resting the bracket against your speaker.

**Vertical**

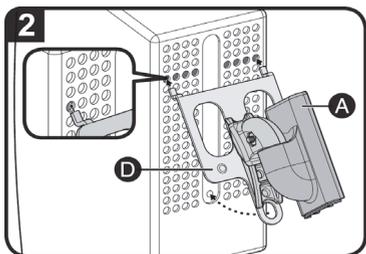


**Horizontal**

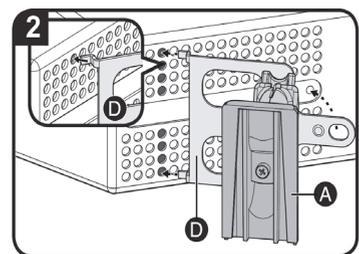


- 3 Secure the assembly to your Play:3 speaker with the Play:1/Play:3 speaker screw (G).


### Vertical

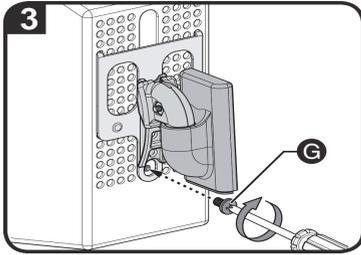


### Horizontal

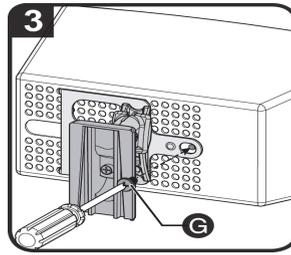

## You'll need

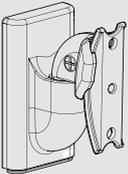

(A) Mount

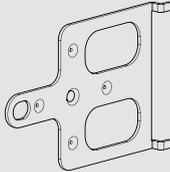

(D) Bracket



Phillips screwdriver




(E) Play:3 interface screw




(G) Play:1 / Play:3 screw

## Step 4 - Mount the assembly to the wall plate


- 1 Slide the speaker/wall mount assembly onto the wall plate (C).

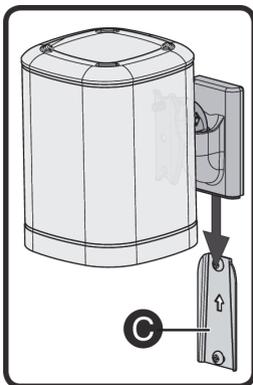


- 2 Slide the cap (B) onto the mount (A).

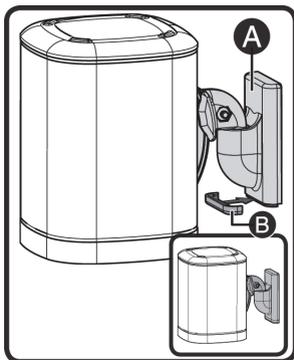

### You'll need

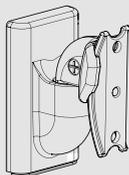

 (A) Mount




(B) Cap


## STEP 5- Adjusting the angle

- You can rotate your mount left or right and tilt it up or down by hand to adjust the angle.

### Sonos Play:1 or other speakers


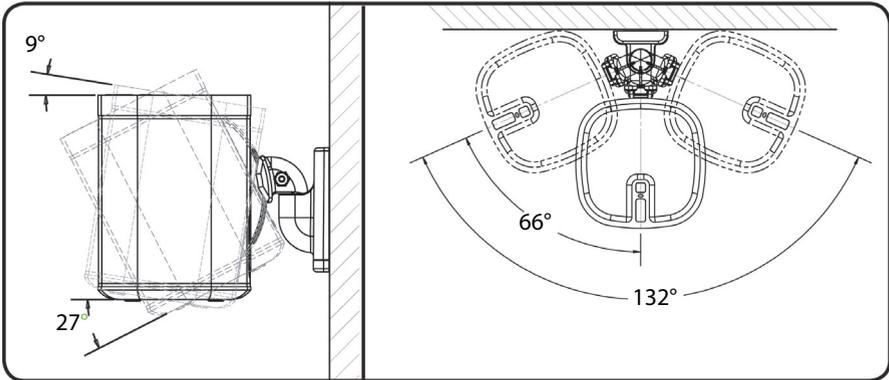


### Sonos Play:3

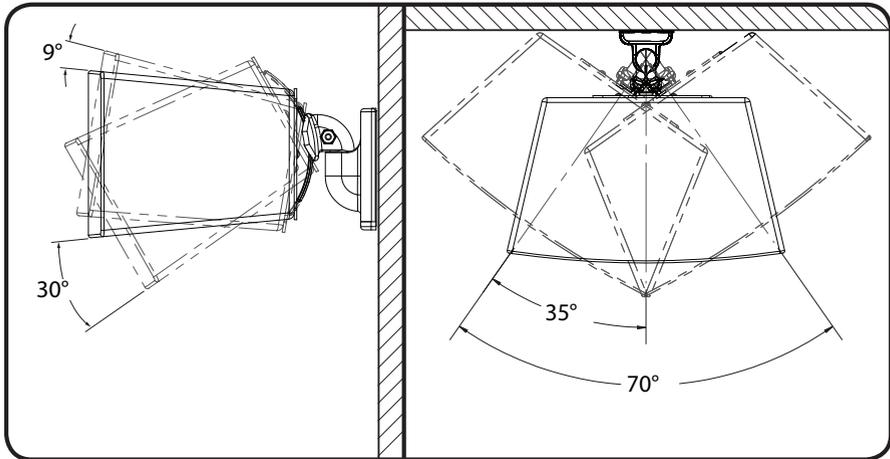


## Removing the speaker

- 1 Use a small screwdriver to loosen the cap (B) and slide it off the mount.
- 2 Slide the speaker/wall mount assembly (A) up and off the wall plate (C).

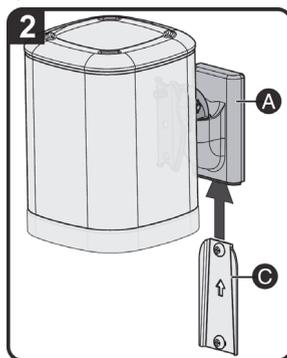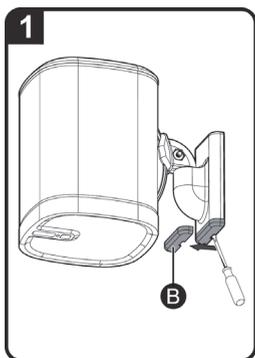


- 3 Remove the Play:1/Play:3 speaker screw (G) to remove the mount (A) from your speaker.

### Sonos Play:1

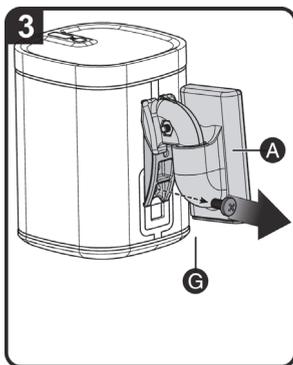

### Sonos Play:3

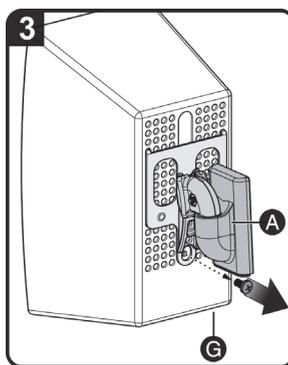

## You'll need



Phillips screwdriver

# One-Year Limited Warranty

## Definitions:

The Distributor\* of Rocketfish branded products warrants to you, the original purchaser of this new Rocketfish-branded product ("Product"), that the Product shall be free of defects in the original manufacturer of the material or workmanship for a period of one (1) year from the date of your purchase of the Product ("Warranty Period").

For this warranty to apply, your Product must be purchased in the United States or Canada from a Best Buy branded retail store or online at [www.bestbuy.com](http://www.bestbuy.com) or [www.bestbuy.ca](http://www.bestbuy.ca), and is packaged with this warranty statement.

## How long does the coverage last?

The Warranty Period lasts for 1 year (365 days) from the date you purchased the Product. Your purchase date is printed on the receipt you received with the Product.

## What does this warranty cover?

During the Warranty Period, if the original manufacture of the material or workmanship of the Product is determined to be defective by an authorized Rocketfish repair center or store personnel, Rocketfish will (at its sole option): (1) repair the Product with new or rebuilt parts; or (2) replace the Product at no charge with new or rebuilt comparable products or parts. Products and parts replaced under this warranty become the property of Rocketfish and are not returned to you. If service of Products or parts are required after the Warranty Period expires, you must pay all labor and parts charges. This warranty lasts as long as you own your Rocketfish Product during the Warranty Period. Warranty coverage terminates if you sell or otherwise transfer the Product.

## How to obtain warranty service?

If you purchased the Product at a Best Buy retail store location, please take your original receipt and the Product to any Best Buy store. Make sure that you place the Product in its original packaging or packaging that provides the same amount of protection as the original packaging. If you purchased the Product from a Best Buy online web site ([www.bestbuy.com](http://www.bestbuy.com) or [www.bestbuy.ca](http://www.bestbuy.ca)), mail your original receipt and the Product to the address listed on the web site. Make sure that you put the Product in its original packaging or packaging that provides the same amount of protection as the original packaging.

To obtain warranty service, in the United States call 1-888-BESTBUY, Canada call 1-866-BESTBUY. Call agents may diagnose and correct the issue over the phone.

## Where is the warranty valid?

This warranty is valid only in the United States and Canada at Best Buy branded retail stores or websites to the original purchaser of the product in the county where the original purchase was made.

## What does the warranty not cover?

This warranty does not cover:

- Customer instruction/education
- Installation
- Set up adjustments
- Cosmetic damage
- Damage due to weather, lightning and other acts of God, such as power surges
- Accidental damage
- Misuse
- Abuse
- Negligence
- Commercial purposes/use, including but not limited to use in a place of business or in communal areas of a multiple dwelling condominium or apartment complex, or otherwise used in a place of other than a private home.
- Modification of any part of the Product, including the antenna
- Display panel damaged by static (non-moving) images applied for lengthy periods (burn-in).
- Damage due to incorrect operation or maintenance
- Connection to an incorrect voltage or power supply
- Attempted repair by any person not authorized by Rocketfish to service the Product
- Products sold "as is" or "with all faults"
- Consumables, including but not limited to batteries (i.e. AA, AAA, C etc.)
- Products where the factory applied serial number has been altered or removed
- Loss or Theft of this product or any part of the product
- Display panels containing up to three (3) pixel failures (dots that are dark or incorrectly illuminated) grouped in an area smaller than one tenth (1/10) of the display size or up to five (5) pixel failures throughout the display. (Pixel based displays may contain a limited number of pixels that may not function normally.)
- Failures or Damage caused by any contact including but not limited to liquids, gels or pastes.

REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS YOUR EXCLUSIVE REMEDY FOR BREACH OF WARRANTY. ROCKETFISH SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR THE BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT, INCLUDING, BUT NOT LIMITED TO, LOST DATA, LOSS OF USE OF YOUR PRODUCT, LOST BUSINESS OR LOST PROFITS. ROCKETFISH PRODUCTS MAKES NO OTHER EXPRESS WARRANTIES WITH RESPECT TO THE PRODUCT, ALL EXPRESS AND IMPLIED WARRANTIES FOR THE PRODUCT, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF AND CONDITIONS OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE WARRANTY PERIOD SET FORTH ABOVE AND NO WARRANTIES, WHETHER EXPRESS OR IMPLIED, WILL APPLY AFTER THE WARRANTY PERIOD. SOME STATES, PROVINCES AND JURISDICTIONS DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS, WHICH VARY FROM STATE TO STATE OR PROVINCE TO PROVINCE.

Contact Rocketfish:

For customer service please call 1-800-620-2790 (U.S. and Canada) or 01-800-926-3010 (Mexico)

[www.rocketfishproducts.com](http://www.rocketfishproducts.com)

ROCKETFISH is a trademark of Best Buy and its affiliated companies

Distributed by Best Buy Purchasing LLC

7601 Penn Avenue South, Richfield, Minnesota 55423 U.S.A.

© 2017 BBY Solutions, Inc. All rights reserved.

**Made in China**



Part # 6907-302006

[www.rocketfishproducts.com](http://www.rocketfishproducts.com)  
(800) 620-2790 (U.S. and Canada) or 01-800-926-3010 (México)

ROCKETFISH is a trademark of Best Buy and its affiliated companies.  
Registered in some countries. Distributed by Best Buy Purchasing, LLC  
7601 Penn Ave South, Richfield, MN 55423 U.S.A.  
©2017 Best Buy. All rights reserved.  
Made in China