

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be taken, including the following:

READ ALL INSTRUCTIONS BEFORE USING

FOR HOUSEHOLD USE ONLY KEEP AWAY FROM WATER DANGER

Any appliance is electrically live, even when the switch is off. To reduce the risk of death or injury by electric shock:

1. Always unplug appliance from electrical outlet immediately after using (except when charging unit).

2. Do not place or store appliance where it could fall or be pulled into a tub or sink.

3. Do not use appliance while bathing or in the shower.

4. Do not place appliance in, or drop into water or other liquids.

5. If appliance has fallen into water, do not reach for it. Unplug immediately.

6. Unplug this appliance before cleaning.

WARNING — To reduce the risk of burns, electric shock, fire, or injury to persons:

1. Except when charging, never leave a plugged-in appliance unattended.

2. This appliance should not be used by, on, or near children or individuals with certain disabilities.

3. Use appliance only for its intended use as described in this manual. Use only attachments

recommended by the manufacturer. Do not use an extension cord to operate the appliance.

4. Never operate the appliance if it has a damaged cord or plug, is not working properly, has been dropped or damaged, or dropped into water. Return the appliance to a Conair Service Center for examination and repair.

5. Keep the appliance cord away from heated surfaces.

6. Do not pull, twist or wrap the cord around the appliance.

7. Never drop or insert any object into any opening on the appliance.

8. Do not place the appliance on any surface while it is operating.

9. Do not use the appliance with a damaged or broken comb or with teeth missing from the blades, as injury may result. Before each use, make certain the blades are aligned properly and oiled.

10. Do not use the appliance outdoors or where aerosol (spray) products are being used or where oxygen is being administered.

11. This appliance is not a toy. Keep away from children.

12. **THIS PRODUCT IS FOR HOUSEHOLD USE ONLY.**

FEDERAL COMMUNICATIONS COMMISSION NOTICE

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

DATE OF ISSUE: OCTOBER 22, 2019

SAVE THESE INSTRUCTIONS

USER MANUAL

Before using the Class 2 Power Supply, read these instructions carefully.

Use with adapter CA51

Rated input voltage: 100–240V AC, 50/60Hz 0.2A

Output: 6.0V DC 70mA

OPERATION

1. For dry location use only. Do not expose to water.

2. When not in use, unplug unit completely.

3. Unit will become warm during operation.

CAUTION

1. Dry location use only. Do not expose to liquids, vapor, or rain.

2. Ensure jack is plugged into the trimmer unit before plugging the adapter into the outlet.

3. Do not operate any appliance that has a damaged output cord or housing.

4. Always unplug the unit before cleaning or when not in use.

5. This power unit is intended to be correctly oriented in a vertical or floor-mount position.

6. Be sure voltage is correct before plugging in. For connection to a power supply not in the U.S.A., use an attachment plug adapter of the proper configuration for power outlet. The adapter included automatically adjusts to the input voltage.

DO NOT USE WITH A VOLTAGE CONVERTER.

TRIMMER OPERATING PRECAUTIONS

This trimmer has a built-in rechargeable battery. Do not throw into fire, apply heat, or charge, use or leave in a high-temperature environment.

CAUTION: Any changes or modifications not expressly approved by the Conair® Corporation, the manufacturer of this product and the party responsible for compliance, could void the user's authority to operate the equipment.

TROUBLESHOOTING

If your rechargeable trimmer does not seem to be taking a charge, take the following troubleshooting steps before returning it for repair:

1. Be sure the electrical outlet is working by plugging in another appliance to test the outlet.

2. Make sure the electrical plug is not connected to a switch that turns power off when lights are turned off.

3. Make sure the adapter is inserted into the trimmer properly, all the connections are secure and that the trimmer is in the OFF position.

CAUTION

1. Dry location use only. Do not expose to liquids, vapor, or rain.

2. Ensure jack is plugged into the trimmer unit before plugging the adapter into the outlet.

3. Do not operate any appliance that has a damaged output cord or housing.

4. Always unplug the unit before cleaning or when not in use.

5. This power unit is intended to be correctly oriented in a vertical or floor-mount position.

6. Be sure voltage is correct before plugging in. For connection to a power supply not in the U.S.A., use an attachment plug adapter of the proper configuration for power outlet. The adapter included automatically adjusts to the input voltage.

DO NOT USE WITH A VOLTAGE CONVERTER.

USER MAINTENANCE INSTRUCTIONS

REMOVING THE BLADE SET

1. Make sure the trimmer is in the OFF position.

2. Place your thumb against the smaller cutter and push up to remove the blade set.

REPLACING THE BLADE SET

1. Make sure the trimmer is in the OFF position.

2. Align the back prong of the trimmer blade with the guide slot on the trimmer housing, place your thumb on top of the blade and snap into place.

OILING THE BLADES

1. Oil the trimmer once a month.

2. Turn the trimmer on.

3. Hold and point the blades downward.

4. Spread one drop of oil across the blades.

5. Turn the trimmer off and wipe away any excess oil.

NOTE:

1. Do not over-oil the blades, as this can damage the motor.

2. Do not oil the motor bearing, as it is permanently lubricated.

3. KEEP OIL AWAY FROM CHILDREN.

BLADE CARE


1. Brush away any loose hair that collects in the blades.

2. Store the trimmer in a safe location.

3. Sharpen or replace both blades at the same time when servicing your trimmer. This is normal.

BLENDING THE JAWLINE

Attach a jawline comb to the trimmer, hold the trimmer in an upright position and begin trimming under your jawline, using short, even strokes

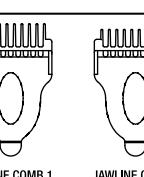

JAWLINE COMB 1

JAWLINE COMB 2

ROTARY NOSE & EAR TRIMMER

1. Make sure the trimmer is in the OFF position.

2. Detach normal trimming blade (see Removing the Blade Set section).

3. Installing the nose/ear trimmer:

Insert the pin of the trimmer body into the hexagonal hole of the trimmer head as shown in Fig. 1.

Fig. 1

4. Press and snap the trimmer head onto the body as shown in Fig. 2.

Fig. 2


5. Detaching the nose/ear trimmer:

Hold the trimmer as shown in Fig. 3 with the thumb pressing the top front part of the trimmer head and snap it off.

Fig. 3




1. Use the comb to shave the sideburns.

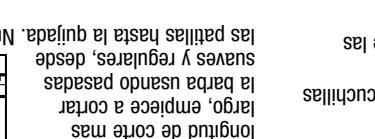


1. Use the comb to shave the ear area.




1. Use the comb to shave the nose area.

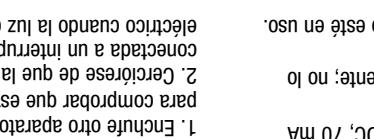

1. Use the comb to shave the chin area.

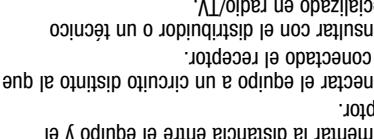

1. Use the comb to shave the upper lip area.

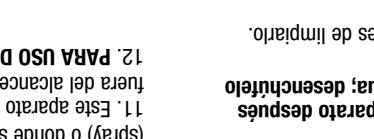


1. Use the comb to shave the mustache area.




1. Use the comb to shave the sideburns.




1. Use the comb to shave the ear area.

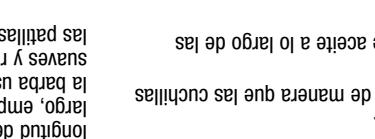


1. Use the comb to shave the nose area.

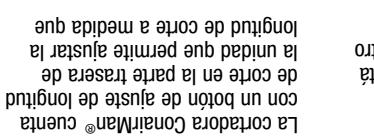


1. Use the comb to shave the chin area.

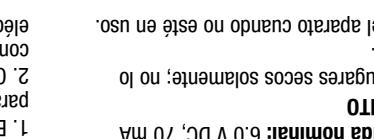

1. Use the comb to shave the upper lip area.

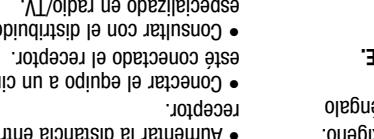

1. Use the comb to shave the mustache area.

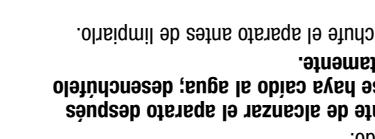

1. Use the comb to shave the sideburns.

