

ANALOG


ENGLISH

1 Hand Movement GL26

Time Setting

1. Pull crown out to position 2.
2. Turn crown clockwise to set the hour/minute hand to desired time.
3. Return crown to position 1.

NOTE: Outside tracking represents 12 minute increments.

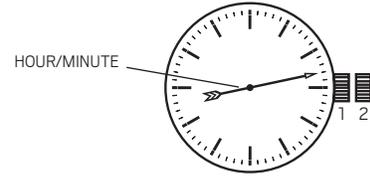


2 Hand Movement 762.4

Time and Date Setting

1. Pull crown out to position 2 and turn to set hour and minute hands.
2. Return crown to position 1.


NOTE: Large indicator shows hours; minutes are indicated by black arrow on disc.

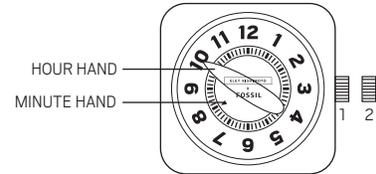

2 Hand Movement 762.3 / VD78

Time Setting

1. Pull crown out to position 2 and turn to set hour and minute hands.
2. Return crown to position 1.

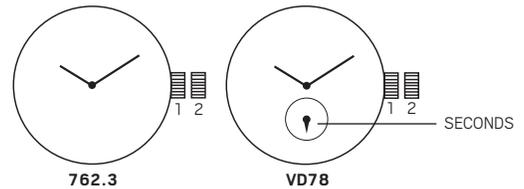


3 Hand Movement Y121E4

Time Setting

1. Pull crown out to position 2 and turn to set hour and minute hands.
2. Return crown to position 1.

NOTE: Crown at 2 hour, spins the patterned disc.

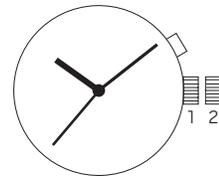

3 Hand / 3 Hand Date




Date Setting

1. Pull the crown out to position 2.
2. Turn the crown either clockwise or counter-clockwise and set the date for the previous day.
The direction that moves the date varies on different watch models.

Time Setting


1. Pull crown out to position 3.
2. Turn counter-clockwise to advance the time and continue until the day changes to the present day.
3. Set to the correct time.
4. Push crown back to position 1.

NOTE: If watch has no date function, pull crown out to position 2 for time setting.

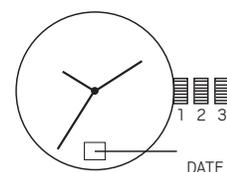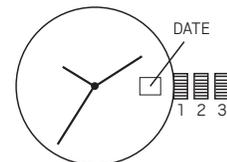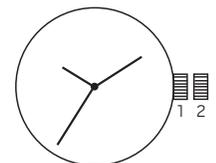

3 Hand with Sun-Moon Dial PC39A

1. Pull crown out to position 2.
2. Turn crown to set hour and minute hands.
NOTE: Sun/Moon disc moves in conjunction with hour and minute hands and will indicate AM/PM time.
3. Return crown to position 1.

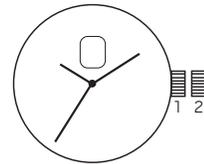

3 Hand Day-Date VJ55A / VX43

Day Setting



1. Pull crown out to position 2.
2. Turn crown clockwise until correct day is shown in day window.
3. Return crown to position 1.

NOTE FOR VX43:

Sunday: Round window will be solid color (showing full moon). Monday - Friday: As watch adjusts Monday through Friday, the round window will show a crescent moon, where the bottom of moon coordinates with the specific day in the window underneath. Crescent moon will decrease in size when adjusting from beginning to end of week. Saturday: Window will be solid color (with no moon).

Time and Date Setting

1. Pull crown out to position 3.
2. Turn crown counter-clockwise until correct time is shown.
3. Turn crown clockwise 24 hours until correct date is shown.
4. Return crown to position 1.

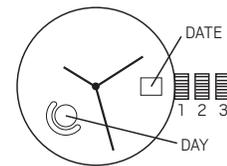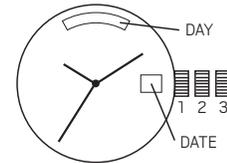

3 Hand with Alarm Function ISA 8176-1990

Time Setting

1. Pull crown out to position 3.
2. Turn crown clockwise to advance hour and minute hands.
3. Return crown to position 1.

Alarm Setting

1. Pull crown out to position 2.
2. Turn crown counter-clockwise to set alarm hand position.
3. Return crown to position 1.

Alarm Function

1. Press A to toggle alarm on/off. Alarm will beep twice to indicate alarm "on," and will beep once to indicate alarm "off."
2. Alarm will sound for 15 seconds. Push A to silence alarm.



NOTE: If A is not pressed, alarm will sound again in one minute.



Retrograde with Date Sweep VD86A / VD85J

Time and Date Setting


1. Pull crown out to position 3 and rotate clockwise to set day of week. Hand in upper left indicates weekday and will automatically reset to "M" at the end of the week.
2. Keeping crown in position 3, rotate hands to set the time (make sure am/pm is set correctly).
3. Push crown back to position 1.
4. Pull crown out to position 2 and rotate counter-clockwise to set date.
5. Push crown back to position 1.

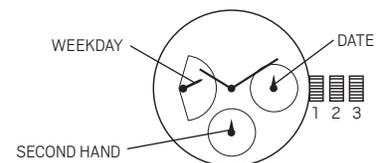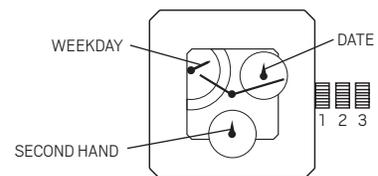

Retrograde Three Hand Date with Day Indicator JR00

Time, Date and Weekday Setting

1. Pull crown out to position 2 and turn counter-clockwise to set date to the previous day.
2. Turn crown clockwise to set weekday to the previous day.
NOTE: Weekday indicator will automatically reset to "M" at the end of the weekday cycle.
3. Pull crown out to position 3 and turn clockwise until the present date and weekday are displayed. Continue turning crown to set the correct AM/PM time.
4. Return crown to position 1.

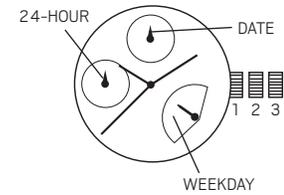

NOTE: To ensure accuracy, do not set the date and weekday between 10:00 PM and 1:00 AM.


3 Hand Dual Time 9238 / 1980

Time Setting

1. Pull crown out to position 2.
2. Turn crown to advance hour and minute hands.
3. Return crown to position 1.

Dual Time Setting

Press A to advance to desired time.

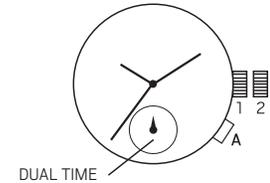

Dual Time VX01


Setting Time A

1. Pull crown A out to position 2 when the second hand is at the 12 o'clock position.
2. Turn crown to set desired time.
3. Return crown to position 1.

Setting Time B

1. Pull crown B out to position 2 when the second hand is at the 12 o'clock position.
2. Turn crown to set desired time.
3. Return crown to position 1.

NOTE: When setting the minute hand, advance it 4 to 5 minutes ahead of the desired time and then turn it back to the exact time.

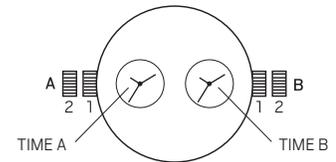


ANALOG - DIGITAL

Ana-Digi FL1331A

Normal Time Display

1. Press A or B for EL.
2. Press and hold A or B for 2 seconds to turn digital display off. Press any pusher to turn on the display when it is off.
3. Press C to toggle 12/24-hour format. Display will show "AM" or "PM" for 12-hour format.
4. Press D to change mode. Mode sequence is time, date, chronograph, alarm.
NOTE: In any setting mode, if no pusher is operated for 30 seconds, all changes will be saved and the setting will automatically return to display mode.

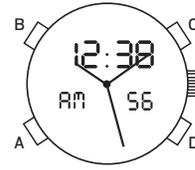

Time and Calendar Setting

1. In normal time display or calendar display, press and hold C for 2 seconds, year will begin flashing.
2. Press D to advance digits; press and hold D for fast advance.
3. Press C to advance to next setting value.
4. Setting sequence is: year, month, date, hour, minute, seconds.
5. Press C to exit setting mode.
NOTE: Weekday will automatically update upon exiting setting mode.

Alarm Mode

1. Press D to change to alarm mode.
2. Press C to toggle alarm/chime on/off.
3. Alarm will sound at preset time for 20 seconds; press any pusher to silence alarm.

Chronograph Mode

1. Press D to change to chronograph mode.
2. Press D and hold 2 seconds to reset chronograph to zero.
3. Press C to start/stop the chronograph.
4. Press D to reset to zero.

Alarm Setting

1. In alarm mode, press and hold C for 3 seconds; hour will begin flashing.
2. Press D to advance digit; press and hold D for fast advance.
3. Press C to set and advance to minute.
4. Press D to advance digit; press and hold D for fast advance.
5. Press C to exit setting mode.


Ana-Digi FL202

Normal Time Display

1. Press A to toggle 12/24H format.
2. Press B to change display mode. Display mode sequence is time, calendar, seconds.

Time/Calendar Setting

1. From any display mode, press and hold A to enter setting mode; year will begin flashing.
2. Press B to advance setting value. Press and hold B for fast advance.
3. Press A to set and advance to next setting value.
4. Setting sequence is: year, month, date, hour, minute.
5. Setting will automatically return to display mode after minute is set, or if no pusher is operated for 30 seconds.
NOTE: When setting hour, digits are in 24-hour display.

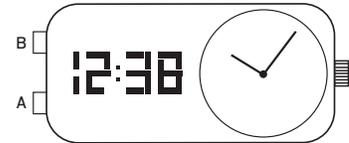

Ana-Digi QFL133

Normal Time Display

1. Press A to change mode. Mode sequence is normal time display, alarm, chronograph, and time/calendar setting.
2. Press B for EL.
3. Press C to toggle 12/24-hour time.

NOTE: In any setting mode, if no pusher is operated for 2 minutes, all changes will be saved and the setting will automatically return to normal time display.

Time and Calendar Setting


1. Press A to change to time/calendar setting mode; seconds will begin flashing.
2. Press C to set seconds to zero.
3. Press D to advance to next setting value.
4. Press C to increase digit, press and hold C for fast advance.
5. Setting sequence is: seconds, hour, minute, month, date and weekday.
6. Press A to exit setting mode.

Alarm Mode

1. Press A to change to alarm mode.
2. Press C to toggle alarm/chime on/off.
3. Alarm will sound at preset time for 20 seconds; press C or D to silence alarm.

Alarm Setting

1. In alarm mode, press D to enter setting mode; hour will begin flashing.
2. Press C to increase hour; press and hold C for fast advance.
3. Press D to set and advance to minutes.
4. Press C to increase minutes; press and hold C for fast advance.
5. Press D to save data and exit setting mode; press A to save data, exit setting mode, and return to normal time display.

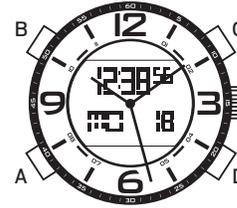

Chronograph Mode

1. Press A to change to chronograph mode.
2. Press C to start/stop the chronograph.
3. Press D to reset to zero.

Split Time

1. Press D while the chronograph is running for split time.
2. Press D again to return to chronograph.
3. Repeat steps 1 and 2 to measure multiple split times.
4. Press C to finalize timing.
5. Press D to reset to zero.

Ana-Digi QFO-017 / Y121E6, QFO-016 / Y121E4

Time and Calendar Setting

1. Press A for EL.
2. Press and hold C for 2 seconds for the time setting state and you will see the seconds flashing.
3. Press D to reset time to zero.
4. Press B to toggle through the following setting sequence:
Second – Minute – Hour – 12/24-hour format – Month – Day – Year
5. Press D to adjust the flashing item.
6. The day of the week is automatically displayed in accordance with the date (month, day, year).
7. Press C to return to Real Time Mode.

Alarm Mode


1. Press B to change to alarm mode.
2. Press D to turn on/off the Alarm or Chime.
3. Alarm will sound at preset time for 20 seconds.

Alarm Setting

1. In alarm mode, press and hold C for 2 seconds to select the "Hour" setting.
2. Press B to select the "Minute" setting.
3. Press D to adjust the flashing item.

Chronograph Mode

1. Press B to change to chronograph mode.
2. Press D to start/stop the chronograph.
3. Press C and hold to reset chronograph to zero.
4. Press C while chronograph is running to display split count.
5. Press D to exit the split count and stop counting.
6. Press C and hold to reset chronograph to zero.

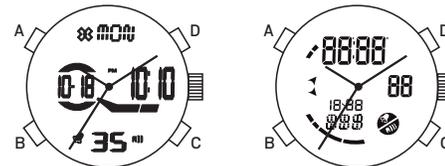

QFO-017 / Y121E6

QFO-016 / Y121E4

Countdown Timer

1. Press B to change to timer mode.
2. Press and hold C for 2 seconds to display the timer setting.
3. Press B to select "Hour" or "Minute" and press D to adjust the flashing item.
4. Press C to complete the setting.
5. Press D to start/stop the timer.
6. Press C and hold to reset the timer.


Dual Time

1. Press D to change to dual time mode.
2. Press and hold C for 2 seconds to select the "Minute" setting.
3. Press B to select the "Hour" setting.
4. Press D to adjust the flashing item.
5. Press C again to complete the setting.

World Time Module (Analog-Digital and Digital)


Normal Time Display

1. Press pusher B for EL.
2. Press pusher C for hourly chime on/off.
3. Press pusher D for DST on/off for the selected city.
4. In any mode or setting, if no pusher is operated for 60 seconds, setting will be returned to normal time display.

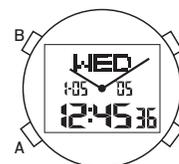

Time and Calendar Mode

1. Press and hold pusher B for 2 seconds to enter setting mode. 12/24 hour time will begin flashing.
2. Press pusher C to select 12/24 hour time.
3. Press pusher A to select and change seconds, minute, hour, year, month, day and city.
4. Press pusher C to increase the digit; press pusher D to decrease the digit.
5. Press pusher B to exit setting mode.

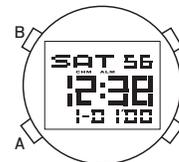

World Time Mode

1. Press pusher A to select world time mode.
2. Press pusher C to select city.
3. Press pusher D for DST on/off for the selected city.

Words	City	Hour Difference	Words	City	Hour Difference
MDY	Midway	-11 hours	PAR	Paris	+1 hour
HNL	Honolulu	-10 hours	CAI	Cairo	+2 hours
ANC	Anchorage	-9 hours	MOW	Moscow	+3 hours
LAX	Los Angeles	-8 hours	DXB	Dubai	+4 hours
DEN	Denver	-7 hours	KHI	Karachi	+5 hours
CHI	Chicago	-6 hours	DAC	Dacca	+6 hours
NYC	New York	-5 hours	BKK	Bangkok	+7 hours
CCS	Caracas	-4 hours	HKG	Hong Kong	+8 hours
RIO	Rio de Janeiro	-3 hours	TYO	Tokyo	+9 hours
-2H	-2H	-2 hours	SYD	Sydney	+10 hours
-1H	-1H	-1 hour	NOU	Noumea	+11 hours
LON	London	0 hours	AKL	Auckland	+12 hours

Alarm Setting (3 alarms)

1. Press pusher A to select alarm mode.
2. Press pusher C to scroll through alarms.
3. Press pusher D for alarm on/off.
4. Press and hold pusher B for 2 seconds to enter setting mode. Minutes will begin flashing.
5. Press pusher A to select minutes and hour.
6. Press pusher C to increase the digit; press pusher D to decrease the digit. Alarm is automatically turned on when setting is changed.
7. Press pusher B to exit setting mode.

Chronograph Mode

1. Press pusher A to select chronograph mode (STW).
2. Press pusher C to start chronograph; press pusher D to stop chronograph.
3. Press pusher D to reset chronograph when it is not running.

Lap Counting

1. Press pusher C while chronograph is running (will record up to 20 laps).
2. Press pusher D to finalize timing.
3. Press pusher A to recall laps (TOT) when information is recorded in the chronograph (will recall up to 20 laps).
4. Press pusher C to view next lap; press pusher D to view previous lap.
5. Enter regular chronograph mode; press pusher D to reset to zero.


Countdown Timer

1. Press pusher A to select timer mode.
2. Press pusher C to start/stop the timer.
3. Press pusher D to reset timer when it is not running. Timer will show all zero's before timer is started again.
4. Press and hold pusher B for 2 seconds to enter setting mode. Seconds will begin flashing.
5. Press pusher A to select seconds, minutes and hour.
6. Press pusher C to increase digit; press pusher D to decrease digit.
7. Press pusher B to exit setting mode.

Ana-Digi ISA Swiss 9012

General

1. Press crown to change mode. Mode sequence is "TIME 1," "TIME 2," "ALARM," "CHRONOGRAPH," and "COMPASS."
2. From each mode press and hold the crown for 3 seconds to synchronize the hands.
3. In any mode, press C to activate the backlight for the digital dial.
4. From any mode, pull crown out to position 2 to set "TIME 1," "DATE" or "PARAMETERS."
5. The day of the month is displayed in the middle right display window in every mode.
NOTE: Analog time is set automatically based off of the digital time settings of the movement. The watch hands will show the time for "TIME 1" by default in all modes.

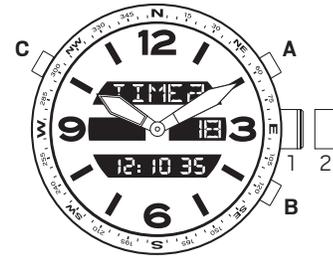

Synchronizing the Hands

This process ensures that the hands are properly aligned in order to show accurate time.

1. From any mode, press and hold the crown for 3 seconds to enter "SYNCH" mode.
2. Press A to advance the setting of the hour hand. Align hour hand with 12. Press and hold A for fast advance.
3. Press B to advance the setting of the minute hand. Align minute hand with 12. Press and hold B for fast advance.
4. Press crown to exit.

Time Mode 1

Hands show "TIME 1" Display shows "TIME 1."

1. To edit in this mode. Pull the crown out or press and hold B for 1 second. The hands will move to LCD Viewing Mode (10:10).
2. Press B to cycle through setting options. Sequence is "TIME 1," "DATE," "PARAMETERS."
3. Press A to select the mode you wish to set.

Setting Time 1

Follow the instructions in "TIME 1 MODE" and choose "TIME 1."

1. The hour should be flashing. Press A to advance the hour to the desired value. Press and hold A for fast advance. Press B when done.
2. The minute should be flashing. Press A to advance the minute to the desired value. Press and hold A for fast advance. Press B when done.
3. The seconds should be flashing. Press A to reset the seconds to "00". Press B when done.

Setting Date

Follow instructions in "TIME 1 MODE" and choose "DATE."

1. The 2-digit year should be flashing. Press A to advance the year to the desired value. Press and hold A for fast advance. Press B to advance to set the month.
2. The 2-digit month should be flashing. Press A to advance the month to the desired value. Press and hold A for fast advance. Press B to advance to set the day.
3. The 2-digit day should be flashing. Press A to advance the day to the desired value. Press and hold A for fast advance. Press B when finished.

Setting Parameters

Follow instructions in "TIME 1 MODE" and choose "PARAMETERS."

1. Press A to toggle between 24-hour and 12-hour. This will change the format in which the time is displayed digitally. Press B when finished.
2. Press A to toggle the hour chime on and off. Press B when done.
NOTE: To return to TIME 1 display, wait 5 seconds on any step or press B when "PARAM" is flashing in the top display. If crown is in position 2, return crown to position 1 to return to TIME 1 display.

Time Mode 2

Hands show "TIME 1" Display shows "TIME 2."

NOTE: Press A and B together to swap time displayed by hands and display. Hands show "TIME 2," display shows "TIME 1."

Setting Time 2

1. Press and hold B for 1 second. Hands move to LCD Viewing Mode.
2. The hour should be flashing. Press A to advance the hour to the desired value. Press and hold A for fast advance. Press B when done.
3. The minutes should be flashing. Press A to advance the minutes in 30-minute increments. Press B when done.

Alarm Mode

1. Press crown to choose alarm mode. Hands will automatically move to LCD Viewing Mode for 20 seconds.
2. Press A to turn alarm on or off.

Setting Alarm

1. Press and hold B for 1 second. Hands will move to LCD Viewing Mode.
2. The hour should be flashing. Press A to advance the hour to the desired value. Press and hold A for fast advance. Press B when done.
3. The minutes should be flashing. Press A to advance the minute to the desired value. Press and hold A for fast advance. Press B when done to exit.
NOTE: Waiting 5 seconds at any point during setting will exit the setting mode.

Chronograph Mode

1. Press crown to choose chronograph mode. Hands will automatically move to LCD Viewing Mode for 20 seconds.
2. Any button press will move the hands to LCD Viewing Mode for 20 seconds.

Chronograph Timing

1. Press A to start and stop the chronograph.
2. Press B while the chronograph is running to show the split time.
NOTE: You will see the minute and seconds demarcations blinking to indicate the chronograph is still running. Press B again to return to the running chronograph.
3. Press B when the chronograph is stopped to reset the chronograph.

Compass Mode

The minute hand indicates the direction of North.
The hour hand indicates the programmed heading.
The hands will animate for 20 seconds at a time. To restart the animation press A.

Setting the Compass Heading

1. Press and hold A for 1 second. The hands will move to LCD Viewing Mode.
2. Press A to increase or B to decrease the degrees until the heading needed is reached. Press and hold A for fast advance or press and hold B for fast decrease.
3. Press the crown in or wait 5 seconds to return to the compass display.

Calibrating the Compass Declination

1. Press and hold B for 1 second. The hands will move to LCD Viewing Mode.
2. Press A to increase degrees East or West (indicated in the middle left of the display) until the desired degree of declination is reached (Range: 0-40 E or 0-40 W). Press and hold A for fast advance. Press B when done.
3. Press A while "CALIB" is flashing to begin calibration.
4. As the hands turn, turn the whole watch so that the hands stay pointing away from you. The watch will return to compass mode when the calibration is complete.


Low Battery Mode

When the battery is low the word "BATT" will display at 12 and the hands will move to show 12:00. Only the digital time and date will work in this mode.

AUTOMATIC / MECHANICAL

Hand Wound Mechanical 6T33 / TY3600

1. To start time-keeping, if watch has completely stopped, rotate crown clockwise approximately 20 times (or until you feel resistance) in position 1. When fully wound, the timepiece has a power reserve of approximately 40 hours.
2. Pull crown out to position 2 and rotate clockwise or counter-clockwise to set time after watch has been wound.
3. Return crown to position 1.



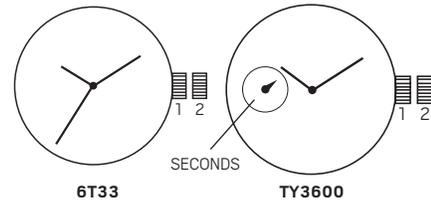


Automatic 8N24 / 82S0 / 82S7

1. To start time-keeping, if watch has completely stopped, rotate crown clockwise approximately 40 times (or until you feel resistance) in position 1. When fully wound, the timepiece has a power reserve of approximately 40 hours.
2. Pull crown out to position 2 and rotate clockwise or counter-clockwise to set time after watch has been wound.
3. Return crown to position 1.

NOTE: A timepiece with an automatic winding movement obtains the power to wind itself by the movement of your wrist, there is no battery. Therefore, not wearing the timepiece for several consecutive days could exhaust the power reserve.

It is important your timepiece is adjusted to match the size of your wrist. A loose fit may result in a loss in capacity of the timepiece to wind itself.

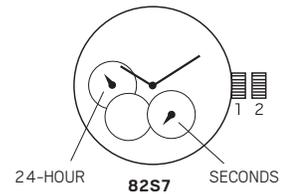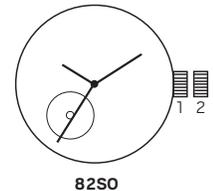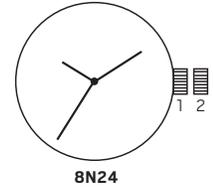


Automatic 2189

1. To start time-keeping, if watch has completely stopped, rotate crown clockwise approximately 40 times (or until you feel resistance) in position 1. When fully wound, the timepiece has a power reserve of approximately 36 hours.
2. Pull crown out to position 2 and rotate clockwise or counter-clockwise to set time after watch has been wound.
3. Return crown to position 1.

NOTE: A timepiece with an automatic winding movement obtains the power to wind itself by the movement of your wrist, there is no battery. Therefore, not wearing the timepiece for several consecutive days could exhaust the power reserve.

It is important your timepiece is adjusted to match the size of your wrist. A loose fit may result in a loss in capacity of the timepiece to wind itself.

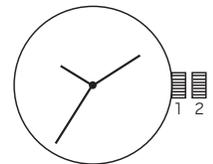


Automatic TY2809 / TY2723 / TY2542 / NH38


1. To start time-keeping, if watch has completely stopped, rotate crown clockwise approximately 50 times (or until you feel resistance) in position 1. When fully wound, the timepiece has a power reserve of approximately 36 hours.
2. Pull crown out to position 2 and rotate clockwise or counter-clockwise to set time after watch has been wound.
3. Return crown to position 1.

NOTE: A timepiece with an automatic winding movement obtains the power to wind itself by the movement of your wrist, there is no battery. Therefore, not wearing the timepiece for several consecutive days could exhaust the power reserve.


It is important your timepiece is adjusted to match the size of your wrist. A loose fit may result in a loss in capacity of the timepiece to wind itself.

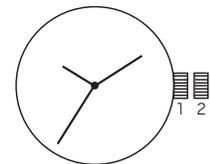


TY2809

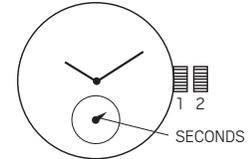

TY2723

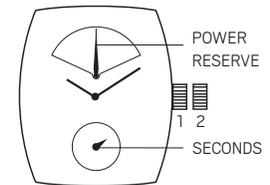

TY2542

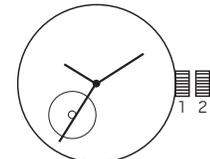

NH38


Automatic TY2876

1. To start time-keeping, if watch has completely stopped, rotate crown clockwise approximately 50 times (or until you feel resistance) in position 1. When fully wound, the timepiece has a power reserve of approximately 40 hours.
2. Pull crown out to position 2 and rotate clockwise or counter-clockwise to set time after watch has been wound. 24-hour hand moves with hour and minute hands. Use 24-hour hand to set correct AM/PM time.
3. Return crown to position 1.
4. Press A to adjust weekday. Each press of pusher A will advance the weekday by one increment.
5. Press B to adjust month. Each press of pusher B will advance the month by one increment.
6. Press C to adjust date. Each press of pusher C will advance the date by one increment.

NOTE: A timepiece with an automatic winding movement obtains the power to wind itself by the movement of your wrist, there is no battery. Therefore, not wearing the timepiece for several consecutive days could exhaust the power reserve.

It is important your timepiece is adjusted to the size of your wrist. A loose fit any result in a loss in capacity of the timepiece to wind itself.


Do not set date between 10 PM and 2 AM (22 o'clock and 2 o'clock). Doing so could damage the movement's accuracy.

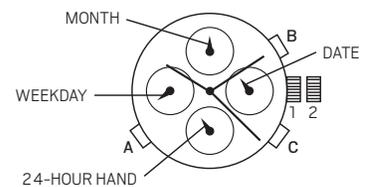

Automatic TY2714

1. To start time-keeping, rotate the crown clockwise in position 1 until power reserve hand moves from "-" (low reserve) to "+" (full reserve).
2. Pull crown out to position 2 and rotate to set time. Return crown to position 1.
3. Press A to set date. Each press of pusher A will advance the date by one increment.

NOTE: Do not set date and week between 10 PM and 4 AM (22 o'clock and 4 o'clock). Doing so could damage the movement's accuracy.

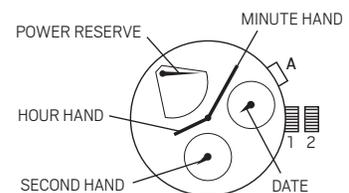

MULTIFUNCTION


Multifunction 6P28

Time Setting

1. Pull crown out to position 2.
2. Turn crown clockwise to set desired time.
3. Return crown to position 1.

24-Hour Setting

1. Pull crown out to position 2.
2. Turn crown clockwise to make a full 12 hour rotation to set either AM or PM. AM is set between 0 and 12; PM is set between 13 and 24.
3. Return crown to position 1.

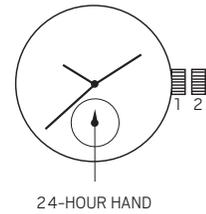


Multifunction 6P25

Date Setting

1. Pull crown out to position 2.
2. Turn counter-clockwise to select date.
2. Return crown to position 1.

Day and Time Setting

1. To set time, pull crown out to position 3.
2. Turn clockwise to set hour and minute hands. The hand showing days of the week will also move with the hour and minute hands. Keep turning until you have reached the desired day.
3. Push crown back to position 1.

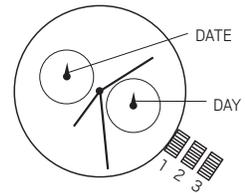

Multifunction VX3R / VX3RE


Time Setting

1. Pull crown out to position 2.
2. Turn crown clockwise to set time.
3. Return crown to position 1.

NOTE: 24-hour hand moves correspondingly with the hour and minute hands. When setting the time be sure to check that the 24-hour hand is set properly.

Date Setting

1. Pull crown out to position 3. Turn crown counterclockwise to set date.
2. Return crown to position 1.

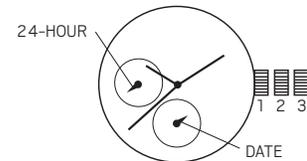


Multifunction VD75A1

Date Setting

1. Pull crown out to position 2.
2. Turn counter-clockwise to advance the date hand.
3. Push crown back to position 1.

Day and Time Setting

1. Pull crown out to position 3.
2. Turn clockwise to advance hour and minute hands. The hand showing days of the week will also move with the hour and minute hands. Keep turning until you have reached the desired day.

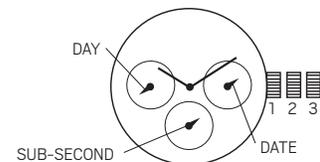

Multifunction 6P27 / 6P29 / 6P77 / 6P79 / VX3NE / VX3JE / VX3JA

Date Setting

1. Pull crown out to position 2.
2. Turn clockwise to advance the date hand.
3. Push crown back to position 1.


Day and Time Setting

1. Pull crown out to position 3.
2. Turn clockwise to advance hour and minute hands.


The hand showing days of the week will also move with the hour and minute hands. Keep turning until you have reached the desired day.

24-Hour Sub-Dial Setting


The 24-hour hand moves correspondingly with the hour and minute hands. When setting the time be sure to check that the 24-hour hand is set properly.

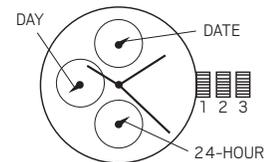

6P27 / 6P77

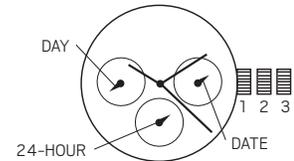

6P29 / 6P79 / VX3JE / VX3JA

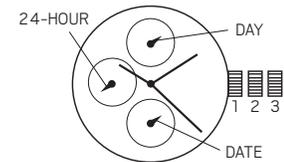

VX3NE

Multifunction JP25

Date/Time Setting

1. Pull crown out to position 2.
2. Turn crown clockwise to set date and time.
3. Return crown to position 1.

NOTE: If the date is set between the hours of around 9:00 PM and 1:00 AM, the date may not change on the following day.


Day Setting

1. Pull crown out to position 3.
2. Turn crown clockwise to set day.
3. Return crown to position 1.

Dual Time Setting

1. Press A to set dual time hand forward in 15 minute increments.
2. Press B to set dual time hand backward in 15 minute increments.

NOTE: Dual time hand can be advanced rapidly by continuously pressing A or B.

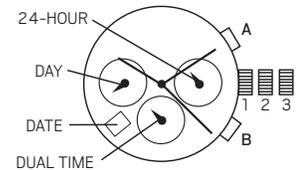

Multifunction with Alarm 8176-1990

Time and Date Setting

1. Pull crown out to position 2 and turn clockwise to set date to the previous day.
2. Pull crown out to position 3 and turn clockwise until the present date is displayed. Continue turning crown to set the correct AM/PM time.
3. Return crown to position 1.

NOTE: To ensure accuracy, do not set the date between 9:00 PM and 12:30 AM.

Second Time Zone Setting

1. Pull crown out to position 2.
2. Press A to set second time zone.

NOTE: Second time zone is read in military time, indicated on the outer portion of the dial.


Alarm Function

1. Press B to toggle alarm on/off. Alarm beeps twice to indicate alarm "on," and beeps once to indicate alarm "off."
2. Alarm will sound for 15 seconds. Push B to silence alarm.

NOTE: If B is not pressed, alarm will sound again in one minute, and will automatically change to alarm "off" setting.

Alarm Setting

1. Pull crown out to position 2 and turn counter-clockwise to set alarm indicator.
2. Return crown to position 1.

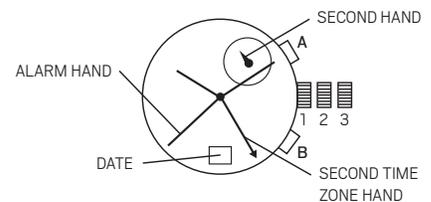


NOTE: Alarm hand is a different color from the other watch hands.

Multi-Time Zone 505.24H

Time / Calendar Setting

1. Pull RED crown B (at 4:00 position) out to position 2.
2. Turn crown clockwise to set to previous day's date.
3. Pull crown out to position 3.
4. Turn crown counter-clockwise until date changes to today's date; set correct AM or PM time.
5. Return crown to position 1.

NOTE: Second time zone hand will move in conjunction with hour and minute hands. Set hour and minute hands before setting second time zone.

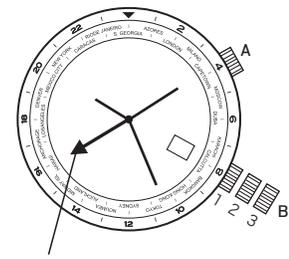

Second Time Zone Setting

1. Pull RED crown B (at 4:00 position) out to position 2.
2. Turn crown counter-clockwise to set second time zone.
3. Return crown to position 1.

NOTE: Second time zone hand is read in military time, indicated on the bezel.

Third Time Zone Reading

1. Turn crown A clockwise or counter-clockwise to match current hour with current city time zone.
2. For third time zone reading, locate the city indicating the new time zone. Each increment (to the right) indicates +1 hour; each decrement (to the left) indicates -1 hour.

Multifunction with Moonphase 6P80

Time Setting:

1. Pull crown out to position 3 when the second hand reaches the 12-hour position.
2. Turn crown clockwise to set the hour and minute hands to desired time.
3. Return crown to position 1.

Date Setting:

1. Pull crown out to position 2.
2. Turn counterclockwise until desired date is set.
3. Return crown to position 1.

Month Setting:

1. Use the pusher at the 2H position to advance the month to the desired setting. Each push advances the month.


Day Setting:

1. Pull crown out to position 3.
2. Turn crown clockwise to rotate the hour and minute hands. With every two full 12 hour rotations, the day will advance.
3. Return crown to position 1.

Moon Phase Setting:

1. To determine the age of the moon, check a newspaper or other source that lists the current age of the moon.
2. To set the moon age, pull crown out to position 2.
3. Turn crown clockwise to set the moon dial to the age (0, 7, 15 or 22) closest to the corresponding position listed in the below index.
4. Return crown to position 1.

Note: Most accurate settings can be made at the time of the new moon (0) or full moon (15). The age of the moon is determined by the period between each new moon, which is approximately 29.5 days.

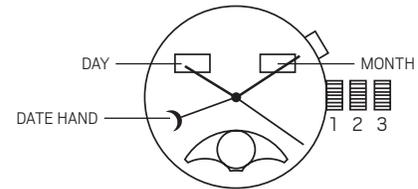

New Moon Moon's Age: 0 Spring Tide	First Quarter Moon Moon's Age: 7 Neap Tide	Full Moon Moon's Age: 15 Spring Tide	Last Quarter Moon Moon's Age: 22 Neap Tide

CHRONOGRAPH

Chronograph OS11

Date Setting

1. Pull crown out to position 2.
2. Turn crown counter-clockwise until the correct date is shown in the date window.
3. Return crown to position 1.

Time Setting


1. Pull crown out to position 3.
2. Turn crown clockwise to advance hour and minute hands.
3. Return crown to position 1.

Chronograph Operation

1. Press A to start/stop the chronograph.
2. Press B for reset.

Adjusting the Chronograph

1. Pull crown to position 3.
2. Press A to reset the second hand to "0."
3. Reset the watch to the current time and return crown to position 1.

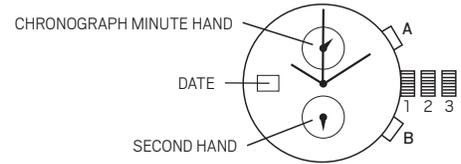

Chronograph JS05 / JS06 / JS15 / JS16 / JS25 / JS26 / VR32 / VR33

Time and Date Setting




1. Pull crown out to position 2.
2. Rotate crown clockwise or counter-clockwise until the previous day's date is shown in the date window.
3. Pull crown out to position 3.
4. Rotate crown clockwise until the correct date is shown in the date window.
5. Continue to rotate crown to set correct am/pm time.
NOTE: 24-hour hand moves correspondingly with the hour and minute hands. When setting the time be sure to check that the 24-hour hand is set properly.
6. Return crown to position 1.
NOTE: When the crown is in position 2, do not press the pushers. Otherwise the chronograph hands will move.
NOTE: Do not set the date between 9:00 PM and 1:00 AM to ensure accuracy.

Chronograph

1. Press A to start/stop the chronograph.
2. Press B to reset to zero.

Chronograph Zero Reset

1. If either of the chronograph hands is not at the zero (12:00) position, pull crown out to position 3.
2. Press A to move hands clockwise; press B to move hands counter-clockwise. Each press of A or B will move the chronograph hands by one increment/decrement. Or press and hold A or B for fast increment/decrement.
3. When both hands are in the zero position, reset time and return crown to position 1.
NOTE: Chronograph minute hand will synchronize with chronograph second hand during chronograph zero reset.

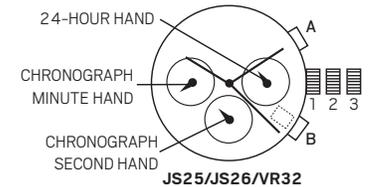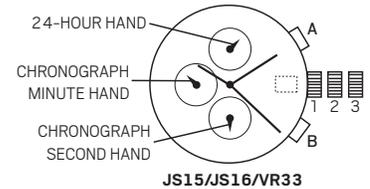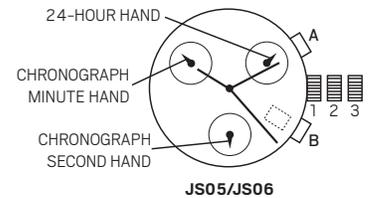

Chronograph 6S20

Setting the Date

1. Pull crown out to position 2.
2. Turn crown clockwise to advance the date hand.
3. Push crown back to position 1.

NOTE: If the date is set between the hours of around 9:00 PM and 3:00 AM, the date may not change on the following day.

Setting the Time


1. Pull crown out to position 3.
2. Turn the crown clockwise to advance hour and minute hands.
3. Push crown back to position 1.

Chronograph

1. Press A to start/stop the chronograph.
2. Press B to reset to zero.

Chronograph Reset

1. If either the of the chronograph hands is not at the zero (12:00) position pull crown out to position 3.
 2. Press A once to set the chronograph second hand to the zero position.
 3. Press B once to set the chronograph 1/20 second hand to the zero position.
- NOTE: The chronograph hands can be advanced rapidly by continuously pressing A or B.*
4. When both hands are in the zero position, reset time and return crown to position 1.

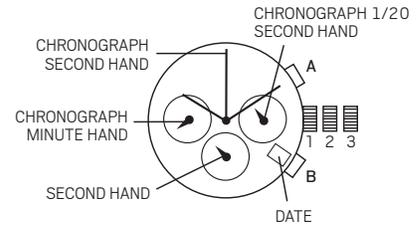

Chronograph VD51

Time and Date Setting

1. Before setting the time, make sure the chronograph second and minute hands are at the 12:00 position and the chronograph is not running. See Chronograph Operation instructions below.
2. Pull crown out to position 2.
3. Rotate crown clockwise until the previous day's date is displayed in date window.
4. Pull crown out to position 3 when the second hand is in the 12:00 position. Second hand will stop.
5. Rotate crown clockwise until the correct date is shown in the date window.
6. Continue to rotate crown to set correct am/pm time.
7. Return crown to position 1.

NOTE: When the crown is in position 2, do not press the pushers. Otherwise the chronograph hands will move.

NOTE: Do not set date between 9:00 PM and 1:00 AM to ensure accuracy.

Chronograph Operation

1. Press A to start/stop the chronograph.
2. Press B to reset.


Split Time

1. Press B while the chronograph is running.
2. Press B again to return to the chronograph.
3. Press A to finalize timing.
4. Press B to reset.

Chronograph Zero Reset

If for any reason the chronograph hands do not return exactly to the zero (12:00) position:

1. Pull crown out to position 3.
 2. Press A to reset the chronograph second hand, or press B to reset the chronograph minute hand. Each press of the pusher will advance the corresponding hand one mark. If either pusher is held down for over 2 seconds, the corresponding hand will advance continuously.
- NOTE: Chronograph minute hand moves simultaneously with chronograph second hand.*
3. Return crown to position 1 when chronograph hands are reset to zero (12:00).

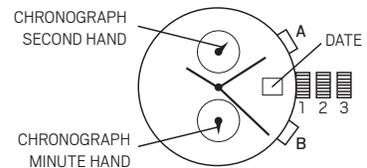

Chronograph VK61 / VK64

Time and Date Setting

1. Pull crown out to position 2 and turn clockwise to set date to the previous day.
2. Pull crown out to position 3 and turn clockwise until the present date is displayed. Continue turning crown to set the correct AM/PM time.

NOTE: 24-hour hand (VK64 model only) moves in conjunction with minute/hour hands and indicates AM/PM time.



3. Return crown to position 1.

NOTE: To ensure accuracy, do not set the date and weekday between 9:00 PM and 3:00 AM.

Chronograph Function

1. Press A to start/stop the chronograph.
2. Press B to reset to zero.

NOTE: After 1 hour of continuous running, the chronograph will automatically stop.

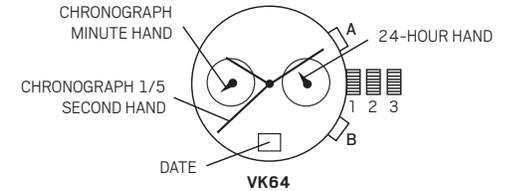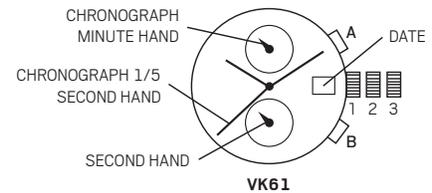

Chronograph VK63

Time Setting

1. Pull crown out to position 3.
2. Turn crown to set desired time (make sure AM/PM is set correctly).
3. Return crown to position 1.

Date Setting

1. Pull crown out to position 2.
2. Turn crown clockwise to set date.
3. Return crown to position 1.


NOTE: Do not set date between 9:00 PM and 3:00 AM, otherwise day may not change properly. If necessary, first change the time, set date, and then reset to correct time.

Chronograph Operation

1. Press A to start/stop chronograph.
2. Press B to reset.

Resetting After Battery Change

1. Pull crown out to position 3.
2. Press B for 2 seconds and then release.
3. The small second hand should move at 2 second intervals for 10 seconds as a demonstration.
4. Return crown to position 1.

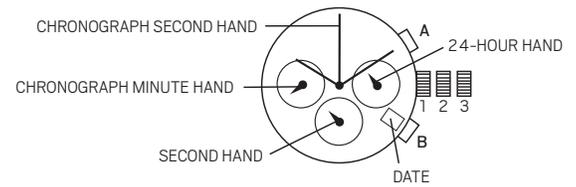

Chronograph Stopwatch JS10

Time Setting

1. Pull crown out to position 2.
2. Turn crown to set desired time.
3. Return crown to position 1.

Using Stopwatch


1. Press A to start/stop stopwatch and control split time.
2. Press B to reset stopwatch.

NOTE: This stopwatch is able to measure and display time in 1/10 second up to a maximum of 30 minutes. Stopwatch will stop automatically after running continuously for 30 minutes.

Resetting Stopwatch

1. Pull crown out to position 2.
2. Press A once to set chronograph second hand to zero position.
3. Once hands have returned to zero, reset to desired time.
4. Return crown to position 1.

NOTE: This procedure should only be performed when chronograph second hand does not return to zero position.

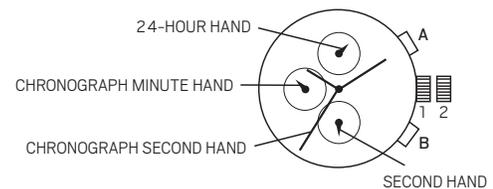

Chronograph Stopwatch OS10 (no date - OS30)

Time Setting

1. Pull crown out to position 3.
2. Turn crown to set the desired time.
3. Return crown to position 1.

Date Setting


1. Pull crown out to position 2.
2. Turn crown counter-clockwise until the correct date is shown in the date window.
3. Return crown to position 1.

Chronograph Operation

1. Press A to start/stop the chronograph.
2. Press B for reset.

Adjusting The Chronograph

1. Pull crown to position 3.
2. Press A to reset the second hand to "0."
3. Press B to reset the chronograph minute and hour hands.
4. Reset the watch to the current time and return crown to position 1.

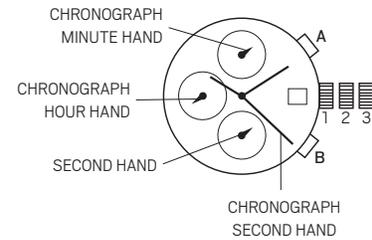

Chronograph Stopwatch OS20 / FS00

Time Setting

1. Pull crown out to position 3. Chronograph second hand will return to "0."
Do not return the crown to position 1 while the hands are returning to "0," or else the position the hands are at when this is done will be recognized as the new "0" position.
2. Turn crown to set the desired time.
3. Return the crown to position 1.

Date Setting

1. Pull crown out to position 2.
2. Turn crown counter-clockwise until the correct date is shown in the date window.
3. Return crown to position 1.

Chronograph Zero Reset


This procedure should be performed when the chronograph second hand does not return to the "0" position after the chronograph has been reset.

1. Pull crown out to position 3.
2. Press A to set the chronograph second hand to the "0" position.
NOTE: The hands move quickly if the pushers are kept pressed.
3. Once the hand has been zeroed, reset the time and return the crown to position 1.
Do not return the crown to position 1 while the hands are returning to "0." Doing so will cause the position of the hands to be recognized as the new "0" position.

Chronograph Operation

This chronograph is able to measure and display time in 1/1 second up to maximum of 1 hour.

1. Press A to start/stop the chronograph.
2. Press B to reset the chronograph.

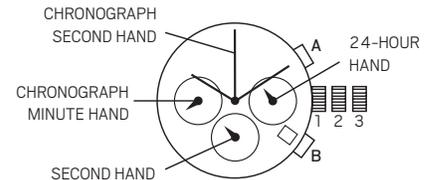

Chronograph Stopwatch VD54 (with date – VD53)


Time and Date Setting

1. Before setting the time, make sure the chronograph is stopped and set to zero (12:00) position.
2. Pull crown out to position 2.
3. Turn crown clockwise until the previous day's date is displayed.
4. Pull crown out to position 3 when the second hand is at the 12:00 position.
5. Turn crown to set time.

NOTE: 24-hour hand moves correspondingly with the hour and minute hands. When setting the time be sure to check that the 24-hour hand is set properly.

6. Return crown to position 1.

NOTE: When the crown is in position 2, do not press the pushers. Otherwise the chronograph hands will move.

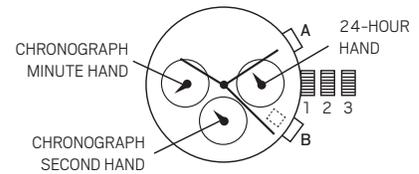

Chronograph

1. Press A to start/stop the chronograph.
2. Press B to reset to zero.

Split Time

1. Press B while the chronograph is running.
2. Press B again to return to the chronograph.
3. Press A to finalize timing.
4. Press B to reset.

Chronograph Zero Reset

1. If either of the chronograph hands is not at the zero (12:00) position, pull crown out to position 3.
2. Press A to move hands clockwise; press B to move hands counter-clockwise.
3. Return crown to position 1.

Chronograph Stopwatch VD55 (with date – VD57)

Time Setting

1. Pull crown out to position 3.
2. Set time by turning the crown clockwise.
3. Push back to position 1 to start the watch.

Using the Stopwatch

1. Press A to start/stop the stopwatch.
2. Press B to control the split time and reset.


Stopwatch Hand Adjustment

1. Pull crown out to position 3.
2. Press A to reset the stopwatch 1/10 second hand to the "0" position.
3. Press B to reset the second and minute hands. The hands only move clockwise.
4. With each press of A or B, the hands move one position. They move quickly if the buttons are kept pressed.

NOTE: If the stopwatch hands function improperly, pull out crown and press A and B at the same time for over 2 seconds. When the buttons are released, the stopwatch second and 1/10 second hands will spin around and return to "0." This will indicate that the internal circuit has been reset.

Date Setting (On some models only)

1. Pull crown out to position 2.
2. Turn clockwise until desired date appears in window.
3. Push crown back to position 1.

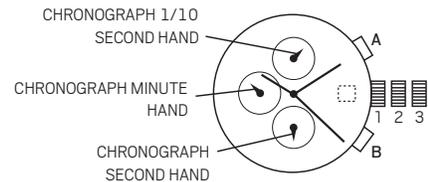

Chronograph Stopwatch YM91

Time and Date Setting


1. Pull crown out to position 2.
2. Turn the crown to set desired time.
3. Return crown to position 1.

Using the Stopwatch

1. Press A to start/stop the chronograph.
2. Press B to reset.

Stopwatch Hand Adjustment

1. Pull crown out to position 2.
2. Press left pusher for 2 seconds to turn stopwatch minute hand fully around and be able to set in correct position. Press right pusher repeatedly to set it to "0" position.
3. Press left pusher for 2 seconds to fully turn stopwatch 1/5-second hand and be able to set in correct position. Press right pusher repeatedly to set it to "0" position.
4. Return crown to position 1.

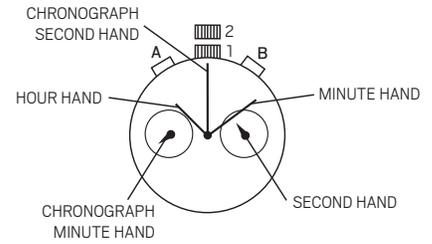

Chronograph Cal 8171/202

Time Setting

1. Pull crown out to position 3.
2. Turn crown to set the desired time.
3. Return crown to position 1.

Date Setting


1. Pull crown out to position 2.
2. Turn crown clockwise until the correct date is shown in the date sub-dial.
3. Return crown to position 1.

Chronograph Operation

1. Press A to start/stop the chronograph.
2. Press B to use split time/reset the chronograph.

Calibration

1. To calibrate movement after battery exchange, pull crown out to position 2.
2. To reset minutes, press B.
3. To reset seconds, press A.
4. Return crown to position 1.

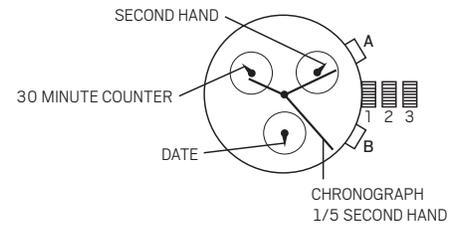

DIGITAL

Digital MLL-004


Normal Time Display

1. Press A to display month/date for 3 seconds.
2. Press A twice (or once if date is displayed) to display seconds. Press A again to return to Normal Time Display.

Time and Date Setting

1. From Normal Time Display, press B twice to enter setting mode; month will be displayed.
2. Press A to increase value.
3. Press B to set and advance to next setting.
4. Setting sequence is: month, date, hour, minute.
5. Press B to exit setting mode; press A to activate watch.

NOTE: Colon will flash between hour and minutes in Normal Time Display to indicate watch is active.

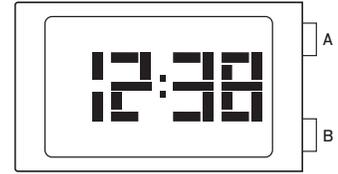


Digital MLL-020

Normal Time Display

1. Press A to change to chronograph mode.
2. Press B for EL.
3. Press and hold C to display date.
4. Press and hold C and then push D to toggle month/date format.
5. Press and hold D to display alarm time.
6. Press and hold D and then push A to toggle 12/24-hour format.

NOTE: At any point in any setting mode, press A to exit setting mode.

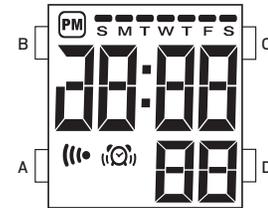

Time and Calendar Setting

1. In normal time display, press and hold A for 3 seconds, then press A again; Tuesday flag and seconds digits will begin flashing.
2. Press D to set seconds to zero.
3. Press C to advance to minute.
4. Press D to advance digit, press and hold D for fast advance.
5. Press C to advance to next setting value.
6. Setting sequence is: seconds, minute, hour, month, date, weekday.
7. Press A to exit setting mode.

Alarm Mode

1. In normal time display, press and hold D and then push C to toggle alarm/chime on/off.
2. Alarm will sound at preset time for 30 seconds; press D to silence alarm.
3. To test alarm, press and hold C and D simultaneously. Alarm will beep.

Alarm Setting

1. In normal time display, press and hold A for 3 seconds; Monday flag and hour will begin flashing.
2. Press D to advance digit; press and hold D for fast advance.
3. Press C to set and advance to minute.
4. Press D to advance digit; press and hold D for fast advance.
5. Press A to exit setting mode.

Chronograph Mode

1. Press A to change to chronograph mode.
2. Press C to start/stop the chronograph.
3. Press D to reset to zero.

Split Time

1. Press D while the chronograph is running for split time.
2. Press D again to return to chronograph.
3. Repeat steps 1 & 2 to measure multiple split times.
4. Press C to finalize timing.
5. Press D to reset to zero.

Digital MLG-017

Normal Time Display

1. Press A to change mode. Mode sequence is normal time, alarm, time zone 2, timer, and chronograph.
2. Press B for EL.

NOTE: At any point in any setting mode, press D to exit setting mode.

NOTE: In any setting mode, if no pusher is operated for 2 minutes, all changes will be saved and the setting will automatically return to display mode.

Time and Calendar Setting

1. In normal time display, press D; seconds will begin flashing.
2. Press C to set seconds to zero.
3. Press A to advance to hour.
4. Press C to advance digit, press and hold C for fast advance.
5. Press A to set and advance to next setting value.
6. Setting sequence is: seconds, hour, minute, year, month, and date.
7. Press D to exit setting mode.

NOTE: Weekday is automatically updated upon exiting setting mode.

NOTE: At any point in time/calendar setting mode, press B to toggle 12/24 hour format.

Alarm Mode

1. Press A to change to alarm mode.
2. Press B to toggle alarm/chime on/off.

Alarm Setting

1. Press A to change to alarm mode.
2. Press D to enter setting mode; hour will begin flashing.
3. Press C to advance digit; press and hold C for fast advance.
4. Press A to set and advance to next setting value.
5. Setting sequence is: hour, minutes, month, date. For daily alarm, leave month and date set at "----".
6. Press D to exit setting mode.

Time Zone 2

1. Press A to change to time zone 2.
NOTE: In time zone 2 display, normal time is shown in the lower portion of the display.
2. Press D to enter setting mode; hour will begin flashing.
3. Press C to advance digit, press and hold C for fast advance.
4. Press A to set and advance to minutes.
5. Press C to advance digit, press and hold C for fast advance.
6. Press D to exit setting mode.
NOTE: At any point in time zone 2 setting mode, press B to toggle 12/24 hour format.

Countdown Timer

1. Press A to change to timer mode.
2. Press C to start/stop the timer.
3. Press B to clear the countdown and reset the timer.

Timer Setting


1. Press D to enter setting mode; hour will begin flashing.
2. Press C to advance digit; press and hold C for fast advance.
3. Press A to set and advance to next setting value.
4. Setting sequence is: hour, minutes, seconds.
5. Press D to exit setting mode.
NOTE: At any point in setting mode, press B to toggle auto reset on/off. When auto reset is on, timer will automatically re-start upon reaching zero.

Chronograph Mode

1. Press A to change to chronograph mode.
2. Press C to start/stop the chronograph.
3. Press B to reset to zero.

Split Time

1. Press B while the chronograph is running for split time.
2. Press B again to return to chronograph.
3. Press C to finalize timing.
4. Press B to reset to zero.

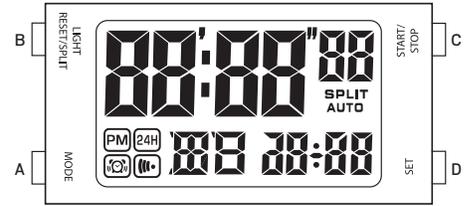


Digital BJ2635

Normal Time Display

1. Press A to change mode. Mode sequence is normal time, world time, alarm, chronograph, recall mode, and timer.
2. Press B for EL.
3. Press C to toggle chime on/off.
4. Press D to toggle DST on/off.

NOTE: In any mode, if no pusher/button is operated for 60 seconds, the setting will automatically return to normal time display.

NOTE: At any point in any setting mode, press B to exit setting mode and return to normal time display.

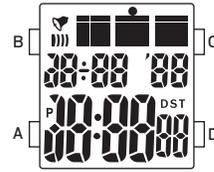

Time and Calendar Setting

1. In normal time display, press and hold B; 12/24-hour format will begin flashing.
2. Press C or D to increase/decrease digits; press and hold C or D for fast increment/decrement.
3. Press A to advance to next setting value.
4. Setting sequence is: 12/24-hour format, seconds, minutes, hour, year, month, date, time zone.
5. Press B to exit setting mode.

NOTE: Weekday is automatically updated upon exiting setting mode.

World Time Mode

1. Press A to change to world time mode.
2. Press C to scroll to next city; press and hold C for fast advance.
3. Press D to toggle DST on/off for the current city time zone.

City Code	City	Time Difference
MDY	Midway	-11:00
HNL	Honolulu	-10:00
ANC	Anchorage	-09:00
LAX	Los Angeles	-08:00
DEN	Denver	-07:00
CHI	Chicago	-06:00
NYC	New York	-05:00
CCS	Caracas	-04:00
RIO	Rio De Janeiro	-03:00
-2H	-2H	-02:00
-1H	-1H	-01:00
LON	London	00:00
PAR	Paris	+01:00
CAI	Cairo	+02:00
MOW	Moscow	+03:00
DXB	Dubai	+04:00
KHI	Karachi	+05:00
DAC	Dacca	+06:00
BKK	Bangkok	+07:00
HKG	Hong Kong	+08:00
TYO	Tokyo	+09:00
SYD	Sydney	+10:00
NOU	Noumea	+11:00
AKL	Auckland	+12:00

Alarm Mode

1. Press A to change to alarm mode.
2. Press C to select alarms 1-3.
3. Press D to toggle alarm on/off.

NOTE: Alarm will sound at present time for 30 seconds. Press any pusher to silence alarm.

Alarm Setting

1. In alarm mode, press C to select alarm 1, 2 or 3.
2. Press and hold B; minutes will begin flashing.
3. Press C or D to increase/decrease digits; press and hold C or D for fast increment/decrement.
4. Press A to advance to next setting value.
5. Setting sequence is minutes, hour.
6. Press B to exit setting mode.

Chronograph Mode

1. Press A to change to chronograph mode.
2. Press C to start the chronograph; press D to stop the chronograph.
3. Press D to reset to zero.

Lap Time

1. Press C while the chronograph is running for lap time. Display will show lap time for 5 seconds, then will resume chronograph time.
2. Press C again to measure multiple lap times (up to 99 laps).
3. Press D to finalize timing. Display will show current lap time for 5 seconds, then total time.
4. Press D again to reset to zero.

Recall Mode

1. Press A to change to recall mode. Total time will be displayed.
NOTE: If no data has been stored, pressing A will advance chronograph mode to timer mode.
2. Press C to view next record; press D to view previous record (memory stores up to 20 laps, lap 1-lap 19, and final lap).

Countdown Timer

1. Press A to change to timer mode.
2. Press C to start/stop the timer.
3. Press D to reset the timer to preset value.
NOTE: When timer reaches zero or preset value, alarm will sound for 30 seconds. Press any key to silence alarm.


Timer Setting

1. In timer mode, press and hold B; seconds will begin flashing.
2. Press C or D to increase/decrease digit, press and hold C or D for fast increment/decrement.
3. Press A to advance to next setting value.
4. Setting sequence is: seconds, minutes, hour.
5. Press B to exit setting mode.

Ten Half Digit Digital FL145 / FL186

Normal Time Display

1. Press A to change mode.
2. Press B for EL.
3. Press C to toggle 12/24 hour format.
4. Press D to stop alarm sound.

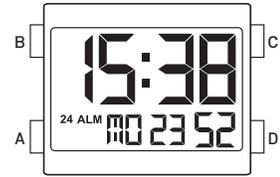

Time/Calendar Setting

1. From normal time display, press A three times to enter setting mode. Seconds will begin flashing.
2. Press C to reset seconds to zero.
3. Press D to set and advance to next setting value.
4. Press C to increase digit; press and hold C for fast advance. Press D to set each setting value.
5. Setting sequence is: seconds, hour, minutes, month, date, day of week.
6. Press A to exit setting mode.

Alarm Setting

1. Press A to change to alarm mode (AL).
2. Press and hold C for alarm sound testing.
3. Press C to toggle alarm/chime on/off.
4. Press D to enter setting mode; hour will begin flashing.
5. Press C to advance digit; press and hold C for fast advance.
6. Press D to set hour and minutes.
7. Setting will automatically exit setting mode mode after minutes are set.

Chronograph Mode

1. Press A to change to chronograph mode (ST).
2. Press C to start/stop chronograph.
3. Press D to reset chronograph when it is not running.

Split Time

1. Press D while the chronograph is running.
2. Press D again to return to the chronograph.
3. Press C to finalize timing.
4. Press D to reset to zero.


Digital FO-001

Normal Time Display

Press A to change display. Display sequence is normal time, date, seconds.

Time and Calendar Setting

1. In normal time display, press B twice; month will begin flashing.
 2. Press A to increase digits.
 3. Press B to advance to next setting value.
 4. Setting sequence is: month, date, hour, and minute.
 5. Press B to exit setting mode.
- NOTE: At any point in setting mode, press A to exit setting mode and return to normal time display.*

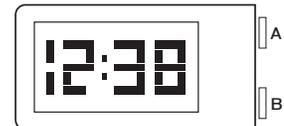

Scrolling Tic


Time Setting

1. Pull crown out to position 2.
2. Turn crown to set the desired time.
3. Return crown to position 1.

Display Options

Press A to alternate between different display choices.

Display shows the seconds from "01" to "60" in various display options.

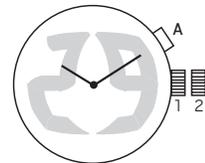

LED QFL558FA

Hour/Minute Display

1. Press A to toggle display on/off.

NOTE: Hour/Minute Display is the default display when turning the display on.

2. Press B to toggle hour/minute display and seconds display.


Seconds Display

Press A or B to return to hour/minute display.

Time Setting

1. In Hour/Minute Display, press and hold B to enter setting mode; hour will flash once.
2. Press A to increase digits.
3. Press B to advance to minutes.
4. Press A to increase digits.
5. Press and hold B to exit setting mode. Hour and minutes will flash once.

NOTE: In setting mode, if no pusher/button is operated for 10 seconds, all changes will be saved and the setting will automatically return to Hour/Minute Display mode.

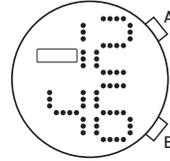

MISCELLANEOUS

WATER RESISTANCE		WATER-RELATED USE			
Caseback Marking	Depth				
		Washing Hands	Showering, Bathing	Swimming, Snorkeling	Scuba Diving
—	—	X	X	X	X
WR	—	✓	X	X	X
3 ATM	3 Bar, 30 Meters	✓	X	X	X
5 ATM	5 Bar, 50 Meters	✓	✓	X	X
10 ATM	10 Bar, 100 Meters	✓	✓	✓	X
20 ATM	20 Bar, 200 Meters	✓	✓	✓	✓
30 ATM	30 Bar, 300 Meters	✓	✓	✓	✓
50 ATM	50 Bar, 500 Meters	✓	✓	✓	✓
Always set the crown in closed position (the normal position). Tighten screw-lock crown completely.					

- To ensure water resistance, exposure to hot water is not recommended.
- Clean your watch with a soft cloth and water only. Do not submerge your watch under water unless it is water rated (see caseback).
- After salt water use, rinse watch under tap water and wipe dry with a soft cloth.
- Metal watch bands should be washed periodically to keep them looking beautiful. Clean with a soft brush dipped in mild, soapy water. Be sure to wipe dry thoroughly with a soft cloth.