


Kit Layout

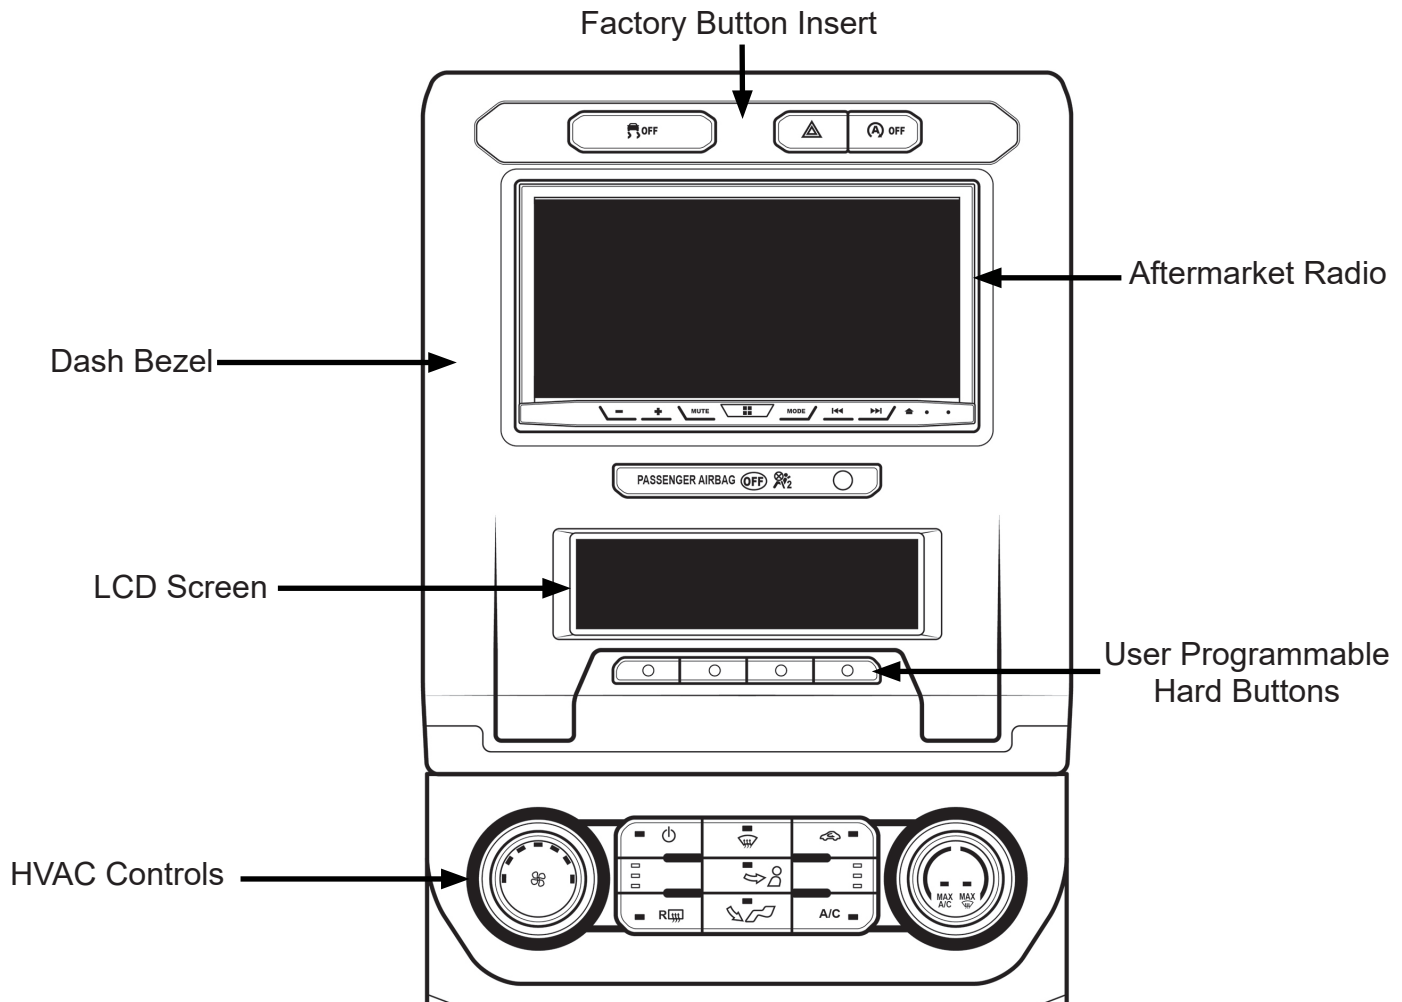


Vehicle Feature Checklist


- | | |
|--|---|
| <input checked="" type="checkbox"/> Vehicle Settings | <input type="checkbox"/> Pro-trailer Assist |
| <input type="checkbox"/> Factory Amplifier | <input type="checkbox"/> 360 Camera System |
| <input type="checkbox"/> Dual Zone HVAC | <input type="checkbox"/> Front Camera |
| <input type="checkbox"/> Heated Steering Wheel | <input type="checkbox"/> Blind Spot Cameras |
| <input type="checkbox"/> Heated/Cooled Seats | <input type="checkbox"/> Rear Park Sensors |



Operating the Display

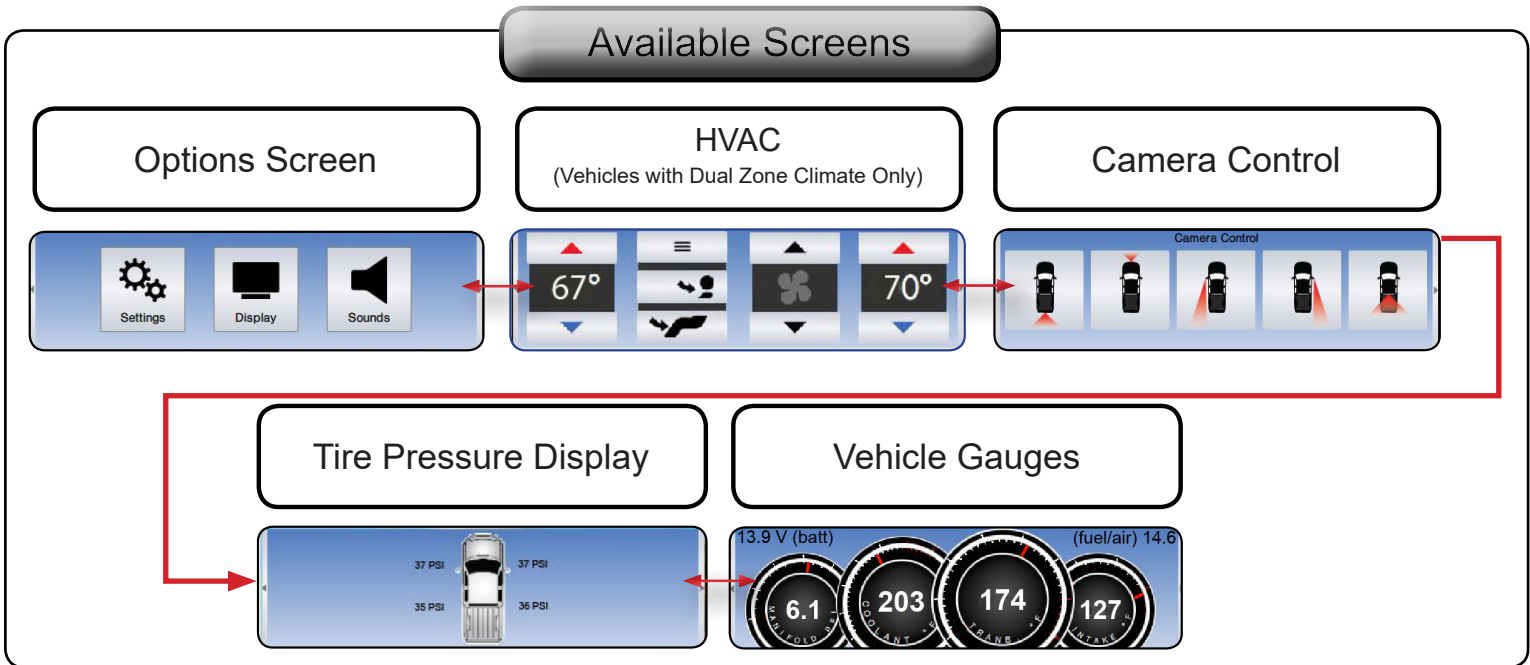


Icons and available screens will vary based on vehicle features, installed cameras, and configuration

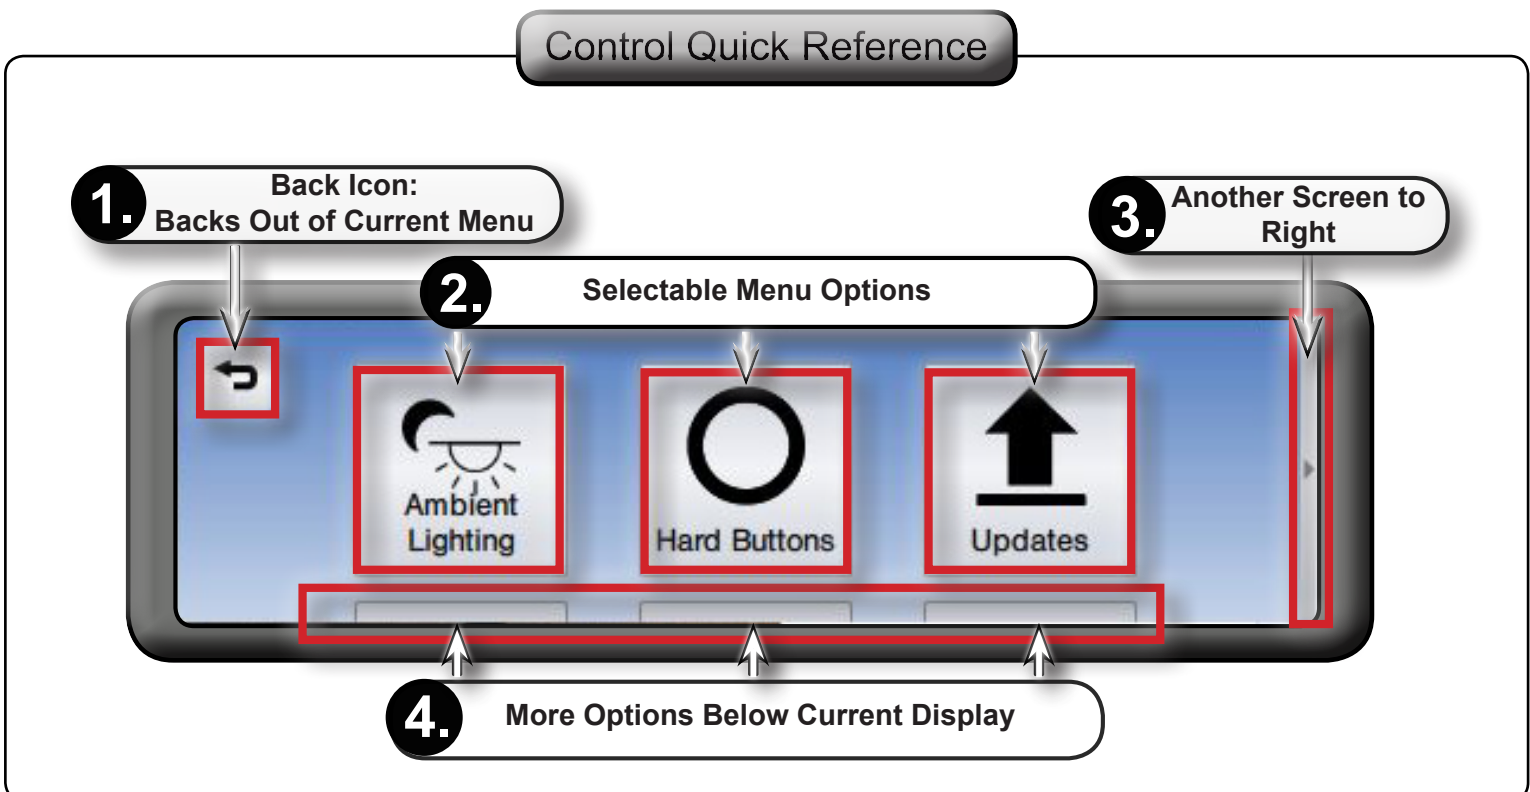

Accessing Common Settings


Accessing Heating / Cooling Options

1. Touch the  icon on the HVAC screen

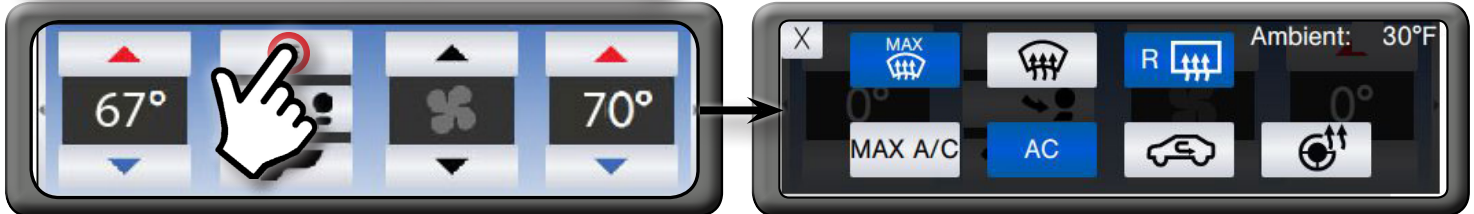


Accessing Vehicle Settings

1. Touch the "Vehicle Settings" icon on the Options screen

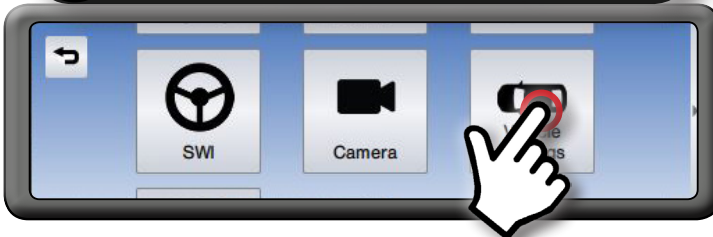

2. Select and adjust the desired vehicle setting

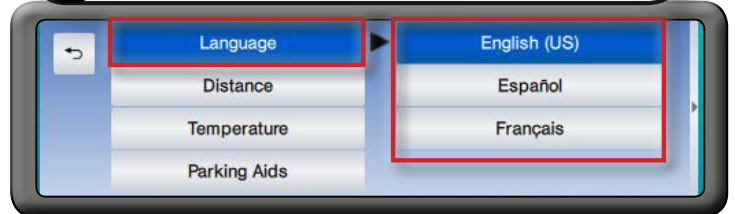


Adjusting Screen Brightness

1. Touch the "Display" icon on the Options screen



2. Up / Down Slider to Adjust LCD Brightness

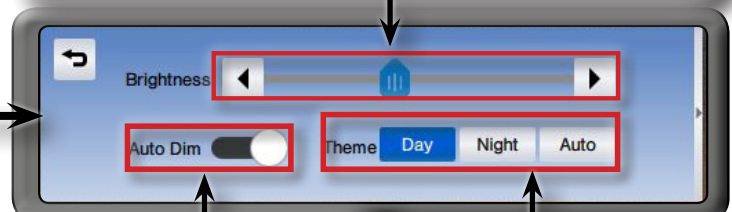

3. Turns Auto Dimming Off/ On

4. Sets Lighting Theme of LCD Screen