



## 8. Electrical connection


- Use the included wire nut to connect the following wires to the receiving unit, connect the green fan (ground) wire to the BARE(ground) wire, connect the black receiving unit wire to the live wire, and connect the white receiving unit wire to the neutral wire. The blue and white light wire terminals are connected to the receiver, and the motor wire terminals are connected to the receiver.

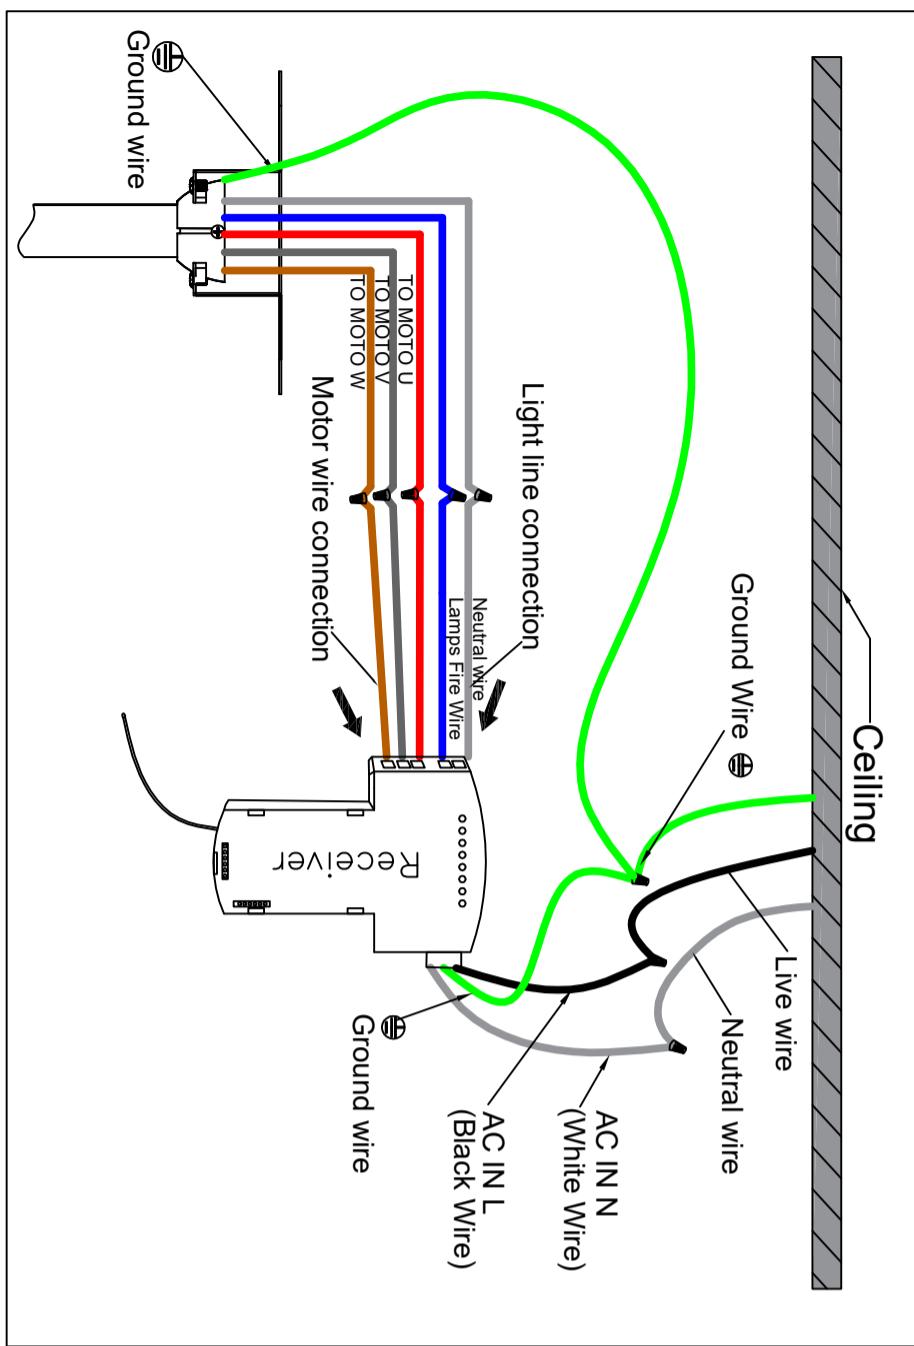

## Controller line name

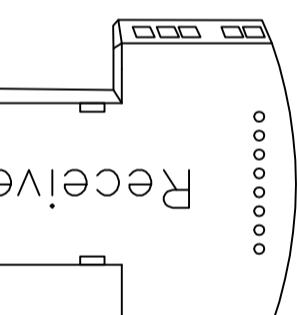

### Instructions for remote control

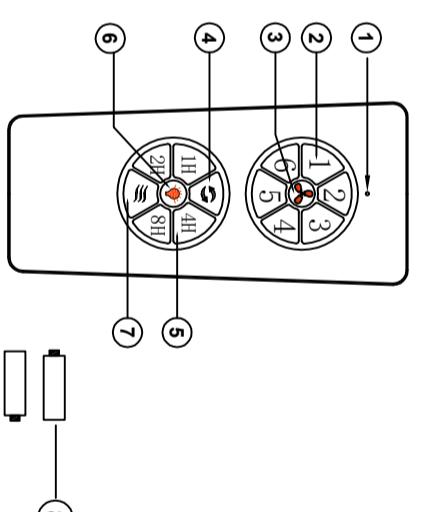

#### Tips:

Learning method of remote control: Power on the receiver, press and hold the  key at the emitter at once. The learning is succeed, when hear double beep ringing from the loudspeaker.

1. When the emitter is unable to remotely control the receiver, please check whether the switch batteries are in good contact, whether they are fixed properly and whether they run out of use.
2. When the emitter is unable to remotely control the receiver, please check whether there is other remote control products around the space and check whether the keys are pressed down, because same nature of remote control product may cause interference with each other resulting in poor receiving effect. Taking away such articles will normalize the remote control function. (the infrared remote controller is not included).
3. Please use this product under applicable voltage. Too low voltage will lead to failure of the remote controller to work (Please refer to the product label for the voltage range and related parameters).
4. Please remove the battery from the remote control when not in use for a long time.

- ◆ RF wireless digital transmission technology, one-to-one control, the weight rate is less than one part of a million (if there is any damage, the controller and remote control must be sent back to the manufacturer for repair).
- ◆ In the allowable space, the load can be controlled by any Angle of the remote control and the direction is not limited.