

INSIGNIA™

## USER GUIDE

# 24 in. Outdoor Compact Refrigerator

**NS-OCF55SS2/NS-OCF55SS2-C**



Before using your new product, please read these instructions to prevent any damage.

# Contents

IMPORTANT SAFETY INSTRUCTIONS .....	3
Features .....	5
Package contents .....	6
Components .....	6
Dimensions .....	7
Control and display panels .....	8
Setting up your refrigerator .....	9
Before using your refrigerator .....	9
Finding a suitable location .....	9
Installing the handle .....	10
Installing the casters .....	11
Front vent .....	13
Building in your refrigerator .....	13
Preparing your refrigerator .....	14
Leveling your refrigerator .....	15
Providing a proper power supply .....	15
Connecting to power .....	16
Using your refrigerator .....	17
Turning on your refrigerator .....	17
Setting the temperature .....	17
Changing the temperature display .....	17
Lighting your refrigerator .....	17
Memory function .....	17
Positioning beverages in your refrigerator .....	18
Removing a shelf .....	18
Replacing a shelf .....	19
Maintaining your refrigerator .....	19
Cleaning the interior of your refrigerator .....	19
Defrosting your refrigerator .....	19
Alarms .....	19
Door ajar alarm .....	19
Temperature alarms and error codes .....	20
Storing your refrigerator .....	20
Moving your refrigerator .....	20
Power failure .....	21
Disposal .....	21
Tips on saving energy .....	21
Troubleshooting .....	22
Error codes .....	22
Specifications .....	23
ONE-YEAR LIMITED WARRANTY .....	24

# IMPORTANT SAFETY INSTRUCTIONS



This symbol indicates that dangerous voltage constituting a risk of electric shock is present within your refrigerator.



This symbol indicates that there are important operating and maintenance instructions in the literature accompanying your refrigerator.

## WARNING

To reduce the risk of fire, electrical shock, or injury follow these basic precautions when using your refrigerator:

- Read all instructions before using the refrigerator.
- Never allow children to operate, play with, or crawl inside the appliance.
- **Refrigerants:** All refrigeration products contain refrigerants. Under the guidelines of federal law, refrigerants must be removed before the disposal of the product. It is the consumer's responsibility to comply with federal and local regulations when disposing of this product.
- Never clean the appliance with flammable fluids. The fumes can create a fire hazard or explosion.
- Do not store or use gasoline or any other flammable vapors and liquids in the vicinity of this or any other appliance. The fumes can create a fire hazard or explosion.
- Do not store explosive substances, such as aerosol cans with a flammable propellant, in this appliance.

## SAVE THESE INSTRUCTIONS

**DANGER:** Risk of fire or explosion. Flammable refrigerant used.

- Do not puncture refrigerant tubing.
- Do not use mechanical devices to defrost your refrigerator.
- Ensure that servicing is done by factory authorized service personnel, to minimize product damage or safety issues.
- Consult repair manual or owner's guide before attempting to service this product. All safety precautions must be followed.
- Dispose of properly in accordance with federal or local regulations.
- Follow handling instructions carefully.



## WARNING

### Electric Shock Hazard

**Failure to follow these instructions can result in electric shock, fire, or death.**



- 1 **WARNING**—Keep ventilation openings in the appliance enclosure or in the built-in structure clear of obstruction.
- 2 **WARNING**—Do not touch the interior of the chiller compartment with wet hands. This could result in frost bite.
- 3 **WARNING**—Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
- 4 **WARNING**—Do not damage the refrigerant circuit.
- 5 **WARNING**—Do not use electrical appliances inside the food storage compartment of the appliance, unless they are of the type recommended by the manufacturer.
- 6 **WARNING—DANGER**—Never allow children to play with, operate, or crawl inside your refrigerator.  
Risk of child entrapment. Before you throw away your old refrigerator:
  - 1) Take off the door
  - 2) Leave the shelves in place so that children may not easily climb inside
- 7 Unplug your refrigerator before carrying out user maintenance on it.
- 8 This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- 9 Please dispose of the refrigerator according to local regulations as the refrigerator contains flammable gas and refrigerant.
- 10 Follow local regulations regarding disposal of the refrigerator due to flammable refrigerant and gas. All refrigeration products contain refrigerants, which under the guidelines of federal law must be removed before disposal. It is the consumer's responsibility to comply with federal and local regulations when disposing of this product.
- 11 This refrigerator is intended to be used in household and similar environments, such as:
  - Staff kitchen areas in shops, offices, and other working environments

- Farm houses and by clients in hotels, motels, and other residential environments
  - Bed and breakfasts
  - Catering and similar non-retail applications
- 12** Do not store or use gasoline or any flammable liquids inside or in the vicinity of this refrigerator.
- 13 WARNING**—To avoid a hazard due to the instability of the appliance, it must be secured in accordance with the instructions.
- 14 WARNING**—The refrigeration system is under high pressure. Do not tamper with it. Contact qualified service personal to facilitate disposal.

## Grounding Instructions

This appliance must be grounded. Grounding reduces the risk of electrical shock by providing an escape wire for the electrical current.

This appliance has a cord that has a grounding wire with a 3-prong plug. The power cord must be plugged into an outlet that is properly grounded. If the outlet is a 2-prong wall outlet, it must be replaced with a properly grounded 3-prong wall outlet. The serial rating plate indicates the voltage and frequency the appliance is designed for.

**WARNING:** Improper use of the grounding plug can result in a risk of electric shock. Consult a qualified electrician or service agent if the grounding instructions are not completely understood, or if doubt exists as to whether the appliance is properly grounded.

**Do not connect your appliance to extension cords or together with another appliance in the same wall outlet.** Do not splice the power cord. Do not, under any circumstances, cut or remove the third ground prong from the power cord. Do not use extension cords or ungrounded (two prong) adapters. If the power supply cord is damaged, it must be replaced by the manufacturer or its service agent or similar qualified person in order to avoid hazard.


## Features

- The main compartment stores up to 90, 12 oz. (355 ml) beverage cans and the door compartments store up to 24 standard beverage cans
- Electronic temperature control with LED control panel adjusts the temperature from 34°–50° F (1°–10° C)
- Stainless steel foam-core door
- Interchangeable glass shelves
- Internal light helps you select the beverage you want

## Package contents

- 24 inch Outdoor Compact Refrigerator
- Glass shelves (3)
- Handle
- Hardware Bag
- *User Guide*


## Components

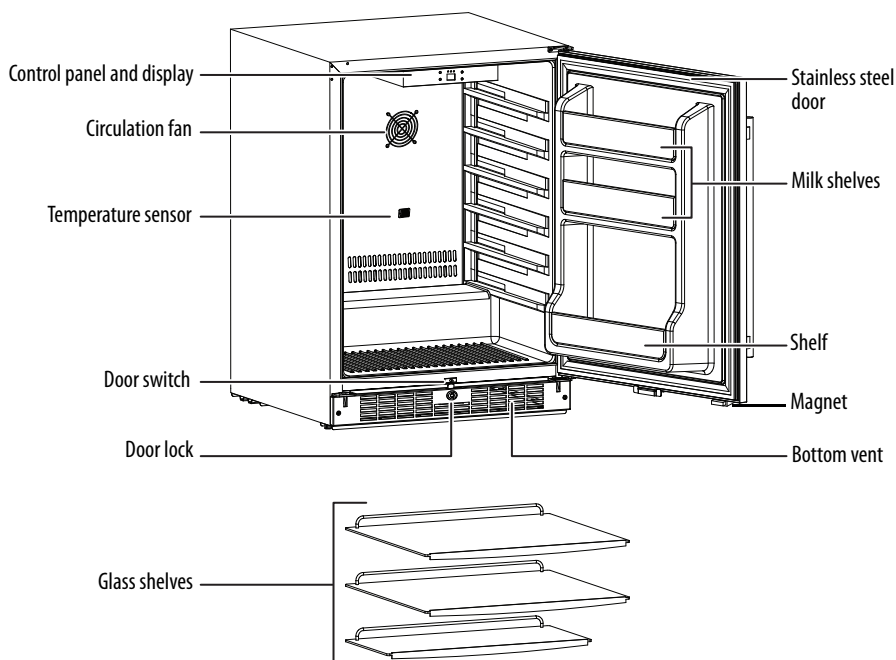


### Notes:

- For your refrigerator to operate normally, avoid placing it in areas with high magnetic fields or high humidity.
- When you put several beverage bottles in your refrigerator at one time, the temperature in your refrigerator may rise temporarily.
- After unplugging your refrigerator, to prolong the service life of the compressor, wait for at least five minutes before plugging it back in.

Dimensions

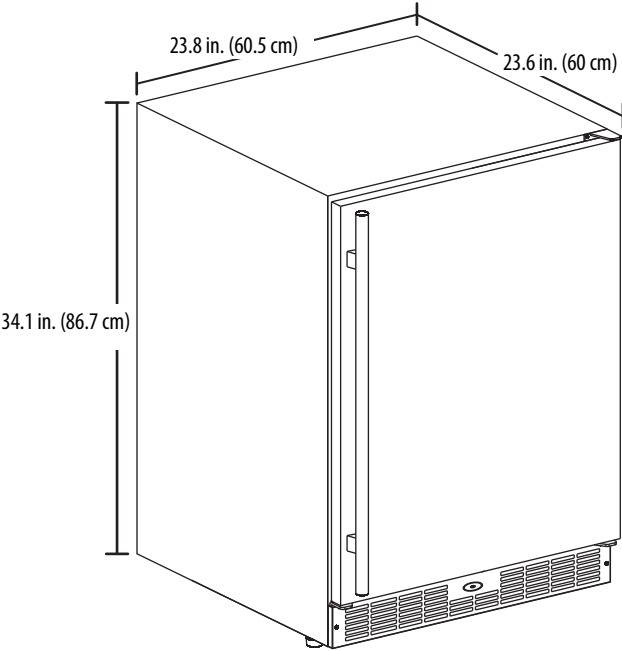

Control and display panels

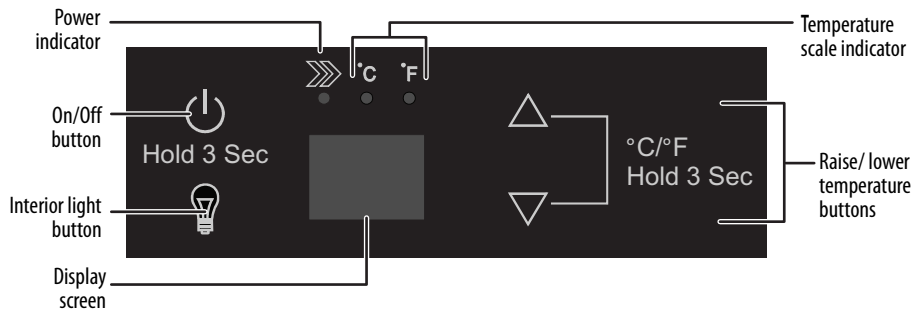

BUTTON	FUNCTION
	Press to turn the power on or off. Press and hold for approximately three seconds to go to "Standby" mode. Press the key once to restart your refrigerator.
	Press to turn the interior light on or off. The light turns on automatically when the door is open, and turns off when the door is closed.
	Press to raise the temperature.
	Press to lower the temperature.
	Press and hold both buttons simultaneously to switch between °F and °C.

INDICATOR	DESCRIPTION
	Lights to indicate that cooling mode is on.
°C/°F	Indicates which temperature mode is being displayed.

**Notes:**

- Touch the control panel lightly when pressing the keys.
- To avoid scratching the control panel, do not touch it with sharp objects.



# Setting up your refrigerator

**CAUTION:** This appliance is heavy. We suggest having two people set up or move.

## Before using your refrigerator

- Remove the exterior and interior packing.
- Let your refrigerator stand upright for approximately six hours before connecting it to power. This reduces the possibility of a malfunction in the cooling system from improper handling during transportation.
- Clean the exterior surface of your refrigerator with a soft, dry cloth and clean the interior surface with lukewarm water using a soft cloth.

## Finding a suitable location

- Your refrigerator is designed to be built-in or free standing.
- Place your refrigerator on a floor, countertop, or cabinet that is strong enough to support it when it is fully loaded.
- Locate your refrigerator away from direct sunlight and sources of heat (stove, heater, radiator, and so on). Direct sunlight may affect the acrylic coating and heat sources may increase electrical consumption.
- Avoid locating your refrigerator in moist areas.

## Finding a suitable location outside

If you decide to place your refrigerator outside and exposed to the elements:


- You should routinely clean the area around the refrigerator pump that is vented.
- Prevent dust and debris from building up, as they can shorten the life of your refrigerator.
- Keep your refrigerator dry to prevent rust or damage.
- Place your refrigerator up on blocks, if flooding is possible, to avoid damage or electrical hazards.
- To prevent damage from high winds, place the back of your refrigerator against a solid surface to keep the compressor and coils safe from flying debris.
- In extremely humid, very dry, or consistently cold and dry locations, the refrigerator's seals and gaskets may dry or break up. This cannot be avoided.

## Installing the handle


### Notes:

- We recommend having two people complete the installation.
- To avoid scratching the front panel, place a soft cloth or towel against the panel while installing the door handle.


- 1 The door handle is located behind the shelves. Remove the top shelf, then take the door handle and hardware bag from your refrigerator. The hardware bag contains a hex key and two extra screws.

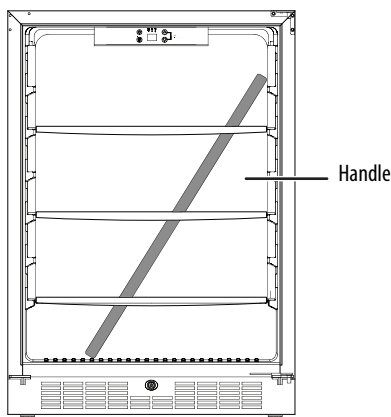

- 2 Place your refrigerator carefully on its back.
- 3 Place the handle on the mounting studs. The set screws are pre-installed in the handle and should face down when installed correctly.

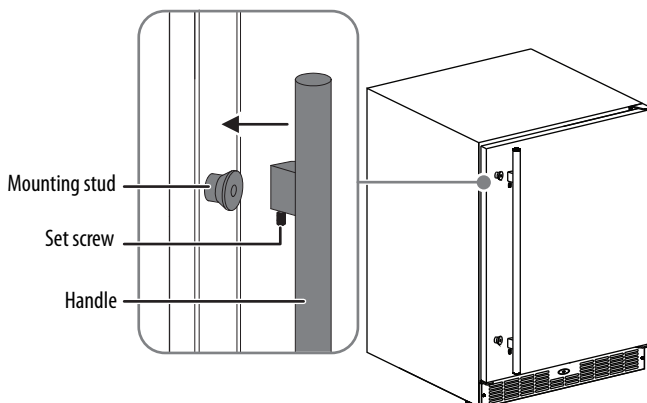

- 4 Push the door handle tightly against the door.
- 5 Insert the short end of the hex key into the set screw and tighten until snug (do not overtighten). The set screw is not recessed into the handle.

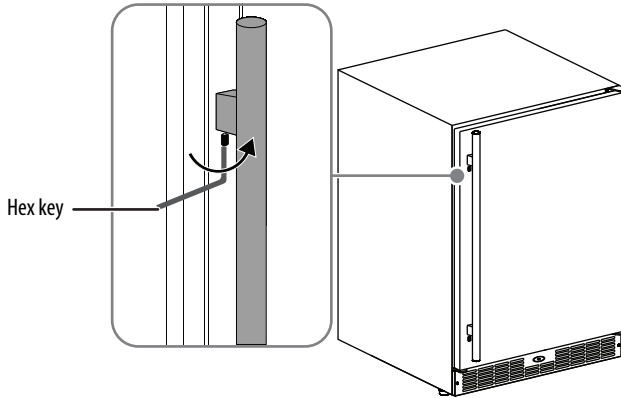


- 6 Repeat Step 5 for the other set screw.
- 7 Keep the hex key with these installation instructions for future use.

## Installing the casters


### CAUTION:

- To reduce the risk of personal injury or property damage, unplug the appliance and use two people to complete the caster installation.


- 1 Lay out a towel or blanket on the floor, then place your refrigerator on its back.
- 2 Remove the four leveling feet and keep them in a safe place for future use.

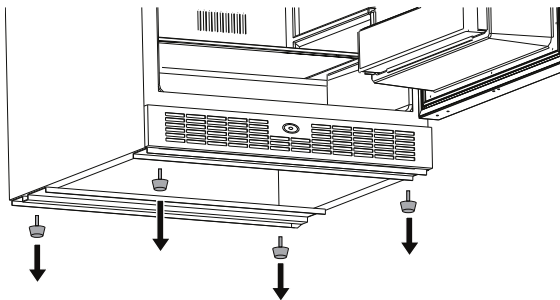

- 3 Install the non-locking casters on the back of the appliance.

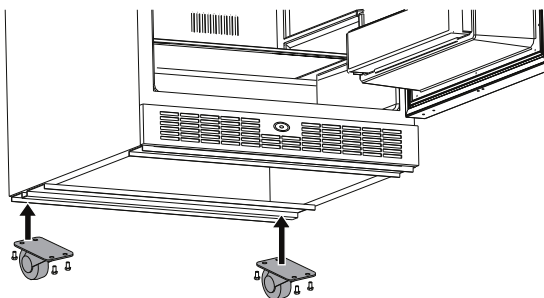


- 4 Install the locking casters on the front of the appliance.

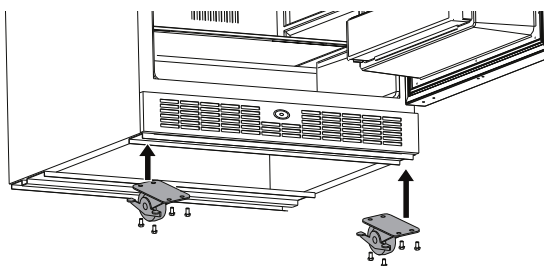


**CAUTIONS:**

- After installing the casters, the refrigerator must be allowed to stand upright for six hours before plugging it in to avoid damage to internal components.
- To avoid damage to the power cord, put the cord on top of the refrigerator when moving it.

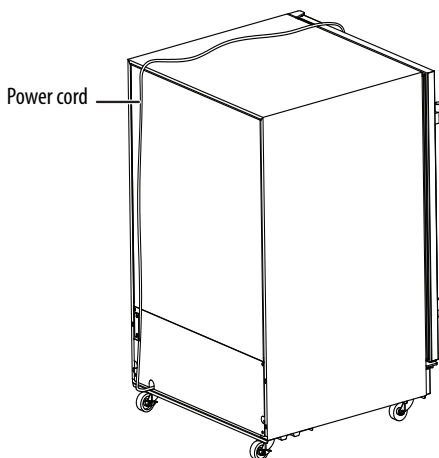


## Using the locking casters

To lock the wheels, push down on the caster tab. To unlock the wheel, push up on the caster tab.

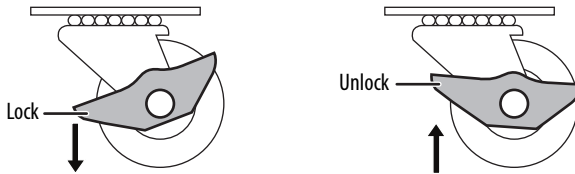


## Front vent

Your refrigerator is front vented. Do not block the front air vent. Doing so will result in high operating temperatures, higher energy usage, and possible system overheating and failure.

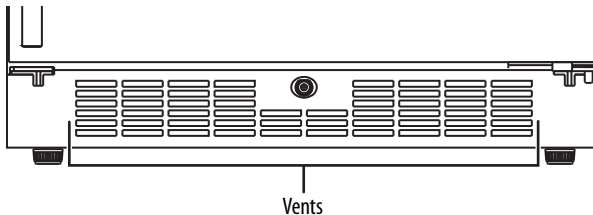

## Building in your refrigerator

### Required tools

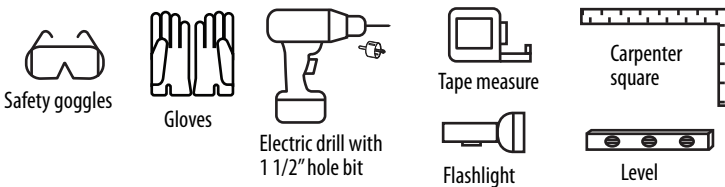


## Preparing the enclosure

**CAUTION:** Wear gloves and safety goggles during installation.

We do not recommend that you install your refrigerator into a corner or directly beside a wall. If it is necessary to place the unit next to a wall or in a corner, leave at least 2.4 - 4 in. (6-10 cm) between the wall and the appliance to allow for the door opening 90° for full extension of the shelves. In order to remove a shelf, the door must be opened at least 120°, which requires at least 25.6 in. (65 cm) between the wall and the appliance.

## Notes:

- The indicated depth requirement assumes that the electrical outlet is located in the adjacent cabinet or is flush mounted (not surface mounted) in the rear wall of the enclosure.
- If the electrical outlet is located inside an adjacent cabinet, cut a 1.5 in. (3.8 cm) diameter hole to route the power cord. If the cabinet wall is metal, the hole edge must be covered with a bushing or grommet to protect the cord.

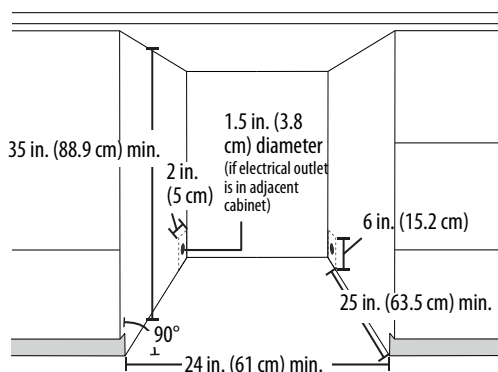


If you are installing your refrigerator between frameless cabinets, a 0.5 in. (1.3 cm) wide filler strip or side panel may be needed on both sides of your refrigerator. The filler strip provides a space between the appliance case and the adjacent cabinet door swing. The width of the opening must include the filler panels. The door should extend at least 1 in. (2.6 cm) beyond the surrounding cabinets.

## Preparing your refrigerator

If your refrigerator will be built into an enclosure the compressor cover must be removed to allow air flow around the compressor, so that it does not overheat. Keep the cover and screws in a safe place so that they can be used again in the future if necessary.


- Remove the four screws and compressor cover from the back of your refrigerator.

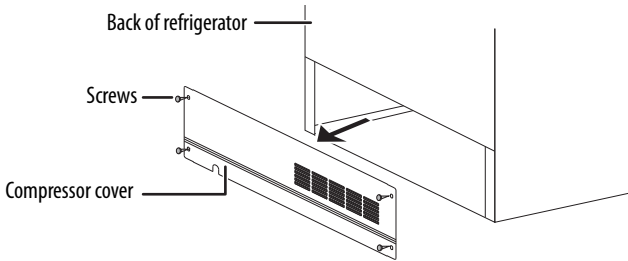

## Leveling your refrigerator

It is very important for your refrigerator to be level in order to function properly. If your refrigerator is not leveled during installation, the door may not close or seal properly, causing cooling, frost, or moisture problems.

- 1 Move your refrigerator to its final location.
- 2 Rotate the front leveling foot clockwise (to raise) or counter-clockwise (to lower) your refrigerator until it is level.

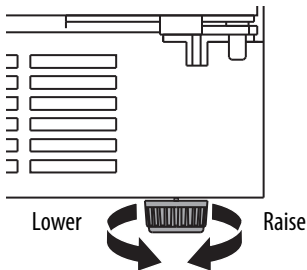


## Providing a proper power supply


Check your local power source. Your refrigerator requires a 110V-120V, 60 Hz power supply.

Your refrigerator should be properly grounded for your safety. The power cord of this refrigerator is equipped with a three-prong plug which plugs into a standard three-prong wall outlet to minimize the possibility of electrical shock.

## Using a 3-prong plug and outlet

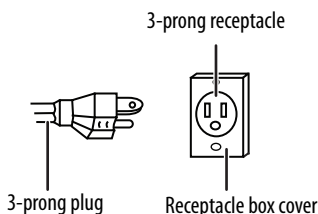

## Using a grounding adapter

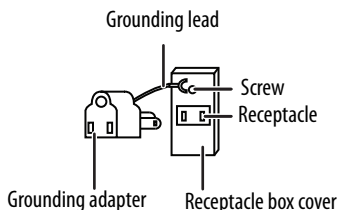

### **WARNING: ELECTRICAL SHOCK HAZARD**

Failure to follow these instructions can result in death, fire, or electrical shock.

- A 15-20 amp fused, grounded electrical supply is required. This provides the best performance and also prevents overloading wiring circuits which could cause a fire hazard from overheated wires.
- The refrigerator should always be connected to its own individual electrical branch leading directly to the main voltage source or distribution panel.
- Immediately discontinue use if the main power supply line has been damaged. If the supply line is damaged, it must be repaired by a qualified service professional.
- When removing the refrigerator away from the wall, be careful not to roll over or damage the main power supply line.

- Do not, under any circumstances, cut or remove the third ground prong from the power cord supplied.
- Your refrigerator is not designed to be used with an inverter.
- The cord should be secured behind your refrigerator, and not left exposed or dangling, to prevent accidental injury.
- Never unplug your refrigerator by pulling on the power cord. Always grip the plug firmly and pull straight out from the receptacle.

## Connecting to power

- Plug your refrigerator into a dedicated, properly installed grounded wall outlet. Your refrigerator should be operated on a separate electrical circuit from other appliances. Any questions concerning power and/or grounding should be directed toward a certified electrician or an authorized service center.

**CAUTION:** Your refrigerator is not designed to be installed in an RV or used with an inverter.

- Plug in and run your refrigerator for three to four hours before making any temperature adjustments and before adding food or beverages. This allows your refrigerator to reach a stable temperature.




- Do not use an extension cord with your refrigerator. If the power cord is too short, have a qualified electrician install an outlet near your refrigerator. Use of an extension cord can negatively affect your refrigerator's performance.

## Using your refrigerator

### Turning on your refrigerator



Your refrigerator turns on automatically the first time you plug it in. An audible beep will be heard, then the compressor starts working.

You can manually set your refrigerator to "Standby" mode (plugged in but power off) by pressing and holding the  button for approximately three seconds, provided that no other setting is in effect (the display is not blinking). Press the key once to restart your refrigerator.

### Setting the temperature

Under normal conditions, the display always shows the set temperature.

The default temperature setting is 43° F (6° C), and the default temperature scale is ° F.



When the  or  buttons are presseded, the temperature increases or decreases in increments of one degree.

The actual temperature inside your refrigerator can vary, based on ambient temperature, how often the door is opened, and how much warm food and beverages have recently been added.


#### Notes:

- A large number of bottles or cans will lower the cooling efficiency of your refrigerator.
- Adjust the thermostat setting by one increment at a time. Allow several hours for the temperature to stabilize between adjustments.

### Changing the temperature display

To switch the display between °C and °F, press and hold the  and  buttons at the same time for approximately three to five seconds.

### Lighting your refrigerator

The light can be switched on or off by pressing the  button on the control panel. Energy-efficient LEDs are used for long-term durability.


### Memory function

If you experience a power outage while your refrigerator is on, when the power is restored, your refrigerator will resume the same temperature that was set when the power went off.

## Positioning beverages in your refrigerator

This refrigerator can hold a total of 114, 12 oz. (355 ml) aluminum cans. To do this:


- Position the beverage cans vertically on the upper three shelves. The upper 3 shelves can hold a total of 77 cans.
- Position 13 cans on their sides in the bottom of the main refrigerator compartment.
- Position the beverage cans vertically in the door. This allows for 24 beverages total to be stored in the door.

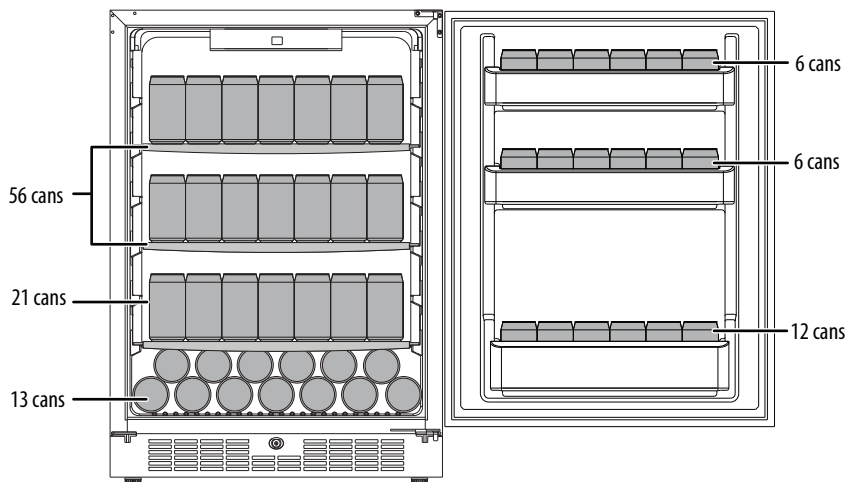

## Removing a shelf

Shelves can be removed to accommodate larger containers.

- 1 Remove all food and beverages from the shelves.
- 2 Tilt one side of the shelf up as far as it will go, then gently pull out the shelf.

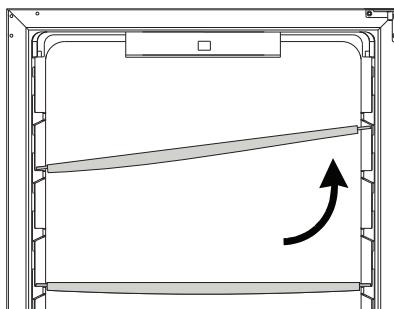

## Replacing a shelf

- To reinstall the shelf, make sure that it is resting securely on the support brackets, then push inward until it clicks into place.

**CAUTION:** Make sure that the tabs are firmly engaged in the supporting guides before storing any beverage containers.

## Maintaining your refrigerator

Your refrigerator is designed for year-round use with only minimal cleaning and maintenance.

When you first receive it, wipe the cabinet with a mild detergent and warm water, then wipe dry with a dry cloth. Do this periodically to keep your refrigerator looking new.

**CAUTION:** To prevent damage to the finish, do not use:

- Gasoline, benzine, thinner, or other similar solvents
- Ammonia or alcohol
- Abrasive cleaners
- Sharp objects or blades

## Cleaning the interior of your refrigerator

- 1 Turn off your refrigerator and unplug it from the wall outlet.
- 2 Remove all food and beverages.
- 3 Wash the inside with a warm, damp cloth soaked in a solution of one quart of lukewarm water and two tablespoons of baking soda.
- 4 Be sure to keep the door gasket (seal) clean to keep your refrigerator running efficiently.
- 5 Dry the interior and exterior with a soft cloth.

## Defrosting your refrigerator

Your refrigerator is equipped with an automatic defrost function and does not require manual defrosting. Defrost water from your refrigerator is channeled into a drip tray located above the compressor. Heat transfer from the compressor causes the defrost water to evaporate.

## Alarms

### Door ajar alarm

If the door is not closed completely for five minutes, an alarm sounds. Close the door to silence the alarm.

If the door is closed and the alarm continues to sound, make sure that the actuator at the bottom of the door is making contact with the switch on your refrigerator.

If the door alarm sounds when filling your refrigerator, it can be silenced by pressing the power button once.

## Temperature alarms and error codes

If the inner cabinet temperature is higher than 73° F (23° C) for one hour, the error code "HI" shows on the display and an alarm sounds.

If the inner cabinet temperature is lower than 32° F (0° C), the error code "LO" shows on the display and an alarm sounds.

If the inner cabinet temperature remains at 32° F (0° C) for more than 30 minutes, the error code "CL" shows on the display, an alarm sounds, and your refrigerator turns off to prevent the contents from freezing.

## Storing your refrigerator

- 1 Turn off your refrigerator and unplug it from the wall outlet.
- 2 Remove all food and beverages.
- 3 Clean your refrigerator.
- 4 Leave the door open slightly to avoid possible formation of condensation, mold, or odor.

<b>CAUTION:</b> Use extreme caution with children. Your refrigerator should not be accessible to child's play.
--

## Moving your refrigerator

- 1 Turn off your refrigerator and unplug it from the wall outlet.
- 2 Remove all food and beverages.
- 3 Securely tape down all loose items inside your refrigerator.
- 4 Turn the leveling foot up to avoid damage.
- 5 Tape the door shut.
- 6 Protect the outside of your refrigerator with a blanket or similar item.
- 7 To avoid damage to the power cord, put the cord on top of the refrigerator.
- 8 Make sure that your refrigerator stays in the upright position during transportation.

If that is not possible and your refrigerator must be placed on its back or side during transportation, upon reaching the destination allow it to remain upright for six hours before plugging it in to avoid damage to internal components.

## Power failure

Most power failures are corrected within a few hours and should not affect the temperature of your appliance, if you minimize the number of times the door is opened. If the power is going to be off for a longer period of time, take the proper steps to protect the contents of your refrigerator.

**Note:** Wait three to five minutes before attempting to restart the appliance if operation has been interrupted.

## Disposal

Your refrigerator should not be treated as regular household waste. It should be taken to an appropriate waste collection point for recycling of electrical components. For information on local waste collection points, contact your local waste removal agency or government office.


## Tips on saving energy

- Locate your refrigerator in the coolest area of the room, away from heat producing appliances or heating ducts and out of direct sunlight.
- Overloading your refrigerator forces the compressor to run longer.
- Do not open the door too often, especially if the weather is very hot. Close the door as soon as possible to prevent cool air from escaping.
- Make sure that your refrigerator is sufficiently ventilated, with adequate air circulation behind it.
- If your refrigerator is not being used, turn it off.
- If your refrigerator is outside, place it out of direct sunlight so the cooling element doesn't have to fight against the sun to stay cold.

# Troubleshooting

## Error codes

If the “HI”, “LO”, or “CL” error codes appear on the display for more than five minutes, a power reset may rectify the issue (see [Temperature alarms and error codes](#) on page 20). Unplug your refrigerator, wait five minutes, then plug it back in. If the error code persists, contact consumer care or an authorized service agent.

PROBLEM	SOLUTION
Your refrigerator does not operate.	<ul style="list-style-type: none"> <li>• Make sure that your refrigerator is plugged in and that the plug is pushed completely into the outlet.</li> <li>• Check the house fuse/circuit breaker box and replace the fuse or reset the circuit breaker.</li> <li>• If a power failure occurs, your refrigerator turns off. Wait until the power is restored, then turn it on again.</li> <li>• The refrigerator is in standby mode. Press the  (power) key once to restart your refrigerator.</li> </ul>
Your refrigerator door does not close completely.	<ul style="list-style-type: none"> <li>• Adjust the shelf properly.</li> <li>• Clean the door gaskets.</li> <li>• Level your refrigerator with the leveling feet.</li> </ul>
Your refrigerator is not cold enough.	<ul style="list-style-type: none"> <li>• Make sure that the door is closed properly.</li> <li>• Allow time for new beverages to cool, then check again.</li> <li>• Set the control to a colder setting.</li> </ul>
Your refrigerator makes unusual noises or vibrates.	<ul style="list-style-type: none"> <li>• Level your refrigerator with the leveling feet.</li> <li>• Move your refrigerator out from the wall.</li> <li>• This is normal.</li> </ul>
Moisture is building up on the interior walls and door of your refrigerator.	<ul style="list-style-type: none"> <li>• Make sure that the door is closed properly.</li> <li>• Door is left open too long or opened too frequently.</li> </ul>
Moisture is building up on the exterior of your refrigerator.	<ul style="list-style-type: none"> <li>• Make sure that the door is closed properly. Cold air from inside your refrigerator may be leaking.</li> <li>• Make sure that the door and gasket are properly aligned.</li> <li>• Weather is hot and humid (this is normal).</li> <li>• Move your refrigerator to a dryer location.</li> </ul>
Your refrigerator turns on and off frequently.	<ul style="list-style-type: none"> <li>• Cool the room or move your refrigerator to a cooler location.</li> <li>• Make sure that the door is closed properly.</li> <li>• Clean the door gaskets.</li> <li>• Set the control to a colder setting.</li> </ul>
The display shows an error code and an alarm sounds.	<ul style="list-style-type: none"> <li>• See <a href="#">Temperature alarms and error codes</a> on page 20.</li> </ul>

# Specifications

Dimensions (HxWxD)	34.1 × 23.8 × 23.6 in. (86.7 × 60.5 × 60 cm)
Net Weight	94 lbs. (43 kg)
Capacity	90 standard (12 oz. [355 ml]) beverage cans
Power requirements	115V~60Hz
Current	1.2A
Operating temperature	34° F to 50° F (1° C to 10° C)
Refrigerant type	R600a
Humidity level in your refrigerator (normal)	50% - 80%
Noise (Db) level	42
Annual energy cost	\$39.00 dollars
Cord length	70.8 in. (180 cm)

## ONE-YEAR LIMITED WARRANTY

Best Buy, or its Authorized Partner of Insignia branded products, warrants to you, the original purchaser of this new Insignia branded product ("Product"), that the Product shall be free of defects in the original manufacture of the material or workmanship for a period of one (1) year from the date of your purchase of the Product or the date of delivery (if later than the date of purchase) ("Warranty Period").

For this warranty to apply, your Product must be (i) purchased in the United States or Canada from a Best Buy branded retail store, online at [www.bestbuy.com](http://www.bestbuy.com) or [www.bestbuy.ca](http://www.bestbuy.ca), or from Best Buy's Authorized Partner, and (ii) packaged or sold with this warranty statement.

The term "Best Buy", as used in this warranty, refers to Best Buy branded retail stores, [www.bestbuy.com](http://www.bestbuy.com), [www.bestbuy.ca](http://www.bestbuy.ca), and Best Buy's Authorized Partner.

Because Insignia cannot control the quality of products sold by unauthorized sellers, this warranty applies only to Products that were purchased from Best Buy or an Insignia Authorized Partner, unless otherwise prohibited by law. Insignia reserves the right to reject warranty claims for Products purchased from unauthorized sellers, including unauthorized websites.

REPAIR OR REPLACEMENT, AS PROVIDED UNDER THIS WARRANTY, IS YOUR EXCLUSIVE REMEDY FOR BREACH OF WARRANTY. INSIGNIA SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR THE BREACH OF ANY EXPRESSED OR IMPLIED WARRANTY ON THIS PRODUCT, INCLUDING, BUT NOT LIMITED TO, LOST DATA, LOSS OF USE OF YOUR PRODUCT, LOST BUSINESS, OR LOST PROFITS. INSIGNIA PRODUCTS MAKES NO OTHER EXPRESS WARRANTIES WITH RESPECT TO THE PRODUCT. ALL EXPRESSED AND IMPLIED WARRANTIES FOR THE PRODUCT, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTIES OF AND CONDITIONS OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE WARRANTY PERIOD SET FORTH ABOVE AND NO WARRANTIES, WHETHER EXPRESSED OR IMPLIED, WILL APPLY AFTER THE WARRANTY PERIOD. SOME STATES, PROVINCES, AND JURISDICTIONS DO NOT ALLOW LIMITATIONS ON (i) HOW LONG AN IMPLIED WARRANTY LASTS, (ii) EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, or (iii) LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATIONS OR EXCLUSIONS MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS, WHICH VARY FROM STATE TO STATE OR PROVINCE TO PROVINCE.

### How long does the coverage last?

The Warranty Period lasts for 1 year (365 days) from the date you purchased the Product or the date of delivery (if later than the date of purchase). Your purchase date is printed on the receipt you received with the Product. In the event that Authorized Partner ceases to sell the covered Insignia branded product, this warranty shall terminate for that product and there shall be no repair or replacement of the Product.

### What does this warranty cover?

During the Warranty Period, if the original manufacture of the material or workmanship of the Product is determined to be defective by an authorized Insignia repair center or store personnel, Insignia will (at its sole option): (1) repair the Product with new or rebuilt parts; or (2) replace the Product at no charge with new or rebuilt comparable products or parts. Products and parts replaced under this warranty become the property of Insignia and are not returned to you. If service of Products or parts are required after the Warranty Period expires, you must pay all labor and parts charges. This warranty lasts as long as you own your Insignia Product during the Warranty Period. Warranty coverage terminates if you sell or otherwise transfer the Product.

### How to obtain warranty service?

If you purchased the Product at a Best Buy retail store location or from a Best Buy online website ([www.bestbuy.com](http://www.bestbuy.com) or [www.bestbuy.ca](http://www.bestbuy.ca)), please take your original receipt and the Product to any Best Buy store. Make sure that you place the Product in its original packaging or packaging that provides the same amount of protection as the original packaging. If you purchased your Product from an Authorized Partner, call Insignia at 1-877-467-4289.

To obtain warranty service, in the United States and Canada call 1-877-467-4289. Call agents may diagnose and correct the issue over the phone.



If you purchased the Product from an Authorized Partner other than Best Buy, please call 1-888-BESTBUY in the United States or 1-866-BESTBUY in Canada. You will be asked to provide proof of purchase and to return your Product to Best Buy. Make sure that you put the Product in its original packaging or packaging that provides the same amount of protection as the original packaging.

### Where is the warranty valid?

This warranty is valid only in the United States and Canada to the original purchaser of the product from an Authorized Partner, in the country where the original purchase was made.

### What does the warranty not cover?

This warranty does not cover:

- Food, beverage, and or medicine loss/spoilage.
- Damage to other products caused by a power surge or other similar issue while connected to the Product.
- Customer instruction/education.
- Installation.
- Set up adjustments.
- Cosmetic damage.
- Damage due to weather, lightning, and other acts of God, such as power surges.
- Accidental damage.
- Misuse.
- Abuse.
- Negligence.
- Commercial purposes/use, including but not limited to use in a place of business or in communal areas of a multiple dwelling condominium or apartment complex, or otherwise used in a place of other than a private home.
- Modification of any part of the Product, including the antenna.
- Display panel damaged by static (non-moving) images applied for lengthy periods (burn-in).
- Damage due to incorrect operation or maintenance.
- Connection to an incorrect voltage or power supply.
- Damage due to attempted repair by any person not authorized by Insignia to service the Product.
- Products sold "as is" or "with all faults".
- Consumables, including but not limited to batteries (i.e. AA, AAA, C etc.).
- Products where the factory applied serial number has been altered or removed.
- Loss or Theft of this product or any part of the product.
- Display panels containing up to three (3) pixel failures (dots that are dark or incorrectly illuminated) grouped in an area smaller than one tenth (1/10) of the display size or up to five (5) pixel failures throughout the display. (Pixel based displays may contain a limited number of pixels that may not function normally.).
- Failures or Damage caused by any contact including but not limited to liquids, gels or pastes.

Contact Insignia:

1-877-467-4289

[www.insigniaproducts.com](http://www.insigniaproducts.com)

INSIGNIA is a trademark of Best Buy and its affiliated companies.

\*Distributed by Best Buy Purchasing, LLC

7601 Penn Ave South, Richfield, MN 55423 U.S.A

©2025 Best Buy. All rights reserved.

# INSIGNIA™

[www.insigniaproducts.com](http://www.insigniaproducts.com)  
1-877-467-4289 (U.S. and Canada)

INSIGNIA is a trademark of Best Buy and its affiliated companies.  
Distributed by Best Buy Purchasing, LLC  
7601 Penn Ave South, Richfield, MN 55423 U.S.A  
©2025 Best Buy. All rights reserved.

V5 ENGLISH  
24-1000