

INSIGNIA™

Two-Slice Toaster

NS-TS2SBK6/NS-TS2SBL6/NS-TS2SPK6



Before using your new product, please read these instructions to prevent any damage.

Insignia Two-Slice Toaster

Contents

- Introduction 2
- IMPORTANT SAFEGUARDS..... 2
- Features 4
 - Package contents 4
 - Main features 4
- Using your toaster 5
 - Toasting frozen bread 6
 - Reheating toast 6
- Cleaning and maintaining your toaster 6
- Troubleshooting 7
- Specifications 7
- ONE-YEAR LIMITED WARRANTY - INSIGNIA 9

Introduction

Congratulations on your purchase of a high-quality Insignia product. Your NS-TS2SBK6, NS-TS2SBL6, or NS-TS2SPK6 represents the state of the art in toaster design and is designed for reliable and trouble-free performance.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- 1 Read all instructions.
- 2 Do not touch hot surfaces. The outer surface may get hot when the toaster is operating.
- 3 To protect against electrical shock, do not immerse cord, plugs, or toaster in water or other liquid.
- 4 Close supervision is necessary when any appliance is used by or near children.
- 5 Unplug from the outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- 6 Do not operate the toaster with a damaged cord or plug, or after the toaster malfunctions or has been damaged in any manner. Return the toaster to the nearest authorized service facility for examination, repair, or adjustment.

- 7 The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- 8 Do not use outdoors.
- 9 Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
- 10 Do not place on or near a hot gas or electric burner, or in a heated oven.
- 11 Always attach the plug to the appliance first, then plug the cord into the wall outlet. To disconnect, turn any control to "off", then remove the plug from the wall outlet.
- 12 Do not use this appliance for other than its intended use.
- 13 Oversize foods, metal foil packages, or utensils must not be inserted in a toaster, as they may involve a risk of fire or electric shock.
- 14 A fire may occur if the toaster is covered or touching flammable material, including curtains, draperies, walls, and the like, when in operation.
- 15 Do not attempt to dislodge food when the toaster is in operation.
- 16 Make sure that your outlet voltage corresponds to the voltage stated on the rating label of the toaster.
- 17 Bread may burn, so the toaster must not be used near or below curtains and other combustible materials, and must be watched.
- 18 Make sure that you take the bread out carefully after toasting so as to avoid injuries.
- 19 This toaster is not intended to be operated by means of an external timer or separate remote-control system.
- 20 This toaster includes a heating function. Surfaces other than the functional surfaces may develop high temperatures. Because temperatures are perceived differently by different people, this toaster should be used with caution. Hold the toaster with heat protection gloves or potholders. Areas which are not intended to be gripped must be given sufficient time to cool.

SAVE THESE INSTRUCTIONS

Notes on the plug and the power cord

- a) A short power-supply cord (or detachable power-supply cord) should be used to reduce the risk resulting from becoming entangled in or tripping over a longer cord.
- b) Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use.

- c) If a longer detachable power-supply cord or extension cord is used:
- 1) The marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance; and
 - 2) The cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally.

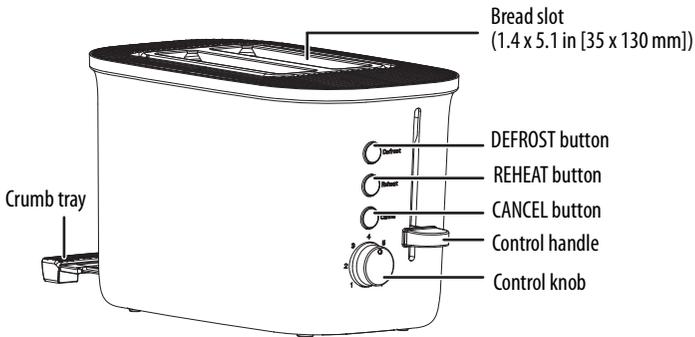
Features

- 120V/60Hz/700W
- Defrost/Reheat/Cancel functions
- Adjustable browning control

Package contents

- Two-slice toaster
- *User Guide*

Main features



Using your toaster

Note**Using your toaster the first time**

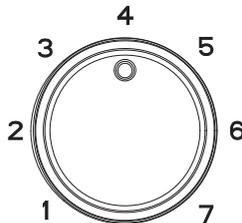
- Remove all protective wrappings prior to toasting.
- There may be manufacturing residue or oil in the toaster or heating element which can emit an odor for the first use. This is normal and will not occur after you use it several times.
- Set the control knob to 7, then lower the control handle until it latches into place. When the cycle is done, let the toaster cool down, then begin using it normally.

- 1 Put up to two bread slices into the bread slot.

Notes

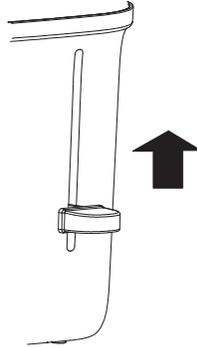
- If the toaster starts to smoke, press **CANCEL** to stop toasting immediately.
- Avoid toasting food with extremely runny ingredients such as butter.
- Never attempt to remove bread jammed in the slots without unplugging the toaster from the electrical outlet first. Do not damage the internal mechanism or heating elements when removing bread.
- Wait a minimum of 30 seconds between each toasting so the color control can reset and you can get a uniform color every time.
- Make sure the crumb tray is in place before using.

- 2 Plug the power cord into a wall outlet.
- 3 Set the control knob to the desired browning level (1 is light and 7 is dark).

**Notes**

- Use a darker setting when toasting two bread slices at the same time.
- If toasting continuously, toasting color for the first slices of bread will be lighter than subsequent slices at the same setting.

- 4 Lower the control handle until it latches into place. The Cancel indicator lights and the toaster begins toasting.
- 5 After the bread has been toasted, the control handle automatically pops up.

**Note**

During toasting, you can press the CANCEL button to cancel the operation at any time, but never lift the control handle to cancel toasting.

Toasting frozen bread

- 1 Set the control knob to the color you want, then lower the control handle until it latches into place.
- 2 Press the **DEFROST** button. The Defrost indicator lights. Your bread will be toasted to the color you want.

Reheating toast

- 1 Lower the control handle vertically until it latches into place.
- 2 Press the **REHEAT** button. The Reheat indicator lights. In this mode toasting time is fixed. When the toasting time expires, the control handle automatically pops up.

Cleaning and maintaining your toaster

- 1 Before cleaning, unplug from the toaster and let it cool down completely.
- 2 Wipe the outside with soft dry cloth. Never use metal polish.

- 3 Pull out the crumb tray at the bottom of the toaster and empty it. If the toaster is used frequently, clean the crumb tray at least once a week. Make sure the crumb tray is completely closed before using the toaster again.
- 4 When not in use or in storage, the power cord may be wound under the bottom of toaster.

Troubleshooting

Caution

Do not try to repair your toaster yourself. Doing so invalidates the warranty.

Problem	Possible cause	Possible solution
Why is my toast not toasted evenly?	The toaster may need to be cleaned.	See "Cleaning and maintaining your toaster" on page 6.
Why is there an odor coming from my toaster?	This is normal. During manufacturing, the toasting elements can have dust that needs to burn off before first using your toaster.	
Why won't the control handle stay down on my toaster?	Your toaster may not be plugged into a working outlet.	The toaster must be plugged in and have power running to it for the control handle to stay down. If you have checked the power and the control handle will not stay down, please contact a service center.
My toaster is not working.	Your toaster may not be plugged into a working outlet.	Make sure that your toaster is plugged in and that the outlet is working.
Why is there smoke coming out of the top?	If this is the first time using your toaster, this is normal, your elements are being conditioned.	
	There may be a build up of crumbs in the crumb tray, or a piece of bread may be stuck in the toaster.	Empty the crumb tray. Unplug your toaster and remove the crumb tray. Then shake your toaster over the sink to dislodge crumbs or small pieces of bread that may be stuck.

Specifications

Dimensions (WxDxH)	11.3 x 6.7 x 7.1 inches (286 x 170 x 180 mm)
Weight (net)	2.2 lbs. (1 kg)
Power	700 W
Capacity	2 slices of bread

ONE-YEAR LIMITED WARRANTY - INSIGNIA

Definitions:

The Distributor* of Insignia branded products warrants to you, the original purchaser of this new Insignia-branded product ("Product"), that the Product shall be free of defects in the original manufacturer of the material or workmanship for a period of one (1) year from the date of your purchase of the Product ("Warranty Period").

For this warranty to apply, your Product must be purchased in the United States or Canada from a Best Buy branded retail store or online at www.bestbuy.com or www.bestbuy.ca and is packaged with this warranty statement.

How long does the coverage last?

The Warranty Period lasts for 1 year (365 days) from the date you purchased the Product. Your purchase date is printed on the receipt you received with the Product.

What does this warranty cover?

During the Warranty Period, if the original manufacture of the material or workmanship of the Product is determined to be defective by an authorized Insignia repair center or store personnel, Insignia will (at its sole option): (1) repair the Product with new or rebuilt parts; or (2) replace the Product at no charge with new or rebuilt comparable products or parts. Products and parts replaced under this warranty become the property of Insignia and are not returned to you. If service of Products or parts are required after the Warranty Period expires, you must pay all labor and parts charges. This warranty lasts as long as you own your Insignia Product during the Warranty Period. Warranty coverage terminates if you sell or otherwise transfer the Product.

How to obtain warranty service?

If you purchased the Product at a Best Buy retail store location, please take your original receipt and the Product to any Best Buy store. Make sure that you place the Product in its original packaging or packaging that provides the same amount of protection as the original packaging. If you purchased the Product from a Best Buy online web site (www.bestbuy.com or www.bestbuy.ca), mail your original receipt and the Product to the address listed on the web site. Make sure that you put the Product in its original packaging or packaging that provides the same amount of protection as the original packaging.

To obtain warranty service, in the United States call 1-888-BESTBUY, Canada call 1-866-BESTBUY. Call agents may diagnose and correct the issue over the phone.

Where is the warranty valid?

This warranty is valid only in the United States and Canada at Best Buy branded retail stores or websites to the original purchaser of the product in the county where the original purchase was made.

What does the warranty not cover?

This warranty does not cover:

- Customer instruction/education
- Installation
- Set up adjustments
- Cosmetic damage
- Damage due to weather, lightning, and other acts of God, such as power surges
- Accidental damage
- Misuse
- Abuse
- Negligence
- Commercial purposes/use, including but not limited to use in a place of business or in communal areas of a multiple dwelling condominium or apartment complex, or otherwise used in a place of other than a private home.

- Modification of any part of the Product, including the antenna
- Display panel damaged by static (non-moving) images applied for lengthy periods (burn-in).
- Damage due to incorrect operation or maintenance
- Connection to an incorrect voltage or power supply
- Attempted repair by any person not authorized by Insignia to service the Product
- Products sold "as is" or "with all faults"
- Consumables, including but not limited to batteries (i.e. AA, AAA, C etc.)
- Products where the factory applied serial number has been altered or removed
- Loss or Theft of this product or any part of the product
- Display panels containing up to three (3) pixel failures (dots that are dark or incorrectly illuminated) grouped in an area smaller than one tenth (1/10) of the display size or up to five (5) pixel failures throughout the display. (Pixel based displays may contain a limited number of pixels that may not function normally.)
- Failures or Damage caused by any contact including but not limited to liquids, gels or pastes.

REPAIR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS YOUR EXCLUSIVE REMEDY FOR BREACH OF WARRANTY. INSIGNIA SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR THE BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT, INCLUDING, BUT NOT LIMITED TO, LOST DATA, LOSS OF USE OF YOUR PRODUCT, LOST BUSINESS OR LOST PROFITS. INSIGNIA PRODUCTS MAKES NO OTHER EXPRESS WARRANTIES WITH RESPECT TO THE PRODUCT, ALL EXPRESS AND IMPLIED WARRANTIES FOR THE PRODUCT, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF AND CONDITIONS OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE WARRANTY PERIOD SET FORTH ABOVE AND NO WARRANTIES, WHETHER EXPRESS OR IMPLIED, WILL APPLY AFTER THE WARRANTY PERIOD. SOME STATES, PROVINCES AND JURISDICTIONS DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS, WHICH VARY FROM STATE TO STATE OR PROVINCE TO PROVINCE.

Contact Insignia:

For customer service please call 1-877-467-4289

www.insigniaproducts.com

INSIGNIA is a trademark of Best Buy and its affiliated companies.

Registered in some countries.

Distributed by Best Buy Purchasing, LLC

7601 Penn Ave South, Richfield, MN 55423 U.S.A.

©2015 Best Buy. All rights reserved.

Made in China

INSIGNIA™

www.insigniaproducts.com

1-877-467-4289 (U.S. and Canada) or 01-800-926-3000 (Mexico)

INSIGNIA is a trademark of Best Buy and its affiliated companies.

Registered in some countries.

Distributed by Best Buy Purchasing, LLC

7601 Penn Ave South, Richfield, MN 55423 U.S.A.

©2015 Best Buy. All rights reserved.

Made in China.

V2 ENGLISH
15-0275