

Portable Steam Sauna Spa
BA8086US

USA office: Fontana

GBR office: Ipswich

AUS office: Truganina

If you're having difficulty, our friendly
customer team is always here to help.



USA:cs.us@costway.com
AUS:cs.au@costway.com
GBR:cs.uk@costway.com

THIS INSTRUCTION BOOKLET CONTAINS **IMPORTANT** SAFETY INFORMATION. PLEASE READ AND KEEP FOR FUTURE REFERENCE.



Before You Start

- ⚠ Please read all instructions carefully.
- ⚠ Retain instructions for future reference.
- ⚠ Separate and count all parts and hardware.
- ⚠ Read through each step carefully and follow the proper order.
- ⚠ We recommend that, where possible, all items are assembled near to the area in which they will be placed in use, to avoid moving the product unnecessarily once assembled.
- ⚠ Always place the product on a flat, steady and stable surface.
- ⚠ Keep all small parts and packaging materials for this product away from babies and children as they potentially pose a serious choking hazard.



Portable Steam Sauna Spa

Before You Start

Please read all instructions carefully.

Retain instructions for future reference.

Separate and count all parts and hardware.

Read through each step carefully and follow the proper order.

We recommend that, where possible, all items are assembled near to the area in which they will be placed in use, to avoid moving the product unnecessarily once assembled.

Always place the product on a flat, steady and stable surface.

Keep all small parts and packaging materials for this product away from babies and children as they potentially pose a serious choking hazard.

⚠ Safety Instructions



 
Please keep the product in balance when using it. To prevent fire hazards, do not place the steamer near flammable materials .



Pregnant women and people having high blood pressure and heart disease should not use this product. Please wait at least 30 minutes after eating before using this product. Do not use this product in times of great hunger for your safety.



Don't put animals or plants in the sauna room.



When using the product, stay at least 10 cm (4 inches) away from the steam outlet. Don't touch the steam outlet with bare hands.



Do not use the product in a humid environment or immerse it in water.



The water filled in the steamer should not reach over the max water line in case of malfunction.



Users should drink 200-300 ml of water or tea before using the product. Please prepare a towel for wiping sweat. Take a break after a certain period of use. Don't use the product consecutively over 20 minutes at one time.



The elders should be accompanied by their families when using the product.



The steamer will power off automatically when the water inside dries up. It will restart 20 minutes later. If it doesn't restart, please contact the supplier. Never turn on the steamer without water added.



Don't forget to disconnect the power after use and wipe it clean with a damp cloth after 15 minutes of cooling down. Don't clean the product with water directly.



 
The sauna room and steamer must be placed on a flat surface. Do not open the lid immediately if the steamer is working. Disconnect the power and let it thoroughly cool down first.



Always keep the product clean and in good condition as it would make its service life longer.



Please keep this product out of reach of children.



Flammable, toxic, corrosive, or other harmful liquids must not be put into the steamer as they might cause bodily injuries or property damage.



The steamer should be only used in the sauna room. It should not be used for other heating purposes. Don't repair or modify the product by yourself.



Milk should not be put into the steamer. If you want to use herbs or flowers, remember to use a gauze bag to wrap them in advance.



Mat × 1



Steam Box × 1



Carrying Bag × 1



Wooden Foot
Massage × 1



Chair × 1



Plastic bag × 1

Package Contents



Sauna Tent Cover × 1



Steamer × 1



Steam Tube × 2

Specifications

Overall Dimensions(L×W×H)	35" × 35" × 58.7"
Material	Satin Cover & Iron Frame
Rated Voltage of Steamer	110V / 60HZ
Power of Steamer	800W

Set-Up Instructions



Fig 1



Fig 2

1. Take out the sauna tent cover from the carrying bag and unfold it from the center as shown in Fig 1.

2. Hold the inner frame and pull out diagonally as shown in Fig 2.

3. The sauna tent cover will look like Fig 3 after it is fully unfolded.



Fig 3

Note:

If the frame of the sauna tent cover is out of shape, please twist it forward and backward repeatedly to readjust it as shown in Fig 4.



Fig 4



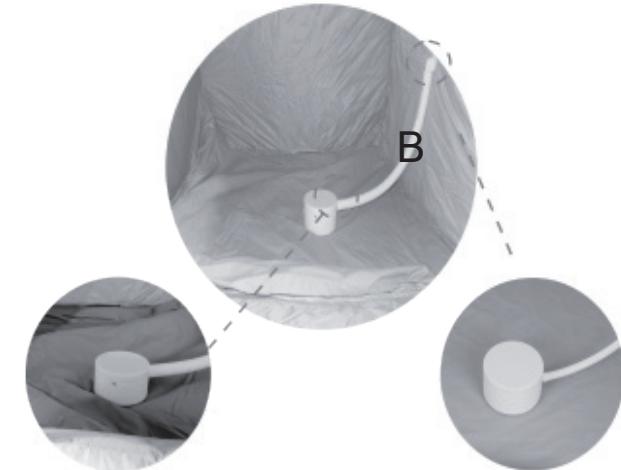


Fig 5

Use one of the steam tubes to connect the steam box and outlet port on the inner side of the sauna tent cover as shown in Fig 5. Ensure that the steam tube is well connected with the two parts.

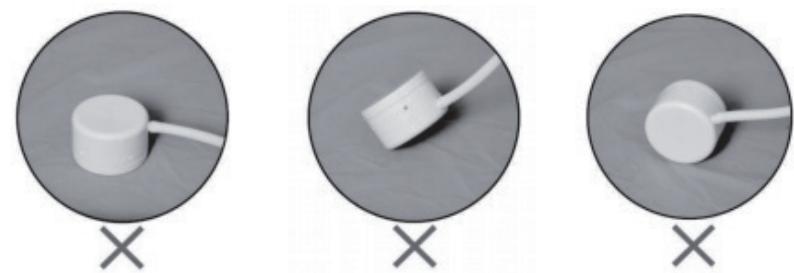

Note: Make sure that the steam box is placed flat with its cover on the top and that there are no objects within 4 inches of all sides.

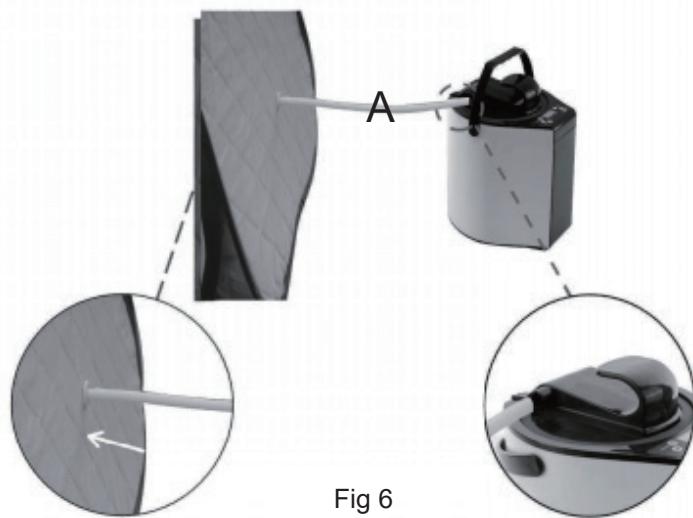


Use one of the steam tubes to connect the steamer and the inlet hole on the outer side of the sauna tent cover as shown in Fig 6.

Ensure that the steam tube is well connected with the two parts. If the tubes fall off or loosen during usage, please turn off the power and let them thoroughly cool down first before reconnection.

Caution:

When you are using the product, please make sure all of the steam tubes are not bent as shown in the picture since it would block the flow of steam.

As a result, the steam tubes may pop off and the hot steam may stray out, causing scalding and other bodily injuries. Make sure the steam tubes are placed straight. If you find they are bent, turn off the power and let them thoroughly cool down first before you adjust their positions.

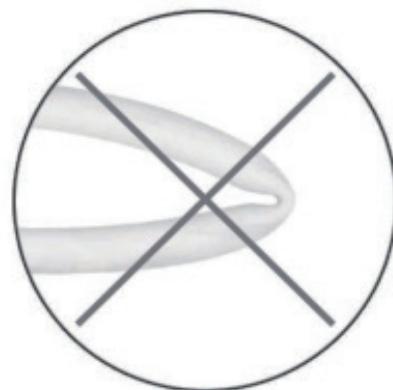

Button Instruction

a).Switch Button (ON/OFF Button)

Press this button to switch between standby and operating status.

b).Timing Button (TIMER Button)

Press this button to shorten and prolong timer. 9-level timing settings: (15, 20, 30, 40, 50, 60, 70, 80, and 90 min). Suggested time is 20-30 minutes.

c).Temperature Button (TEMP Button)

Press this button to increase temp. There are 9 grades. Suggested temperature grade is 6-8.

d).Fogging Button

Photocatalyst fogging function makes steam have better wettability and skin-friendly properties. At the same time, the steamer has a certain bactericidal affect.

NOTE:

- 1.Do not operate without water in the steamer when the power is on.
- 2.Pay attention to the battery(not included). If there is not enough battery left of the remote controller, please open the cover of the battery behind the controller and install a new one, then close the cover again.

Steamer Operation Instructions

1. Zip up the cover and add water to the steamer until the water reaches to the M water line. This amount of water could last about 1 hour. If you like, you can add some herb or flowers in the steamer or the steam box. Remember to use a gauze bag to wrap them in advance.
2. Connect the steamer or the sauna room with shorter steamer hose (Please keep the air in good conditions).
3. Make sure the lid is closed on the steamer and connected to the power. Before connection, please note that the voltage on the power plug is consistent with the voltage on the nameplate, and then press the power button "ON /OFF".
4. Press the button on the steamer or use the remote to turn it on and adjust the time to 90 minutes and temperature to P9. Let it preheat for about 10-15 minutes first. When the steam is ready in the tent, we will start the sauna.

5. Before you get into the sauna room, adjust the temperature back to P6 first. Since the P6 is suitable for most people. You can turn it up if you think it is not hot enough.

6. For time setting, press the "TIMER" button. There are 9 grades of time from 15 minutes to 90 minutes. The recommended time is 20-30 minutes (press the up button for 15-80 minutes. For 90 minutes, the user has to press the button down).

7. For the temperature setting, press the "TEMP" button. There are 9 adjustable temperature grades. The recommended temperature is 6-8 grades depending on comfort level.

Press the up button to increase the temperature level from low to high (1-2-3-4-5-6-7-8-9), which can be adjusted in a cycle. Press the downward button, the temperature level decreases from high to low (9-8-7-6-5-4-3-2-1), which can be adjusted in a cycle.

There is a "FOGGING" button. When pressed, the water vapor becomes smoother and more pleasing to the skin.

NOTE:

1. After use, please disconnect the power and let the product cool down completely before disassembling (If you reuse it, let the product cool down for 30 minutes before starting).
2. After sauna, relax your body and let your body temperature return to normal before taking a bath.
3. It is forbidden to pour water into the steam box. Because it will cause the vapor diffusion to be blocked.

Sauna Tent Cover Take-Down Instructions

First way:

1. Lay down the sauna tent cover with the inlet hole facing you. Press down the frame on the opposite side as shown in Fig 7.
2. Fold the sauna tent cover into half as shown in Fig 8.
3. Put the sauna tent cover into the plastic bag, then tie the plastic bag tightly as shown in Fig 9.

Second way:

1. Lay down the sauna tent cover with the inlet hole facing you. Press down the frame on the opposite side as shown in Fig 7.

2. Fold the sauna tent cover into half as shown in Fig 8.

3. Hold the top left corner and fold it toward the right side of the inlet hole as shown in Fig 10.

4. With your right hand holding the top left corner in place, use your left hand to fold the top right corner toward the outlet hole as shown in Fig 11.

5. Fold the bottom left corner over the top right corner as shown in Fig 11.

6. Press down the folded sauna tent cover as shown in Fig 13.

7. Put the folded sauna tent cover back to the carrying bag as shown in Fig 14.

*In order to keep the shape of the sauna tent cover, recommend using the first way. If you're skilled in taking down the sauna tent cover as the second way's shown, you can use the second way.



Fig 7



Fig 8



Fig 9



Fig 10



Fig 11



Fig 12



Fig 13



Fig 14



Return / Damage Claim Instructions

⚠ **DO NOT discard the box / original packaging.**

In case a return is required, the item must be returned in original box. Without this your return will not be accepted.

⚠ **Take a photo of the box markings.**

A photo of the markings (text) on the side of the box is required in case a part is needed for replacement. This helps our staff identify your product number to ensure you receive the correct parts.

⚠ **Take a photo of the damaged part (if applicable).**

A photo of the damage is always required to file a claim and get your replacement or refund processed quickly. Please make sure you have the box even if it is damaged.

⚠ **Send us an email with the images requested.**

Email us directly from marketplace where your item was purchased with the attached images and a description of your claim.