





















USER'S MANUAL

 

 
 


 

 
 

 
 
 
 
 
 
 

 

 
**Bookcase
HW61830**

PRODUCT ASSEMBLY


Hardware List

| | | | | | | | | |
|---|--|--------|---|---|--------|---|---|--------|
| A |  6*35mm | 38 pcs | H |  | 1 pc | O |  4*30mm | 3 pcs |
| B |  15*10mm | 46 pcs | I |  | 2 pcs | P |  | 2 pcs |
| C |  | 4 pcs | J |  4*16mm | 2 pcs | Q |  | 2 pcs |
| D |  8*30mm | 44 pcs | K |  | 2 pcs | R |  3.5*12mm | 2 pcs |
| E |  | 4 pcs | L |  | 12 pcs | S |  2.5*12mm | 38 pcs |
| F |  3*14mm | 2 pcs | M |  3.5*40mm | 2 pcs | T |  | 38 pcs |
| G |  3*12mm | 18 pcs | N |  4*25mm | 2 pcs | | | |

Parts List

| | | | | | | | |
|----|----------------------------------|---|-------|----|---|---|-------|
| 1 | Top Panel |  | 1 pc | 13 | Upper Back Connect Bar |  | 1 pc |
| 2 | Upper Side Panel |  | 2 pcs | 14 | Left Lower Deco Rail |  | 1 pc |
| 3 | Lower Back Connect Bar |  | 1 pc | 15 | Right Lower Deco Rail |  | 1 pc |
| 4 | Top Connect Bar |  | 1 pc | 16 | Front Deco Rail for Middle and Bottom Shelf |  | 1 pc |
| 5 | Upper Adjustable Shelf |  | 2 pcs | 17 | Lower Left Side Panel |  | 1 pc |
| 6 | Front Deco Rail for Upper Shelf |  | 2 pcs | 18 | Lower Right Side Panel |  | 1 pc |
| 7 | Left Upper Deco Rail |  | 1 pc | 19 | Left Door |  | 1 pc |
| 8 | Right Upper Deco Rail |  | 1 pc | 20 | Right Door |  | 1 pc |
| 9 | Middle and Bottom Shelf |  | 2 pcs | 21 | Upper Back Panel |  | 2 pcs |
| 10 | Front Deco Rail for Middle Shelf |  | 1 pc | 22 | Lower Back Panel |  | 2 pcs |
| 11 | Magnetic Catch Block |  | 1 pc | | | | |
| 12 | Lower Shelf |  | 1 pc | | | | |

 
Part List Assembly Overview

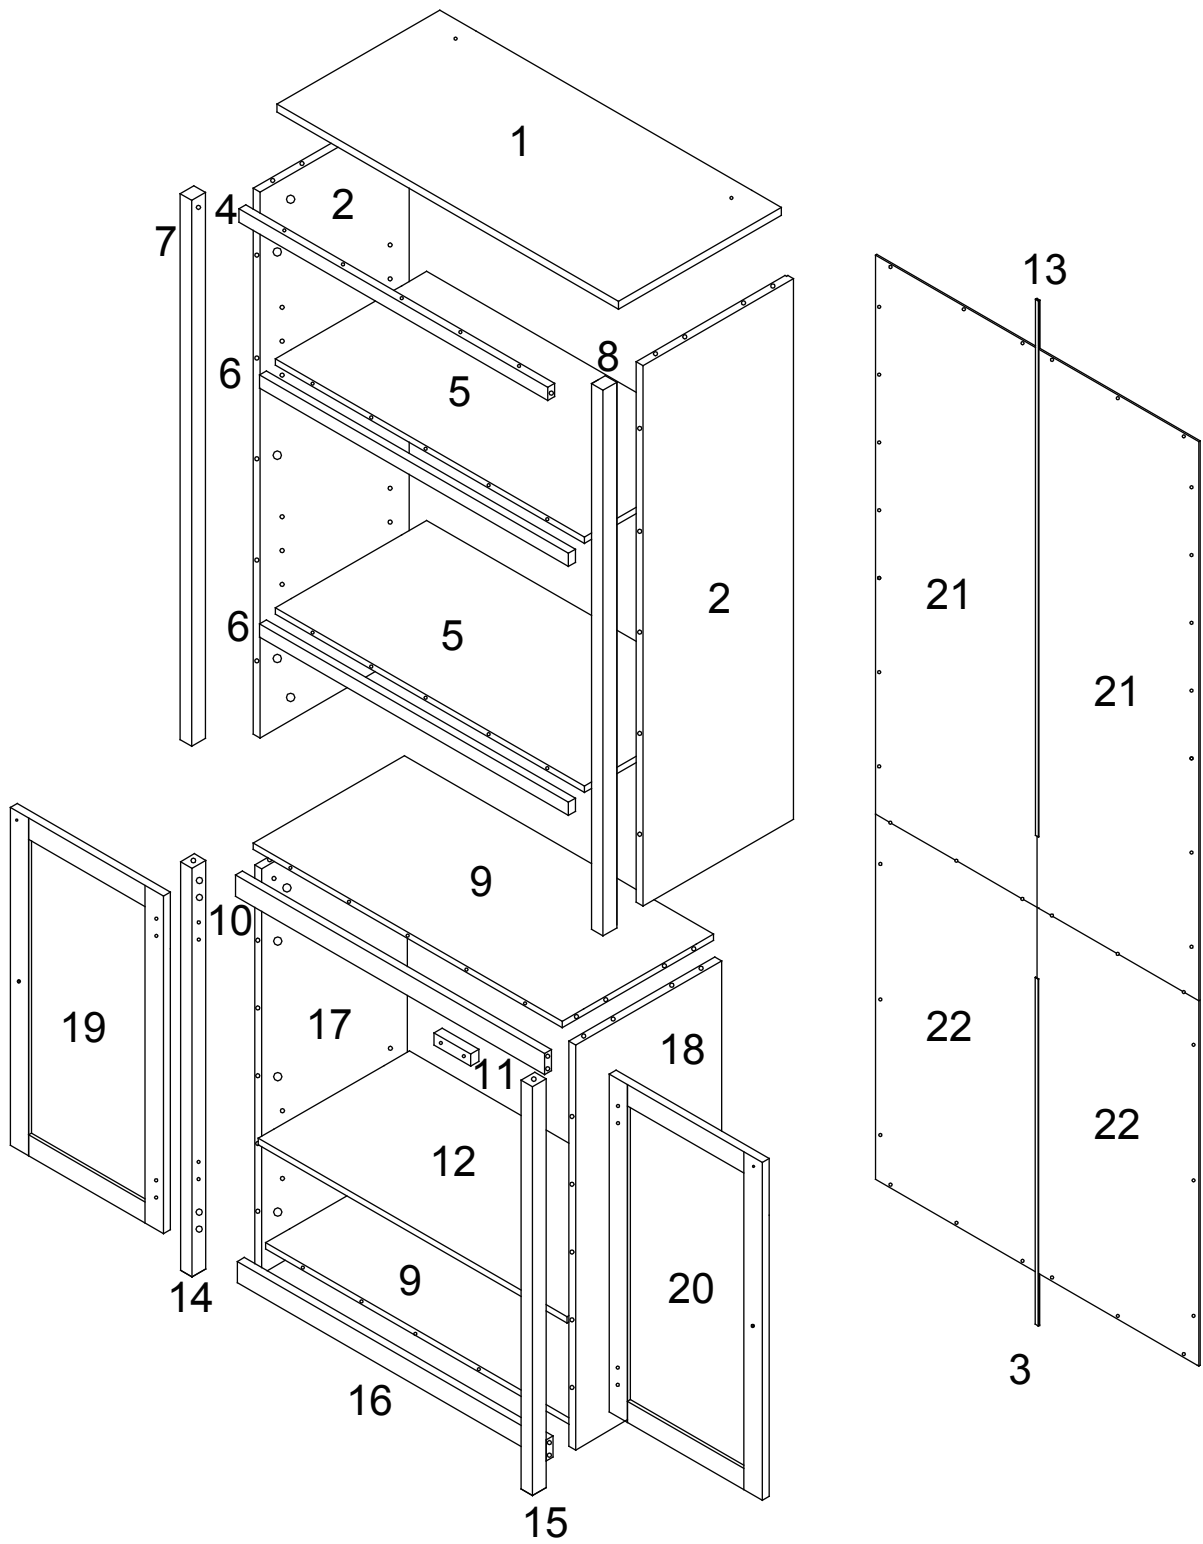

PRODUCT ASSEMBLY

  
Step 1



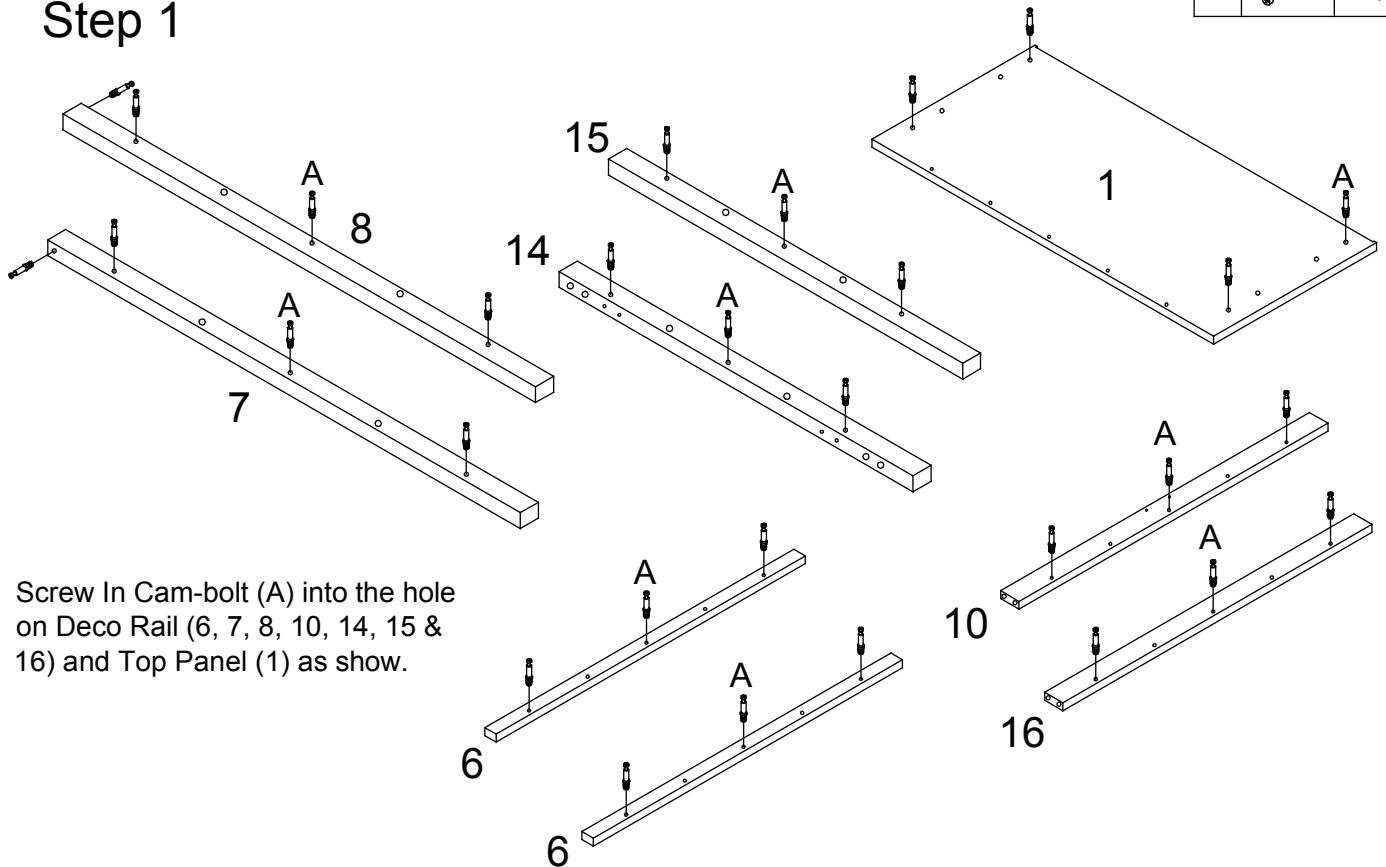




 
A  30 pcs

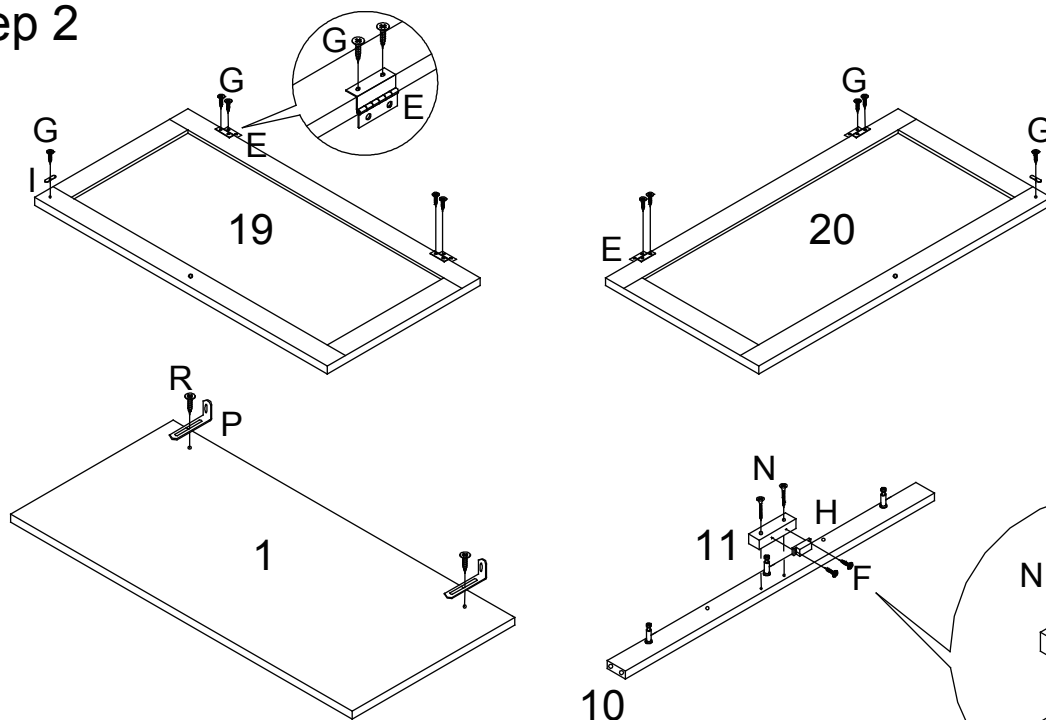

Screw In Cam-bolt (A) into the hole on Deco Rail (6, 7, 8, 10, 14, 15 & 16) and Top Panel (1) as show.

Step 2






| | | |
|---|---|--------|
| E |  | 4 pcs |
| F |  | 2 pcs |
| G |  | 10 pcs |
| H |  | 1 pc |
| I |  | 2 pcs |
| N |  | 2 pcs |
| P |  | 2 pcs |
| R |  | 2 pcs |


- 1) Attach Hinge (E) and Magnetic bar (I) to Door (19 & 20) with Screw (G).
- 2) Attach Bracket (P) to Top Panel (1) with Screw (R).
- 3) Attach Magnetic Catch Block (11) to Front Deco Rail for Middle Shelf (10) with Screw (N) as shown.
- 4) Attach Magnetic Catch (H) to (11) with Screw (F) as shown.

PRODUCT ASSEMBLY


Step 3

1) Attach Deco Rail (7 & 8) to Upper Side Panel (2) with Wood Dowel (D) and Cam-bolt on (7 & 8). Insert Cam-lock (B) and turn clockwise to lock onto Cam-bolt.


| | | |
|---|---|--------|
| A |  | 8 pcs |
| B |  | 24 pcs |
| D |  | 16 pcs |

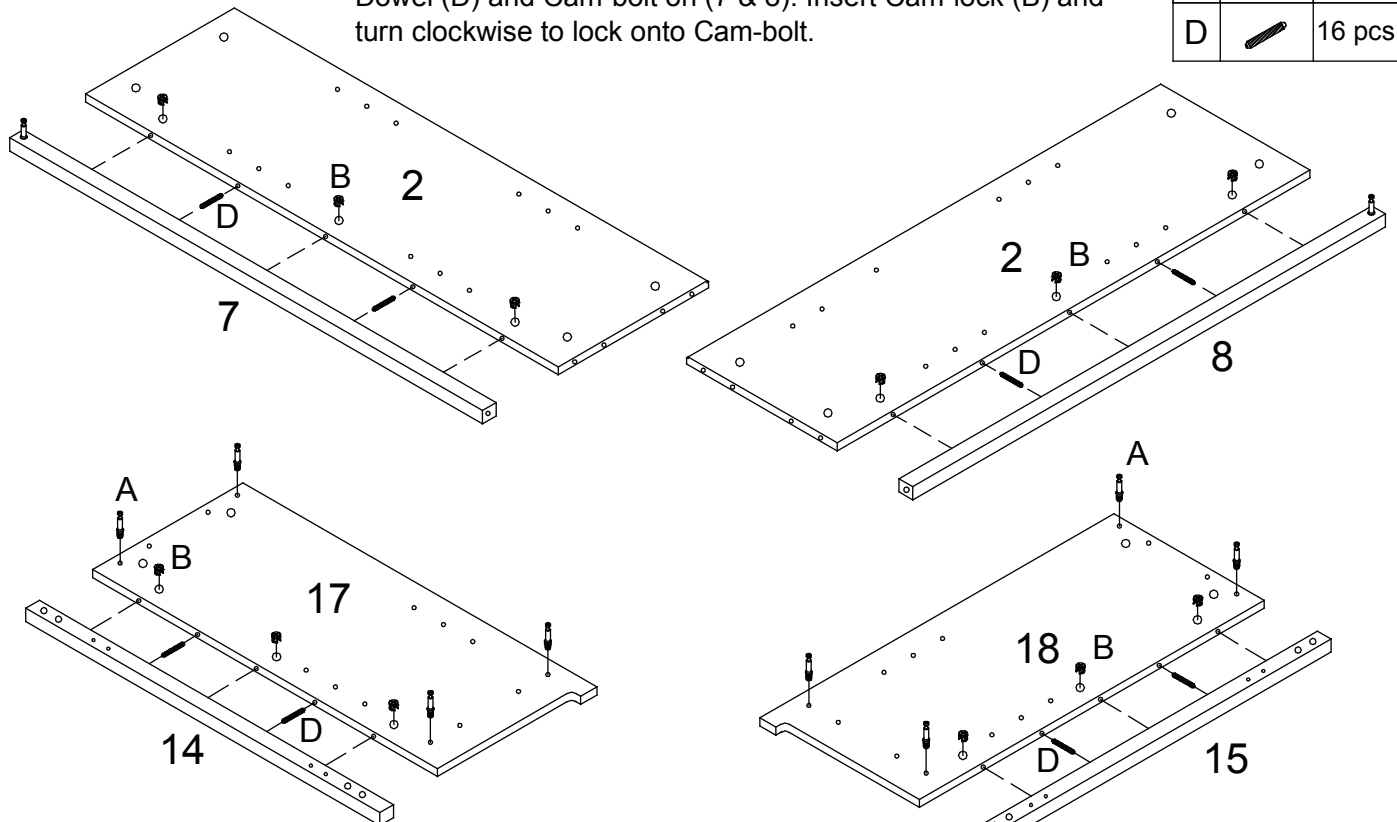 

  2) Attach Deco Rail (14 & 15) to Lower Side Panel (17 & 18) with Wood Dowel (D) and Cam-bolt on (14 & 15). Insert Cam-lock (B) and turn clockwise to lock onto Cam-bolt.

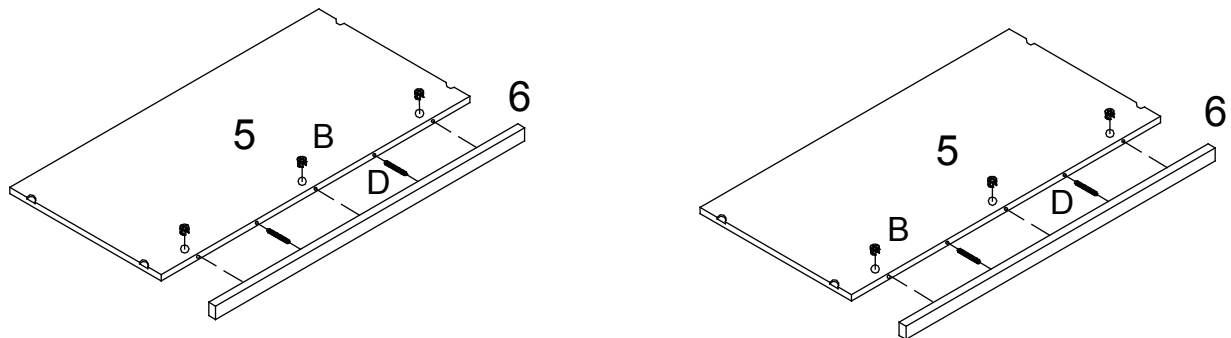

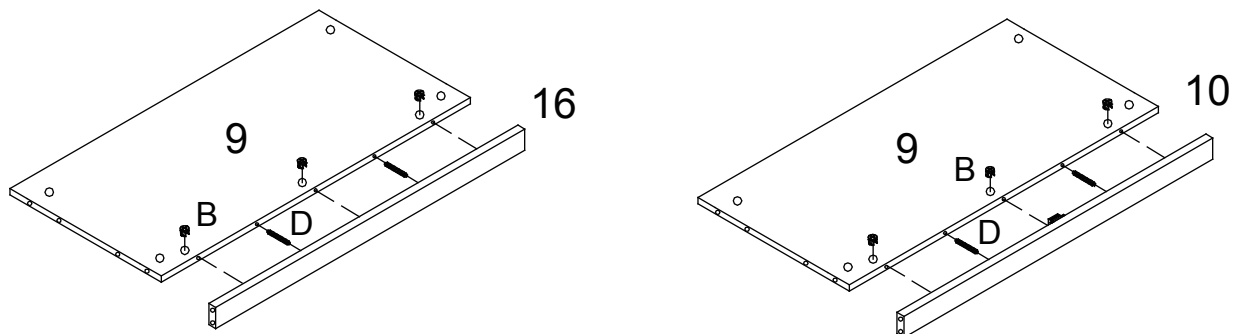

3) Attach Deco Rail (6) to Upper Adjustable Shelf (5) with Wood Dowel (D) and Cam-bolt on (6). Insert Cam-lock (B) and turn clockwise to lock onto Cam-bolt.

 


4) Attach Deco Rail (10 & 16) to Middle and Bottom Shelf (9) with Wood Dowel (D) and Cam-bolt on (10 & 16). Insert Cam-lock and turn clockwise to lock onto Cam-bolt.

PRODUCT ASSEMBLY



Step 4

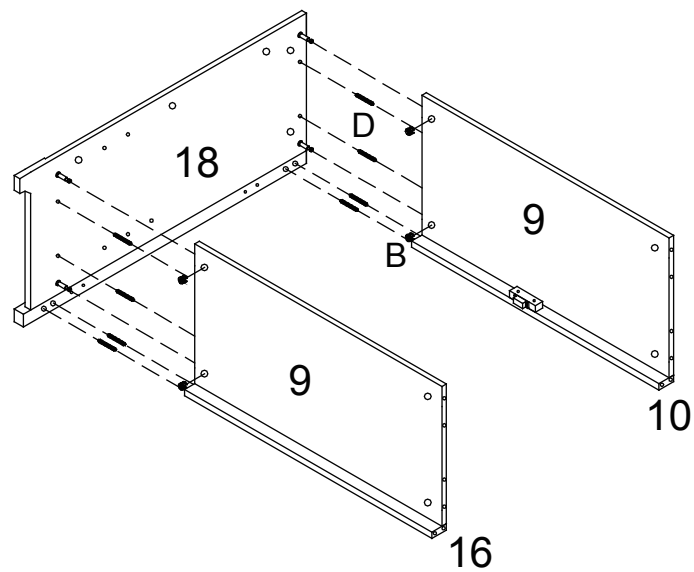
| | | |
|---|---|-------|
| B |  | 4 pcs |
| D |  | 8 pcs |



- 1) Insert Wood Dowel (D) into the holes on Shelf (9) and Deco Rail (10 & 16).
- 2) Attach Shelf (9) to Lower Right Side Panel (18).
- 3) Insert Cam-lock (B) to the holes on (9) and turn clockwise to lock onto Cam-bolt.

Step 5


| | | |
|---|---|-------|
| B |  | 4 pcs |
| D |  | 8 pcs |

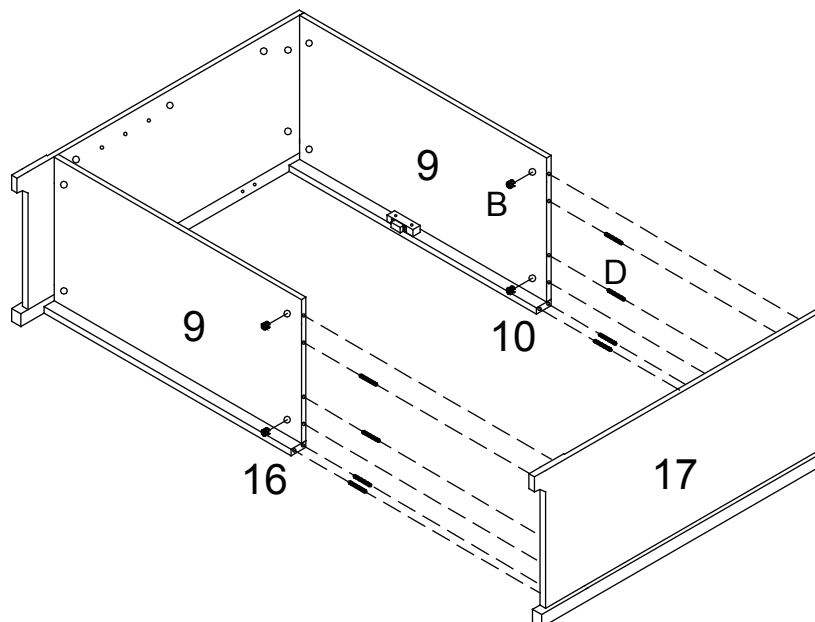 

- 1) Insert Wood Dowel (D) into the holes on Shelf (9) and Deco Rail (10 & 16).
- 2) Attach Lower Left Side Panel (17).
- 3) Insert Cam-lock (B) to the holes on (9) and turn clockwise to lock onto Cam-bolt.

PRODUCT ASSEMBLY

 
Step 6

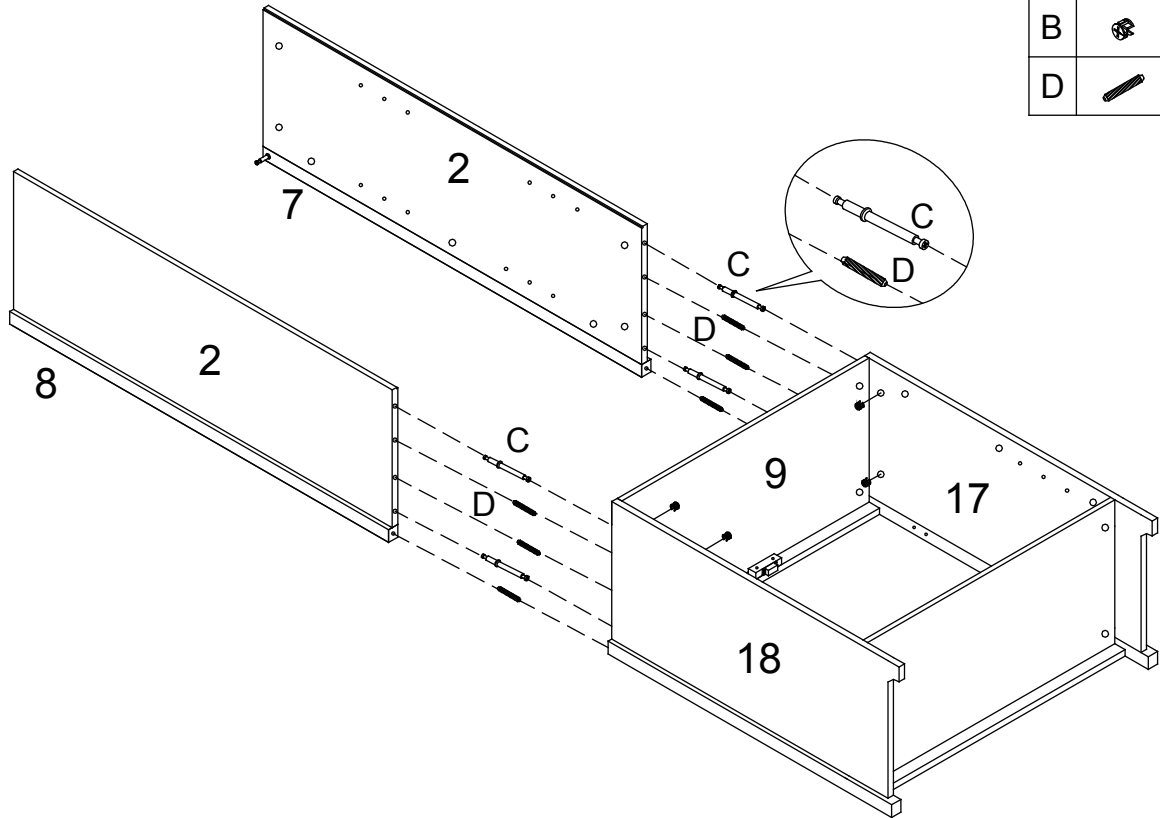

| | | |
|---|--|-------|
| C | | 4 pcs |
| B | | 4 pcs |
| D | | 6 pcs |

- 1) Insert Cam-bolt (C) and Wood Dowel (D) into the holes on Middle Shelf (9).
- 2) Insert Cam-lock (B) to the holes on (17 & 18) and turn clockwise to lock onto Cam-bolt.
- 3) Attach Upper Side Panel (2) to (9) via Wood Dowels and Cam-bolts on (9).

 Step 7

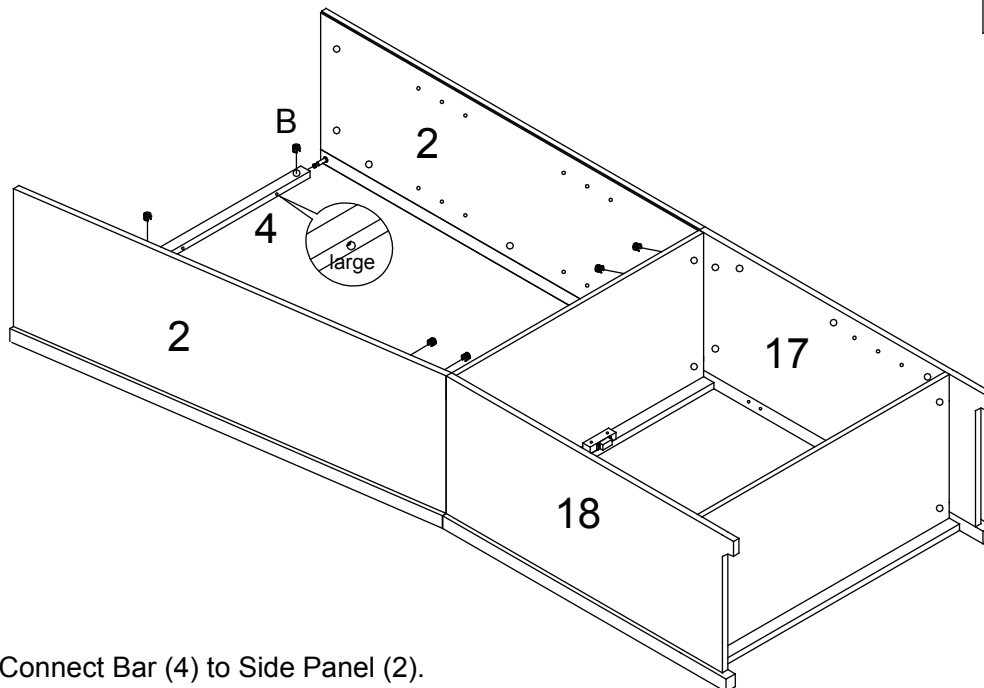


| | | |
|---|--|-------|
| B | | 6 pcs |
|---|--|-------|

- 1) Attach Top Connect Bar (4) to Side Panel (2).
Important: The large hole is in under side.
- 2) Insert Cam-lock (B) to the holes on (4) and turn clockwise to lock onto Cam-bolt.
- 3) Insert Cam-lock (B) to the holes on (2) and turn clockwise to lock onto Cam-bolt.
Important: If you can't lock it, please loose the cam-lock on (17 & 18), tighten two Cam-locks when both are in place.

PRODUCT ASSEMBLY

Step 8


| | | |
|---|---|-------|
| D |  | 6 pcs |
|---|---|-------|

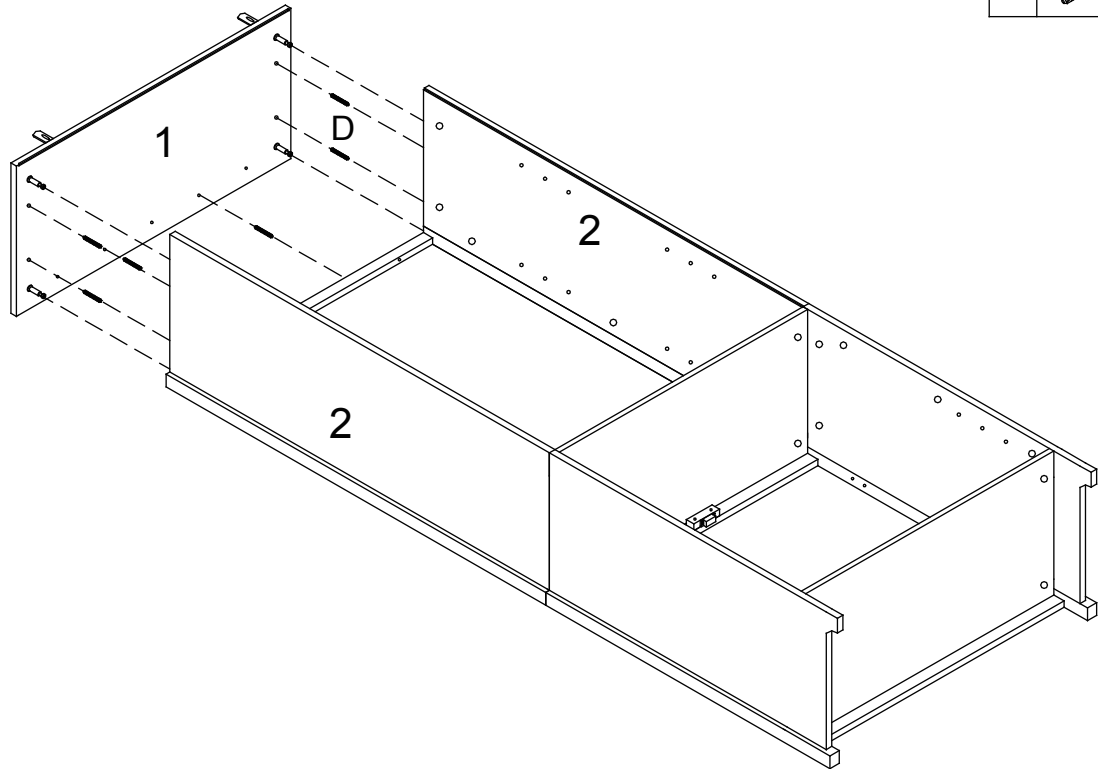 

- 1) Insert Wood Dowel (D) into the holes on Side Panel (2).
- 2) Attach Top Panel (1) to (2) via Wood Dowels and Cam-bolts on (1).
- 3) Insert Cam-lock (B) to the holes on (2) and turn clockwise to lock onto Cam-bolt.

 Step 9



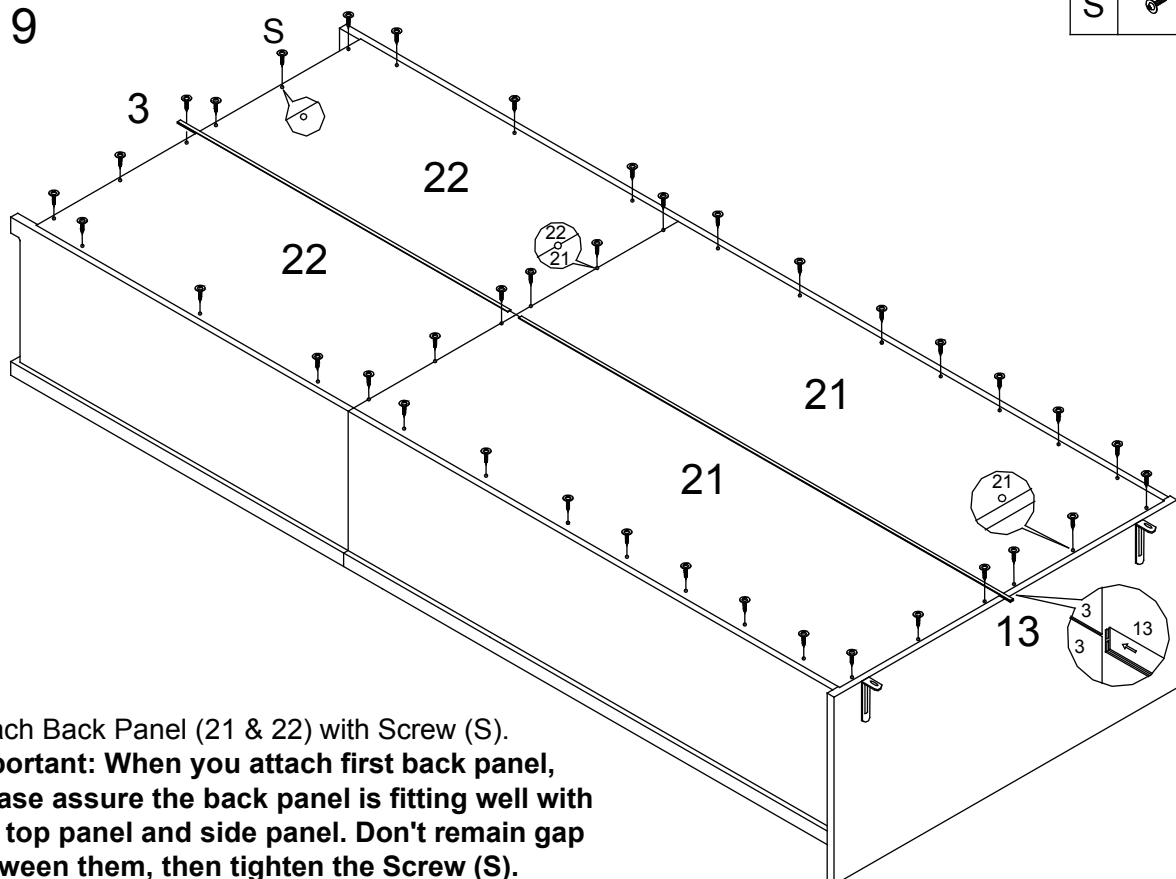

| | | |
|---|---|--------|
| S |  | 38 pcs |
|---|---|--------|




- 1) Attach Back Panel (21 & 22) with Screw (S).
Important: When you attach first back panel, please assure the back panel is fitting well with the top panel and side panel. Don't remain gap between them, then tighten the Screw (S).
- 2) Slide in Connect Bar (3 & 13) as shown.

PRODUCT ASSEMBLY


Step 10


| | | |
|---|---|-------|
| G |  | 8 pcs |
| J |  | 2 pcs |
| K |  | 2 pcs |
| O |  | 3 pcs |

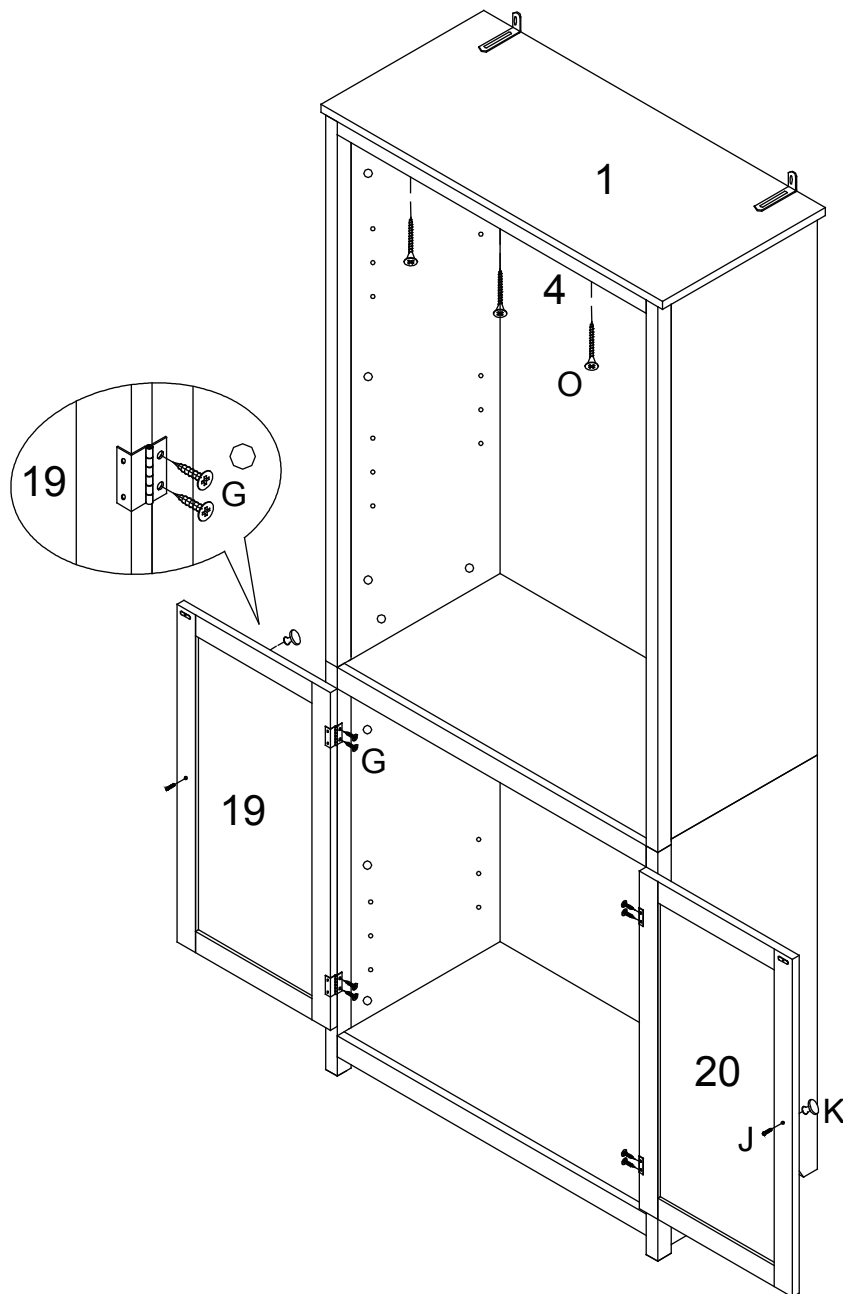 

- 1) Affix Top Connect Bar (4) to Top Panel (1) with Screw (O).
- 2) Attach Door (19 & 20) to Side Panel with Screw (G).
- 3) Attach Knob (K) to Door (19 & 20) with Knob Bolt (J).


Step 11


| | | |
|---|---|--------|
| L |  | 12 pcs |
|---|---|--------|

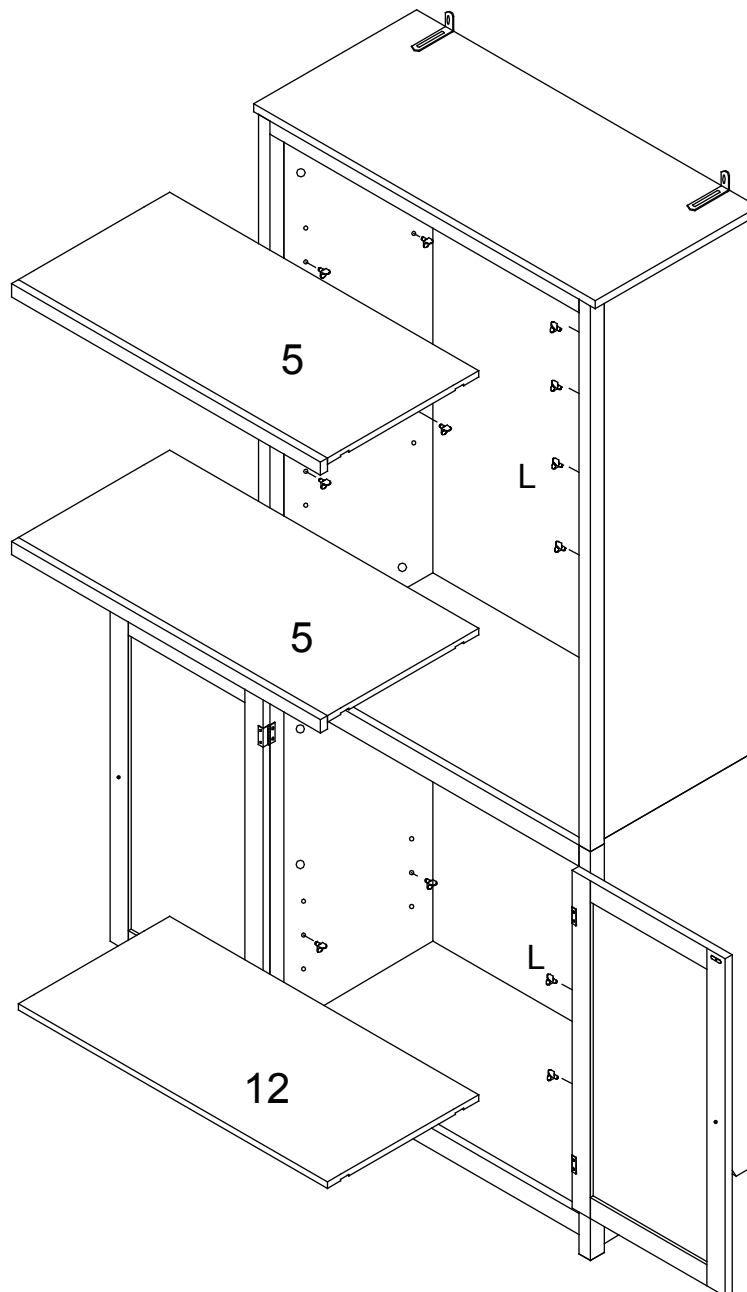 

Insert Shelf Pin (L) and place Shelf (5 & 12) on it.

 Step 12

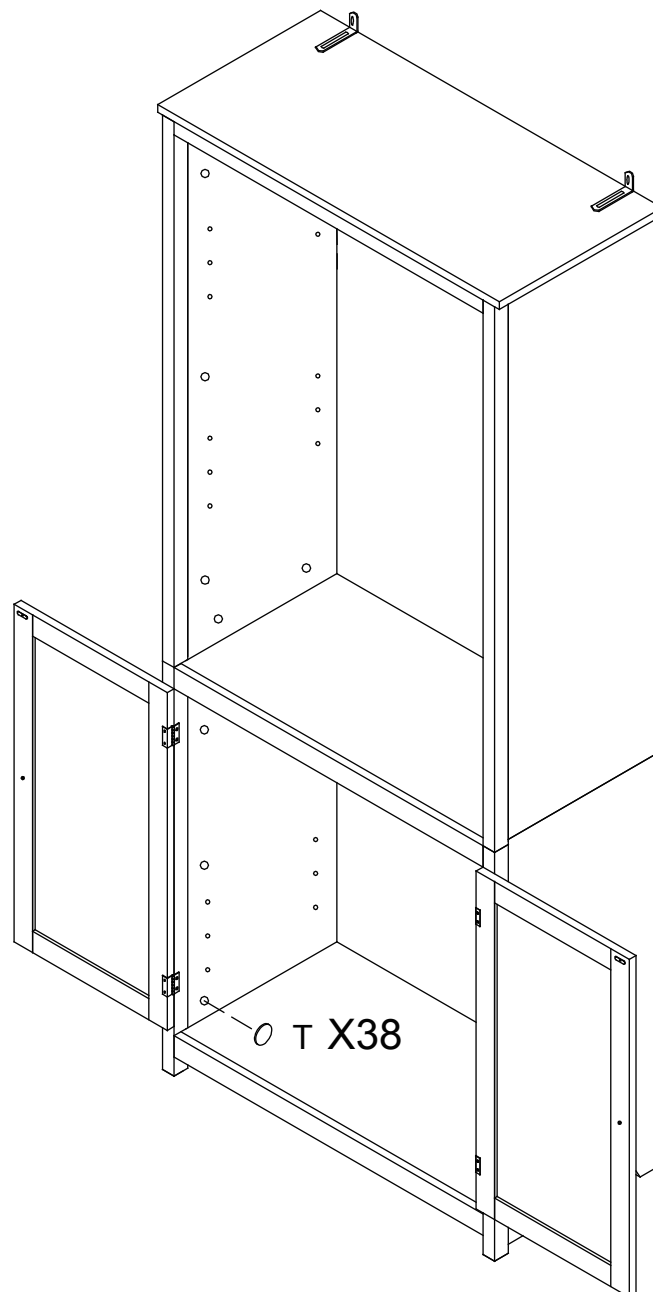

| | | |
|---|---|--------|
| T |  | 38 pcs |
|---|---|--------|




Cover the exposed holes of Cam-lock with Plastic Cover (T).


PRODUCT ASSEMBLY

Step 13

| | | |
|---|---|-------|
| M |  | 2 pcs |
| Q |  | 2 pcs |

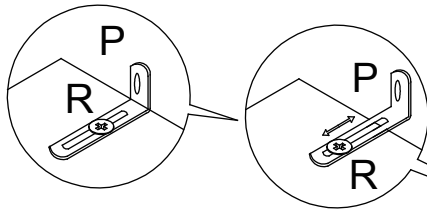 

 Bracket (P) is adjustable when you rescrew the screw (R).

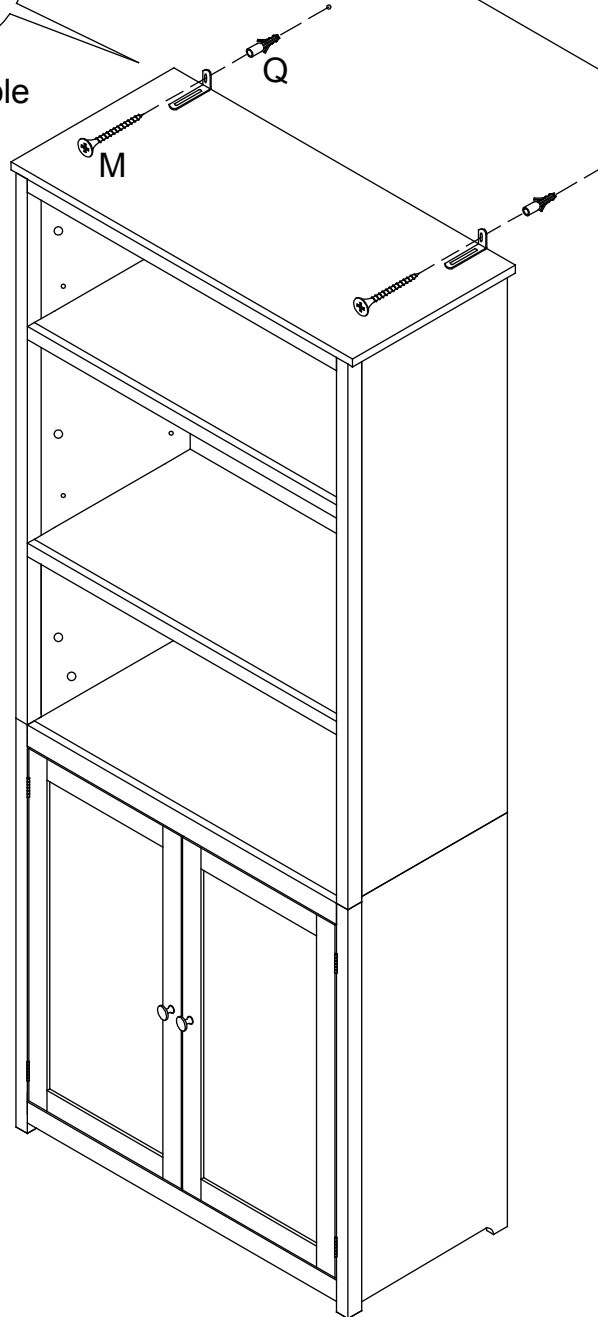

- 1) Drill two holes in the dry wall as per the length and dia of Plastic Anchor (Q) and distance between two holes on Bracket (P) on Top Panel.
- 2) Press Plastic wall anchor (Q) to the drywall. Ensure that the anchor fits securely in the wall.
- 3) Move the bookcase to the wall as per the holes on wall and Bracket (P) on Top Panel.
- 4) Fix the bookcase on the wall using Screw (M).



TIPS:

Your suggestions and comments for Costway are really important to us!
We sincerely solicit you to go back to our shop and leave a good rating in just a simple click. It would be quite encouraging if you could kindly do so like below:

★★★★★ Great products so far

February 24, 2018

Great product so far. Fast delivery, easy setup, and working without any issues.

With your inspiring rating, Costway will be more consistent to offer you
EASY SHOPPING EXPERIENCE, GOOD PRODUCTS and EFFICIENT SERVICE!

US office:Fontana

UK office:Ipswich

