

# Wood, Metal and Glass TV Stand

for TVs up to 48" or 100 lbs.

**NS-HWVG1844**



SAFETY INFORMATION AND SPECIFICATIONS.....	2
PACKAGE CONTENTS: PARTS.....	3
PACKAGE CONTENTS: HARDWARE .....	4
ASSEMBLY INSTRUCTIONS.....	5
CARE AND MAINTENANCE .....	12

Before using your new product, please read these instructions to prevent any damage.

## SAFETY INFORMATION AND SPECIFICATIONS



**CAUTION:** The top surface of this stand is designed for use with a product weighing no more than 100 lbs. (45.5 kg) and having a width that permits it to sit evenly on the stand with no more than a one-inch overhang on each side of the shelf. Use with products that weigh more than the maximum weight allowed, or with dimensions that extend beyond the maximum width may result in instability, which may result in injury.



**CAUTION:** This product contains small items that could be a choking hazard if swallowed. Keep these items away from young children!

**Maximum top shelf weight:** 100 lbs. (45.5 kg)

**Maximum middle/bottom shelf weight:** 50 lbs. (22.7 kg)

**Maximum TV weight:** 100 lbs. (45.5 kg)

**Maximum screen size:** 48" diag.

**Overall dimensions (W x H x D):**

44 x 22 x 20 in. (111.8 x 55.9 x 50.8 cm)

 
**Shelf dimensions (W x D):**

40.6 x 19.1 in. (103.2 x 48.6 cm)


**TV stand weight:** 58.2 lbs. (26.4 kg)



**Tools needed:**



Phillips screwdriver

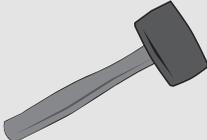

Rubber mallet




Drill




Wood drill bit  
(3/16")

# PACKAGE CONTENTS: PARTS


Make sure that you have all the parts necessary to assemble your new TV stand.

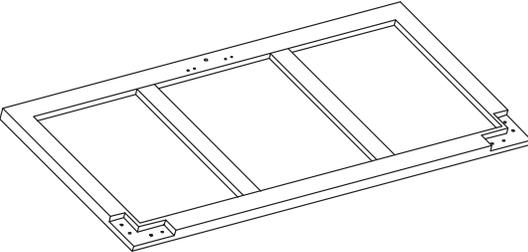


1 Top shelf (Qty. 1)

 


2 Left leg (Qty. 1)

 


3 Right leg (Qty. 1)

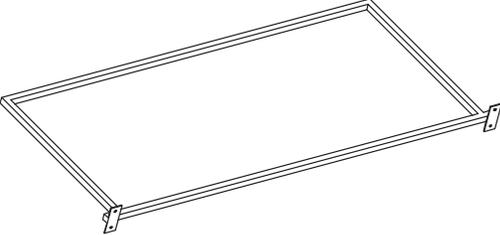


4 Middle frame (Qty. 1)

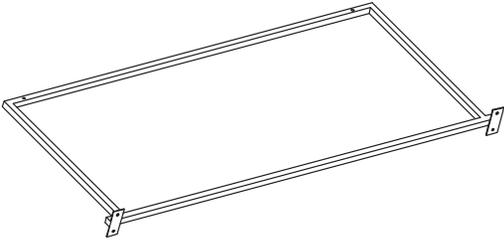

5 Lower frame (Qty. 1)

 



6 Back panel (Qty. 1)

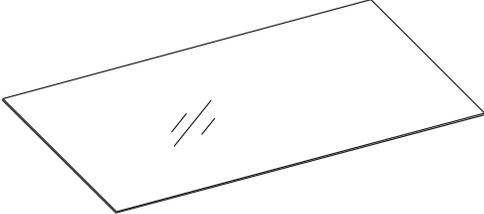


7 Glass shelves (Qty. 2)

# PACKAGE CONTENTS: HARDWARE

  Make sure that you have all the hardware necessary to assemble your new TV stand.

How	Hardware	Qty.
A	 Supports	2
B	 Adhesive glass support	12
C	 Wood dowel	1
D	 Allen wrench	1
E	 Short Allen bolt (6 x 15 x 10 mm)	8
F	 Long Allen bolt (6 x 25 x 10 mm)	12
G	 Wood screw (3.5 x 15 x 6 mm)	4
H	 Glue	1
I	 Spring washer	8
J	 Flat washer	8

Label	Hardware	Qty.
WA	 Short wood screw (3.5 x 12 x 8 mm)	2
WB	 Long wood screw (4 x 25 x 8 mm)	2
WC	 Wall anchor	2
WD	 Mounting bracket	4
WE	 Mounting strap	2

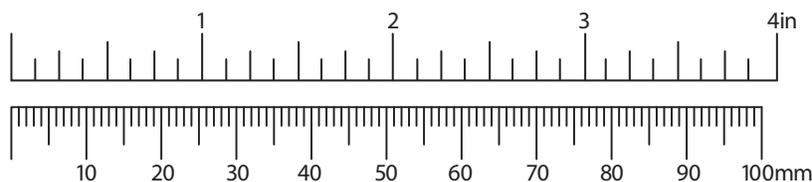


# ASSEMBLY INSTRUCTIONS

## Step 1: Attach the supports and wood dowel

*Tip: Assemble your stand on a carpeted floor or the empty TV stand box to avoid scratching it.*

- 1 Screw the two supports (A) into the lower frame (#5).
- 2 Glue a wood dowel (C) into the end of the back panel (#6):
  - A Put one drop of glue (H) in the hole, then insert the wood dowel (C).
  - B Gently tap the wood dowel (C) into the hole with a rubber mallet to secure it in place.

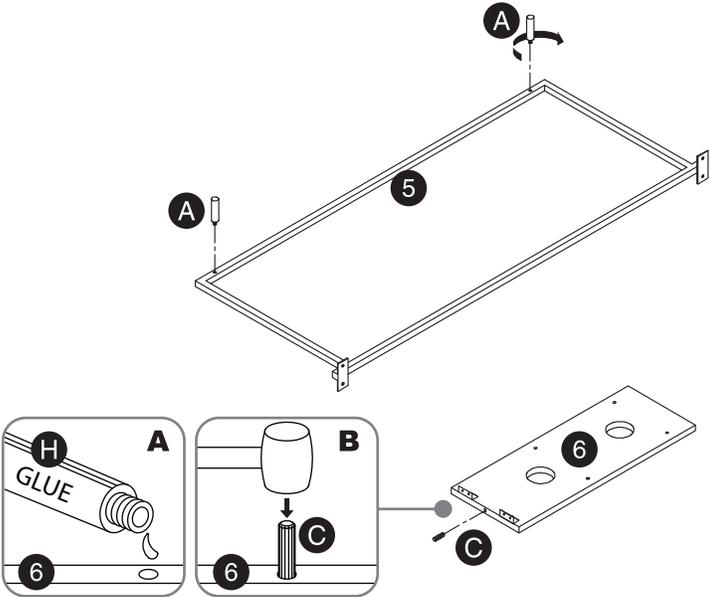


**You'll need:**

 A Supports (Qty. 2)	 C Wood dowel (Qty. 1)	 Glue	 Rubber mallet
----------------------------	------------------------------	----------	-------------------


## Step 2: Attach the frames to the legs

**Note:** Do not fully tighten the bolts until the end of step 4.

- 1 Align the lower frame (#5) with the holes in the left and right legs (#2 and #3), then insert a spring washer (I) and a flat washer (J) onto four short Allen bolts (E) and secure with an Allen wrench (D). Make sure that you connect the lower frame to the holes near the bottom of the TV stand with the supports facing outward.
- 2 Align the middle frame (#4) with the holes in the left and right legs (#2 and #3), then insert a spring washer (I) and a flat washer (J) onto four short Allen bolts (E) and secure with an Allen wrench (D).

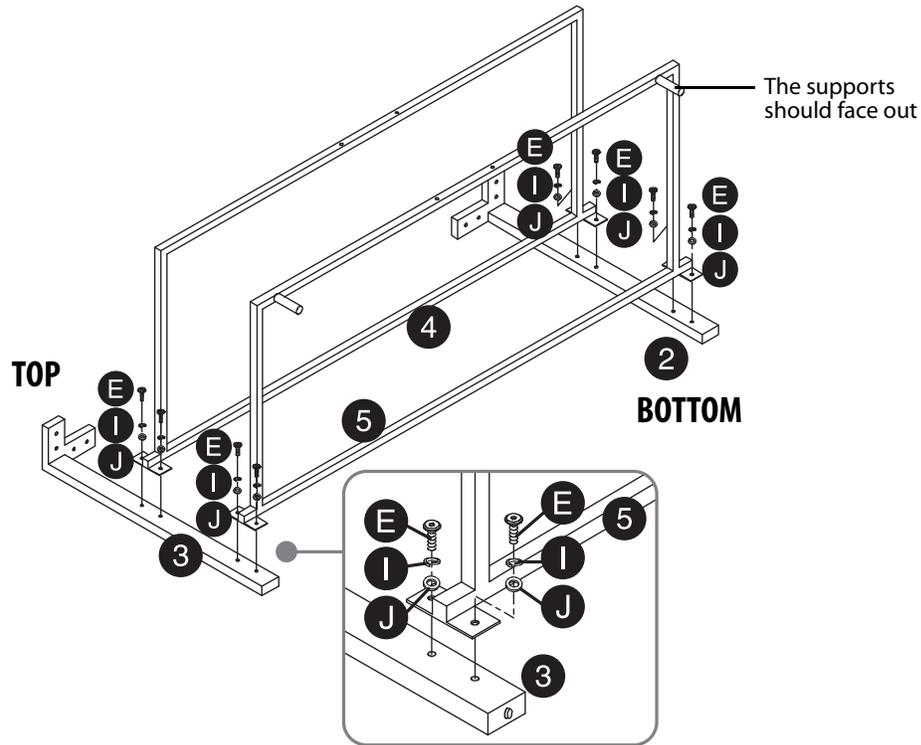

### You'll need:

 


### Step 3: Attach the back panel

**Note:** Do not fully tighten the bolts until the end of step 4.

- Attach the back panel (#6) to the middle and lower frames (#4 and #5) with four long Allen bolts (F) and the Allen wrench (D). Make sure that the edge with the wood dowel faces the top and the Velcro straps face outward.

**Tip:** After setup, use the Velcro straps to secure your devices' cables.

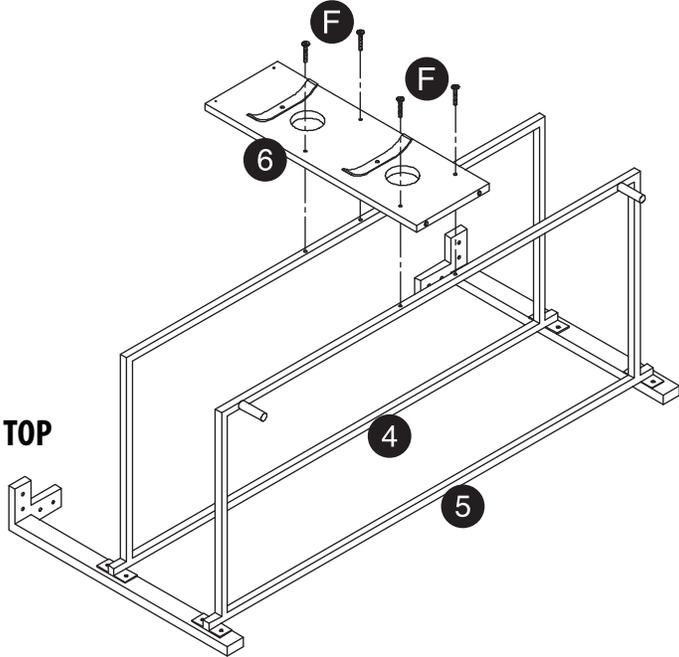

**You'll need:**




D Allen wrench





F Long Allen bolt  
(Qty. 4)

## Step 4: Attach the top shelf

- 1 Align the assembly with the top shelf (#1). Make sure that the assembly is aligned with the corners of the top shelf and that the wood dowel (in the back panel) is inserted into the top shelf.
- 2 Secure the legs (#2 and #3) with eight long Allen bolts (F) and the Allen wrench (D).
- 3 Secure the back panel (#6) with four wood screws (G) and a Phillips screwdriver.
- 4 Use the Allen wrench (D) to fully tighten all the Allen bolts.

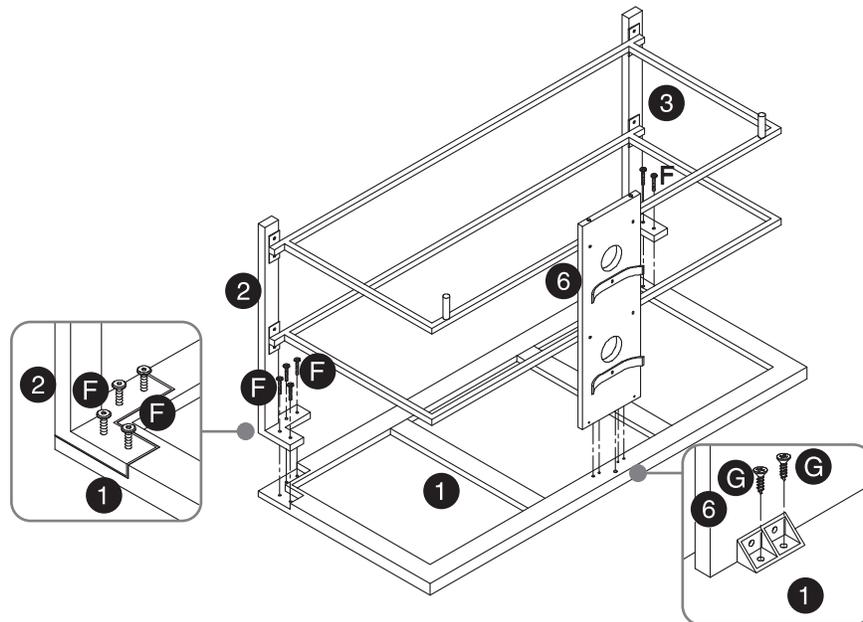


### You'll need:

  

**Step 5: Attach the glass supports**

- 1 Flip the TV stand upright.
- 2 Peel off the 12 adhesive glass supports (B) and stick them onto the middle and lower frames (#4 and #5). Place six on each frame (three on the back and three on the front).

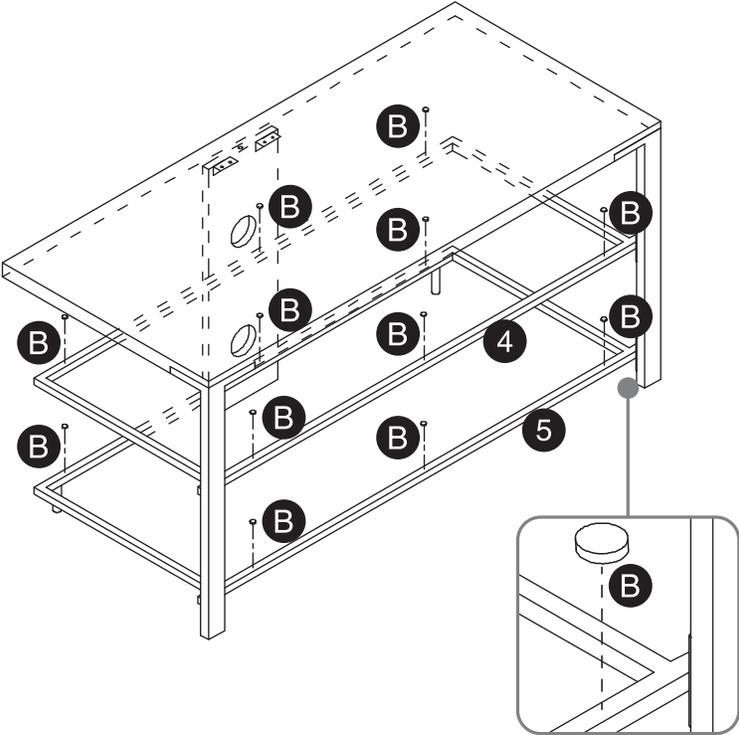


**You'll need:**

  
**B Adhesive glass support**  
(Qty. 12)

**Step 6: Insert the glass shelves**


- Slide the glass shelves (#7) onto the middle and lower frames (#4 and #5).

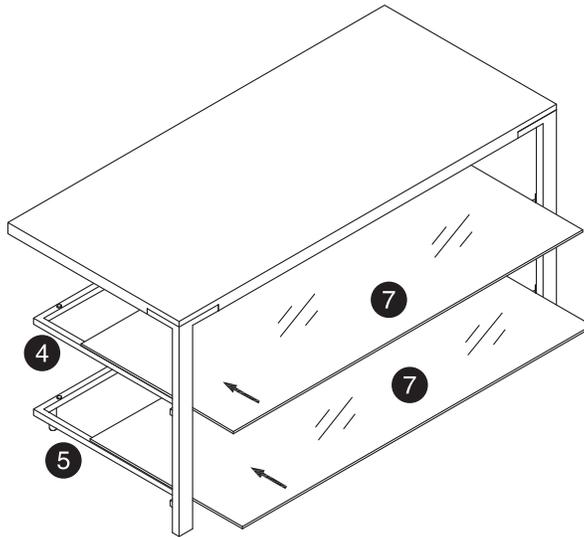


## Step 7: Secure your TV stand to the wall

- 1 Attach two mounting brackets (WD) to the holes on the back of the TV stand's back panel with two short wood screws (WA) and a Phillips screwdriver. Make sure that the brackets face down (as shown).
- 2 Decide where you want to place your TV stand, then drill two holes in your wall with a 3/16" wood drill bit two inches below the positions of the mounting brackets on your TV stand. Insert the wall anchors (WC) into the holes.


**Note:** You may need to tap the anchors lightly with a rubber mallet until they are flush with the wall.

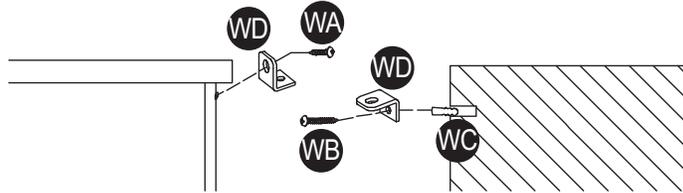

- 3 Attach two mounting brackets (WD) to the wall with two long wood screws (WB). Make sure that the brackets face up (as shown).

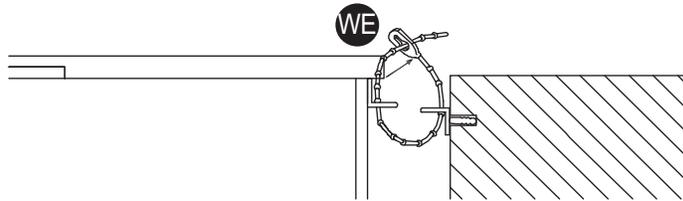

- 4 Thread the mounting straps (WE) through the mounting brackets, loop it through itself, then pull tight to secure your TV stand to the wall.

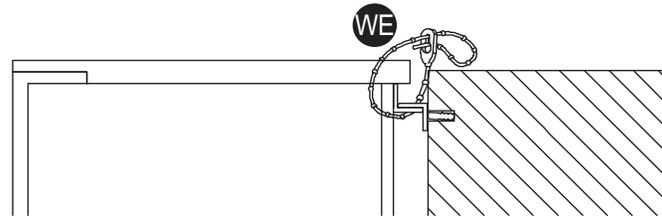

### You'll need:

 **WA** Short wood screw (Qty. 2)


 **WB** Long wood screw (Qty. 2)


 **WC** Wall anchor (Qty. 2)

 **WD** Mounting bracket (Qty. 4)

 **WE** Mounting strap (Qty. 2)

 Phillips screwdriver

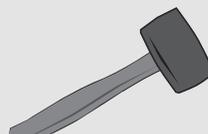 Rubber mallet

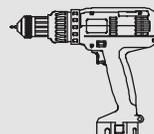 Drill

 Wood drill bit (3/16")

# CARE AND MAINTENANCE

## Wood/Laminate

- Use your favorite type of furniture polish.
- Do not spray polish directly onto the stand. Spray onto a soft cloth then wipe the stand.
- Clean spills immediately with a soft, damp cloth.
- Always test any polish in a discrete location first, such as the back of the stand, to make sure that there is no adverse reaction.
- Dust frequently with a soft cloth.
- Never slide objects across surfaces. Lift objects from the top surface rather than dragging them across the finish when moving them.
- Protect surfaces by using felt, leather, or cork under accessories.
- Use a protective pad when using your stand as a writing surface (especially when using a ballpoint pen).
- Do not expose your stand to direct sunlight, drying heat sources, or dampness.

## Glass

- Use a commercial liquid glass cleaner and a soft cloth.
- Do not use harsh powders or any other abrasive substances as they will scratch the glass.

### **WARNING**

Please use your stand correctly and safely. Improper use can cause safety hazards or damage to your furniture or household items. Carefully read the following chart.

Look out for:	What can happen:	How to avoid the problem:
<ul style="list-style-type: none"> <li>• Children climbing on the stand.</li> <li>• A child may try to reach a toy or other object by climbing on the stand.</li> <li>• Children will play and be active near the TV.</li> </ul>	<ul style="list-style-type: none"> <li>• Risk of injury or death.</li> <li>• A child climbing on the stand can make it top-heavy and cause it to tip over.</li> <li>• A child playing with a TV can cause it to tip over.</li> </ul>	<ul style="list-style-type: none"> <li>• Never allow children to climb on or play with the stand.</li> <li>• Do not place toys or food on the top shelves. Children may try to climb to reach them out of curiosity.</li> </ul>
<ul style="list-style-type: none"> <li>• Improper use of the stand to support TVs.</li> <li>• The stand is designed for use with TVs with a specified maximum weight rating and recommended size of the TVs it will safely support.</li> </ul>	<ul style="list-style-type: none"> <li>• Risk of injury or death.</li> <li>• TVs can be very heavy. Note, older CRT TVs tend to be unbalanced and prone to tipping forward.</li> </ul>	<ul style="list-style-type: none"> <li>• A TV must only be set on furniture specifically designed to support a television.</li> <li>• Never use a TV that exceeds the weight ratings or size guidelines specified for the stand.</li> </ul>
<ul style="list-style-type: none"> <li>• Overloaded shelves.</li> </ul>	<ul style="list-style-type: none"> <li>• Risk of injury.</li> <li>• Top-heavy furniture can tip over.</li> <li>• Overloaded shelves can break.</li> </ul>	<ul style="list-style-type: none"> <li>• Never exceed the weight limits shown in the instructions.</li> <li>• Work from the bottom to the top when loading shelves.</li> <li>• The middle and bottom shelves can only support 50 lbs. while the top can support 125 lbs.</li> </ul>
<ul style="list-style-type: none"> <li>• Improperly moving the stand.</li> </ul>	<ul style="list-style-type: none"> <li>• The stand can tip over or break if improperly moved.</li> <li>• Risk of injury.</li> </ul>	<ul style="list-style-type: none"> <li>• Unload shelves from the top to the bottom before moving the stand.</li> <li>• Do not push the stand, especially on a carpeted floor. Have a friend help you lift the item and set it in place.</li> <li>• Do not lift the stand using the top shelf. Lift from the frame or leg assembly.</li> <li>• Remove the TV before moving the TV stand.</li> </ul>
<ul style="list-style-type: none"> <li>• The TV/stand assembly tipping forward.</li> </ul>	<ul style="list-style-type: none"> <li>• Risk of injury.</li> <li>• Top-heavy furniture can tip over.</li> <li>• The TV and stand could be damaged.</li> </ul>	<ul style="list-style-type: none"> <li>• Use the tipping restraint hardware provided and install it properly.</li> </ul>

# ONE-YEAR LIMITED WARRANTY

## Definitions:

The Distributor\* of Insignia branded products warrants to you, the original purchaser of this new Insignia-branded product ("Product"), that the Product shall be free of defects in the original manufacturer of the material or workmanship for a period of one (1) year from the date of your purchase of the Product ("Warranty Period").

For this warranty to apply, your Product must be purchased in the United States or Canada from a Best Buy branded retail store or online at [www.bestbuy.com](http://www.bestbuy.com) or [www.bestbuy.ca](http://www.bestbuy.ca), and is packaged with this warranty statement.

## How long does the coverage last?

The Warranty Period lasts for 1 year (365 days) from the date you purchased the Product. Your purchase date is printed on the receipt you received with the Product.

## What does this warranty cover?

During the Warranty Period, if the original manufacture of the material or workmanship of the Product is determined to be defective by an authorized Insignia repair center or store personnel, Insignia will (at its sole option): (1) repair the Product with new or rebuilt parts; or (2) replace the Product at no charge with new or rebuilt comparable products or parts. Products and parts replaced under this warranty become the property of Insignia and are not returned to you. If service of Products or parts are required after the Warranty Period expires, you must pay all labor and parts charges. This warranty lasts as long as you own your Insignia Product during the Warranty Period. Warranty coverage terminates if you sell or otherwise transfer the Product.

## How to obtain warranty service?

If you purchased the Product at a Best Buy retail store location, please take your original receipt and the Product to any Best Buy store. Make sure that you place the Product in its original packaging or packaging that provides the same amount of protection as the original packaging. If you purchased the Product from a Best Buy online web site ([www.bestbuy.com](http://www.bestbuy.com) or [www.bestbuy.ca](http://www.bestbuy.ca)), mail your original receipt and the Product to the address listed on the web site. Make sure that you put the Product in its original packaging or packaging that provides the same amount of protection as the original packaging.

To obtain warranty service, in the United States call 1-888-BESTBUY or in Canada call 1-866-BESTBUY. Call agents may diagnose and correct the issue over the phone.

## Where is the warranty valid?

This warranty is valid only in the United States and Canada at Best Buy branded retail stores or websites to the original purchaser of the product in the county where the original purchase was made.

## What does the warranty not cover?

This warranty does not cover:

- Customer instruction/education
- Installation
- Set up adjustments
- Cosmetic damage
- Damage due to weather, lightning, and other acts of God, such as power surges
- Accidental damage
- Misuse
- Abuse
- Negligence
- Commercial purposes/use, including but not limited to use in a place of business or in communal areas of a multiple dwelling condominium or apartment complex, or otherwise used in a place of other than a private home.
- Modification of any part of the Product, including the antenna

- Display panel damaged by static (non-moving) images applied for lengthy periods (burn-in).
- Damage due to incorrect operation or maintenance
- Connection to an incorrect voltage or power supply
- Attempted repair by any person not authorized by Insignia to service the Product
- Products sold "as is" or "with all faults"
- Consumables, including but not limited to batteries (i.e. AA, AAA, C etc.)
- Products where the factory applied serial number has been altered or removed
- Loss or Theft of this product or any part of the product
- Display panels containing up to three (3) pixel failures (dots that are dark or incorrectly illuminated) grouped in an area smaller than one tenth (1/10) of the display size or up to five (5) pixel failures throughout the display. (Pixel based displays may contain a limited number of pixels that may not function normally.)
- Failures or Damage caused by any contact including but not limited to liquids, gels or pastes.

REPAIR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS YOUR EXCLUSIVE REMEDY FOR BREACH OF WARRANTY. INSIGNIA SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR THE BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT, INCLUDING, BUT NOT LIMITED TO, LOST DATA, LOSS OF USE OF YOUR PRODUCT, LOST BUSINESS OR LOST PROFITS. INSIGNIA PRODUCTS MAKES NO OTHER EXPRESS WARRANTIES WITH RESPECT TO THE PRODUCT, ALL EXPRESS AND IMPLIED WARRANTIES FOR THE PRODUCT, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF AND CONDITIONS OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE WARRANTY PERIOD SET FORTH ABOVE AND NO WARRANTIES, WHETHER EXPRESS OR IMPLIED, WILL APPLY AFTER THE WARRANTY PERIOD. SOME STATES, PROVINCES AND JURISDICTIONS DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS, WHICH VARY FROM STATE TO STATE OR PROVINCE TO PROVINCE.

Contact Insignia:

For customer service please call 1-877-467-4289

[www.insigniaproducts.com](http://www.insigniaproducts.com)

INSIGNIA is a trademark of Best Buy and its affiliated companies.

Distributed by Best Buy Purchasing, LLC

7601 Penn Ave South, Richfield, MN 55423 U.S.A.

©2017 Best Buy. All rights reserved.

Made in China

# INSIGNIA™

1-877-467-4289 (U.S. and Canada) or 01-800-926-3000 (Mexico)  
[www.insigniaproducts.com](http://www.insigniaproducts.com)

INSIGNIA is a trademark of Best Buy and its affiliated companies.  
Registered in some countries.  
Distributed by Best Buy Purchasing, LLC  
7601 Penn Ave South, Richfield, MN 55423 U.S.A.  
©2017 Best Buy. All rights reserved.  
**Made in China**

V1 ENG  
17-0329