 


USER'S MANUAL  
WICKER CHAT SET  
HW66529 -12 -22

THIS INSTRUCTION BOOKLET CONTAINS **IMPORTANT** SAFETY INFORMATION. PLEASE READ AND KEEP FOR FUTURE REFERENCE.

**Please give us a chance to make it right and do better!**  
Contact our friendly customer service department for help first.  
Replacements for missing or damaged parts will be shipped ASAP!

FLOOR AREA  
2MX2M

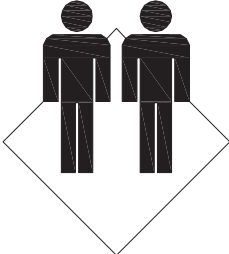

ASSEMBLED BY 2 ADULTS

Follow Costway




# Contact Us!

 **Do NOT return this item.**


Contact our friendly customer service department for help first.



# Before You Start

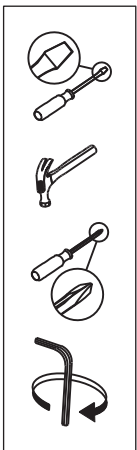



- Read each step carefully before starting. It is very important to ensure each step followed in correct order, otherwise assembly difficulties may occur.
- Most of board parts are labeled or stamped on the raw edges. Have a check to make sure all parts are included.
- Work in a spacious area, preferably on a carpet close to where the unit will be used.
- Keep the handtools close at hand. Do not use power tools to assemble your furniture. They may scratch or damage the parts.

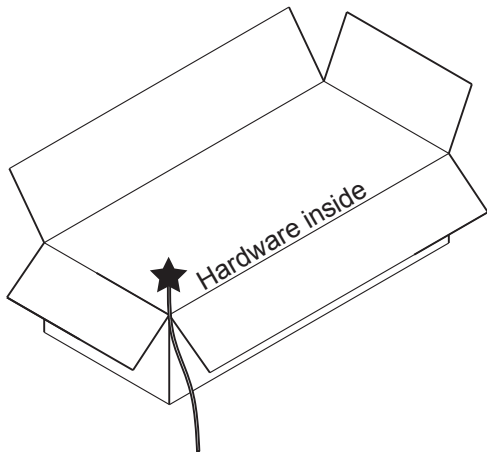 


## Part List

 Backrest <b>1</b> x2 pcs	 Left leg <b>2</b> x2 pcs With a hole in this place	 Right leg <b>3</b> x2 pcs With a hole in this place
 Seat panel <b>4</b> x2 pcs	 Front leg panel <b>5</b> x2 pcs	 Glass top <b>6</b> x1 pce
 Table top <b>7</b> x1 pce	 Short table side <b>8</b> x2 pcs	 Long Table side <b>9</b> x2 pcs
 Cushion seat <b>10</b> x2 pcs	 Cushion back <b>11</b> x2 pcs	 Plastic feet <b>12</b> x12 pcs
 M6x25mm Bolt <b>A</b> x24 pcs	 M6x30mm Bolt <b>B</b> x40 pcs	 Allen Key <b>C</b> x2 pcs

 
 
**STEP 1: x2**

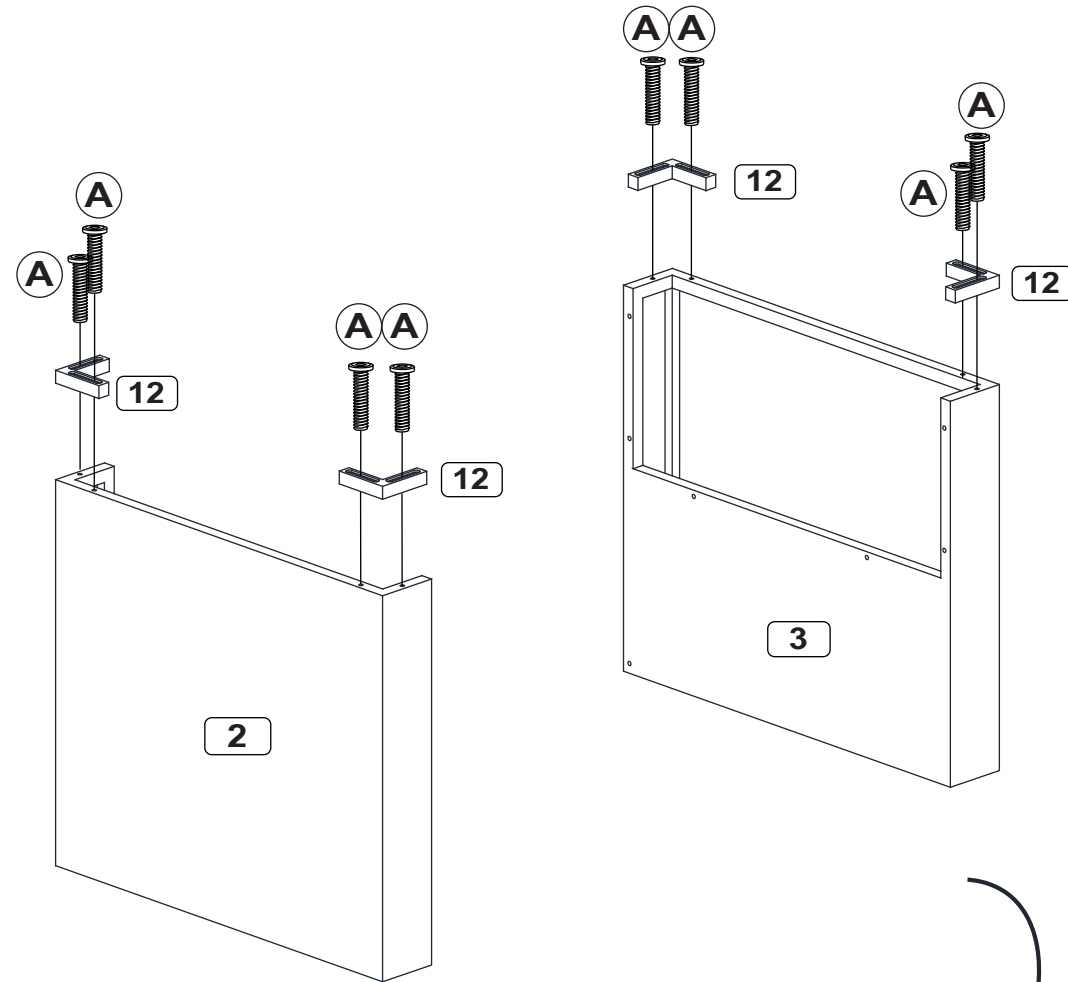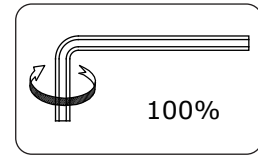



**STEP 2: x2**

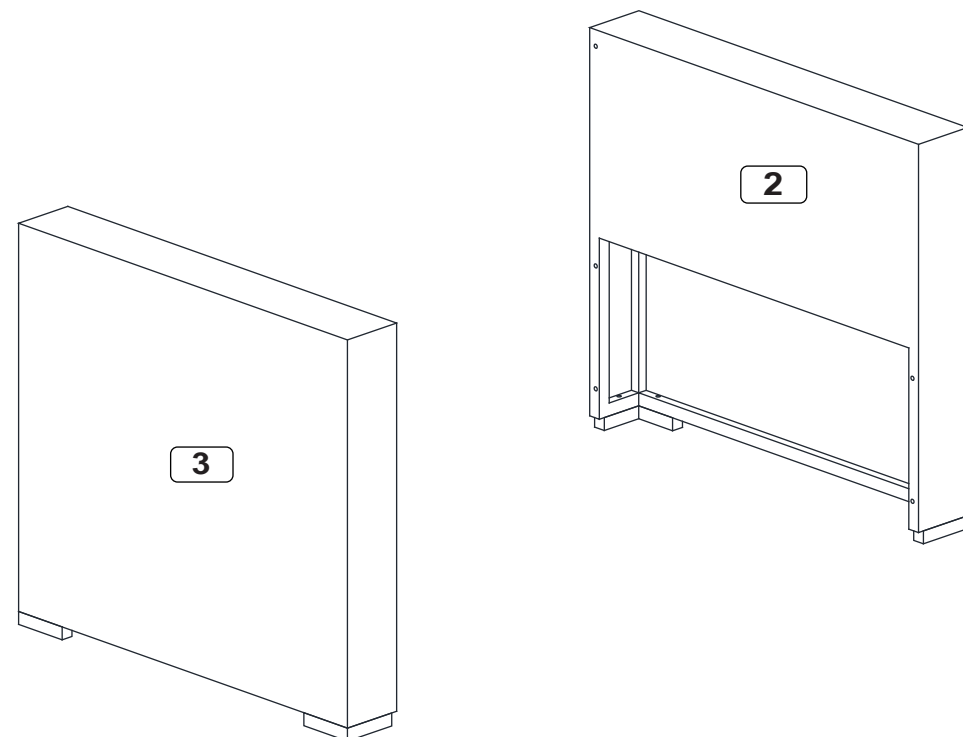 



**STEP 3: x2**

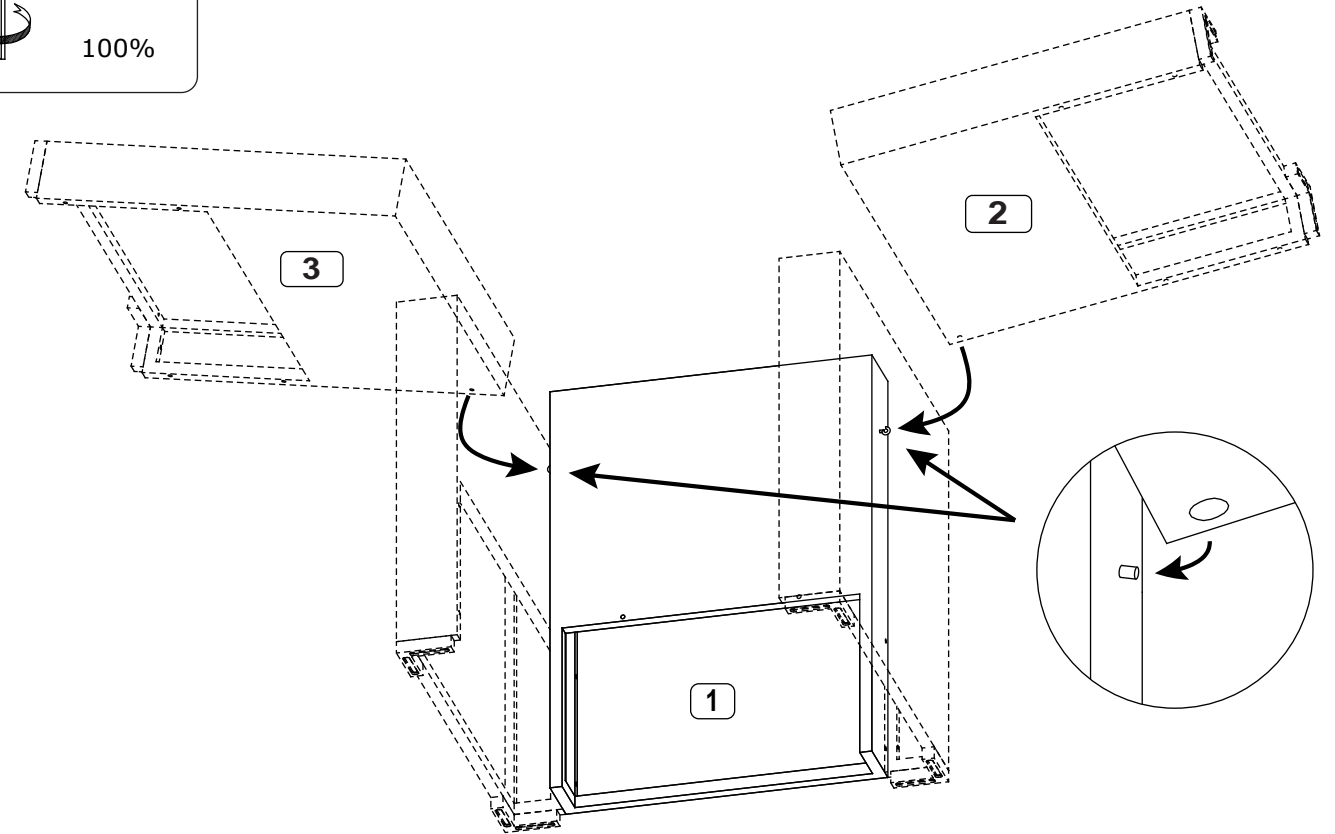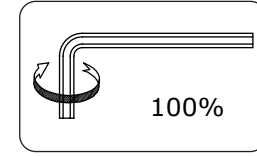  



**STEP 4: x2**

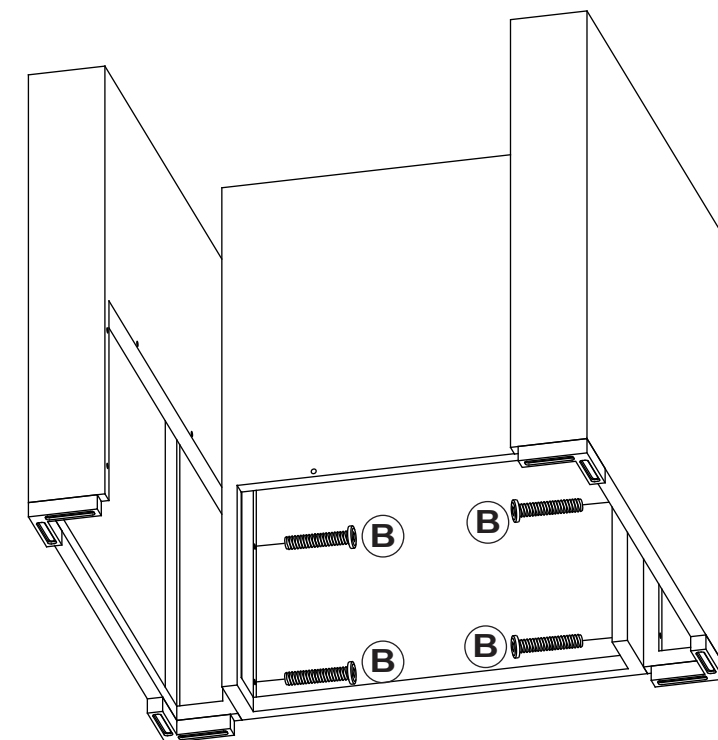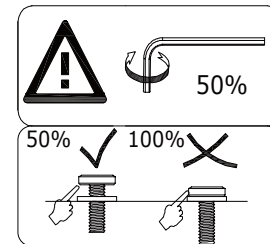  



**STEP 5: x2**

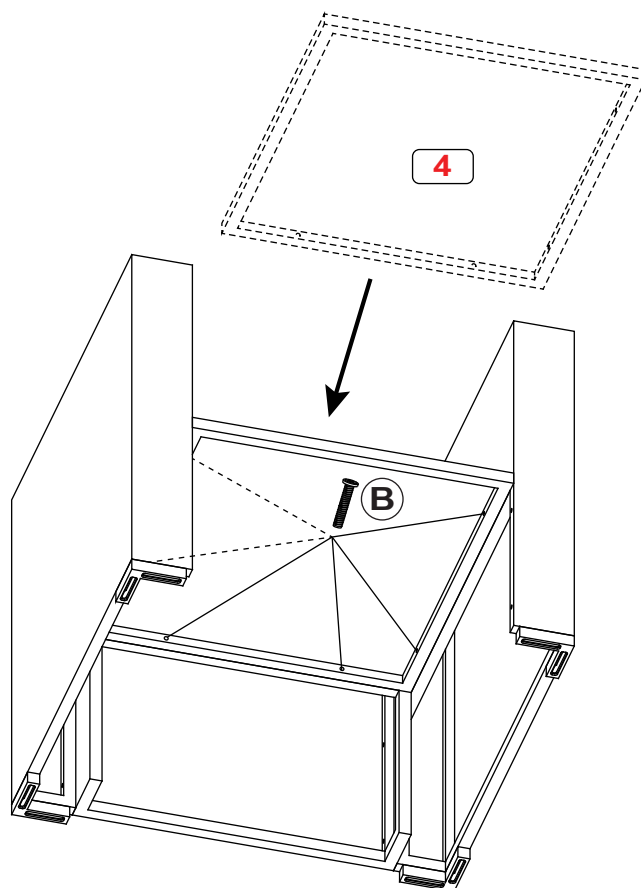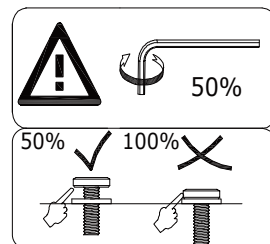  


**STEP 6: x2**

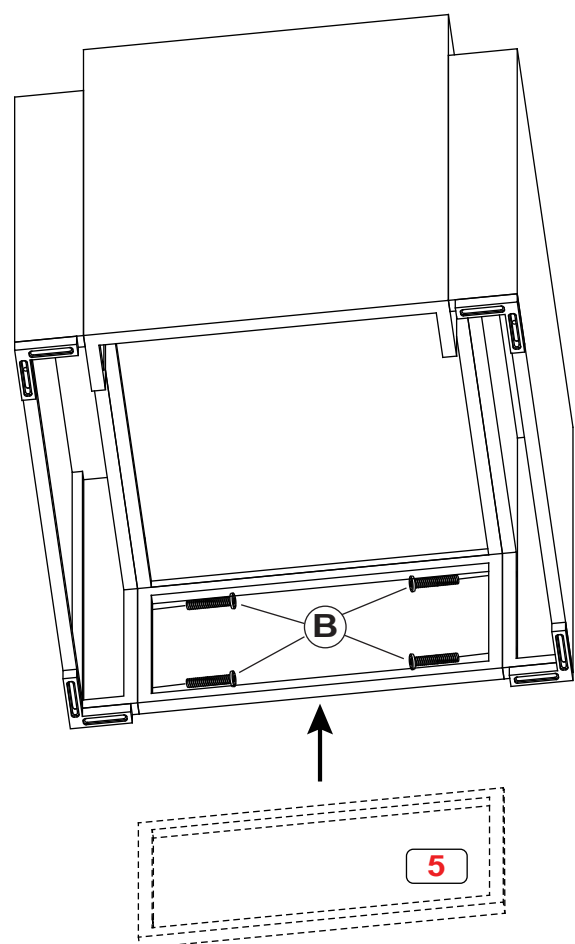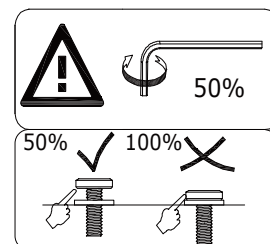  


**STEP 7: x2**

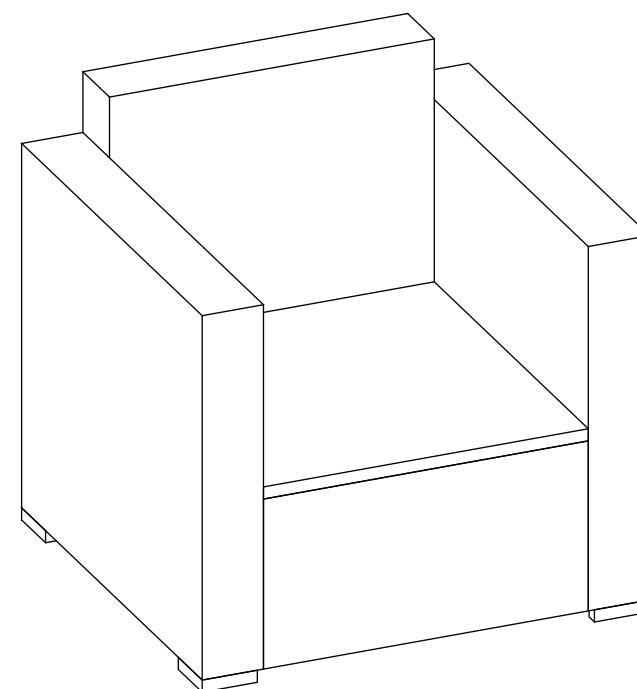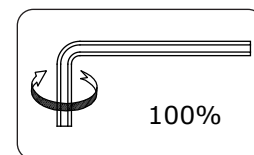  



**STEP 8: x2**

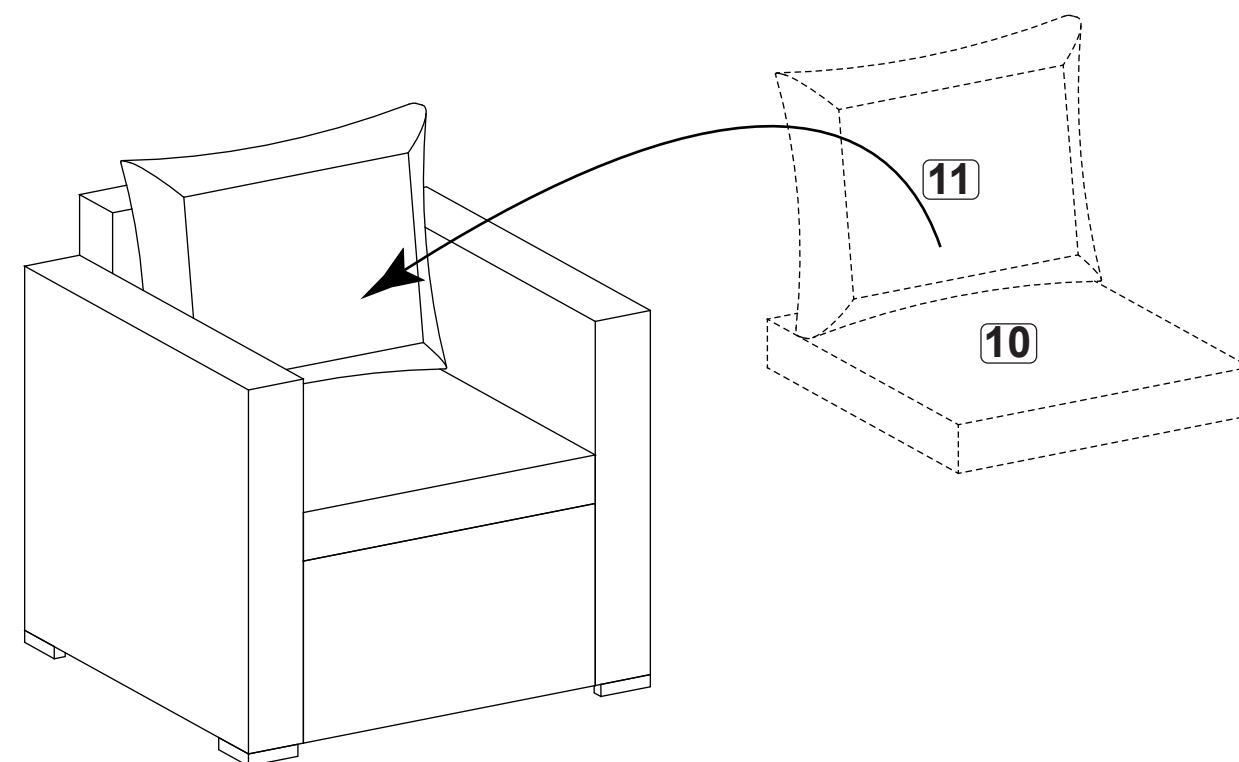 



**STEP 9: x2**

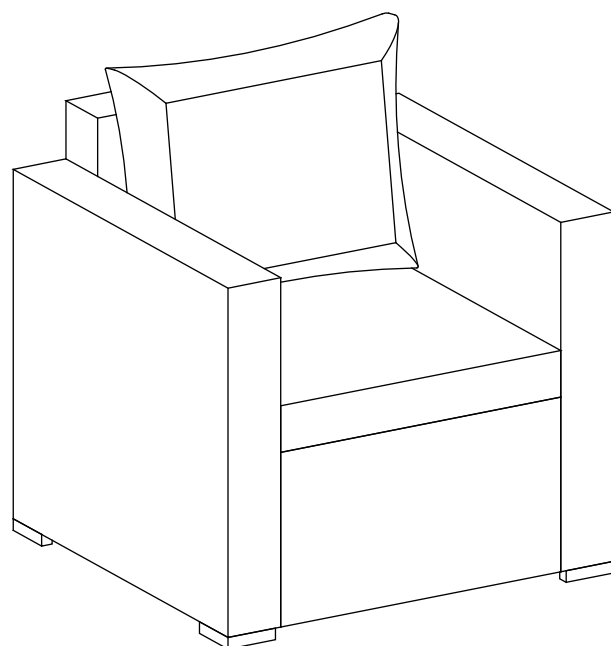 



**STEP 10:**

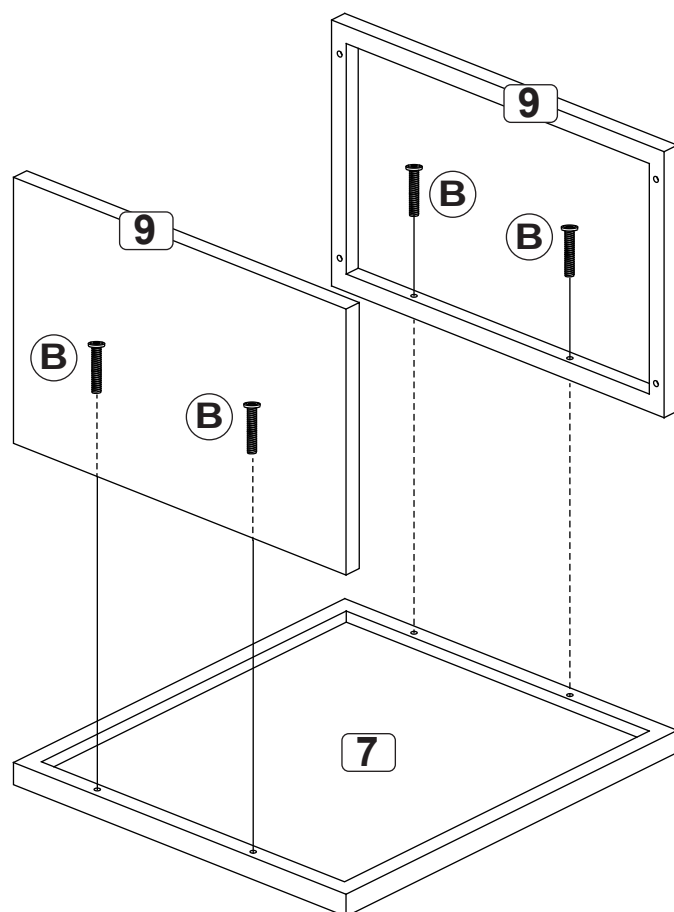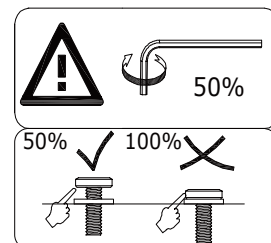  



**STEP 11:**

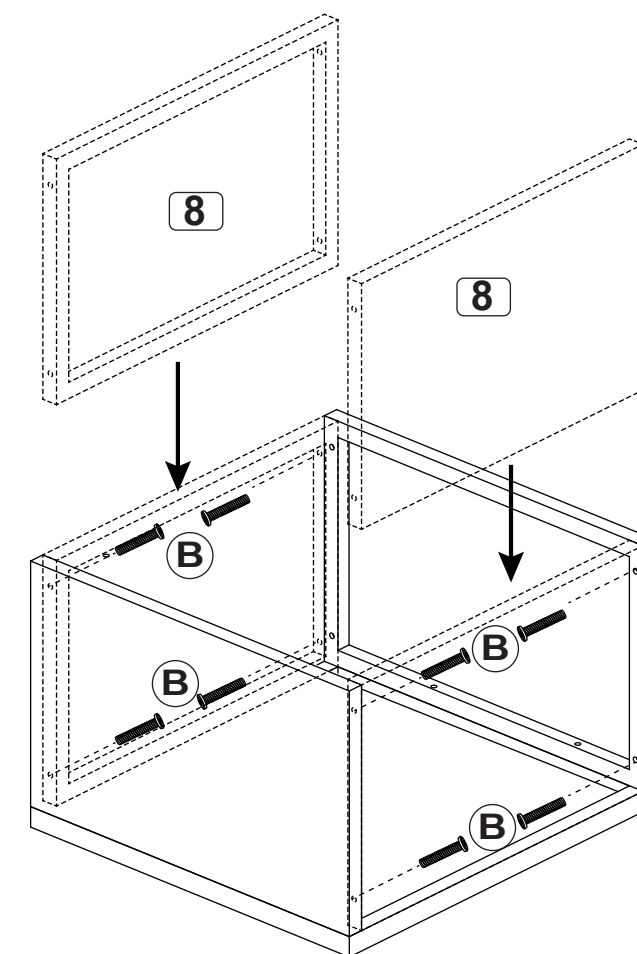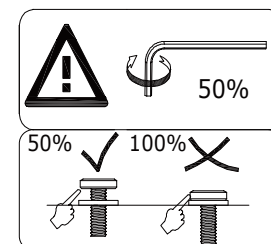  



**STEP 12:**

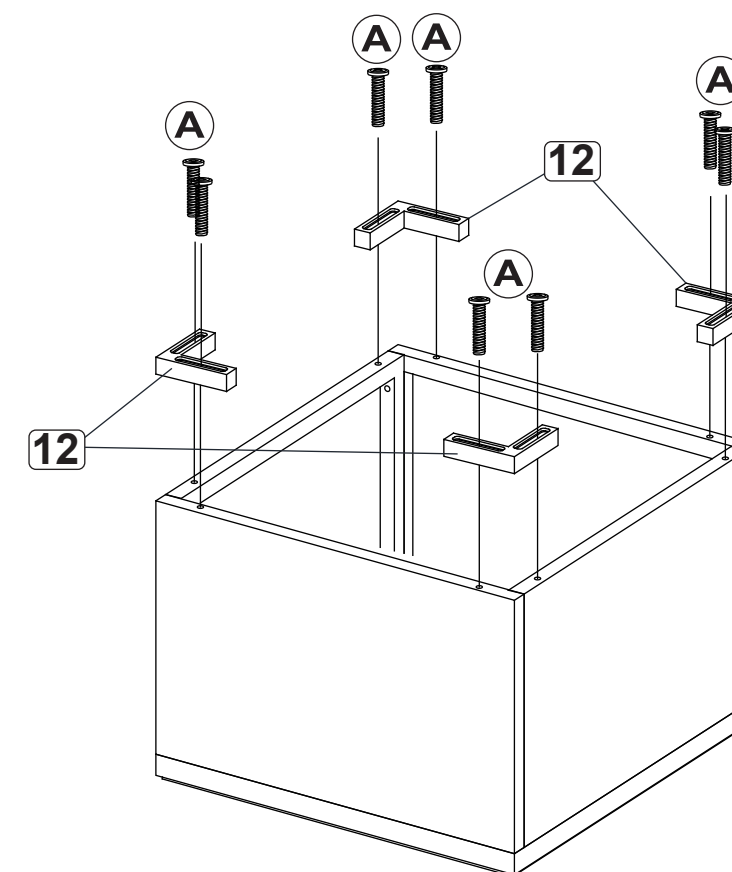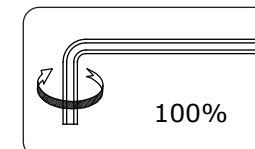  


**STEP 13:**

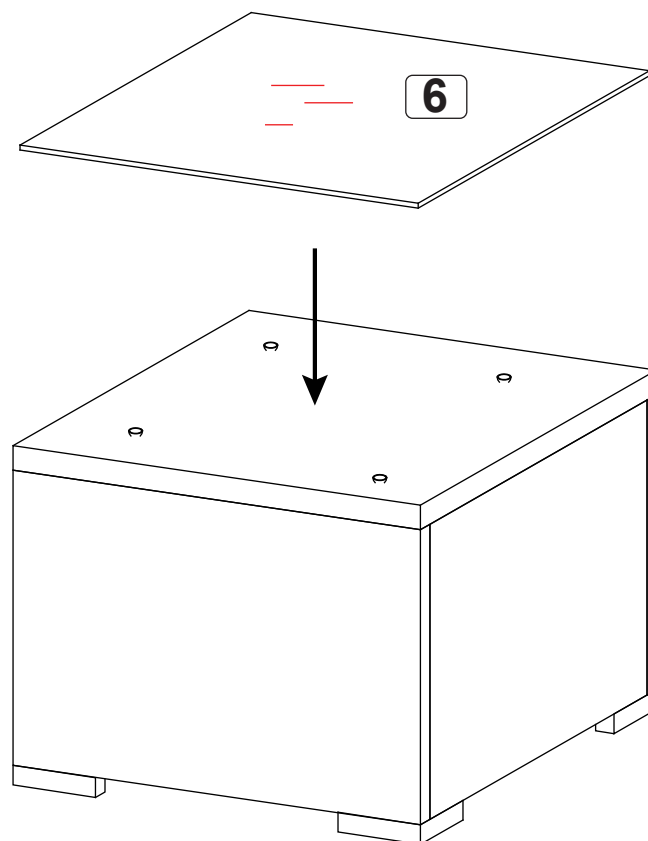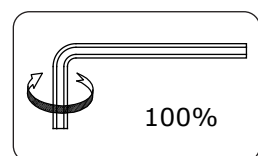  


**STEP 14:**

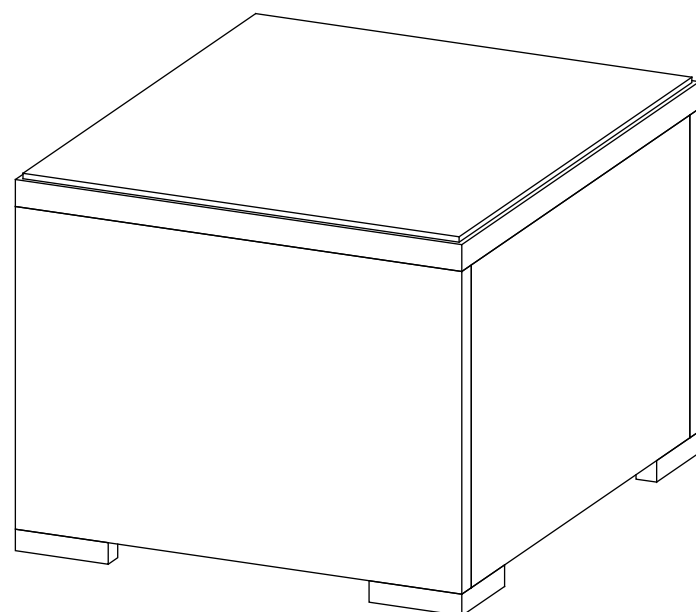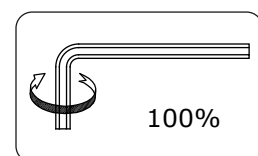  

**OPTION 1**

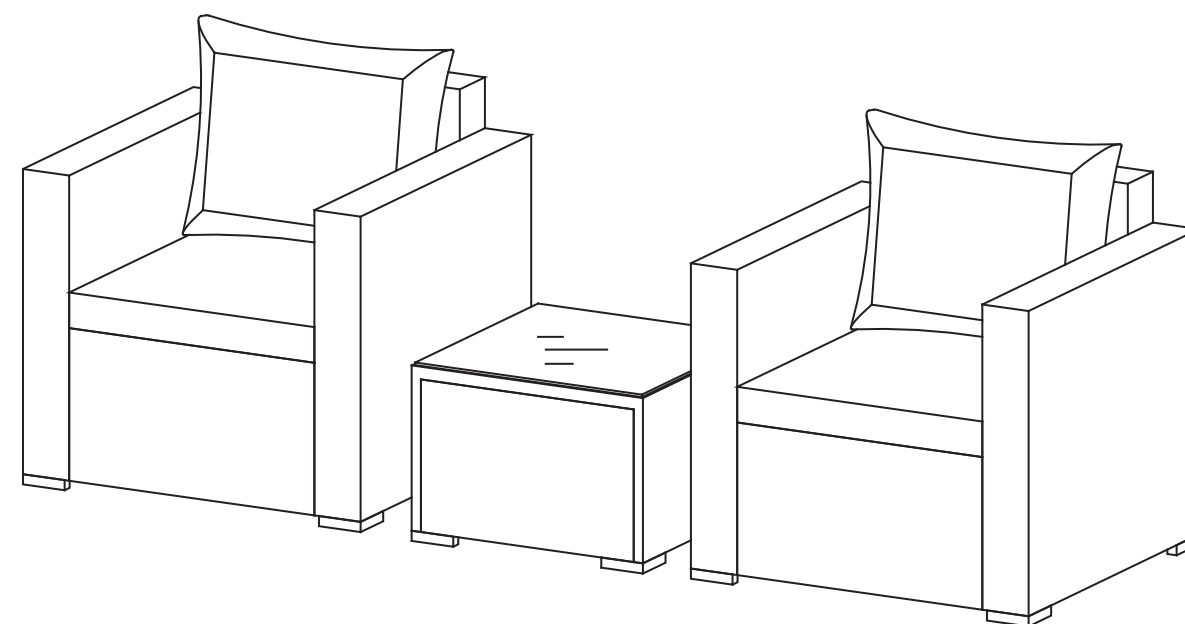 

**OPTION 2**

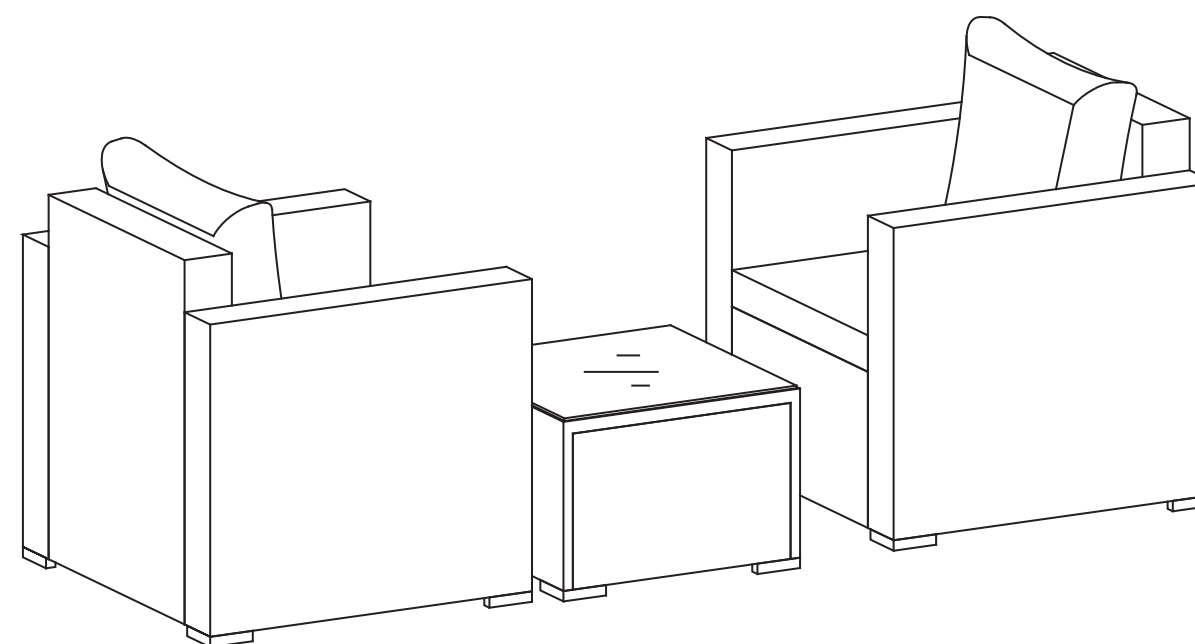 

## Care and Maintenance

Use a soft, clean cloth that will not scratch the surface when dusting.

Use of furniture polish is not necessary.

Should you choose to use polish, test first in an inconspicuous area.

Using solvents of any kind on your furniture may damage the finish.

Liquid spills should be removed immediately. Using a soft clean cloth, blot the spill gently. Avoid rubbing.

Check bolts/screws periodically and tighten them if necessary.

## Further advice about wood furniture care

Please protect your outdoor furniture with a cover when not in use since Long-term sunlight exposure will result in the damage on the surface.

In addition to sunlight damage, wood and metal frame suffers when exposed to extremes in temperature and humidity.

Proper care and cleaning at home will extend the life of your purchase. Following these important and helpful tips will enhance your furniture as it ages.

**Welcome to visit our website and purchase our quality products!**

With your inspiring rating, COSTWAY will be more consistent to offer you  
**EASY SHOPPING EXPERIENCE, GOOD PRODUCTS and EFFICIENT SERVICE!**

US office: Fontana, California

UK office: Ipswich



- \* Reward Points
- \* Exclusive Customer Service
- \* Personalized Recommendations
- \* Permanent Shopping Cart
- \* Order History

## 5 Star Rating



**We would like to extend our heartfelt thanks to  
all of our customers for taking time to assemble  
this product and giving us valuable feedbacks.**

