


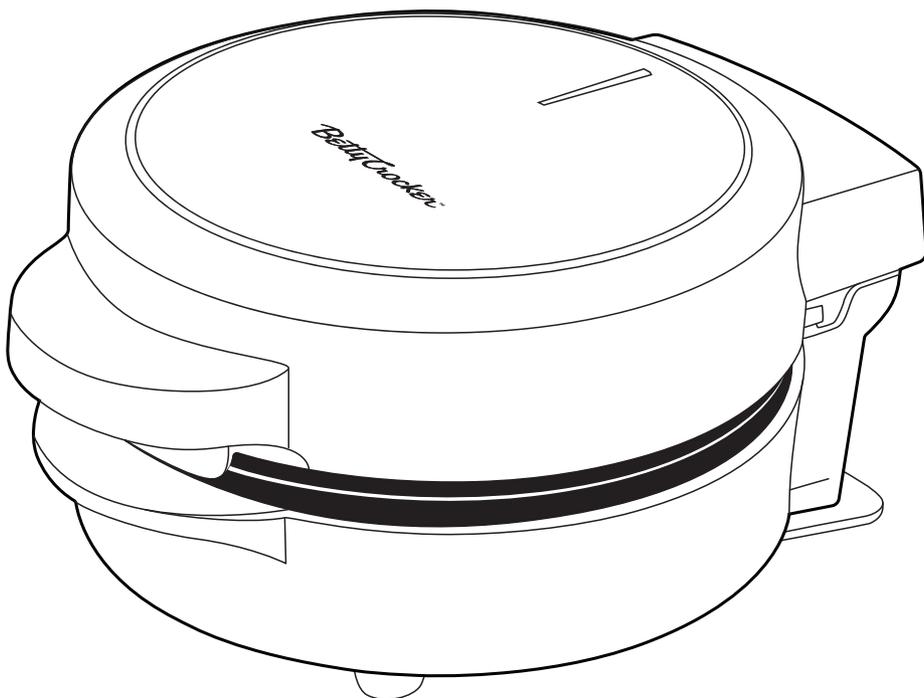

Betty Crocker™

Mini Waffle Maker



HOUSEHOLD USE ONLY

BC-4888R

Table of Contents

Important Safeguards	3
Before Your First Use.....	6
Getting To Know Your Mini Waffle Maker	7
Using Your Mini Waffle Maker	8
Care and Cleaning Your Mini Waffle Maker.....	10
Recipe	11
Limited Warranty.....	12
To Return for Service.....	13

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock and/or injury to persons, including the following:

1. **READ ALL INSTRUCTIONS CAREFULLY BEFORE USE.**
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against fire, electric shock, and injury to persons, do not immerse cord, plug, or unit in water or any other liquid.
4. This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they are closely supervised and instructed concerning use of the appliance by a person responsible for their safety. Close supervision is necessary when any appliance is used by or near children. Children should be supervised to ensure that they do not play with the appliance.
5. Unplug the Mini Waffle Maker from the outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts and before cleaning.
6. Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service centre for examination, repair or electrical or mechanical adjustment.
7. The use of accessory attachments not recommended or sold by the appliance manufacturer may cause fire, electrical shock, or injury, and is therefore prohibited.
8. Do not use outdoors or for commercial purposes.
9. Do not allow the cord to hang over the edge of table or counter, or touch hot surfaces.

10. Do not place on or near a hot gas or electric burner, or in a heated oven.
11. To disconnect, remove the plug from wall outlet.
12. Extreme caution must be used when moving an appliance containing hot foods, such as batter or hot cheese.
13. Do not use appliance for other than intended use.
14. Do not twist, kink or wrap the power cord around the appliance as this may cause the insulation to weaken and split, particularly in the location where it enters the unit.
15. Do not attempt to dislodge food when appliance is plugged in.
16. To prevent fire, ensure the Mini Waffle Maker is not covered or touching flammable material, including curtains, draperies or walls during operation.
17. Do not move unit when it is still hot.
18. Do not intend to operate by means of an external timer or separate remote-control system.
19. **NEVER leave appliance unattended while in use.**

SAVE THESE INSTRUCTIONS
HOUSEHOLD USE ONLY

POWER CORD INSTRUCTIONS

1. A short power-supply cord is provided to reduce the hazard resulting from entanglement or tripping over a long cord.
2. Extension cords may be used if care is exercised.
If it is necessary to use an extension cord, it should be positioned so that it does not drape over the counter or tabletop where it can be pulled on or tripped over by children.
3. The electrical rating of the extension cord must be the same or more than the wattage of the appliance (the wattage is shown on the rating label located on the underside or back of the appliance).
4. Avoid pulling or straining the power cord at outlet or appliance connections.

POLARIZED PLUG

1. Your appliance is equipped with a polarized plug (one blade is wider than the other).
2. To reduce the risk of injury this plug must be inserted into a properly installed outlet.
3. If the plug does not fit fully into the outlet, reverse the plug. If it does not fit, please consult a qualified electrician. Do not attempt to defeat this safety feature by modifying the plug in any way.

WARNING: Improper use of the power cord may result in electric shock. Consult a qualified electrician if necessary.

Before Your First Use

Carefully unpack the Mini Waffle Maker and remove any packaging materials. Set the Mini Waffle Maker on a clean, dry counter or table. Wipe the surface of the cooking plates with a clean, damp cloth or sponge, then dry with dry cloth. This will remove any dust that may have settled during packaging. For best results after each cleaning, occasionally wipe the cooking plates with a small amount of cooking oil to season them for easy release of foods.

Wipe the outside of the Mini Waffle Maker with a clean, damp cloth or sponge. Do not immerse the Mini Waffle Maker in water or other liquid. Do not use abrasive cleaners.

Getting To Know Your Mini Waffle Maker


COOKING UNIT

Heating
Indicator Light


Lid

Handle

Non-slip Feet

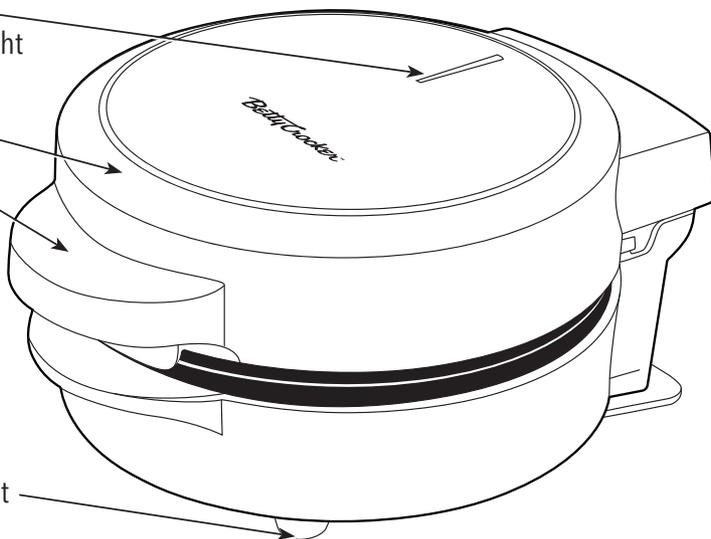

Non-Stick
Cooking Plates

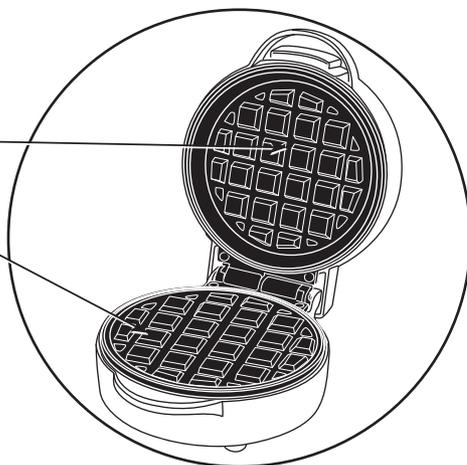

RATING: 120 V, 60 Hz, 550 W, AC ONLY

Using Your Mini Waffle Maker


WARNING: NEVER LEAVE THE MINI WAFFLE MAKER UNATTENDED WHEN PLUGGED INTO AN ELECTRICAL OUTLET.

1. Place the appliance on a dry, level, heat resistant surface such as a countertop.
2. Plug the unit into a working 120 V 60 Hz AC only outlet. Close the lid and allow the unit to preheat.

CAUTION: The unit is on when it is plugged in. The illuminated red heating indicator light will come on, indicating the cooking unit is heating. After 2 - 3 minutes the red light will go out, indicating that the unit is ready.

3. We find it best to plug the unit in first and then prepare your ingredients while unit is preheating. Follow the directions of your chosen recipe.
4. Using oven mitts, lift the lid to its fully upright position.

WARNING: The Mini Waffle cooking plates get very hot. Avoid touching them and the outer housing to avoid possible injury.

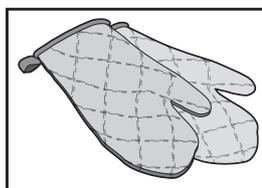

*Always use oven mitts when using your appliance.



Never touch the cooking surface or lid while appliance is plugged in.



DO NOT lift the lid so that your arm is over the cooking surface as it is hot and may cause injury.



Always lift and lower the lid by the lid handle. Lift from the side.

- Carefully place your batter onto the lower cooking plate and close the lid. Do not apply excessive force to close the lid. Steam may come from the unit while closing the lid, so care must be taken not to burn yourself. Never fill the waffle plates with more than 3 Tablespoons of batter. This reduces the risk of batter spilling over.

NOTE: Cook only with the lid in the closed position.

During the cooking process, the RED indicator light may cycle on and off. This is simply the Mini Waffle Maker adjusting the temperature as the waffle is being cooked.

Waffle should be ready after 5-8 minutes. Depending on personal preference and taste, these times may vary slightly.

- With an oven mitt, lift the lid to its fully upright position. Remove the waffle from the cooking plate with a heat-resistant nylon, silicone or wooden cooking utensil. Do not use metal utensils, as this will damage the nonstick surface.
- If additional portions are desired, lower the lid to preserve the heat. Simply repeat the above steps to make as many tasty portions as desired.
- When finished with the Mini Waffle Maker, be sure to unplug and allow to cool before cleaning and storing.

CAUTION: Do not overfill your Mini Waffle Maker. Excess ingredients may not allow you to close your Mini Waffle Maker lid and may also cause ingredients to spill over.

Helpful Hints

- Wipe the cooking plates with a small amount of cooking oil or use cooking spray prior to every use.
- Always preheat the unit before cooking.
- Never fill the mini waffle maker with more than 3 Tablespoons of batter. This reduces the risk of batter spilling over.
- If the lid resists lifting, allow the waffle to bake a little longer, then try lifting the lid again.
- If the waffle sticks to the top cooking plates, remove them with a heat-resistant plastic, silicone or wooden spatula.
- Let waffle cool slightly before eating to avoid possible burns.

CAUTION: AVOID LEAVING THE MINI WAFFLE MAKER PLUGGED IN WITH NO BATTER ON THE COOKING PLATES FOR AN EXTENDED LENGTH OF TIME.

When finished making waffles, be sure to unplug the cooking unit and allow it to cool completely before cleaning and storing.

Care and Cleaning Your Mini Waffle Maker

Always ensure the Mini Waffle Maker is unplugged and cool before moving, cleaning or storing.

Always wipe the inside and the edges of the cooking plates with a small amount of cooking oil or use cooking spray. To remove stubborn stains, use a soft nylon brush or other cleaning utensil safe for nonstick surfaces. Do not use steel wool or scouring pads, this will damage the nonstick coating.

WARNING: Do not immerse the unit, cord or plug in water or any other liquid. Do not pour or run water onto any part of the unit. Do not place in dishwasher. Do not use harsh or abrasive cleansers on any part of the appliance.

The inside and the exterior of the unit may be wiped clean with a damp cloth. Dry thoroughly.

RECIPE

2 cups (500mL) all-purpose flour
1 tablespoon (15 mL) sugar
4 teaspoons (20 mL) baking powder
¼ tsp (1 mL) salt
2 eggs
1 ¾ cups (400mL) of milk
½ cup (125mL) melted butter or vegetable oil

In a medium bowl, combine the flour, sugar, baking powder and salt. In a separate bowl whisk the eggs, milk and melted butter or vegetable oil until well blended. Pour the wet ingredients into the dry ingredients and mix until well blended.

Lightly coat the nonstick cooking plates with butter, vegetable oil or cooking spray. Heat the mini waffle maker by following the instructions located on page 8.

Makes about ten (10) waffles or 3-1/2 cups (800ml) of batter.

LIMITED WARRANTY ONE (1) YEAR

This warranty is the only warranty for this product. This product is warranted to be free from defects in material and workmanship for a period of one (1) year from the date of original purchase, as evidenced by the receipt of purchase, and provided it is used for the purpose for which the product is intended. During this period, your exclusive remedy is repair or replacement of this product or any component found to be defective, at our option. If the product should become defective within the warranty period, we will repair it or replace it free of charge. If the product or component is no longer available, we will replace with a similar one of equal or greater value. We will return your product, transportation charges prepaid provided it is delivered prepaid to Formula Brands Inc. Any and all remedies relating to this warranty are limited to the amount of the purchase price of the product. This warranty extends only to the original purchaser, consumer or gift recipient.

This warranty does not cover failure caused by food build-up, water deposits, normal cosmetic discoloration, and inadequate maintenance of the product. This warranty will not cover damage or failure to function if the product has been dismantled or tampered with, if it has been damaged due to exposure to water or any other liquid, if it is not used in conformity with the printed directions of this product or if it has been accidentally or intentionally damaged.

This warranty does not cover the following parts which may be supplied with the appliance: plastic parts, glass parts, glass containers, ceramic containers, cutter/strainer, filters or non-stick surfaces.

This product is intended for use in a single-family household. This warranty will become null and void if the product is used for commercial purposes or any other purpose other than for single-family household use.

We exclude all claims for special, incidental and consequential damages caused by breach of any express or implied warranty. All liability is limited to the amount of the purchase price. Every implied warranty, including any statutory warranty or condition of merchantability or fitness for a particular purpose, is disclaimed except to the extent prohibited by law, in which case such warranty or condition is limited to the duration of this written warranty. This warranty gives you specific legal rights. You may have other legal rights that vary depending on where you live. Some states or provinces do not allow limitations on implied warranties or special, incidental or consequential damages, so the foregoing limitations may not apply to you.

TO RETURN FOR SERVICE:

1. Securely package and return the product PREPAID to:
FORMULA BRANDS INC.
45 Mural Street, Unit #7, Richmond Hill, Ontario, Canada L4B 1J4

NOTE: We recommend you insure your parcel for your protection.

2. Please enclose your name, return address, postal code, telephone number and a description of the defect.
3. To ensure prompt 'In-Warranty' service, be sure to include a proof of purchase (a copy of your store receipt).
4. For repairs not covered under warranty, you will be advised of the cost of the repair in advance, and upon receipt of your cheque or money order the repairs will be completed and the product returned to you.

If at any time you order parts or inquire about service, please quote the "MODEL NUMBER" stamped on the appliance nameplate.

For assistance regarding this appliance, please call
1-877-244-1110
between 9:00 am and 5:00 pm (EST) Monday to Friday
or write
FORMULA BRANDS INC.
45 Mural Street, Unit #7, Richmond Hill, Ontario, Canada L4B 1J4
or email:
customerservice@formulabrands.com

© General Mills. Betty Crocker and designs are trademarks of General Mills used under license.

