


# INSTALLATION & USER MANUAL

## CEILING FAN WITH LIGHT

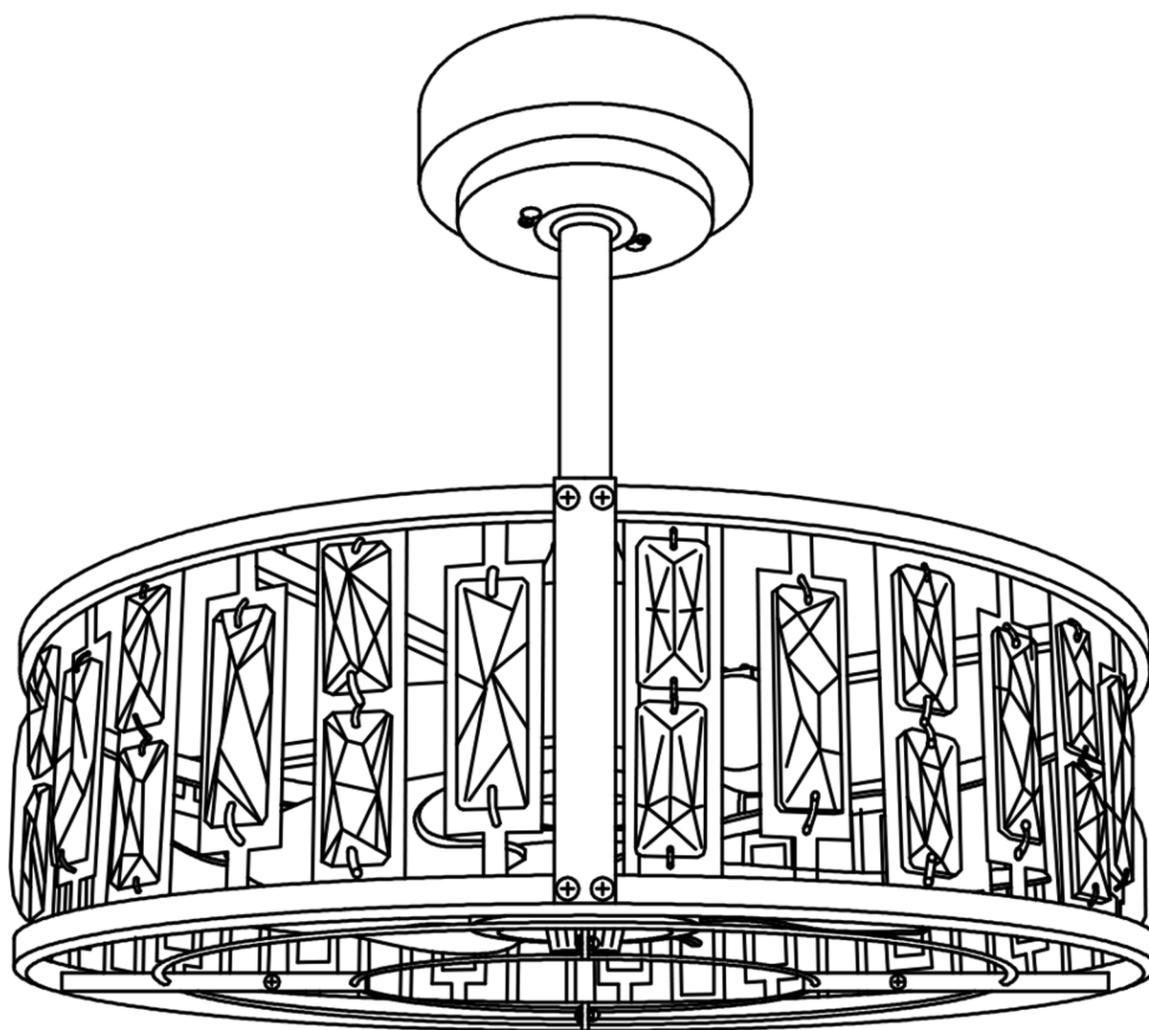

ITEM # 35071

Customer Service: [support@ceilingfanhelp.com](mailto:support@ceilingfanhelp.com)

# Table of Contents

Table Of Contents.....	2	Exploded View.....	4
Safety Information.....	2	Installation Instructions.....	5-7
Dimension Reference.....	3	Troubleshooting Guide.....	8
Hardware Included.....	3		
Fan Parts Included.....	3		

## Safety Information

### READ AND SAVE THESE INSTRUCTIONS.

1. To reduce the risk of electric shock, ensure electricity has been turned off at the circuit breaker or fuse box before you begin.
2. All wiring must be in accordance with the National Electrical Code “ANSI/NFPA 70” and local electrical codes. Electrical installation should be operated by a qualified licensed electrician.
3. The outlet box and support structure must be securely mounted and capable of reliably supporting a minimum of 35 lbs (15.9 kg). Use only UL Listed outlet boxes marked “Acceptable for Fan Support of 35 lbs. (15.9 kg) or less. ”
4. Do not place objects in the path of the blades.
5. To clean the fixture, turn off the power, wait for it to cool, and wipe the fixture with a clean,dry, soft cloth.
6. After making electrical connections, spliced conductors should be turned upward and pushed carefully up into the outlet box. The wires should be spread apart with the grounded conductor and the equipment grounding conductor on one side of the outlet box and ungrounded conductor on the other side of the outlet box.
7. All set screws must be checked and tightened where necessary before installation.



**WARNING:** To reduce the risk of electrical shock or fire,do not use this fan with any solid-state fan speed control device.It will permanently damage the electronic circuitry.



**WARNING:** To reduce the risk of personal injury, do not bend the blade brackets when installing the brackets, balancing the blades, or cleaning the fan.



**WARNING:** To reduce the risk of fire, electric shock or personal injury, mount to outlet box marked “acceptable for fan support of 35 lbs. (15.9 Kg) or less” and use screws provided with the outlet box.



**WARNING:** To avoid possible electrical shock, turn the electricity off at the main fuse box before wiring.



**WARNING:** To reduce the risk of electrical shock, this fan should not be installed with an isolating wall control or switch,as it may cause incompatibility issues.



**CAUTION:** To reduce the risk of personal injury, use only the screws provided with the outlet box.




**CAUTION:** Please use carefully when working around or cleaning the fan to avoid injury or damage of fan.



**CAUTION:** The fan must be mounted with a minimum of 7 ft (2.1 m) clearance from the trailing edge of the blades to the floor.




**CAUTION:** Changes or modifications not expressly approved by the party responsible for compliance could void the user 's authority to operate the equipment.



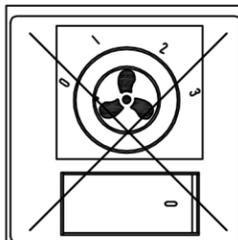


**CAUTION:**It is recommended that when installing a fan light, there is already a regulator at home, and the controller cannot be connected together.







# Dimension Reference

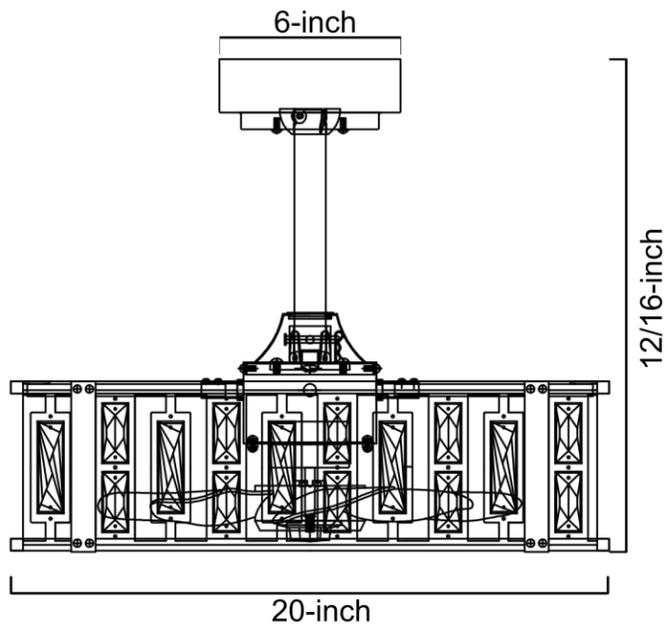


# Hardware Included

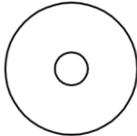  		Hardware Package	Quantity
	S1	S1. Wire Connector	3
	S2	S2. Wood Screw	4
	S4	S3. Plastic Expansion Tube	4
	S3	S4. Spring Washer	2
	S5	S5. Inch Thread	2

# Fan Parts Included

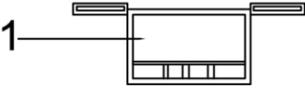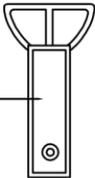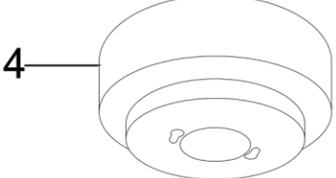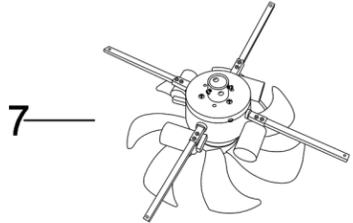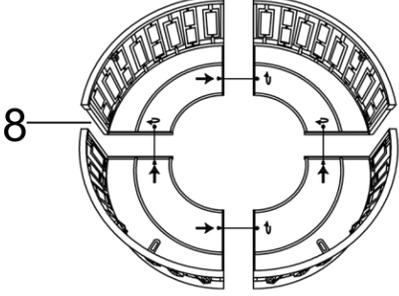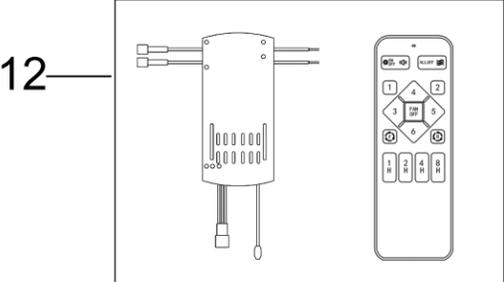		Name	Quantity
	1	1. Hanger Bracket	1
	2	2. Short Down rod	1
	3	3. Long Down rod	1
	4	4. Canopy	1
	5	5. Decorative cover	1
	6	6. Connector	4
	7	7. Main Body Connector	1
	8	8. Motor Assembly	1
	9	9. Short Screw	30
	10	10. Long Screw	5
	11	11. Block a Shot	9
	12	12. Remote Control (Batteries Not Included)	1

# Exploded View








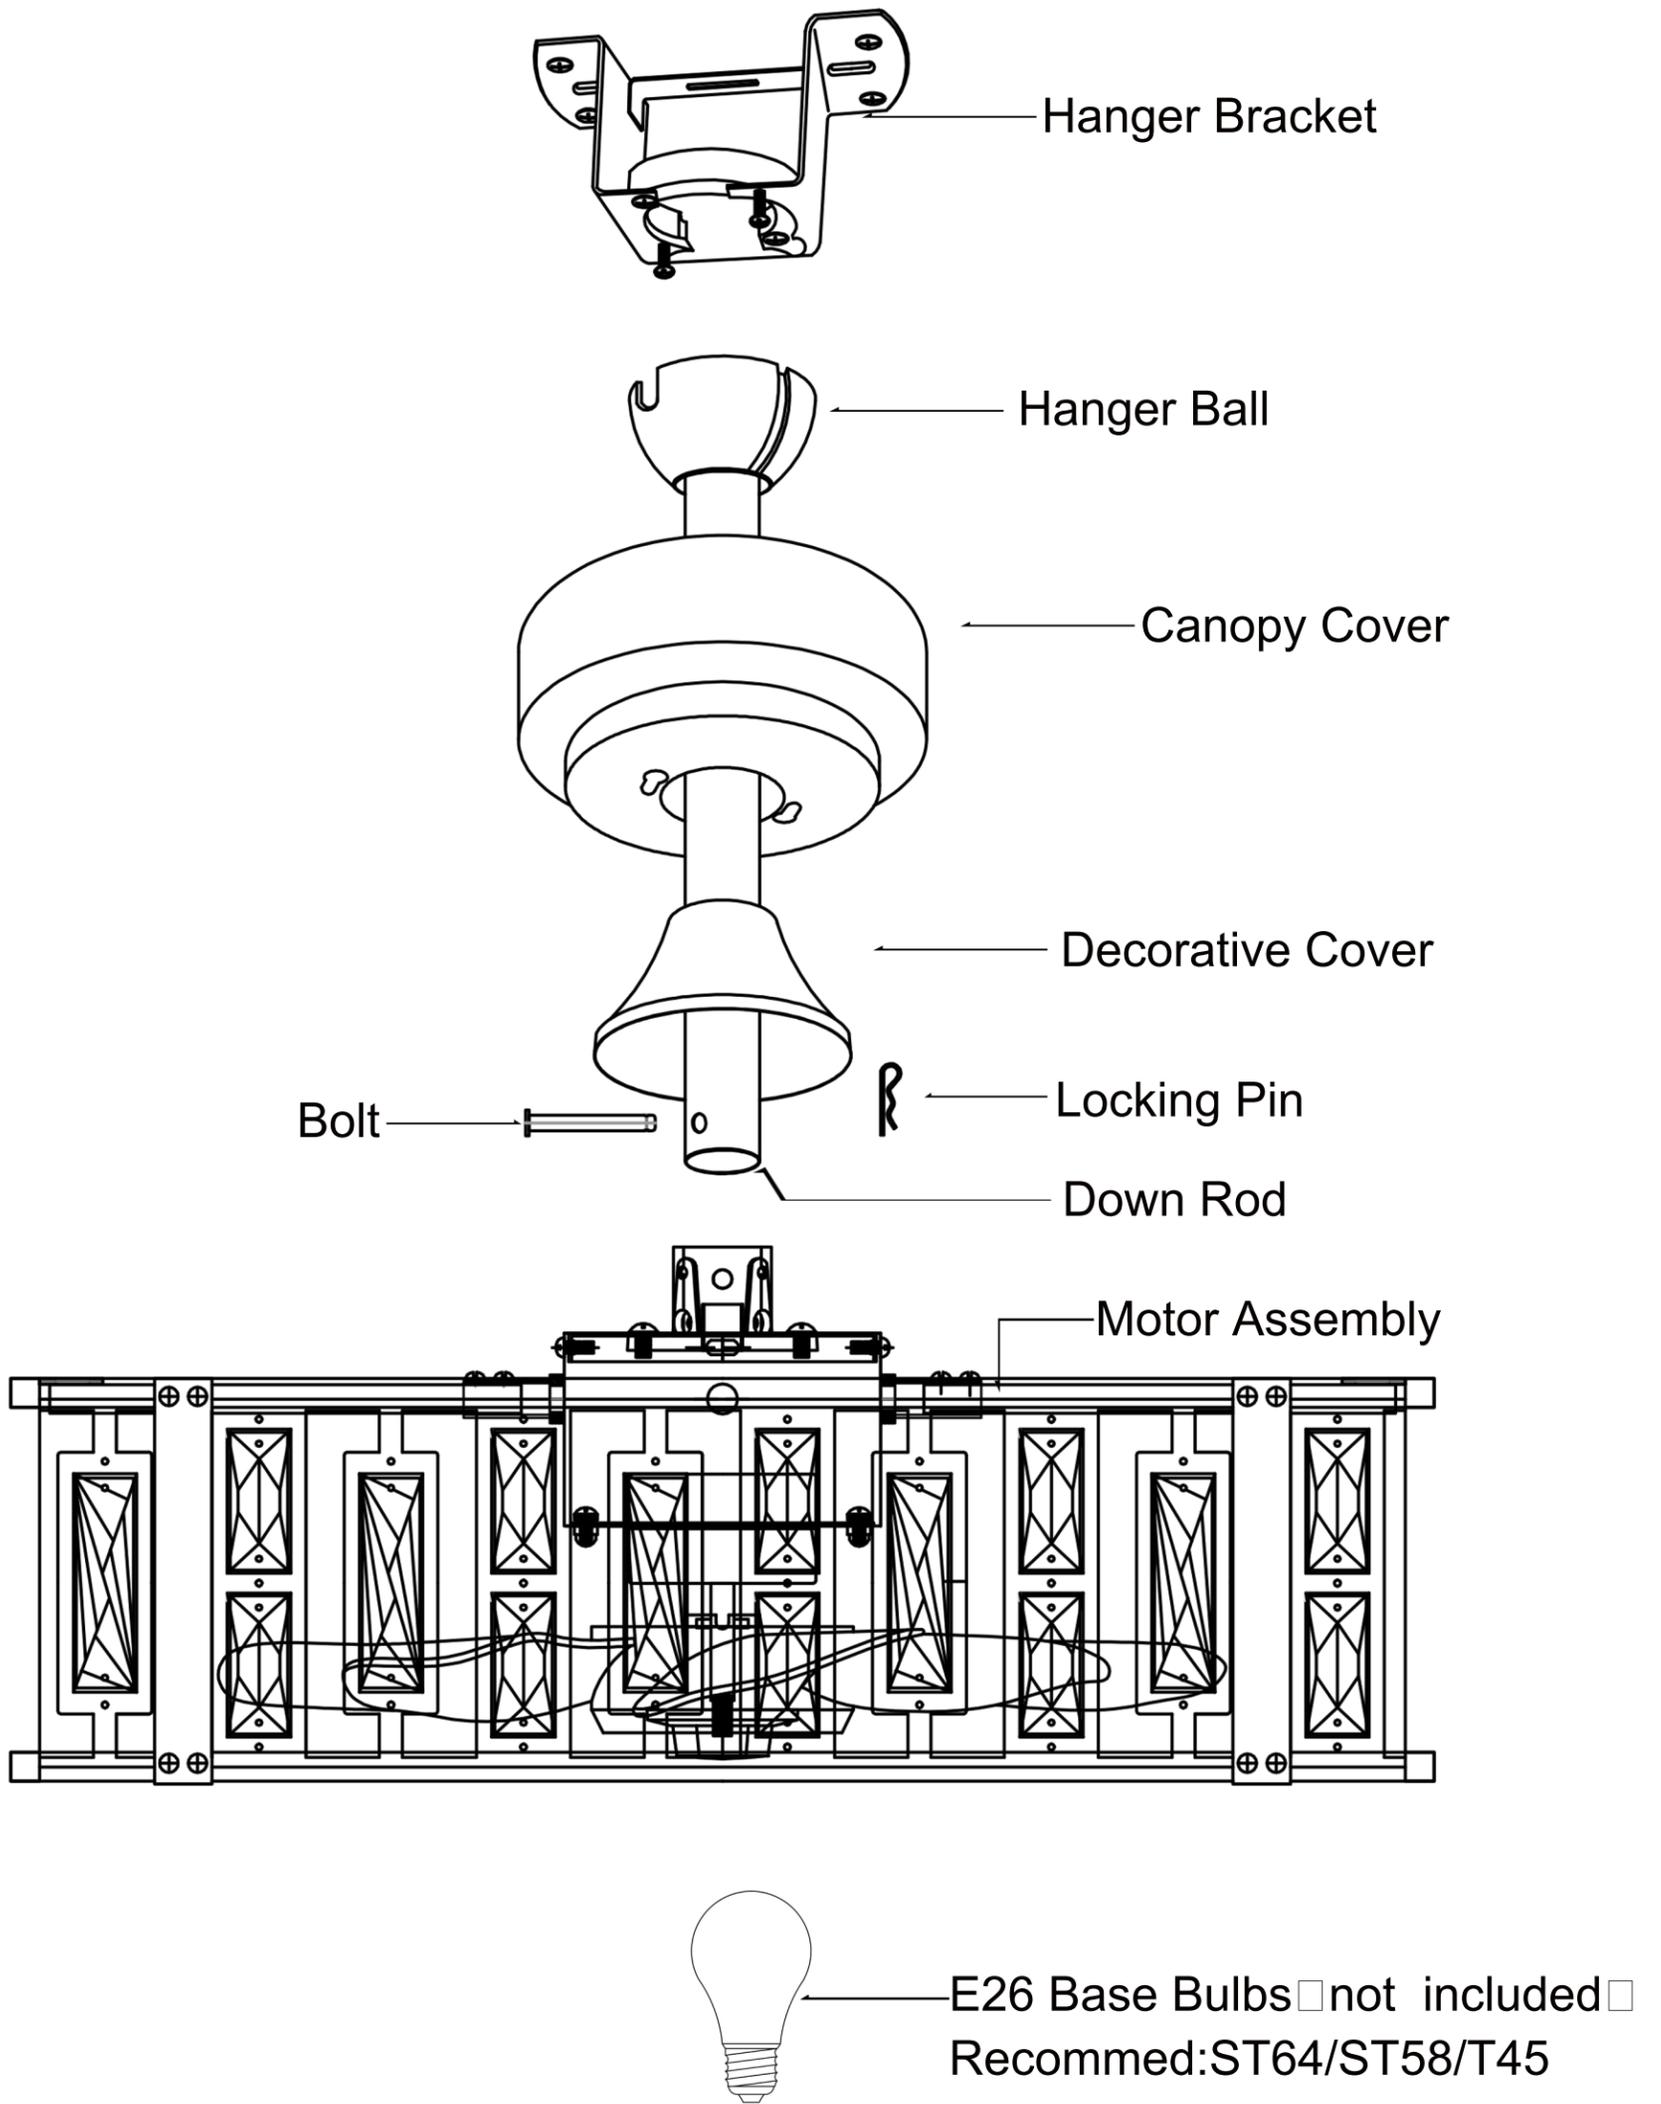


# Installation Instructions

## Step1 MOUNTING




- 1: Turn off the electric circuit at the main fuse or circuit breaker box.
- 2: Use wood screws to fix the bracket for a wooden or false ceiling.
- 3: Take out the downrod pin from the 8" downrod assembly.
- 4: Assemble the canopy and coupling cover as shown in the figure, thread the light fixture wire through the downrod.
- 5: Insert the downrod pin into the side hole of yoke, lock it with the downrod clip, and then tighten the two side screws.
- 6: Lift the assembled fan body onto the mounting bracket, ensure the concave groove of the hanger ball is positioned on the hanger lug of the mounting bracket.
- 7: Insert the receiver into the mounting bracket.
- 8: Connect the wires between the controller and the fan motor: white to white wire, black to black wire, and connect the 3-pin wire connector,

**CAUTION:** To ensure wobble-free operation and to avoid damage to the fan, the downrod and the set screws must be completely tightened.

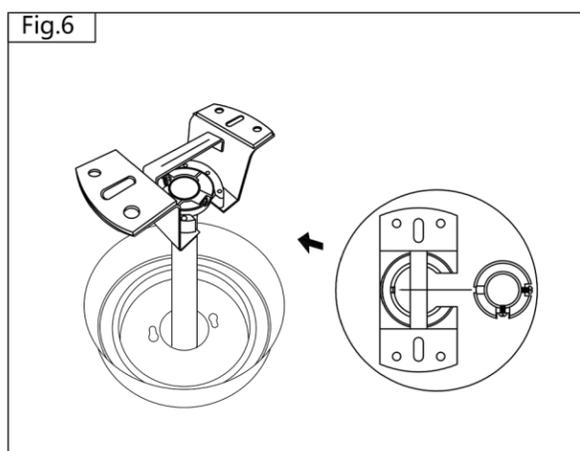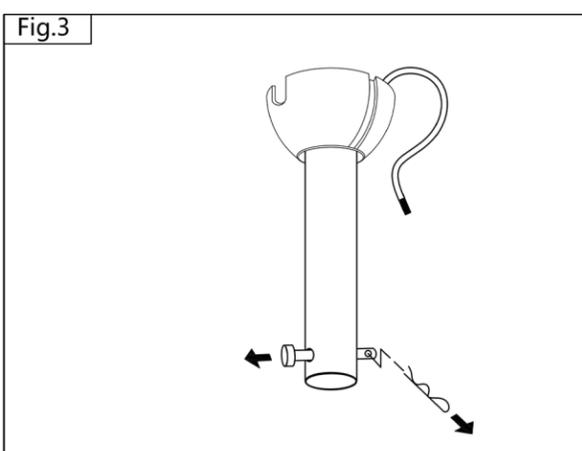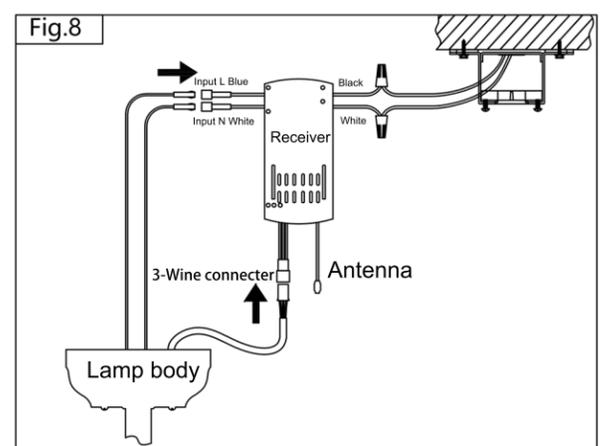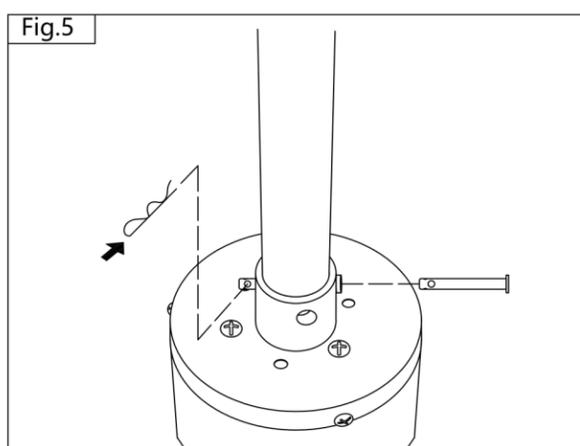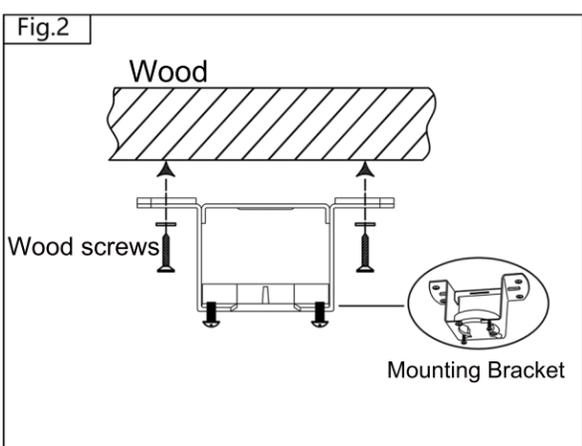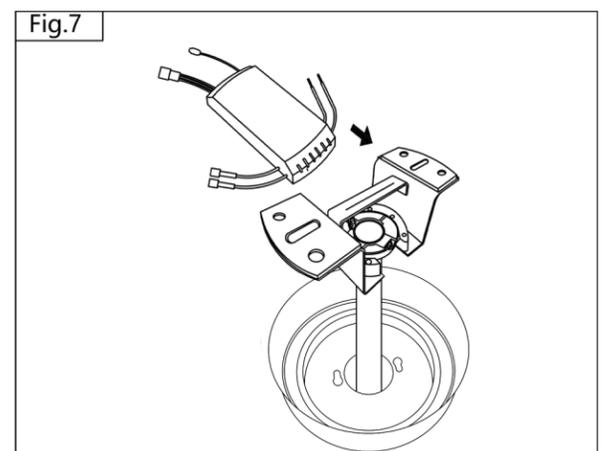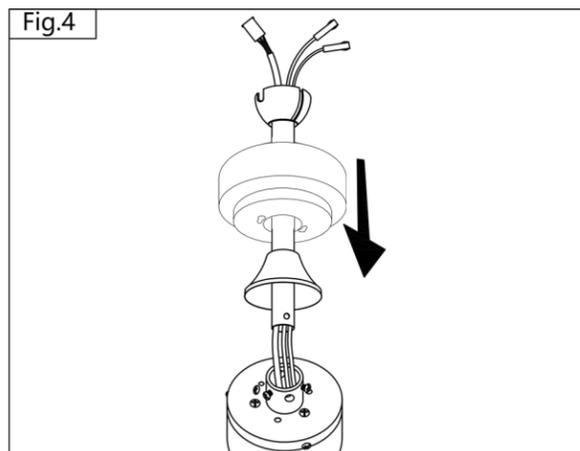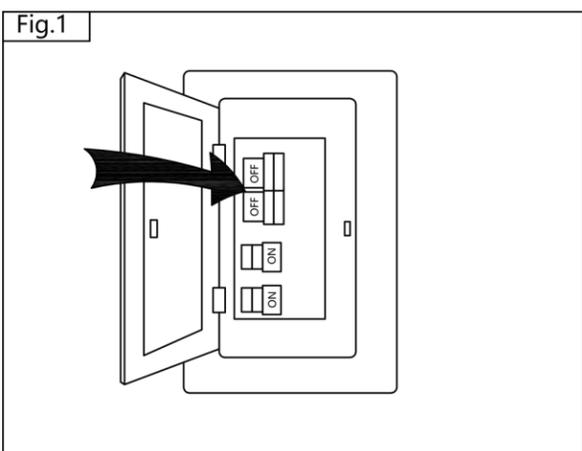

# Installation Instructions

## Step2 INSTALL MOUNTING BRACKET

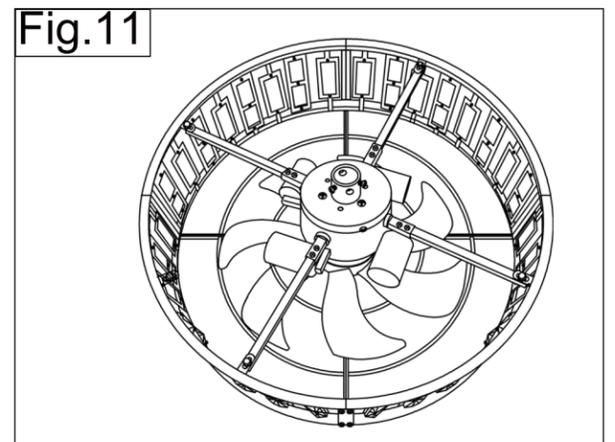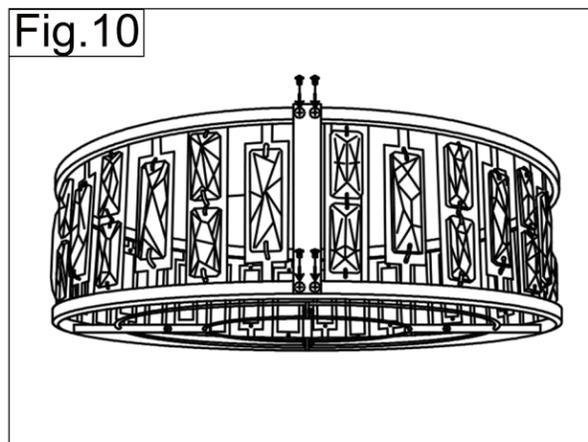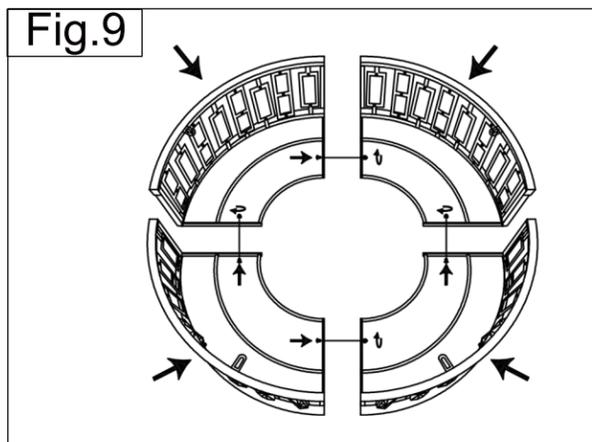



9: Move the frame inward while aligning the edges of the knockdown frame.

10: Attach the connecting component to the knockdown frame. Then, use 4 side screws to assemble the lamp frame, and 2 bottom screws and nuts to connect the two frame parts together.

When installing one side of the frame, do not fully tighten the screws initially. Leave enough space for the screws to align properly with the holes. Once all 4 screws are inserted, tighten them securely. Repeat the process for the other side.

11: Attach the connecting component to the knockdown frame again, then use 4 side screws to secure it.

## Step3 INSTALL MOUNTING BRACKET

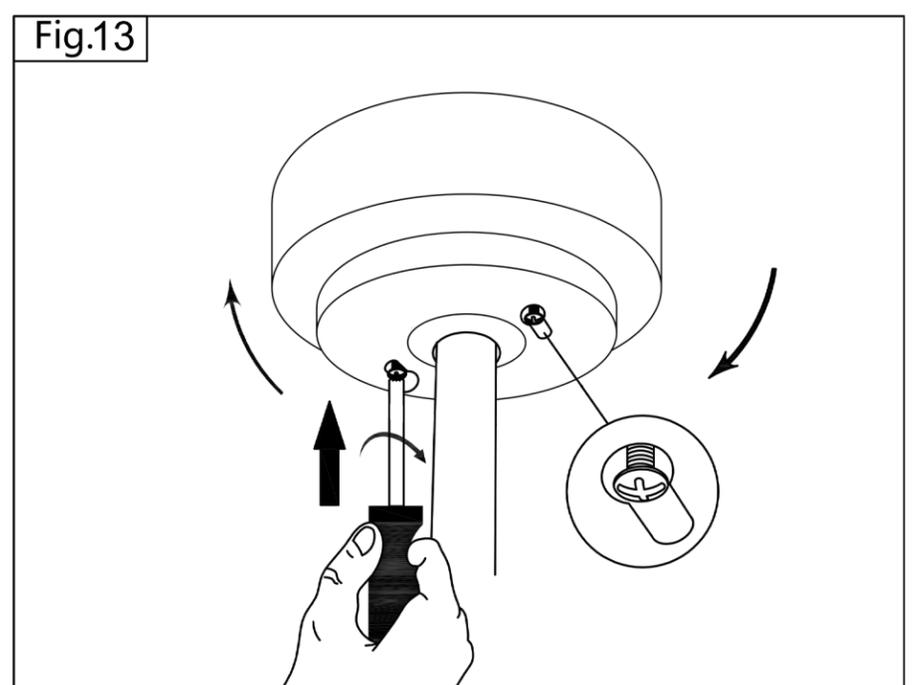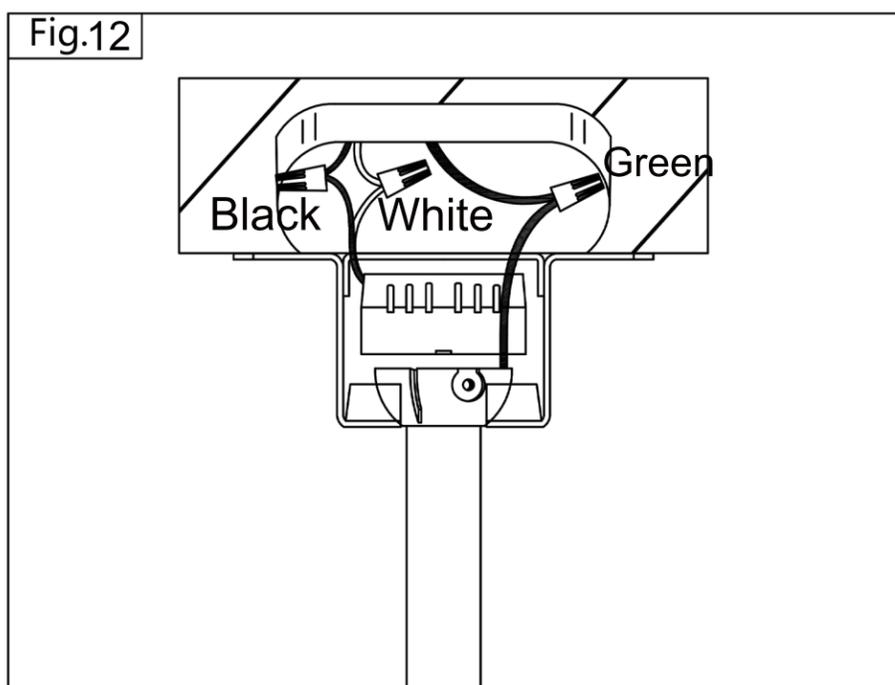

### Wiring Instructions:

12: Connect the "Neutral Wire" → White wire from the ceiling to the white wire of the fan.


Connect the "Live Wire" → Black wire from the ceiling to the black wire of the fan.

Connect the "Ground Wire" → Green or yellow/green wire from the ceiling to the green wire of the fan.

13: Push the canopy cover upward, aligning it with the two screws from Step 1.


Rotate and tighten the screws to secure the canopy cover.

# Button Function

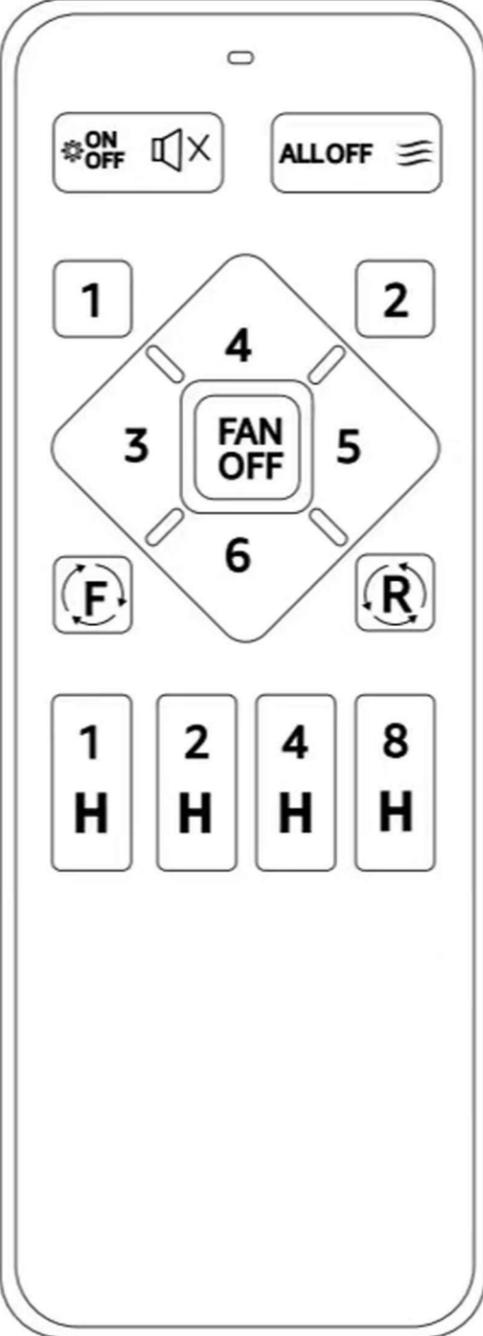 <p>Battery: 2*1.5VAAA(not included)</p>	<b>ALLOFF</b>	Turns off both the fan and light
	<b>1-6</b>	Adjusts fan speed(Levels 1-6)
	<b>Fan Off</b>	Turns off the fan
	  	Fan forward rotation Fan reverse rotation Natural wind mode
 	Turns light on/off Mutes remote controller sounds	
<b>1H</b>	Fan and light turn off after 1 hour	
<b>2H</b>	Fan and light turn off after 2 hours	
<b>4H</b>	Fan and light turn off after 4 hours	
<b>8H</b>	Fan and light turn off after 8 hours	

# Wall PLate Installation

Align the plate with desired mounting location .  
 Secure the wall plate using the two provided screws.

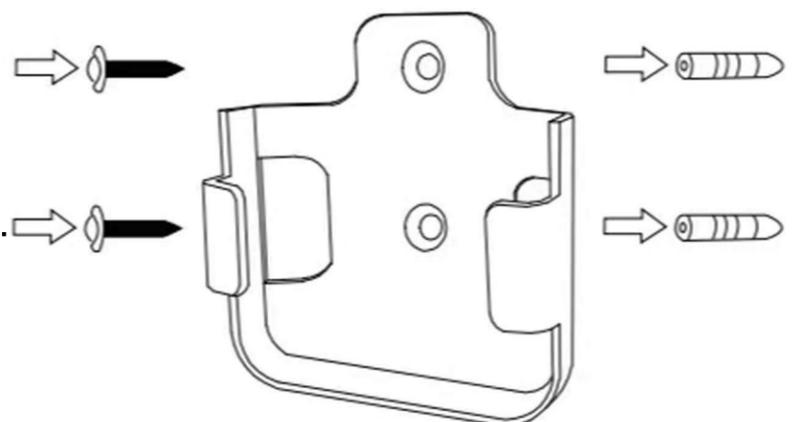

# Troubleshooting Guide

<p>If Fan Does Not Start</p>	<ol style="list-style-type: none"> <li>1. Check the main and branch circuit fuses or circuit breakers.</li> <li>2. Do not use a wall control switch, as it may cause compatibility issues. Instead, use the provided handheld remote control for optimal performance.</li> <li>3. Check the line wire connections to the fan and switch wire connections in the switch housing.</li> </ol> <p>CAUTION: Make sure to turn off the main power before making any electrical connections.</p>
<p>If The Fan Sounds Noisy</p>	<ol style="list-style-type: none"> <li>1. Make sure all screws in the motor housing are snug (not over tightened).</li> <li>2. Check that wire connectors in the switch housing are not rattling against each other or the interior wall of the switch housing. CAUTION: Turn off the main power before entering the switch housing.</li> <li>3. Ensure that the screws securing are tight. Make sure the light bulb is tight in the socket and not touching the lamp frame or blades.</li> <li>4. Note that some fan motors are sensitive to signals from Solid State variable speed controls. DO NOT USE a Solid State variable speed control.</li> <li>5. Allow a "break-in" period of 24 hours. Most noises associated with a new fan will disappear after this period.</li> </ol>
<p>If Fan Wobbles</p>	<ol style="list-style-type: none"> <li>1. Check that all blades are screwed firmly into blade holders.</li> <li>2. Make sure that the canopy and mounting plate are tightened securely to the ceiling junction box, and the junction box is mounted firmly to the ceiling joist.</li> <li>3. Ensure the concave groove of the hanger ball is positioned on the hanger lug of the mounting bracket.</li> </ol>
<p>If Light Does Not Work</p>	<ol style="list-style-type: none"> <li>1. Check the black wiring of motor to receiver, and receiver to AC input.</li> <li>2. Check for loose or disconnected wires in the fan switch housing.</li> <li>3. Check for loose for light bulbs.</li> <li>4. Check for faulty light bulbs, make sure the light bulb is AC120V and E26 medium base.</li> </ol> <p>CAUTION: Make sure the main circuit is turned off before entering the switch housing.</p>
<p>Remote Does Not Work</p>	<ol style="list-style-type: none"> <li>1. Battery out of power or not installed correctly; change new AAA battery and ensure well installed.</li> <li>2. Remote controller not paired, make new pairing with light.</li> </ol>