

QUICK SETUP GUIDE

6-Sheet Cross Cut Shredder


NS-S6CCBK2 / NS-S6CCBK2-C (Rev. B)

PACKAGE CONTENTS

- Cross cut shredder with wastebasket
- Quick Setup Guide

FEATURES

- Shreds up to six sheets of paper at one time
- Destroys credit cards, small staples, and small paper clips
- Cross-cut size .2 x .71 in. (5 x 18 mm) protects sensitive data
- 3.2 gal. (12 l) capacity wastebasket holds shredded waste and is easy to empty

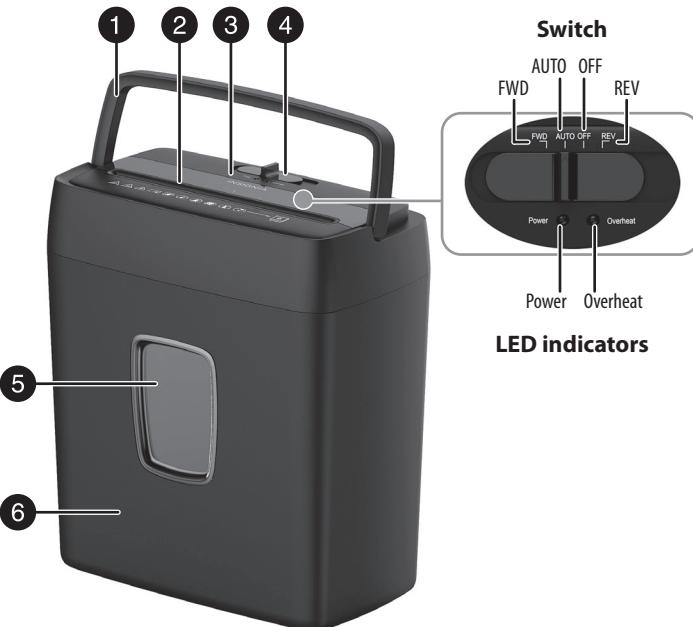


#	ITEM	DESCRIPTION
1	Handle	Lets you easily lift up the shredder head to empty the paper inside the wastebasket. Make sure that your shredder is turned off before you move it.
2	Shredding slot	Insert up to six sheets of paper at a time or one credit card at a time.
3	LED indicators	Overheat: Lights when your shredder has overheated. When overheated, the shredder stops shredding. After 30 minutes, the indicator turns off and the shredder can shred again. Power: Lights when your shredder is in use.
4	Switch	FWD: Sends an item through your shredder. The Power indicator lights green. Note: When you slide the power switch to FWD , the cutters run forward continuously. To stop the cutters, you have to move the switch to a different position. Only use FWD to make sure that the remaining paper in the slot gets shredded or that you want to clear the slot. AUTO: Automatically shreds an item when inserted into the shredding slot. The Power indicator lights green. After shredding, the shredding stops automatically. OFF: Turns off your shredder. REV: Reverses the paper in the slot to clear a jam or remove unshredded paper. The power indicator light turns green when REV is being used, similar to FWD .
5	Window	Let you see how much shredded material is in the wastebasket.
6	Wastebasket	Holds the paper and credit cards that you have shredded. Empty the basket when it is 2/3 full.

SETTING UP YOUR SHREDDER

- 1 Place the wastebasket upright on a level surface.
- 2 Attach the shredder head to the basket. Make sure that it fits correctly.
Note: Do not use plastic bags to line the wastebasket.
- 3 Connect the power cord to a power outlet. Do not use an extension cord.

USING YOUR SHREDDER


- 1 Slide the power switch to **AUTO**.

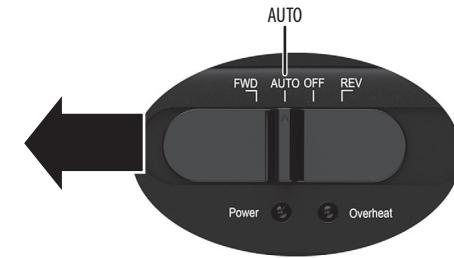

- 2 Insert paper (up to six pages) or one credit card into the shredding slot. Your shredder automatically shreds what you insert.

Note: Don't put envelopes, adhesive material, newsprint, transparencies, laminated documents, continuous forms, cardboard, or hard and plastic materials (except credit cards) through the shredder. You can shred small staples and small paper clips, if they are attached to the paper you are shredding.

- 3 If the shredder jams, slide the switch to **REV** to return the paper, then slide the switch to **AUTO**. The shredder can be used again when the jam is cleared.

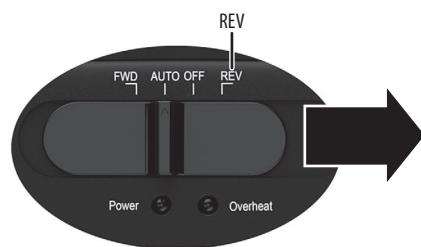

- 4 When the wastebasket is 2/3 full, slide the switch to **OFF**, unplug the cord from the power outlet, then lift off the shredder head and empty the wastebasket.

Note: Empty the wastebasket when the window is filled. When you empty the basket or the shredder jams, switch to **REV** for two seconds, then **FWD** for five seconds. Repeat twice to clear debris.

TROUBLESHOOTING

My shredder isn't working.

- Make sure that the power cord is plugged into a working power outlet. If the power cord is damaged, replace it.
- Make sure that the shredder head and wastebasket are positioned correctly.
- If the Overheat indicator is on, let your shredder cool at least 30 minutes. When the indicator is off, you can use your shredder again.
- Change the position of the paper as you insert it.
- The paper may be too thin or crumpled for your shredder to recognize it. Fold the paper, then reinsert it.
- Slide the switch to **FWD**.
- Make sure that you only send six sheets of paper or one credit card through your shredder at a time.

My shredder is jammed.

- Slide the switch to **REV**, remove the paper from the cutter, then slide the switch to **AUTO**, and try again.

The cutter won't stop.

- Slide the switch to **OFF**, unplug your shredder from the power outlet, then push the shredded paper down to make sure that it is away from the shredder head.
- Slide the switch to **REV** to remove extra paper or credit card from your shredder.

My shredder is too noisy.

- Make sure that your shredder is on a flat, level surface.
- Make sure that the shredder head and wastebasket are positioned correctly.

The Overheat indicator is lit.

- Let your shredder cool at least 30 minutes. When the indicator turns off, you can use your shredder again.

SPECIFICATIONS

- **Dimensions (HxWxD):** 14.7 x 12.1 x 6.9 in.
(37.4 x 30.8 x 17.6 cm)
- **Cutting style:** Cross cut
- **Entry width:** 8.6 in. (22 cm)
- **Shred capacity:** 6 sheets (75 g/m² A4 paper)
- **Shred size:** .2 x .71 in. (5 x 18 mm)
- **Shred speed:** 2.2 m/min.
- **Duty cycle:** 4 minutes ON / 30 minutes OFF
- **Input:** AC 120 V, 60 Hz, 2.0 A
- **Net weight:** 7.9 lbs. (3.6 kg)
- **Basket capacity:** 3.2 gal. (12 l)
- **Noise level (db) @ Non-loading at 1 M distance:** 74 dB
- **Security level:** P-4

IMPORTANT SAFETY INFORMATION

Please read thoroughly

Before using the shredder, please read the guide and become familiar with the safety information, operating instructions, and maintenance requirements. Follow all warnings and instructions in the guide and as marked on the shredder. Do not attempt to service this unit by yourself. Doing so will void the manufacturer's warranty and may expose you to sharp cutting blades and/or high voltage electric shock that could cause serious injury. Any repairs must be performed by qualified service personnel.



11. Keep in the OFF position when the shredder is not in use for prolonged periods of time.
12. Empty wastebasket frequently.
13. The document shredder must always be deactivated and disconnected from the electrical line prior to moving, transporting, and cleaning the device and prior to emptying the wastebasket.
14. The device may not be operated with a damaged power cord.
15. For indoor use only.
16. To protect the machine, we suggest the user to operate it in this way: work 4 minutes then rest 30 minutes.
17. The machine allows a maximum shred six sheets paper (75 gsm) or one credit card at one time.
18. The socket-outlet must be installed near the equipment and must be easily accessible during use.

LEGAL NOTICES

FCC statement:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAN ICES-003(B)/NMB-003(B)

ONE-YEAR LIMITED WARRANTY

Visit www.insigniaproducts.com for details.

QUEBEC AVAILABILITY GUARANTEE

For Quebec Residents Only: No guarantee of replacement parts, repair services, or maintenance/repair information. Visit www.insigniaproducts.com for details.

CONTACT INSIGNIA:

For customer service, call 1-877-467-4289 (U.S. and Canada)
www.insigniaproducts.com

INSIGNIA is a trademark of Best Buy and its affiliated companies.

BEST BUY Distributed by Best Buy Purchasing, LLC
Richfield, MN 55423
©2025 Best Buy. All rights reserved.