

Brookstone®

Shiatsu Massage Cushion

DEEP RELIEF. WIDE COVERAGE. FEELS LIKE
THE HANDS OF A MASSEUSE.



CAUTION

- TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER. THERE ARE NO SERVICEABLE PARTS INSIDE.
- TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS UNIT TO RAIN OR MOISTURE.



The lightning flash with arrow-head symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated "dangerous voltage" within the unit's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the unit.

IMPORTANT SAFETY INSTRUCTIONS

All the safety and operating instructions should be read, adhered to and followed before the unit is operated.

To reduce the risk of electric shock, this appliance has a polarized plug (one blade is wider than the other). This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician to install the proper outlet. Do not change the plug in any way.

For adult use only. Do not use massager in close proximity to loose clothing or jewelry. Keep long hair away from massager while in use.

Any individual who may: be pregnant, or recently gave birth, has a heart condition, or a pacemaker, suffers from diabetes or other sensory impairment, phlebitis and/or thrombosis, joint dysfunction, inflammation or injuries, weak bones, osteoporosis, a high fever, an abnormal or curved spine, is at an increased risk of developing blood clots, has pins/screws/artificial joints or other medical devices implanted in his/her body, is being treated for a medical condition or physical injury or is under a doctors care should consult

with a medical professional before using a massaging device designed for home use.

SAVE THESE INSTRUCTIONS

DANGER

To reduce the risk of electric shock, burns, fire or injury:

1. Always unplug the unit from the electrical outlet immediately after use.
2. Do not use while bathing or in a shower.
3. Do not place or store unit where it can fall or be pulled into a tub or sink.
4. Do not place in, drop or submerge in water or other liquid.
5. Do not reach for unit that has fallen into water. Unplug it immediately.
6. Care should be taken so that objects do not fall and liquids are not spilled onto the unit.
7. Never use pins or other metallic fasteners with this appliance.
8. Carefully examine the covering before each use. Discard the appliance if there are any signs of deterioration such as cracking or blistering.
9. Keep dry—do not operate in a wet or moist environment.

Brookstone®

A WORLD OF INNOVATION

Since 1965, people have come to Brookstone to see what's new, discover smart solutions to everyday problems—and have some fun. At Brookstone, we believe there's always a better way to do things. And we created a world of innovation to prove it.

982024,982025,982026,082027

Merrimack, New Hampshire, USA 03054
800-846-3000 • Brookstone.com


WARNING

1. Close supervision is necessary when this appliance/product is used by or near children or mentally disabled individuals.
2. An appliance should never be left unattended while plugged in. Unplug when not in use.
3. Use this unit only for its intended use as described in this manual.
4. Unplug this unit during lightning storms.
5. Never drop or insert an object into any opening.
6. Protect the power cord from being walked on or pinched, particularly at plug outlets, convenience receptacles and the point where it exits the unit.
7. Do not allow cord to touch hot surfaces. Wrap cord loosely around the unit when storing.
8. Do not operate under blanket or pillow. Excessive heating can occur and cause electric shock or injury to persons.
9. The unit should be situated away from direct sunlight or heat sources such as radiators, electric heaters, heat registers, stoves, or other units.

10. Never block the air openings of the unit with materials such as clothing, plastic bags or papers, or place it on a soft surface such as a bed, where the air openings may be blocked.
11. Do not overload electrical outlet. Use only the power source as indicated.
12. Do not carry this unit by cord or use cord as handle. Do not crush—avoid sharp folds.
13. Never operate this unit if it has a damaged cord or plug, if it is not working properly, or if it has been dropped or damaged, or dropped into water. If the unit's power supply cord or plug is damaged, do not attempt to fix it yourself.
14. To avoid the risk of electric shock, do not disassemble or attempt to repair the unit. Incorrect repair can cause risk of electric shock or injury to persons when unit is used.
15. Do not use this unit outdoors.
16. Do not operate in the presence of explosive and/or flammable fumes.
17. Never remove the plug from the socket by pulling the power cord.
18. To disconnect, ensure all controls are off and remove the plug from the electrical outlet.

LOCATION OF CONTROLS

1. Power Button (Not Shown)
(On/Heat/Off)
2. Shiatsu Massage Nodes (4)
3. Power Jack
4. Power Adapter

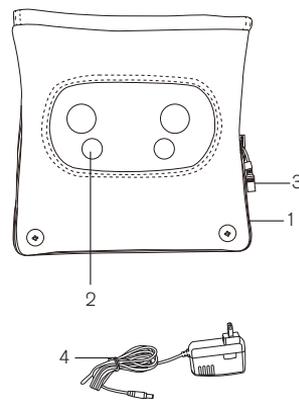

MASSAGER OPERATION

1. Plug the POWER ADAPTER into the POWER JACK.
2. Plug the POWER ADAPTER into an electrical outlet.
3. Place the massager upright against the back of a chair.
4. Press the Power Button once to turn the massager on.
5. Press the Power Button twice to turn the massager with heat on.
6. Press the Power Button a third time to turn the massage off.

Note: The unit shuts off automatically after 20 minutes.

CARE AND MAINTENANCE

1. Allow unit to cool before cleaning. Wipe with a soft cloth. Do not use abrasive cleaning agents. Do not submerge unit in any liquid.
2. Store in a cool, dry environment when not in use. Avoid contact with sharp edges or pointed objects that could cut or puncture unit.

SPECIFICATIONS

Power Supply. AC 120V 60Hz
Output. DC 12V 24W

ONE (1) YEAR LIMITED WARRANTY

Brookstone® warrants this product against defects in materials and/or workmanship under normal use for a period of ONE (1) YEAR from the date of purchase by the original purchaser ("Warranty Period"). If a defect arises and a valid claim is received within the Warranty Period, at its option, Brookstone will either 1) repair the defect at no charge, using new or refurbished replacement parts, or 2) replace the product with a new product that is at least functionally equivalent to the original product. A replacement product or part, including a user-installable part installed in accordance with instructions provided by Brookstone, assumes the remaining warranty of the original product. When a product or part is exchanged, any replacement item becomes your property and the replaced item becomes Brookstone's property. When a store credit is given, the original product must be returned to Brookstone and becomes Brookstone's property.

Obtaining Service: To obtain warranty service, call Brookstone Limited Warranty Service at 1-800-292-9819. Please be prepared to describe the product that needs service and the nature of the problem. A purchase receipt is required. All repairs and replacements must be authorized in advance. Service options, parts availability and response times will vary. You are responsible for delivery and the cost of delivery of the product or any parts to the authorized service center for replacement, per our instructions.

Limits and Exclusions: Coverage under this Limited Warranty is limited to the United States of America, including the District of Columbia and the U.S. Territories of Guam, Puerto Rico, and the U.S. Virgin Islands. This Limited Warranty applies only to products manufactured for Brookstone that can be identified by the "Brookstone" trademark, trade name, or logo affixed to them or their packaging. The Limited Warranty does not apply to any non-Brookstone products. Manufacturers or suppliers other than Brookstone may provide their own

warranties to the purchaser, but Brookstone, in so far as permitted by law, provides these products "as is." This warranty does not apply to: a) damage caused by failure to follow instructions relating to product's use or the installation of components; b) damage caused by accident, abuse, misuse, fire, floods, earthquake or other external causes; c) damage caused by service performed by anyone who is not a representative of Brookstone; d) accessories used in conjunction with a covered product; e) a product or part that has been modified to alter functionality or capability; f) items intended to be periodically replaced by the purchaser during the normal life of the product including, without limitation, batteries or light bulbs; g) any product sold "as is" including, without limitation, floor demonstration models and refurbished items; or h) a product that is used commercially or for a commercial purpose.

BROOKSTONE SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT, OR ARISING OUT OF ANY BREACH OF THIS WARRANTY. TO THE EXTENT PERMITTED BY APPLICABLE LAW, BROOKSTONE DISCLAIMS ANY AND ALL STATUTORY OR IMPLIED WARRANTIES, INCLUDING, WITHOUT LIMITATION, WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND WARRANTIES AGAINST HIDDEN OR LATENT DEFECTS. IF BROOKSTONE CANNOT LAWFULLY DISCLAIM STATUTORY OR IMPLIED WARRANTIES, THEN TO THE EXTENT PERMITTED BY LAW, ALL SUCH WARRANTIES SHALL BE LIMITED IN DURATION TO THE DURATION OF THIS EXPRESS WARRANTY.

Some states disallow the exclusion or limitation of incidental or consequential damages or how long an implied warranty lasts, so the above exclusions or limitations may not apply to you. This warranty gives you specific legal rights and you may also have other rights, which vary from state to state.