

INSIGNIA™

USER GUIDE

DVD Player

NS-HDVD18



Before using your new product, please read these instructions to prevent any damage.

Contents

Important Safety Instructions.....	2
Features	4
Package contents	4
DVD player	4
Setting up your DVD player.....	6
Connecting to AC power	6
Connecting the DVD player	6
Using your DVD player	8
Powering your DVD player	8
Playing a DVD or audio CD	8
Controlling DVD or audio CD playback.....	9
Adjusting the volume	9
Programming your DVD player	9
Using the Setup menus	9
Troubleshooting	12
Maintaining.....	12
Cleaning your DVD player	12
Handling discs	12
Cleaning discs	13
Specifications	13
Legal notices.....	13
ONE-YEAR LIMITED WARRANTY.....	15

Important Safety Instructions



This symbol indicates that dangerous voltage constituting a risk of electric shock is present within your DVD player.



This symbol indicates that there are important operating and maintenance instructions in the literature accompanying your DVD player.

This unit contains a low-power laser device. There is no danger of hazardous radiation outside this unit.



Double insulation.

This is a class II apparatus.

- 1 Read these instructions.
- 2 Keep these instructions.
- 3 Heed all warnings.
- 4 Follow all instructions.
- 5 Do not use this apparatus near water.
- 6 Clean only with a dry cloth.
- 7 Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 8 Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9 Do not defeat the safety purpose of the polarized or grounding-type plug. The wide blade is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10 Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11 Only use attachments/accessories specified by the manufacturer.
- 12 Unplug this apparatus during lightning storms or when unused for long periods of time.
- 13 Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as when the power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- 14 To reduce the risk of fire or electric shock, do not expose this device to rain, moisture, dripping, or splashing, and do not place objects filled with liquids, such as vases, on it.


Features

Package contents


- DVD player
- Remote control (includes two AAA batteries)
- AV cable (to connect to a TV)
- *Quick Setup Guide*

DVD player


Front view

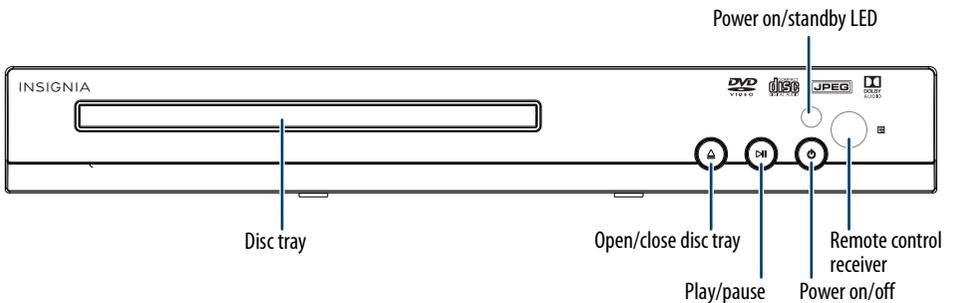

Back view

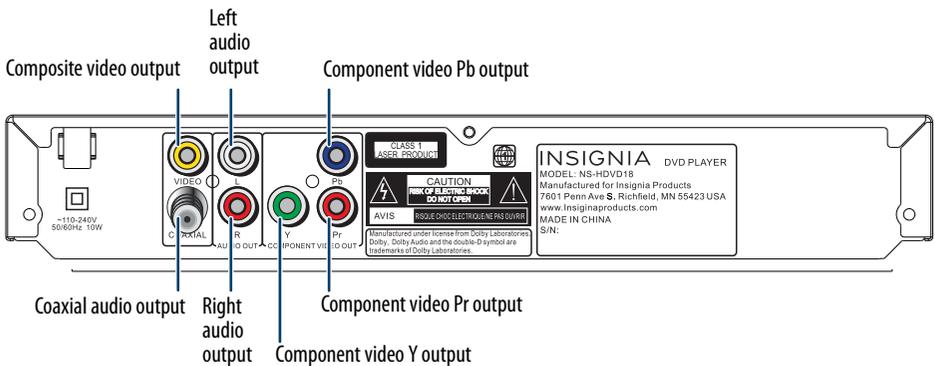

Remote control

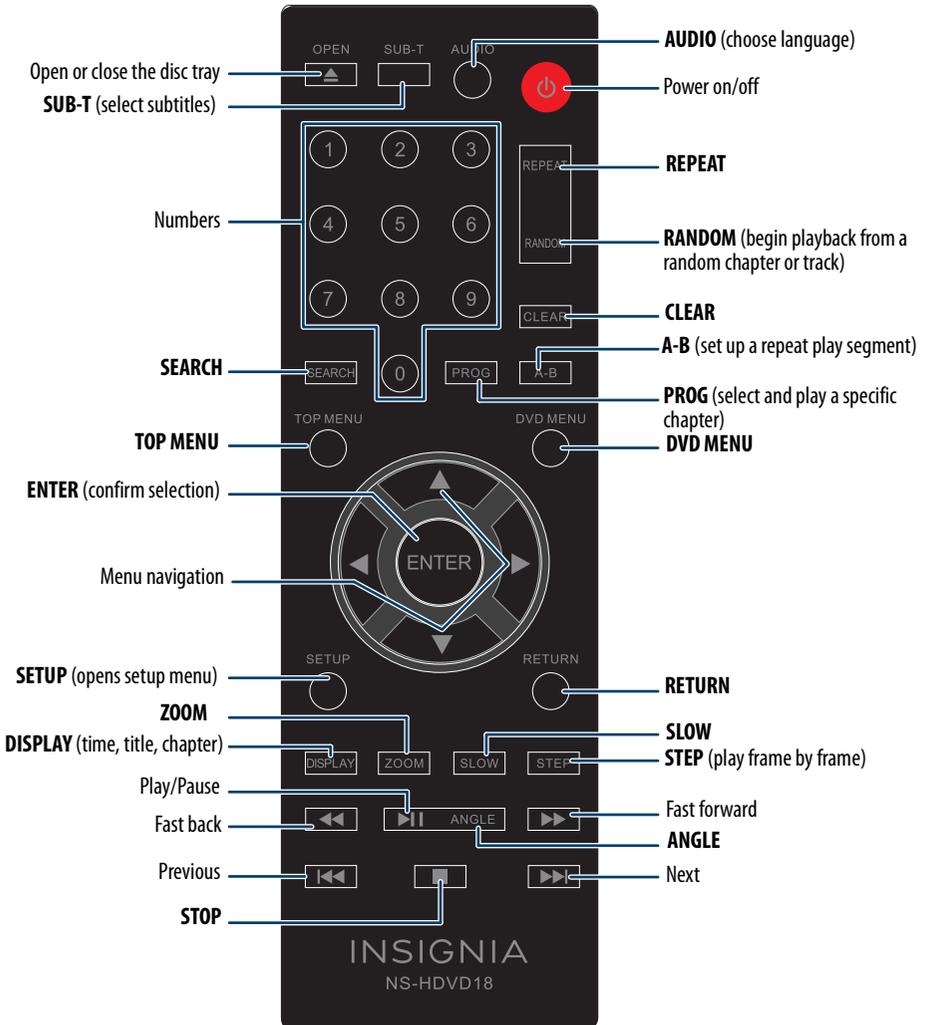

Setting up your DVD player

Connecting to AC power

- Plug the AC power cord into an AC wall outlet.

Connecting the DVD player


You can connect your DVD player to a TV or monitor so you can watch DVDs and to a stereo or home theater system for enhanced audio.

Component video (best)

- 1 Plug the green, blue, and red connectors from an RCA cable (not included) into the **COMPONENT VIDEO OUT** connectors (Y, Pb, and Pr) on the back of your DVD player. Make sure that the colors on the connectors match the jacks.
- 2 Plug the red, green, and blue connectors on the other end of the RCA cable into the component video in jacks on your TV or monitor, making sure to match the colors on the connectors with the jacks.

Note

You may have to select the correct input on your TV or monitor.

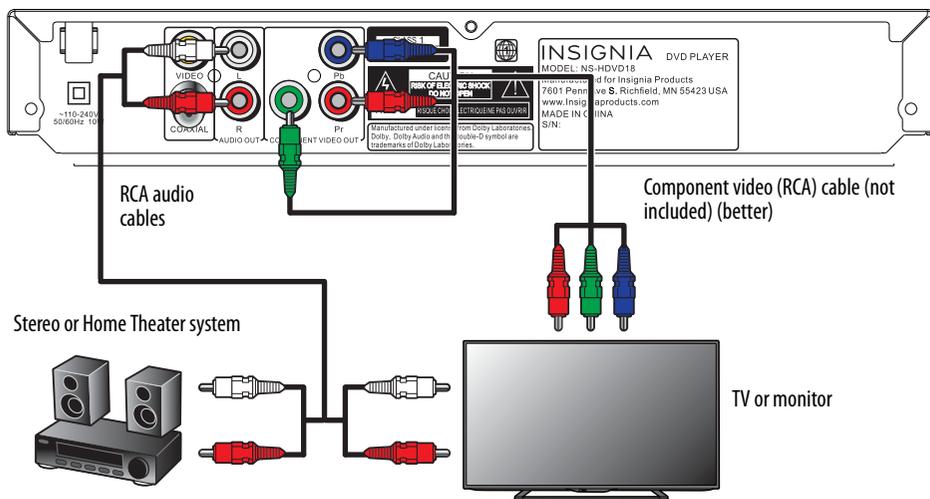


- 3 Connect the white (Left) and red (Right) connectors from an RCA audio cable to the **L** and **R AUDIO OUT** jacks on your DVD player.
- 4 Connect the white (Left) and red (Right) connectors from the other end of the RCA audio cable to the white (Left) and red (Right) audio in connectors on your TV, monitor, stereo, or home theater system.

Coaxial video and audio (good)

- Connect a coaxial cable from the back of your DVD player to the coaxial (antenna) jack on your TV or monitor.

Note

You may have to select the correct input on your TV or monitor.

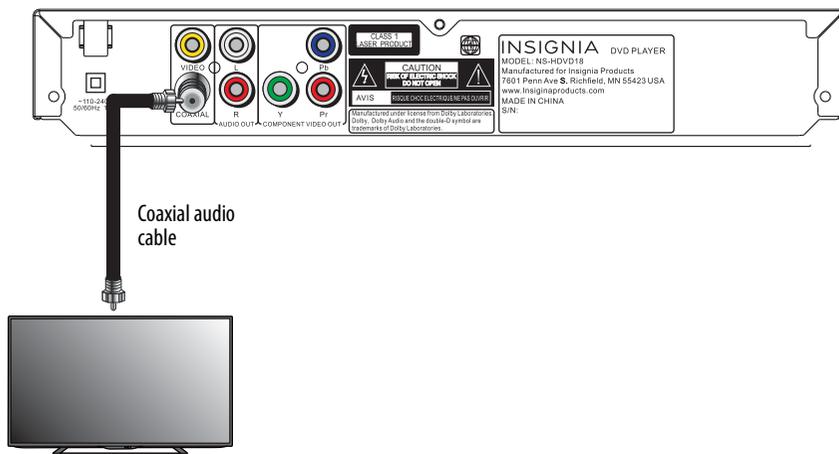

Using your DVD player

Powering your DVD player

- 1 Make sure that your DVD player is connected to power.
- 2 Push the  (power) switch on the front of your DVD player, or on the remote control, to turn it on. The start-up picture (DVD VIDEO) appears on the screen.
- 3 Push the  (power) switch on the front of your DVD player, or on the remote control, to turn it off.

Playing a DVD or audio CD

Note

Most DVDs and your DVD player have region codes that help control illegal distribution of DVDs. The region code for your DVD player is **1**. You can only play DVDs with a region code of **1**. The region code for a DVD is printed on the DVD or the DVD packaging.

- 1 Push the  (open/close) button on the front of your DVD player, or on the remote control, to open the disc tray.
- 2 Place a disc, label side up, in the disc tray, then close the tray. The disc starts playing automatically.

Controlling DVD or audio CD playback

- Press **■ (STOP)** once to stop playback. Your DVD player remembers where you stopped. If you press **▶II**, your DVD player starts playing at the point where you stopped.
- Press **■ (STOP)** twice to stop playback. If you press **▶II**, your DVD player starts playing at the beginning of the disc.
- Press **▶II** to pause playback. Press this button again to resume playback.
- Press **▶▶** to fast-forward the disc. Each time you press this button, the fast-forward speed changes from 2 to 4 to 8 to 20 times the normal speed.
- Press **◀◀** to fast-reverse the disc. Each time you press this button, the fast-reverse speed changes from 2 to 4 to 8 to 20 times the normal speed.
- Press **▶▶ (NEXT)** to go to the next title, chapter, or track.
- Press **◀◀ (PREV)** to go to the previous title, chapter, or track.

Adjusting the volume

- Adjust the volume of playback by turning it up or down on your TV, stereo system, or home theater.

Programming your DVD player

- 1 Insert a disc into the DVD player.
- 2 Press the PROG button on the remote control.
- 3 Select the chapter number you want to play, from the list on the screen.
- 4 Press **▶II** to begin playback.

Using the Setup menus

Your DVD player has a Setup menu you can use to adjust settings.

- 1 Press **SETUP** on the remote control. The *Setup Menu* opens on your TV or monitor.



- 2 Press **▲** or **▼** to highlight an option, then press **ENTER** to select that option.
- 3 Press **◀** or **▶** to change the setting for that option, then press **OK** to confirm your selection.
- 4 Repeat Step 2 through Step 3 to change other menu options.
- 5 Press **SETUP** to exit.

Setup menu options

Option	Menu and sub-options
General Setup	 <p>TV Type—Selects the aspect ratio. You can select:</p> <ul style="list-style-type: none"> • 4:3/PS—Select this option when the DVD player is connected to a normal TV (4:3 aspect ratio). Wide-screen images are shown on the screen, but with some parts cropped automatically. • 4:3/LB—Select this when the DVD player is connected to a normal TV (4:3 aspect ratio). Wide-screen images are shown on the screen with a black band on the top and bottom. • 16:9—Displays the video image full-screen when your DVD player is connected to a widescreen TV (16:9 aspect ratio). <p>P-SCAN—Turns progressive scan On or Off. The progressive scan feature adjusts the TV screen resolution to provide a smoother, more theaterlike image.</p> <p>Screen Saver—When this option is turned on, your DVD player displays a screen saver when the same image stays on the screen for five minutes.</p> <p>PASSWORD—Lets you set the parental control password. The default password is 0000. You should change the password to a number you can remember.</p> <p>Parental—Blocks DVD playback based on ratings. Select this option to set the parental control level. Options include: KID SAFE, G, PG, PG 13, PGR, R, Nc17, and ADULT. The default is ADULT. Enter the password 0000.</p> <p>Memory—When this option is turned on and you open the disc tray, your DVD player remembers where you stopped. If you close the tray with the same disc loaded, your DVD player starts playing at the point where you stopped.</p> <p>Reset—Reset all settings except the password and parental controls back to the factory default.</p>

Option	Menu and sub-options
Language Setup	 <p>OSD Language—Selects the language for the <i>Setup</i> menu. You can select English, French, or Spanish.</p> <p>Audio—Selects the audio language. If the language you select is not recorded on the DVD, your DVD player plays the default audio language.</p> <p>Subtitle—Select the subtitle language. If the language you select is not recorded on the DVD, your DVD player displays the default subtitle language.</p> <p>Disc Menu—Selects the DVD menu language. If the language you select is not recorded on the DVD, your DVD player displays the default language.</p> <p>TTS—Select to turn text-to-speech function on or off.</p>
Audio Setup	 <p>Digital Out—Selects the audio output mode. You can select:</p> <ul style="list-style-type: none"> • BITSTREAM—Outputs the movie soundtrack without any processing. This option requires a receiver or TV that supports the movie soundtrack format. • PCM—Outputs the signal as processed audio ready for any receiver. Use this when your receiver or TV cannot decode the movie soundtrack on the disc. <p>Dynamic Range—Turns Dynamic Range on or off. When the dynamic range feature is turned Off, movie soundtracks are played with the standard dynamic range.</p>

Troubleshooting

Problem	Solution
No sound or distorted sound.	<ul style="list-style-type: none"> Adjust the volume. Make sure that the sound is not muted. Make sure that all cables are inserted correctly into the appropriate jacks.
Disc does not play.	<ul style="list-style-type: none"> Make sure that the disc is inserted with the label side up. Make sure that the disc is compatible with your DVD player. Your DVD player can play region code 1 DVDs and audio CDs. Blu-ray and 3D discs will not play. Make sure that the correct input is selected on your TV or monitor.
Play starts, then stops immediately.	<ul style="list-style-type: none"> Make sure that the region code for a DVD matches the region code for your DVD player. Your DVD player's region code is 1. The DVD's region code is on the DVD or the DVD packaging. Make sure that the disc is not dirty. If condensation has formed inside your DVD player, let your DVD player dry out.
Cannot fast-forward or fast-reverse through a movie.	<ul style="list-style-type: none"> You cannot fast-forward through opening credits and warning information at the beginning of a movie. Some DVDs do not allow rapid scanning or skipping of titles or chapters.
"Invalid Key" appears on the screen.	<p>The action you tried cannot be done because:</p> <ul style="list-style-type: none"> The DVD software does not allow it. The DVD does not support the feature (for example the Subtitle feature). The feature is not available at the current point on the DVD. You entered a title or chapter number that is out of range.
Picture is distorted.	<ul style="list-style-type: none"> During fast-forwarding or fast-reversing, distortion is normal. The DVD may be damaged. Try another DVD.

Maintaining

Cleaning your DVD player

Clean the outside of your DVD player with a clean cloth, slightly dampened with water.

Caution

Do not use liquid cleaners or aerosol cleaners because they may damage your DVD player.

Handling discs

- Do not touch the surface of a disc. Handle a disc by its edge.
- Do not attach paper or tape to the disc.



- Do not use irregularly shaped discs, such as heart-shaped or star-shaped discs, because they may cause your DVD player to malfunction.
- Do not expose a disc to direct sunlight or heat sources.
- Remove a disc from your DVD player and store it in its case after playing.
- Some playback operations of discs may be intentionally limited by software producers, which might cause some playback features to be unavailable. Also refer to the instructions supplied with the discs.

Cleaning discs

- Before playback, wipe the disc outwards from the center with a clean cloth.



Specifications

Specifications are subject to change without notice.

Compatible discs	Compatible discs: CD Digital Audio 12cm, CD-R, CD-RW, DVD-Video 12cm, DVD-R, DVD+R, DVD+RW, DVD-R DL Dual Layer, DVD+R Dual Layer Does not support: Blu-ray, 3D
Signal system	NTSC
Video output	Electrical output: 1.0±0.2V; Resistance: 75 ohms Unbalanced negative
Audio S/N	Equal to or better than 80 dB
Dynamic range	Equal to or better than 80 dB
Wave length	650 nm/795 nm
Power source	110-240 V ~ 50/60 Hz 10W
Weight	2.2 lbs. (1.0 kg)
Dimensions (W × H × D)	10.24 x 7.28 x 1.50 in. (260 x 185 x 38 mm)

Legal notices

FCC Part 15

This device complies with Part 15 of the FCC Rules. Operation of this product is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply within the limits for a class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment

generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC warning

Changes or modifications not expressly approved by the party responsible for compliance with the FCC Rules could void the user's authority to operate this equipment.

Canada ICES-003

This Class B digital apparatus complies with Canadian ICES-003. Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.



Dolby License Notice and Trademark Acknowledgement

Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories.

ONE-YEAR LIMITED WARRANTY

Definitions:

The Distributor* of Insignia branded products warrants to you, the original purchaser of this new Insignia-branded product ("Product"), that the Product shall be free of defects in the original manufacturer of the material or workmanship for a period of one (1) year from the date of your purchase of the Product ("Warranty Period").

For this warranty to apply, your Product must be purchased in the United States or Canada from a Best Buy branded retail store or online at www.bestbuy.com or www.bestbuy.ca, and is packaged with this warranty statement.

How long does the coverage last?

The Warranty Period lasts for 1 year (365 days) from the date you purchased the Product. Your purchase date is printed on the receipt you received with the Product.

What does this warranty cover?

During the Warranty Period, if the original manufacture of the material or workmanship of the Product is determined to be defective by an authorized Insignia repair center or store personnel, Insignia will (at its sole option): (1) repair the Product with new or rebuilt parts; or (2) replace the Product at no charge with new or rebuilt comparable products or parts. Products and parts replaced under this warranty become the property of Insignia and are not returned to you. If service of Products or parts are required after the Warranty Period expires, you must pay all labor and parts charges. This warranty lasts as long as you own your Insignia Product during the Warranty Period. Warranty coverage terminates if you sell or otherwise transfer the Product.

How to obtain warranty service?

If you purchased the Product at a Best Buy retail store location, please take your original receipt and the Product to any Best Buy store. Make sure that you place the Product in its original packaging or packaging that provides the same amount of protection as the original packaging. If you purchased the Product from a Best Buy online web site (www.bestbuy.com or www.bestbuy.ca), mail your original receipt and the Product to the address listed on the web site. Make sure that you put the Product in its original packaging or packaging that provides the same amount of protection as the original packaging.

To obtain warranty service, in the United States call 1-888-BESTBUY, Canada call 1-866-BESTBUY. Call agents may diagnose and correct the issue over the phone.

Where is the warranty valid?

This warranty is valid only in the United States and Canada at Best Buy branded retail stores or websites to the original purchaser of the product in the county where the original purchase was made.

What does the warranty not cover?

This warranty does not cover:

- Food loss/spoilage due to failure of refrigerator or freezer
- Customer instruction/education
- Installation
- Set up adjustments
- Cosmetic damage
- Damage due to weather, lightning, and other acts of God, such as power surges
- Accidental damage
- Misuse
- Abuse

- Negligence
- Commercial purposes/use, including but not limited to use in a place of business or in communal areas of a multiple dwelling condominium or apartment complex, or otherwise used in a place of other than a private home.
- Modification of any part of the Product, including the antenna
- Display panel damaged by static (non-moving) images applied for lengthy periods (burn-in).
- Damage due to incorrect operation or maintenance
- Connection to an incorrect voltage or power supply
- Attempted repair by any person not authorized by Insignia to service the Product
- Products sold “as is” or “with all faults”
- Consumables, including but not limited to batteries (i.e. AA, AAA, C etc.)
- Products where the factory applied serial number has been altered or removed
- Loss or Theft of this product or any part of the product
- Display panels containing up to three (3) pixel failures (dots that are dark or incorrectly illuminated) grouped in an area smaller than one tenth (1/10) of the display size or up to five (5) pixel failures throughout the display. (Pixel based displays may contain a limited number of pixels that may not function normally.)
- Failures or Damage caused by any contact including but not limited to liquids, gels or pastes.

REPAIR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS YOUR EXCLUSIVE REMEDY FOR BREACH OF WARRANTY. INSIGNIA SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR THE BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT, INCLUDING, BUT NOT LIMITED TO, LOST DATA, LOSS OF USE OF YOUR PRODUCT, LOST BUSINESS OR LOST PROFITS. INSIGNIA PRODUCTS MAKES NO OTHER EXPRESS WARRANTIES WITH RESPECT TO THE PRODUCT, ALL EXPRESS AND IMPLIED WARRANTIES FOR THE PRODUCT, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF AND CONDITIONS OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE WARRANTY PERIOD SET FORTH ABOVE AND NO WARRANTIES, WHETHER EXPRESS OR IMPLIED, WILL APPLY AFTER THE WARRANTY PERIOD. SOME STATES, PROVINCES AND JURISDICTIONS DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS, WHICH VARY FROM STATE TO STATE OR PROVINCE TO PROVINCE.

Contact Insignia:

For customer service please call 1-877-467-4289

www.insigniaproducts.com

INSIGNIA is a trademark of Best Buy and its affiliated companies.

Distributed by Best Buy Purchasing, LLC

7601 Penn Ave South, Richfield, MN 55423 U.S.A.

©2017 Best Buy. All rights reserved.

Made in China

INSIGNIA™

www.insigniaproducts.com

1-877-467-4289 (U.S. and Canada) or 01-800-926-3000 (Mexico)

INSIGNIA is a trademark of Best Buy and its affiliated companies.

Distributed by Best Buy Purchasing, LLC

7601 Penn Ave South, Richfield, MN 55423 U.S.A.

©2017 Best Buy. All rights reserved.

Made in China.

V1 ENGLISH
17-0080