



Quick Assembly Guide

Elevation TLC55

Outdoor TV Lift Cabinet



Congratulations on your purchase of the Apollo Elevation TLC55 Outdoor TV Lift Cabinet!

With its innovative, mobile design, your new cabinet lets you enjoy TV from almost any outdoor location—whether at home, in a commercial venue, or in a hospitality setting. Apollo developed this outdoor TV lift cabinet to combine flexibility, durability, and style—delivering a truly engaging entertainment experience in any outdoor environment.

With optimized internal capacity, configurability, and flexibility, the Apollo environmental TV Lift cabinet is the ideal solution for protecting your TV for outdoor entertainment applications today and tomorrow, providing both quality and durability for years to come.

To ensure your personal safety and the optimum performance of your enclosure, please read this instruction manual thoroughly.

SAFETY INSTRUCTIONS

Important! Please read before beginning assembly.

- This cabinet is fully weatherproof and designed for outdoor use. Be sure the TV is down and the lid is closed when not in use.
- Only connect the included power cord to a grounded GFCI 120-volt outlet with outdoor rated “in-use” cover.
- Do not modify any electrical components.
- Disconnect the cabinet from power before servicing.
- Do not exceed the maximum TV size (55”) or weight limits.
- Inspect all cords for damage before use.
- Be sure TV is fully in down position when wheeling the cabinet.
- Cabinet is equipped with four (4) lockable wheels. Only two are required to be locked at one time. For locking instructions refer to 1.f on page #3

What's Included

- Fully Assembled TV Lift Cabinet
- (2) Caster wheel bracket assemblies with hardware and wire ties
- TV mounting brackets with hardware
- Wireless Remote control for lift

Tools Required:

- Tape measure or ruler
- 7/16" box, ratchet or adjustable wrench
- Phillips head screwdriver

Product Warranty:

1 Year from the date of purchase. Product will be repaired in-factory or parts exchanged basis. Customer is responsible for all freight charges. For inclusions and exclusions, please refer to full Warranty statement at www.apolloenc.com/faq

ASSEMBLY INSTRUCTIONS

1. Attaching the Wheel Bracket- Note: Leave cardboard and plastic underneath the cabinet while performing this step.

- a. Manually open the top cabinet lid and remove the accessory box.
- b. Remove the wheel bracket assemblies, remote control, TV mount brackets and all hardware from the box.
- c. Close the box and place the empty box under the cabinet as support while installing the wheel assemblies. **Be sure to orient the box as shown**





- d. From underneath the unit, orient the wheel assembly bracket to line up with the pem inserts and finger-tighten four (4) 14-20 hex head screws with washers.
- e. Use 7/16" box, ratchet, or adjustable wrench to securely tighten the screws.
- f. Lock one of the wheels, ensuring the wheel faces forward and press down on the lever



- g. Move the box to the opposite end of the cabinet and repeat the process for the second wheel bracket.

2. Installing the TV


- a. The cabinet accommodates TVs up to **55"** (maximum depth: 3.5").
- b. Lay your TV face down on a clean, protective surface.
- c. Align the brackets with the TV's VESA holes so the **top of each bracket is approximately 3" from the top edge of the TV**. Using the appropriate metric screws for your TV, attach the vertical TV mounting brackets to the back of the TV.

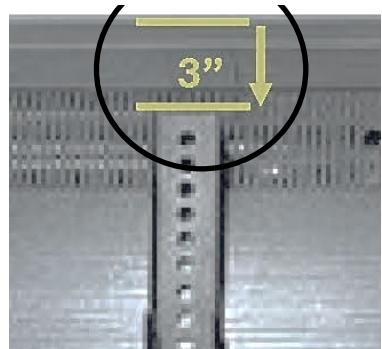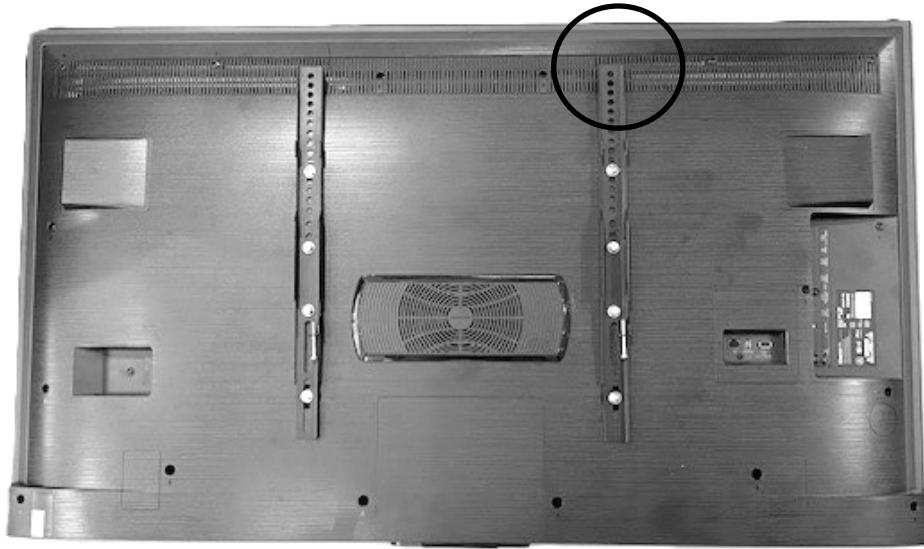

IMPORTANT!

Brackets need to be installed as shown (3" from the top of the TV) to keep the TV from hitting the bottom of the cabinet or the top lid when stowed in the down position.


- d. Plug the cabinet's power cord into a 120-volt outlet. The lift mechanism is now ready for use.
- e. Use the handheld remote and press the **UP** arrow to automatically raise the lift mechanism to its full height.
NOTE: The top lid will open and close automatically during the lift operation.
- f. With assistance, hang the TV on the lift mechanism mounting plate.
 - i. To vertically center the TV, align the brackets with the black bar label markings on the back mount plate. **(A)** Before engaging the bottom hook.
 - ii. Ensure both top and bottom hooks are properly engaged.
- g. Use a Philips screwdriver to tighten the two (2) screws to the mounting plate. **(B)**

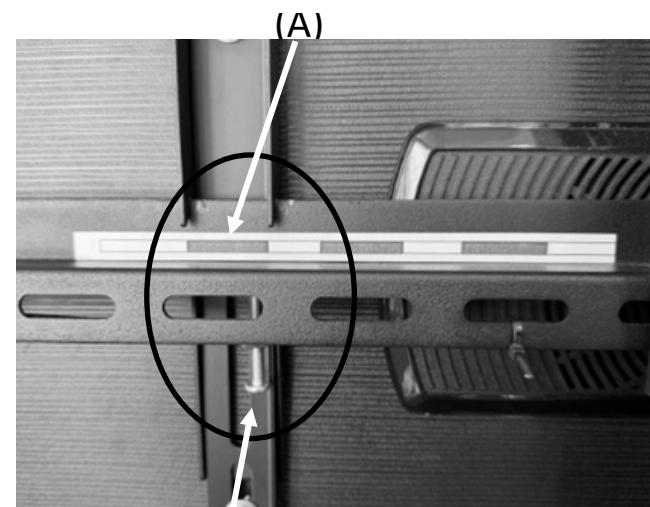


- h. Before lowering the TV, double-check that it is centered left to right and will not contact the cabinet sides on the way down.

3. TV Power Cord Cable Management

- a. With the lift in full UP position, plug the TV power cord into the cabinet's built-in 3-outlet power receptacle. **(A)**
- b. Leaving 1" to 2" of slack, wire tie cord to the rear of the TV mount as shown **(B)**
- c. Use the provided wire ties to neatly secure and manage all cables to the rear of the mounting plate, ensuring nothing interferes with the lift mechanism.

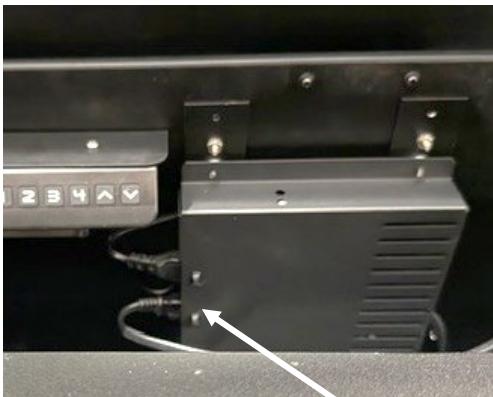

TV POWER CORD (A)

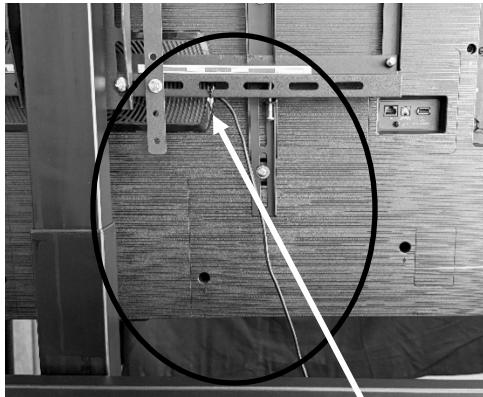

**CABINET BACK VIEW (B)
WIRE TIE 4th SLOT FROM
RIGHT EDGE**



CABINET FRONT VIEW (B)
LEATHER FRONT VIEW (B)
LEATHER BACK POWER
CORD SLACK



4. Operating the Lift Mechanism

a. Wireless Remote Control

- i. To **raise** the TV, press and release the **UP** arrow button. Once the TV reaches the desired height, press the center **STOP** button to halt movement.
- ii. To **lower** the TV into the cabinet, press and release the **DOWN** arrow button on the remote. The TV will stop automatically at the bottom.
- iii. Use the remote-control holder located inside the cabinet to store the wireless remote when not in use.

b. Programming Internal Control Pad

- i. The internal control pad is available to use if the wireless remote is lost or damaged.
- ii. To program the **UP** position, press and hold the **UP** arrow until the TV is at the desired height. **Press the “M” button, then the #1 button to save the UP position.**
- iii. To program the **DOWN** position, press and hold the **DOWN** arrow until the TV is all the way down. **Press the “M” button, then the #2 button to save the DOWN position.**
- iv. Once programmed, to raise the TV, press #1 **TWICE** and release.
- v. To lower the TV, press #2 **TWICE** and release.

NOTE: The UP stop position is only memorized by the internal control and not when using the wireless remote.



Care and Maintenance of the TV Lift Cabinet

Basic Cleaning of Enclosure Housing –

- With a soft soapy cloth and warm water, wipe dirt, dust, bird droppings, etc. from housing; rinsing the cloth frequently to avoid scratching powder-coated aluminum from dirt and grit. **Avoid using harsh chemicals, abrasives, or solvents when cleaning the housing surface.**
- **For Snow and Ice** - Use a soft brush to remove snow and ice from the enclosure.

Frequently Asked Questions (FAQs)

1) What size TV can I use?

TVs up to 55" diagonal with a maximum depth of 3.5" will fit the cabinet perfectly

2) Can this cabinet stay outdoors?

Yes, The Cabinet is fully weatherproof. Do not submerge or allow water inside the power compartment. Be sure the TV is stowed, and the lid is fully closed when not in use for weatherproof protection.

3) What type of outlet should the cabinet be plugged into?

This cabinet is equipped with an 8' outdoor rated power cord with a 3-prong grounded plug. This is a safety feature, and this plug should be plugged into a GFCI receptacle with an outdoor-rated "in use" cover. If an extension cord is used, be sure it is rated for outdoor use.

4) How do I reset the lift?

Unplug the cabinet for 30 seconds, then reconnect.

5) The wireless remote isn't working. What should I do?

Check the batteries, confirm the cabinet is plugged in, and ensure you are within range. If the wireless remote is still inoperable, you can use the internal control pad. If the wireless remote control needs to be replaced, please contact Apollo Enclosures customer service at support@apolloenc.com for assistance.

Troubleshooting:

For Troubleshooting tips, please visit Apollo Enclosures <https://www.apolloenc.com/faq>

Customer Service Contacts:

It is our goal to provide a safe, practical, and fulfilling outdoor TV viewing experience with the use of the Apollo Elevation TLC55 outdoor TV lift cabinet.

For questions regarding the quick assembly of this TV lift cabinet, please contact Apollo by any of the following options:

Toll Free: 1-888-414-5919

Email: support@apolloenc.com

Website: www.apolloenc.com

Please complete the following information for future reference

Model No: _____ Serial No: _____

Date of Purchase: _____

Purchased from: _____

The model number and serial number are located on the silver label in the top back right of the cabinet. Retain this Quick Assembly Guide with your sales receipt as a permanent record of your purchase in the event of warranty service