

INSIGNIA™

QUICK SETUP GUIDE

43" FHD 1080p LED TV


NS-43N101NA24

ACCESSORIES


Remote and two AAA batteries



TV stands

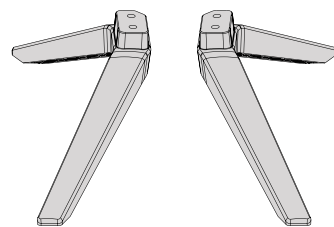

M4 screws (12 mm length) (4 pcs.)

 

STOP


Before using your new product, read these instructions to prevent any damage. Do not plug your power cord in until all other devices have been connected.

1 INSTALLING THE STANDS OR A WALL MOUNT

Place your TV face-down on a cushioned, clean surface.

STANDS

- 1 Align the TV stand screw holes with the holes on your TV's bottom.
- 2 Use a Phillips screwdriver and two provided screws to secure each stand to your TV.

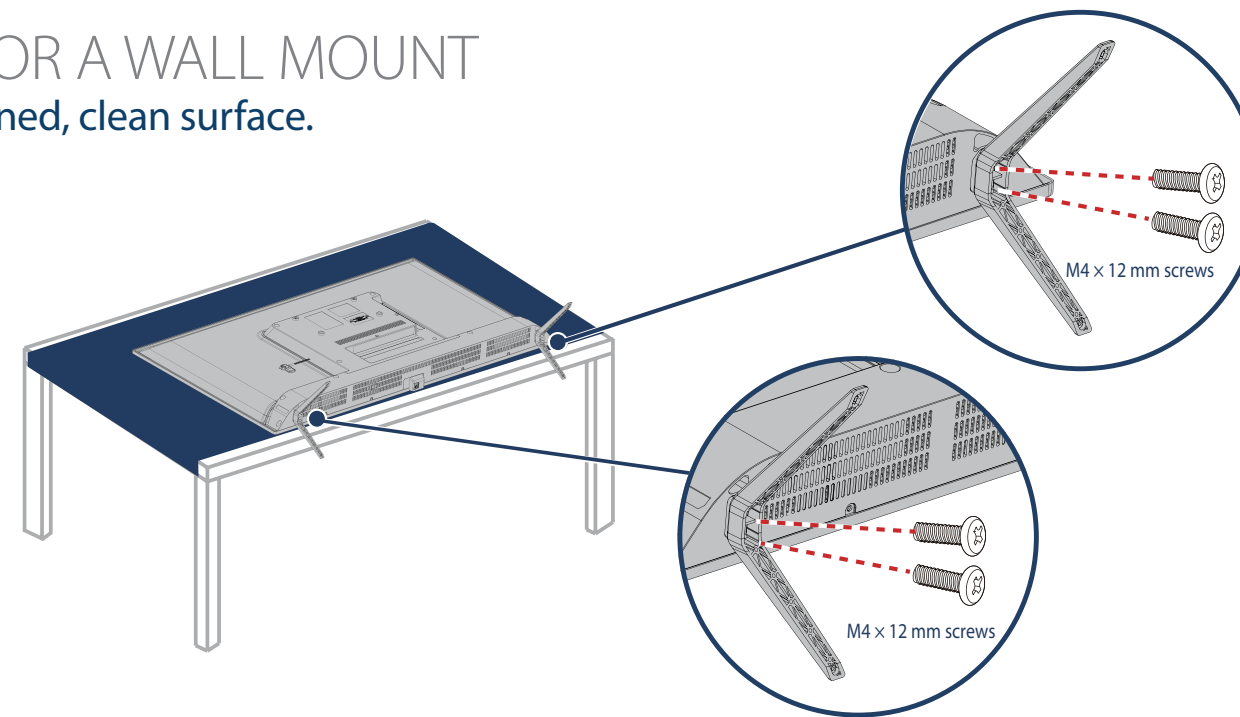

OR

WALL MOUNT


Before you mount your TV, make sure that:

- You remove the stands.
- The wall-mount bracket supports the weight of your TV.

See the instructions that came with your wall mount for more information about how to correctly mount your TV.

WARNING: Your TV has four VESA mounting holes on the back. **You must secure a wall-mount bracket to all four holes.** If you do not use all four holes, your TV may fall and cause property damage or personal injury.

Note: Wall-mount screws are not included.



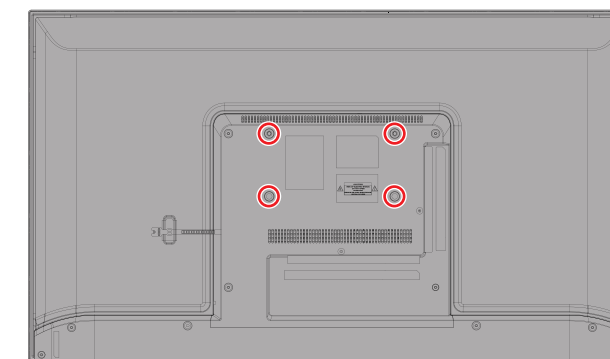


VESA Mounting Pattern


200 x 100 mm

Screws: type M6 10 mm to 12 mm length depending on the wall mount

FEATURES

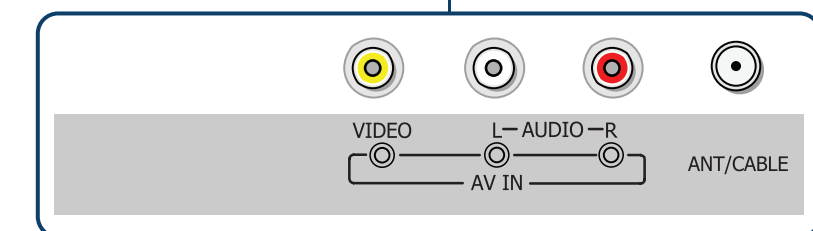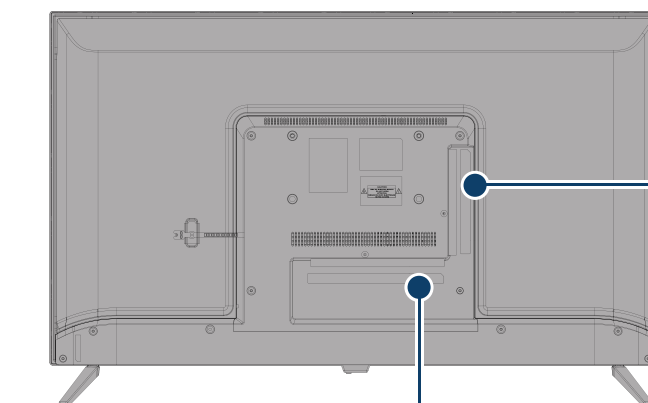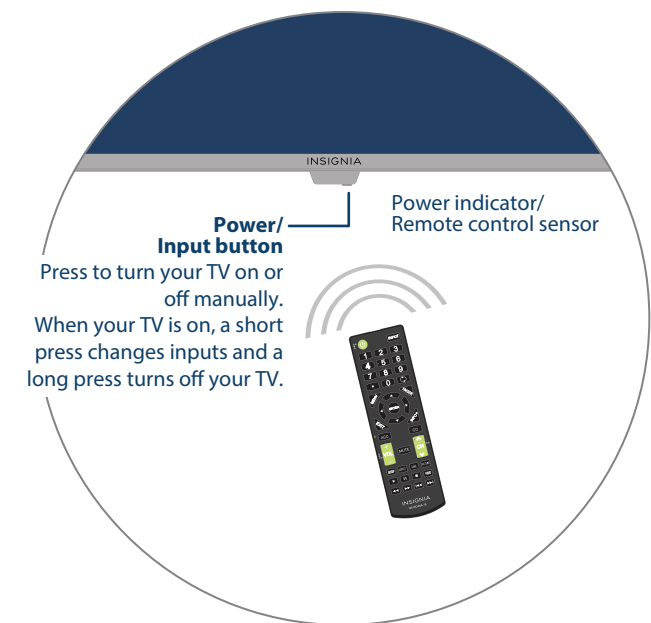


Note: Images do not necessarily represent the exact design of your television.

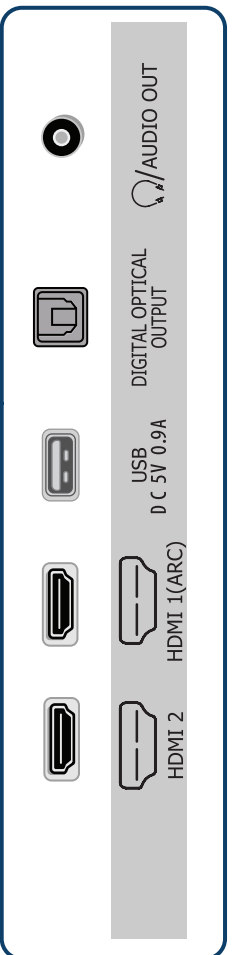


2 MAKING CONNECTIONS

 HDMI (best video quality)





Note: You can use the **HDMI 1 (ARC)** jack to connect a digital audio system.


AV (good video quality)

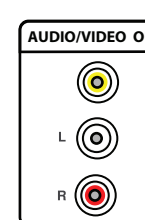


Coaxial (good video quality)

 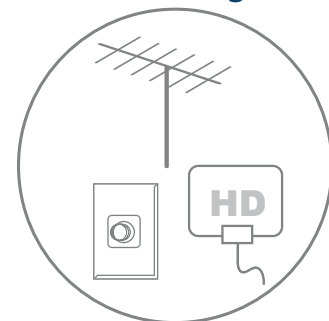

Connect an antenna to access live over-the-air TV.


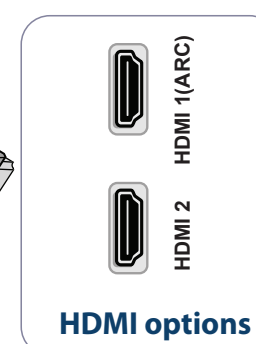


HDMI options

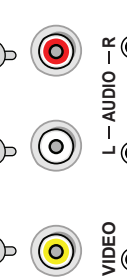



AUDIO OPTIONS

DIGITAL

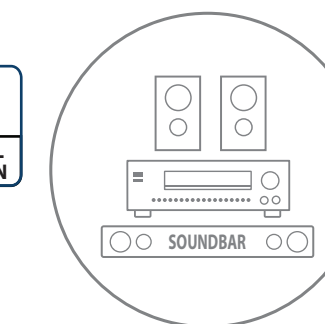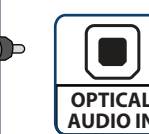


You can use the **DIGITAL OPTICAL OUTPUT** jack or the **HDMI 1 (ARC)** jack. **Note:** To change the digital audio format, on your TV's Audio menu, select **Audio Format/Audio Delay**, then set **Audio Format** to **PCM**.

ANALOG

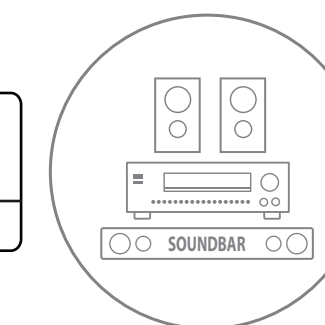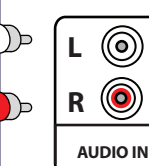


3 TURNING ON YOUR TV

1 Plug the power cord into a power outlet.

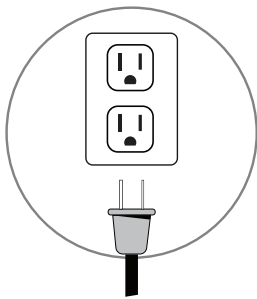

2 Remove the remote control cover and install the batteries.

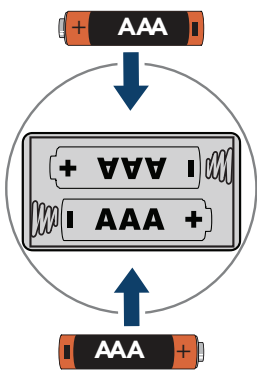

3 Press  on your remote.

4 Follow the on-screen instructions.



REMOTE



FIND YOUR USER GUIDE ONLINE

- 1 Go to www.insigniaproducts.com.
- 2 Use the search bar to find **NS-43N101NA24**.
- 3 Select **Support & Downloads**.
- 4 Next to *User Guide*, select the language you want.

I already have a universal remote control. How do I make it control this TV?

If you already have a universal remote control that you would like to program to work with your TV and don't want to use the included Insignia remote control, see the table below for common codes.

UNIVERSAL REMOTE CONTROL CODES	
AT&T U-verse	1034, 1035, 1040, 1398, 1465, 1596, 1437, 1507, 12049, 11641, 11564, 11326, 11423, 11892, 11517, 10171, 10463, 11385, 11660, 11963, 12184, 13227
Cablevision	068, 069, 078, 096, 100, 164, 168, 229, 026
Charter	2002, 1204, 1423, 1517, 0171, 1963, 0463, 1463, 0842, 1326, 167, 415, 424, 450, 456, 461, 507, 523, 567, 577, 586
Comcast	10463, 10171, 11204, 11326, 11463, 11517, 11641, 11780, 11785, 11892, 11963, 12002, 01877, 00276, 01982, 01376, 00810, 01187, 01106, 00877, 00476
Cox	1326, 1463
DirecTV	10463, 10171, 11204, 11326, 11517, 11564, 11641, 11963, 12002, 11463, 12049
Dish Network	834, 720, 222, 898, 365, 777, 754
RCA	135, 12049, 11423, 11564, 10171, 10463, 11810, 11892, 11963, 12184, 12417
Rogers	0463, 1326, 2049, 1785, 1780, 1423, 1963
Time Warner	400, 450, 461, 456, 10463, 1463, 0463
Verizon	0198, 0490

For an up-to-date list of codes for other cable providers and universal remote brands, visit www.insigniaproducts.com/remotecodes.

INSIGNIA™

ONE-YEAR LIMITED WARRANTY
Visit www.insigniaproducts.com for details.

NEED ADDITIONAL HELP?
Check out our **Support Community** at <http://community.insigniaproducts.com/> for helpful information from other Insignia TV owners.

WE'RE HERE FOR YOU
www.insigniaproducts.com
For customer service, call:
1-877-467-4289 (U.S./Canada)



For DTS patents, see <http://patents.dts.com>.
Manufactured under license from DTS, Inc. or DTS Licensing Limited. DTS, TruSurround, and the DTS logo are registered trademarks or trademarks of DTS, Inc. in the United States and other countries. © 2021 DTS, Inc. ALL RIGHTS RESERVED.



Products that have earned ENERGY STAR® are designed to protect the environment through superior energy efficiency. Your TV is ENERGY STAR® compliant. Changes to as-shipped TV configurations, certain features, settings, and functionalities of this TV (for example, picture and sound) may increase or change the power consumption. Depending on such changed settings, the power consumption may exceed the limits required for the ENERGY STAR qualification.

U.S. and Canada:
INSIGNIA is a trademark of Best Buy and its affiliated companies. Registered in some countries. Distributed by Best Buy Purchasing, LLC 7601 Penn Ave South, Richfield, MN 55423 U.S.A.

©2023 Best Buy. All rights reserved.