



Standard Film for New Polaroid i-Type Cameras

Every camera needs film to go with it. Our i-Type cameras have their own i-Type film, battery-free, unlike the standard film for vintage cameras (meaning it's easier on the wallet) and optimized for the Polaroid OneStep 2 camera.



8 Instant Photos

[1] Film speed may vary, allow for +/- 1/3 stops
[2] Do not freeze the film

Format

Image Area

Finish

HS or HTS code

PRD

EAN

Battery report (UN38.3)

Warranty info

Classic white frame

ASA 640^[1]

Photos develop in 5-10 mins

Best stored refrigerated^[2]

3.5" x 4.25" (8.8 cm x 10.8 cm)

3.1" x 3.1" (7.9 cm x 7.9 cm)

Glossy

37012000

004669

9120066087720

No Battery- no UN38.3

polaroidoriginals.com/warranty

8 Instant Photos

[1] Film speed may vary, allow for +/- 1/3 stops
[2] Do not freeze the film

Format

Image Area

Finish

HS or HTS code

PRD

EAN

Battery report (UN38.3)

Warranty info

Classic white frame

ASA 640^[1]

Photos develop in 10-15 mins

Best stored refrigerated^[2]

3.5" x 4.25" (8.8 cm x 10.8 cm)

3.1" x 3.1" (7.9 cm x 7.9 cm)

Glossy

37012000

004668

9120066087713

No Battery- no UN38.3

polaroidoriginals.com/warranty

Store chilled, shoot warm

Temperature affects how the film works. Keep it stored cold in the fridge, but never freeze it. Ideally you should let it adjust to room temperature before you use it. That's around 55-82°F (13-28°C). When it's cold out, keep your photos warm in a pocket close to your body while they develop. Or if it's a hot day, make sure they stay cool.

Shoot with the light

The more light in your shot, the better your photo will turn out. Instant film loves light, especially natural light. Use the flash for all your indoor photos. For best results we also recommend using the flash for outdoor shots, unless it's a bright sunny day.

Develop in the dark

All photos appear blank at first. They're most sensitive during this time, so don't bend or shake them. Shield them from the light, and place them face down as they develop. Keep B&W photos shielded from light for about 1 minute, and color film for about 6 minutes.

Care for your camera

Your camera has a set of rollers inside the film door. Each photo passes through these rollers as it's made, so it's important to make sure that they stay clean. If the rollers get visibly dirty then gently wipe them down with a soft, damp cloth.

For use with:



Polaroid i-Type



Impossible i-Type



Impossible Instant Lab

Does not work with:



Vintage Polaroid cameras

Have a problem, or a question you need answered?

USA/Canada
usa@polaroidoriginals.com
1-212-219-3254

Contact our Customer Support Team

EU/Rest of World
service@polaroidoriginals.com
00800 5770 1500

or visit polaroidoriginals.com/help

Polaroid, the Polaroid Classic Border Logo, Polaroid Originals Design and Polaroid OneStep are trademarks of PLR IP Holdings, LLC, used under license.