





READ THIS FIRST

ATTACHING THE SLIM FIT CASE:

- 1 Slide the 3DS XL® system bottom first into the BOTTOM piece of the Slim Fit Case and then snap the case onto the 3DS® XL system.

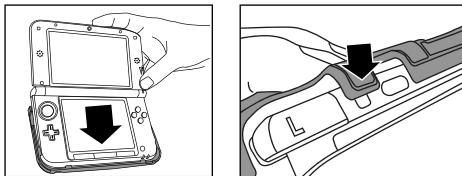

- 2 Slide the front of the TOP piece of the Slim Fit Case onto the top of the 3DS XL® system and then snap the case onto the 3DS XL® system.

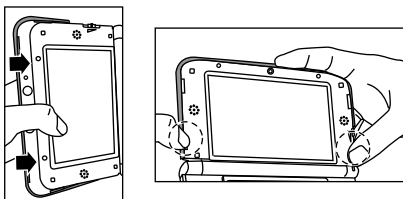


The charging cradle cannot be used to charge the Nintendo 3DS XL with the product attached. Please charge by plugging the DC plug of the AC adapter to the AC adapter connector of the Nintendo 3DS XL. Also, when charging the Nintendo 3DS XL with the DC plug of the AC adapter plugged into the AC adapter connector, please do not open the Nintendo 3DS XL to a full 180° as it may damage the system.


REMOVING THE SLIM FIT CASE:

CAUTION: Failure to follow these instructions could damage your 3DS XL system.




- 1 Firmly hold the 3DS XL system and pull the tab locks off.

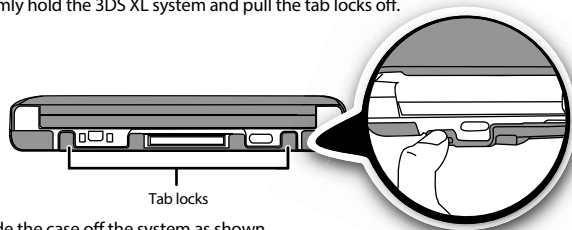

- 2 Slide the case off the system as shown.

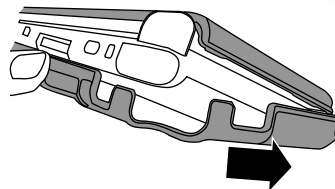

- 3 Continue to firmly hold the 3DS XL® system and locate the tab locks on the TOP piece of the Slim Fit Case. Release the Tab Locks and remove the TOP piece of the Slim Fit Case as shown.

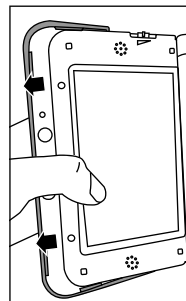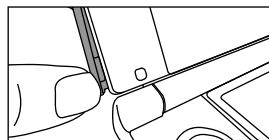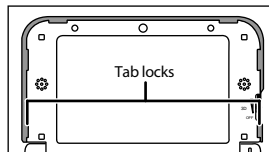





FAVOR LEA ESTO PRIMERO

AJUSTE DEL ESTUCHE DELGADO:

- 1 Primero, deslice el sistema 3D XL® en la parte INFERIOR del estuche delgado y encaje el estuche en el sistema 3DS® XL.

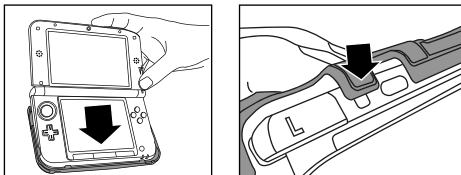

- 2 Deslice la parte frontal de la parte SUPERIOR del estuche delgado en la parte superior del sistema 3D XL® y encaje el estuche en el sistema 3DS® XL.

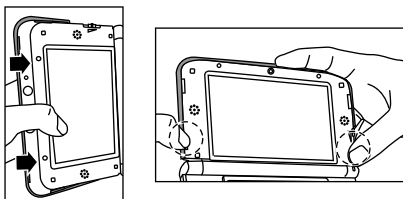


La base de carga no debe usarse para cargar el Nintendo 3DS XL con el producto instalado. Favor cargue enchufando el enchufe de CC del adaptador de CA al conector del adaptador de CA del Nintendo 3DS XL. Cuando esté cargando el Nintendo 3DS XL con el enchufe de CC del adaptador de CA enchufado en el conector del adaptador de CA, no abra el Nintendo 3DS XL completamente a 180°, ya que esto puede dañar el sistema.


DESMONTAJE DEL ESTUCHE DELGADO:

CUIDADO: De no seguir estas instrucciones podría dañar su sistema 3DS XL.

 
- 1 Mantenga firmemente el sistema 3DS XL y tire de las lengüetas de bloqueo.




Lengüetas de bloqueo

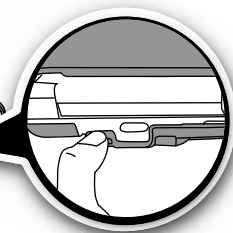

- 2 Remueva el estuche del sistema tal como se muestra.

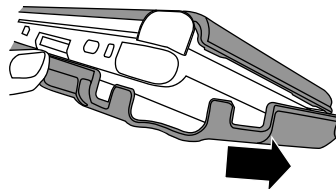

- 3 Siga manteniendo firmemente el sistema 3DS XL® y localice las lengüetas de bloqueo en la parte SUPERIOR del estuche delgado. Suelte las lengüetas de bloqueo y remueva la parte SUPERIOR del estuche delgado, tal como se muestra.

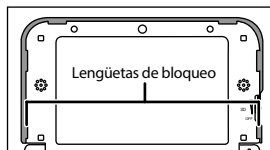

Lengüetas de bloqueo

