


# Wood Finish 3-in-1 TV Stand for TVs up to 55"/135 lbs.

**NS-HWMC1848**

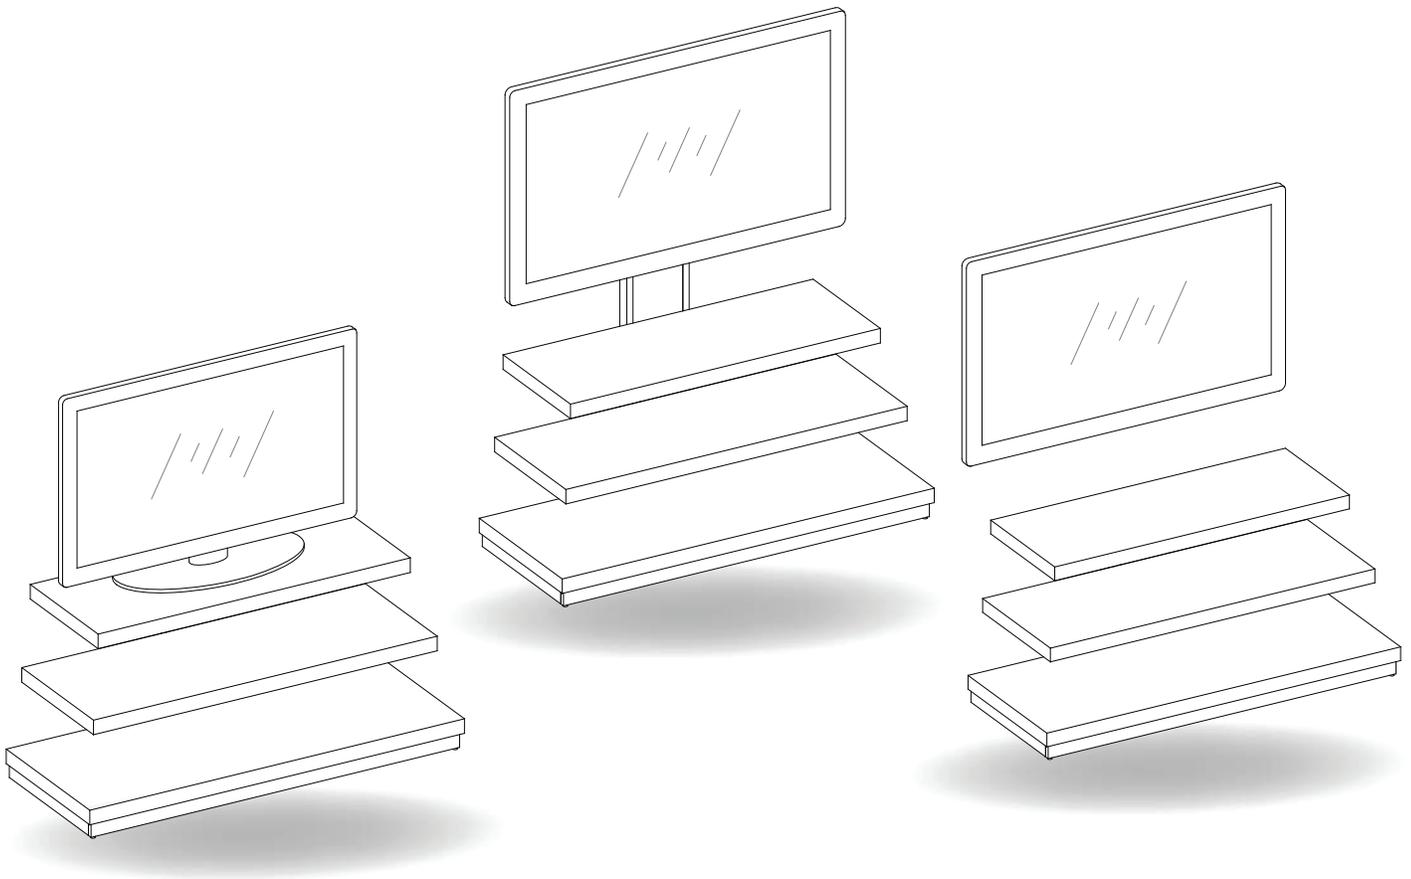

SAFETY INFORMATION AND SPECIFICATIONS	.2
PACKAGE CONTENTS: PARTS	.....4
PACKAGE CONTENTS: HARDWARE	.....5
ASSEMBLY INSTRUCTIONS	.....7
CARE AND MAINTENANCE	..... 33

Before using your new product, please read these instructions to prevent any damage.

# SAFETY INFORMATION AND SPECIFICATIONS




**CAUTION:** The top surface of this stand is designed for use with a product weighing no more than 135 lbs. (61.2 kg) and having a width that permits it to sit evenly on the stand with no more than a one-inch overhang on each side of the shelf. Use with products that weigh more than the maximum weight allowed, or with dimensions that extend beyond the maximum width may result in instability, which may result in injury.



**CAUTION:** This product contains small items that could be a choking hazard if swallowed. Keep these items away from young children!


- Maximum overall weight:** 235 lbs (106.6 kg)
- Maximum top shelf weight:** 135 lbs (61.2 kg)
- Maximum lower shelf weight:** 50 lbs (22.6 kg)
- Maximum TV weight on swivel stand:** 135 lbs (61.2 kg)
- Recommended screen range:** 37" - 55" diag. (32.5 - 49.75" width)
- Overall dimensions (H x W x D):** 55.25 x 47.75 x 22.5 in. (140.3 x 121.2 x 57.2 cm)
- TV stand weight:** 81.6 lbs (37 kg)
- Vesa Compatibility:** 100 x 100 mm, 200 x 100 mm, 200 x 200 mm, 200 x 300 mm, 200 x 400 mm, 300 x 300 mm, 400 x 300 mm, 400 x 400 mm, 600 x 400 mm

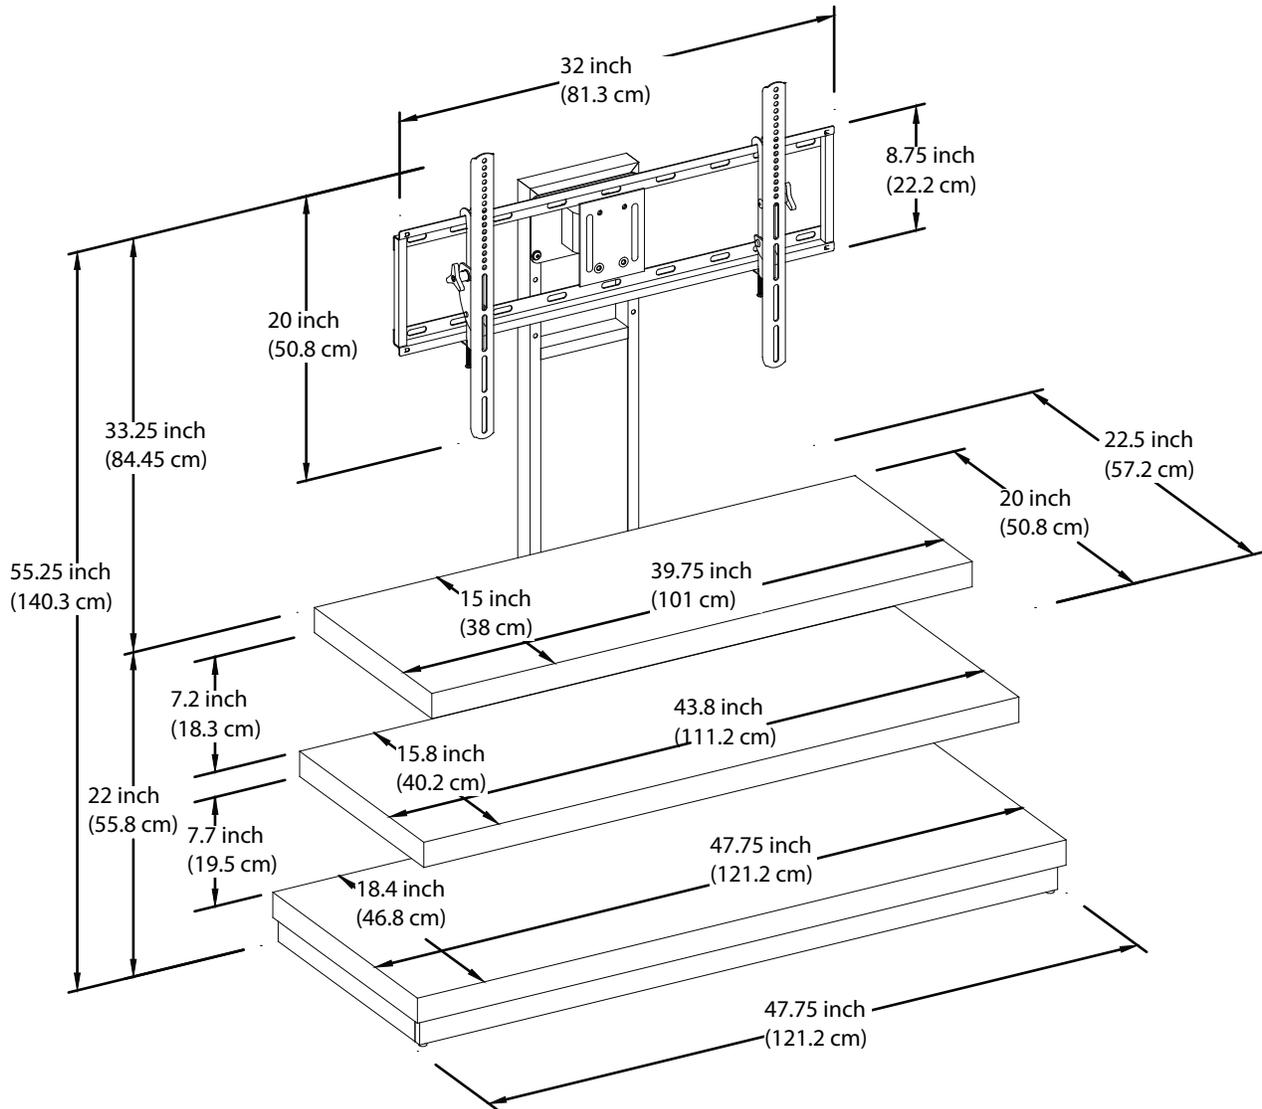


**Tools needed:**



Phillips screwdriver

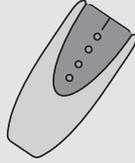


Edge-to-edge stud finder

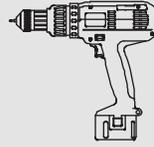


Power drill



 Pencil




Hammer

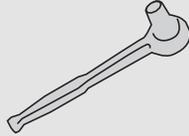

1/2" Socket wrench



 Level




3/8" drill bit (for tipping restraint)  
3/16" wood drill bit  
or  
7/16" masonry drill bit


# PACKAGE CONTENTS: PARTS

Make sure that you have all the parts necessary to assemble your new TV stand.


**A** Left side frame (1)

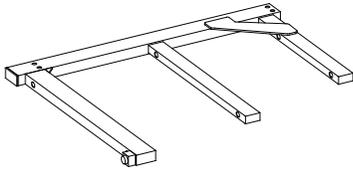


**B** Right side frame (1)

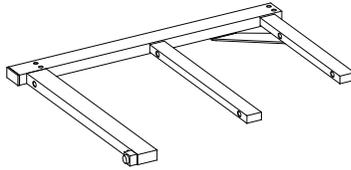


**C** Long rear support (1)

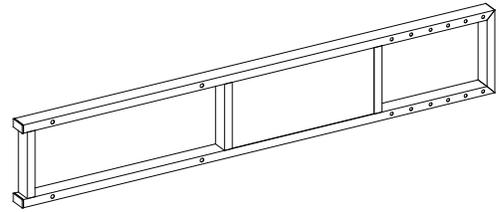

**D** Bottom crossbar (1)

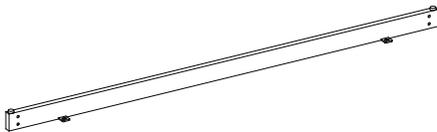


**E** Bottom left rail (1)

 

**F** Bottom right rail (1)



 
**G** Back stretcher (2)




**H** Support leg (2)




**I** Top shelf (1)

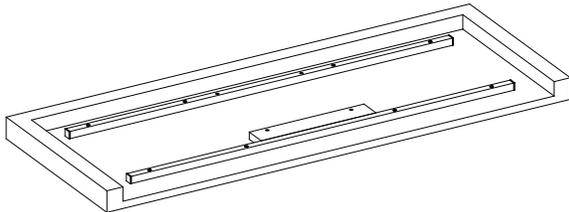


**J** Middle shelf (1)

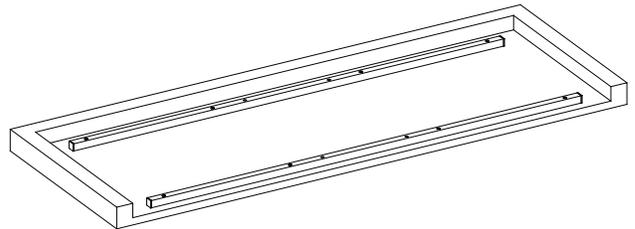


**K** Bottom shelf (1)

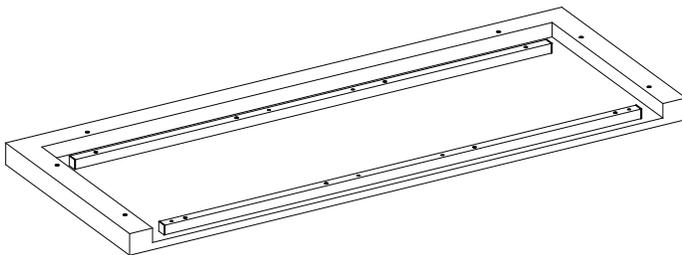


**L** Back panel (1)

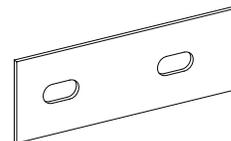


**M** Swivel bracket (1)

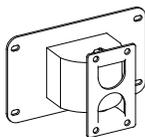

**N** Mounting frame (1)

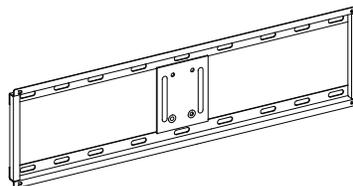




**P** TV brackets L/R (2)




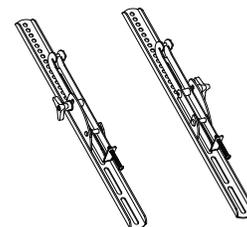


# PACKAGE CONTENTS: HARDWARE


**Note:** You may receive extra hardware.

 


Make sure that you have all the hardware necessary to assemble your new TV stand.

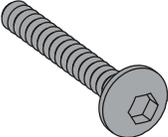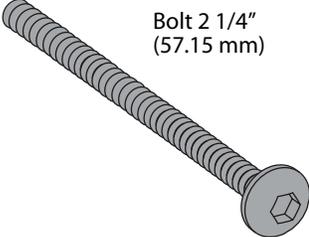
Label	Hardware	Qty.
Q	 Cable clip	2
R	 Screw #4 x 10 mm	4
S	 Bolt 1/2" (12.7 mm)	4
T	 Bolt 5/8" (15.87 mm)	14
U	 Bolt 1 5/8" (41,27 mm)	16
V	 Bolt 2 1/4" (57.15 mm)	12
W	 Lock washer	46

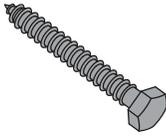   Label	Hardware	Qty.
X	 Flat washer	46
Y	 Hex nut	4
Z	 Hex wrench 3/16" (4.76 mm)	1
AA	 Lag bolt	4
BB	 Large flat washer	4
CC	 Concrete anchor	4
DD	 Open wrench	1
EE	 Hex wrench 0.158" (4 mm)	2
FF	 Touch-up pen	1

## PACKAGE CONTENTS: HARDWARE (continued)

 Label	Hardware	Qty.
<b>GG</b>	 Tipping restraint hardware kit	<b>1</b>
<b>HH</b>	 Bolt M4 × 12 mm	<b>4</b>
<b>II</b>	 Bolt M4 × 30 mm	<b>4</b>
<b>JJ</b>	 Bolt M5 × 12 mm	<b>4</b>
<b>KK</b>	 Bolt M5 × 30 mm	<b>4</b>
<b>LL</b>	 Bolt M6 × 12 mm	<b>4</b>
<b>MM</b>	 Bolt M6 × 35 mm	<b>4</b>
<b>NN</b>	 Bolt M8 × 16 mm	<b>4</b>
<b>PP</b>	 Bolt M8 × 20 mm	<b>4</b>
<b>QQ</b>	 Bolt M8 × 40 mm	<b>4</b>

   Label	Hardware	Qty.
<b>RR</b>	 Bolt M8 × 50 mm	<b>4</b>
<b>SS</b>	 Lock washer M4	<b>4</b>
<b>TT</b>	 Lock washer M5	<b>4</b>
<b>UU</b>	 Lock washer M6	<b>4</b>
<b>VV</b>	 Lock washer M8	<b>4</b>
<b>WW</b>	 Large spacer	<b>4</b>
<b>XX</b>	 Small spacer	<b>4</b>
<b>YY</b>	 Flat washer M4/M5	<b>8</b>
<b>ZZ</b>	 Flat washer M6/M8	<b>4</b>

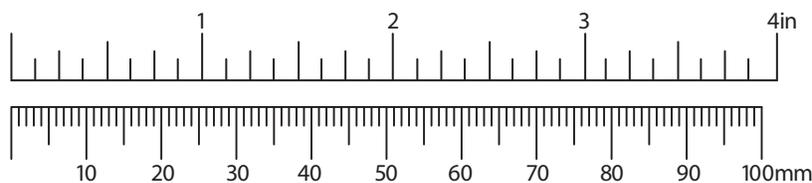


# ASSEMBLY INSTRUCTIONS

## Step 1: Attach the back stretchers between the side frames


*Tip: Assemble your stand on a carpeted floor or the empty TV stand carton to avoid scratching it.*

- 1 Insert four 1 5/8" bolts (U), with lock washers (W) and flat washers (X), through the drilled holes on the left side frame (A) and screw them into the threaded holes on the side of the back stretchers (G) with the 4 mm hex key (EE). Make sure that the metal brackets on the back stretchers (G) are located on the front side and faced inward.
- 2 Repeat the same procedure to attach the right side frame (B).

**NOTE:** Do not fully tighten all bolts until you finish assembling all of the parts. After assembly, go back and fully tighten all bolts. This will make the assembly easier.

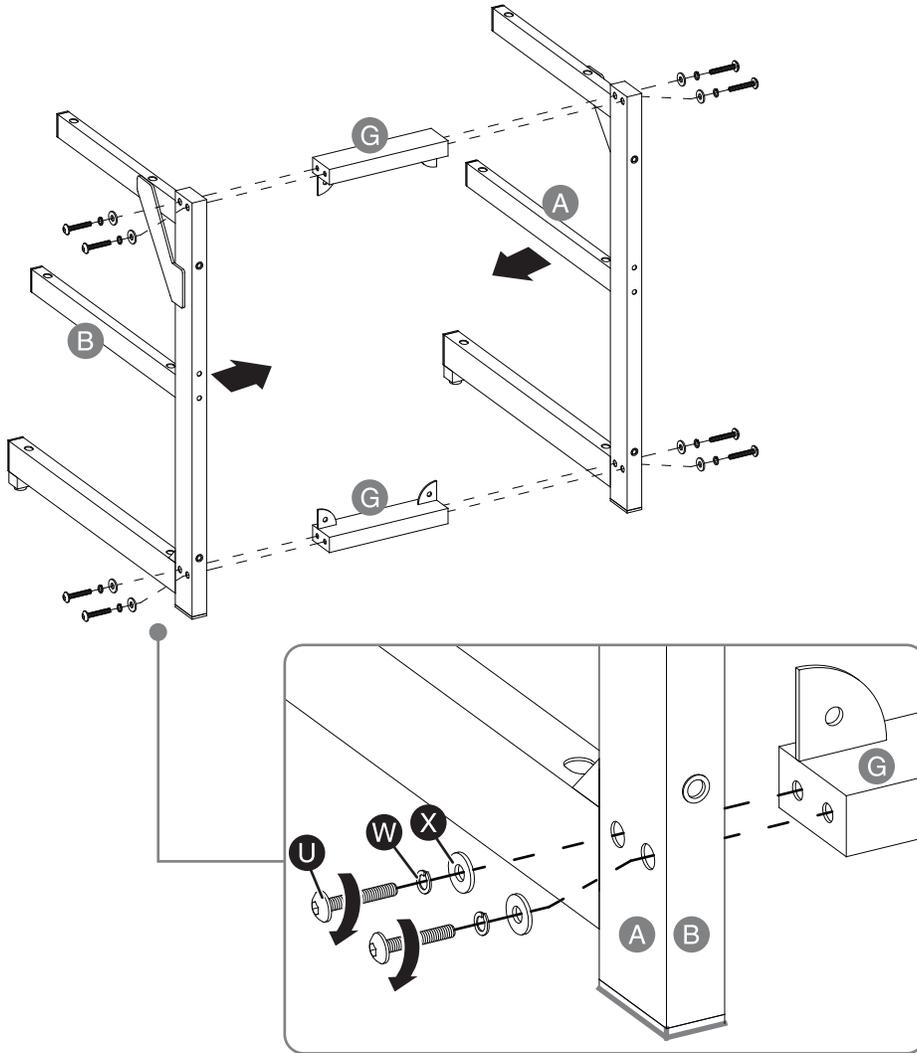

### You'll need:

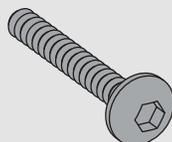

U (8)



W (8)




X (8)



EE (1)

## Step 2: Attach the back panel between the back stretchers

- Using the pilot holes as guide, insert four 10 mm screws (R) through the metal brackets of the back stretchers (G) and securely screw them into the back panel (L) using a Phillips screwdriver.

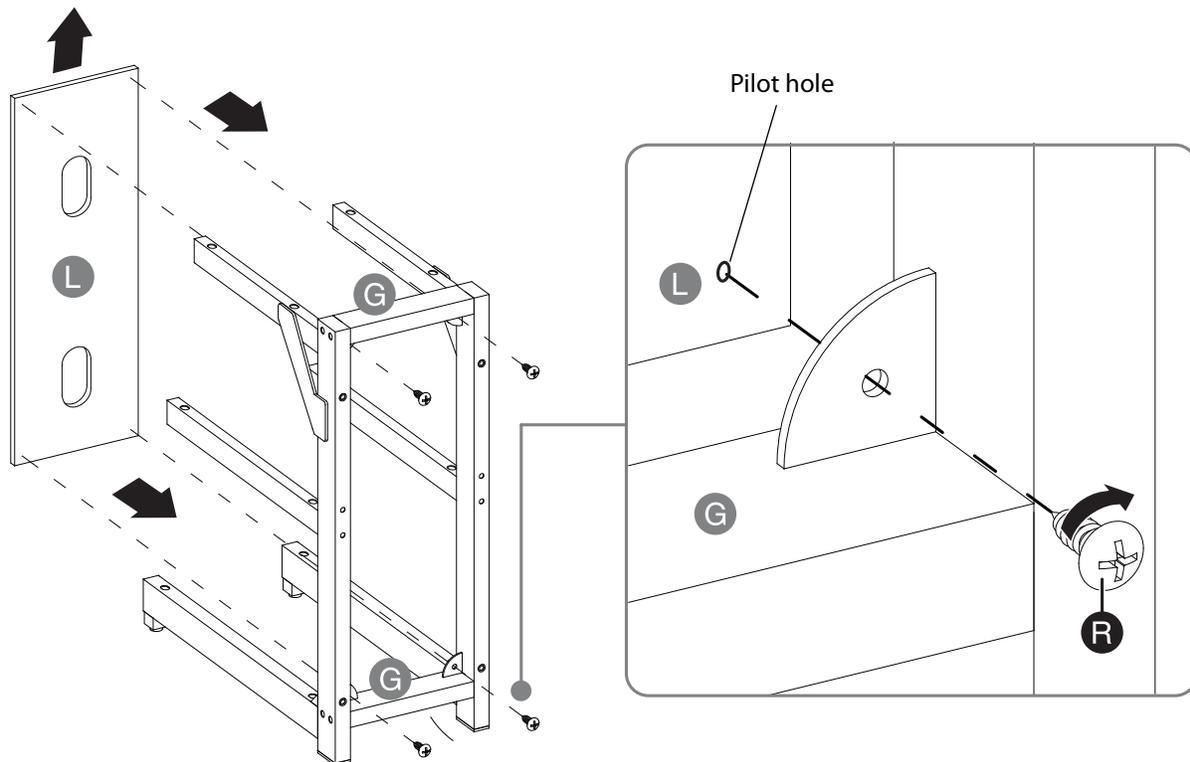

### You'll need:




R (4)




Phillips screwdriver

### Step 3: Align and attach the top shelf to the side frames

- Insert four 1 5/8" bolts (**U**), with lock washers (**W**) and flat washers (**X**), through the drilled holes on the top rails of both side frames (**A** and **B**), then securely screw them into the threaded holes on the top shelf (**I**) using the 4 mm hex key (**EE**).

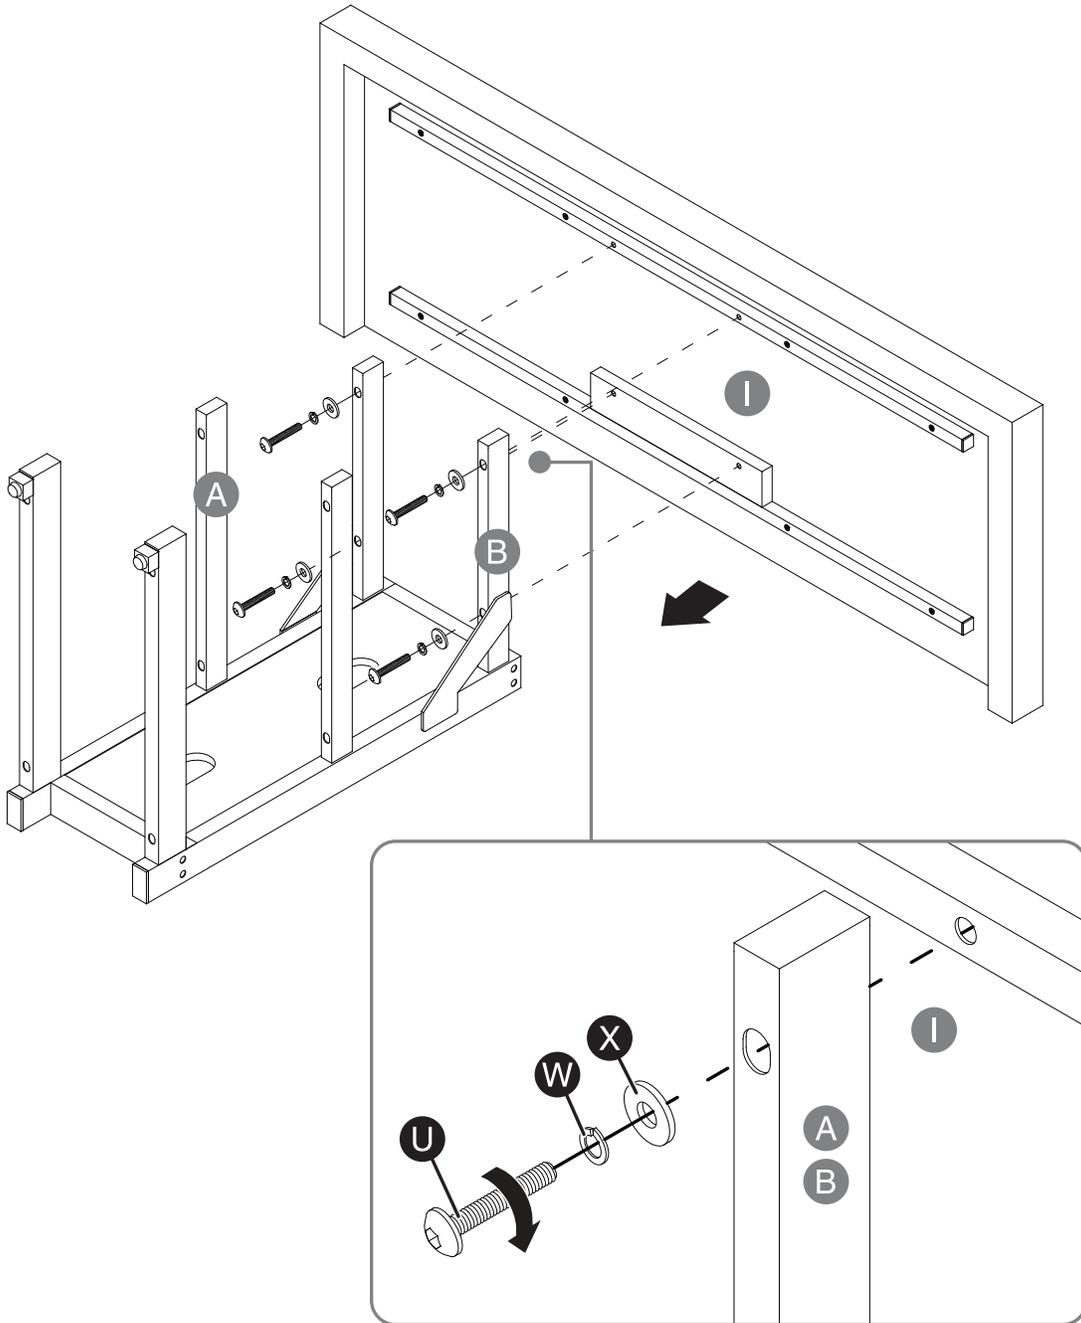


#### You'll need:

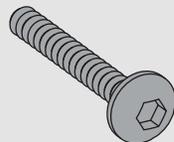

**U** (4)



 **W** (4)





**X** (4)




**EE** (1)

### Step 4: Align and attach the middle shelf to the side frames

- Insert four 1 5/8" bolts (U), with lock washers (W) and flat washers (X), through the drilled holes on the middle rails of both side frames (A and B), then securely screw them into the threaded holes on the middle shelf (J) using the 4 mm hex key (EE).

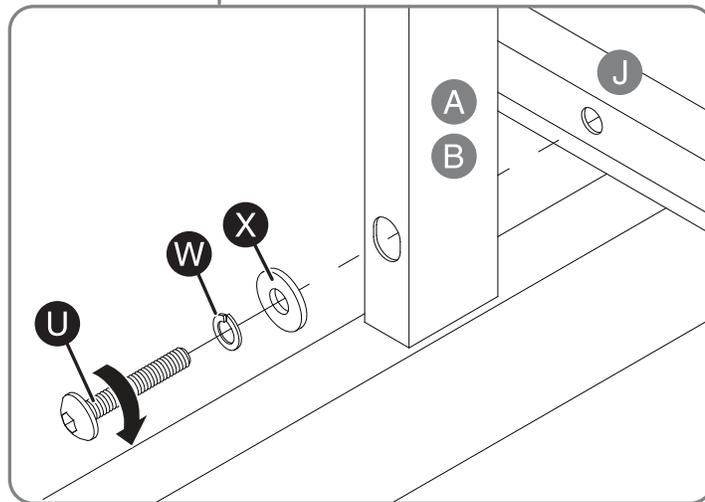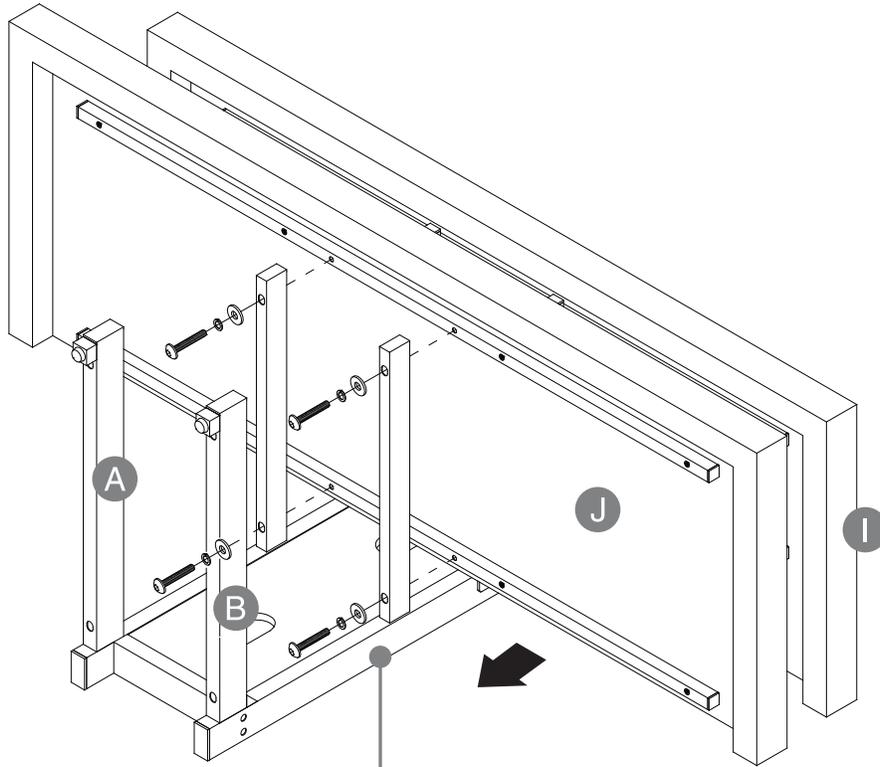

**You'll need:**

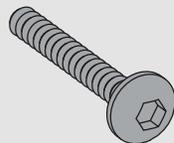

U (4)



W (4)




X (4)




EE (1)

### Step 5: Attach the bottom subframe

- Insert four 5/8" bolts (**T**), with lock washers (**W**) and flat washers (**X**), through the end brackets on the left and right rails (**E** and **F**), then securely screw them into the threaded holes on the bottom crossbar (**D**) with the 4 mm hex key (**EE**). Make sure that the metal tabs face inward and are flush with each other.

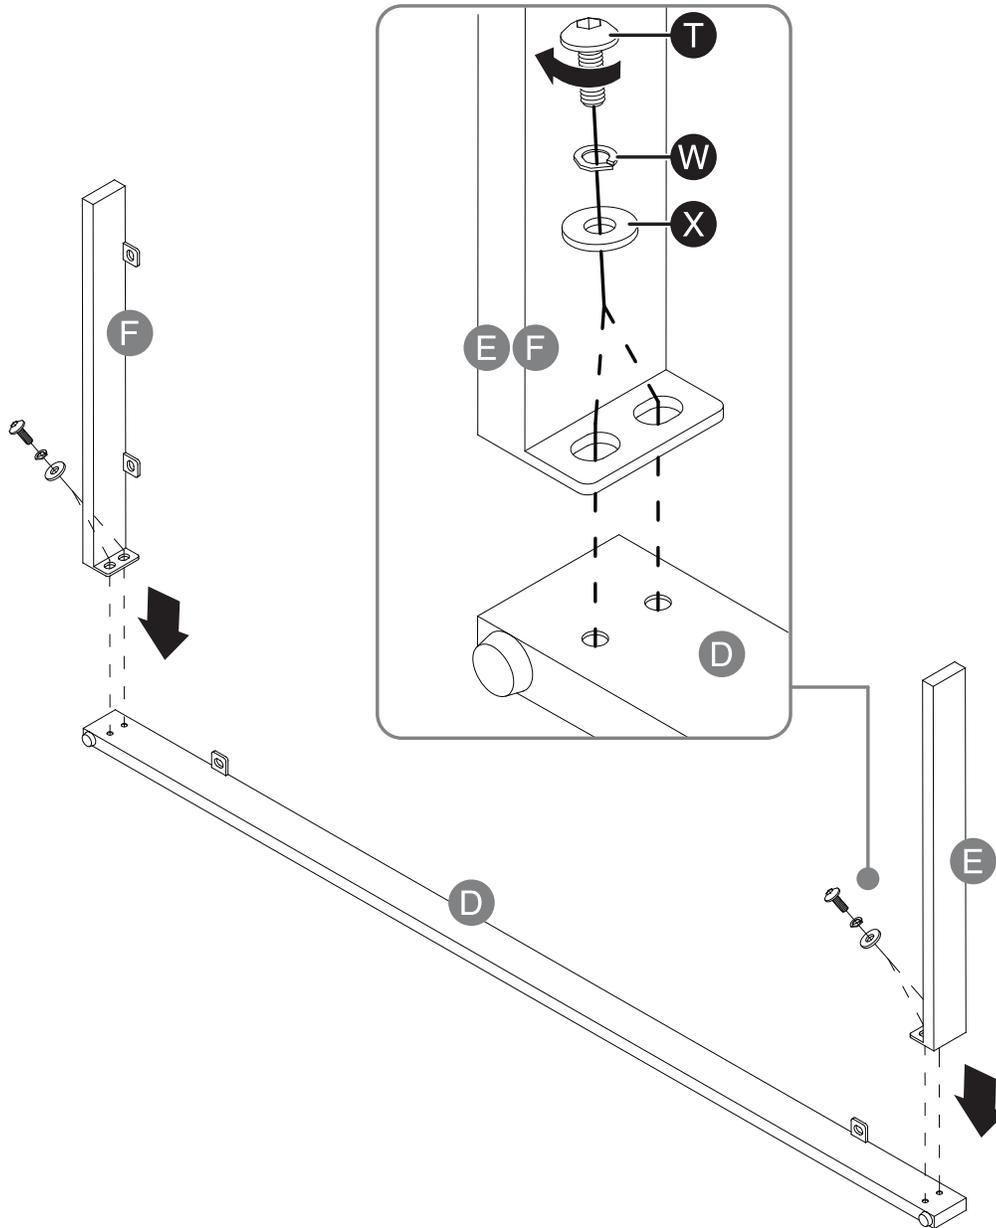


#### You'll need:

 


**T** (4)



 **W** (4)




**X** (4)

 


**EE** (1)

## Step 6: Attach the bottom subframe to the bottom shelf

- 1 Insert six 5/8" bolts (**T**), with lock washers (**W**) and flat washers (**X**), through the metal tabs on the bottom crossbar (**D**) and the side rails (**E** and **F**), then finger tighten them into the threaded holes on the bottom shelf (**K**).
- 2 Tighten the bolts (**T**) with the 4 mm hex key (**EE**).

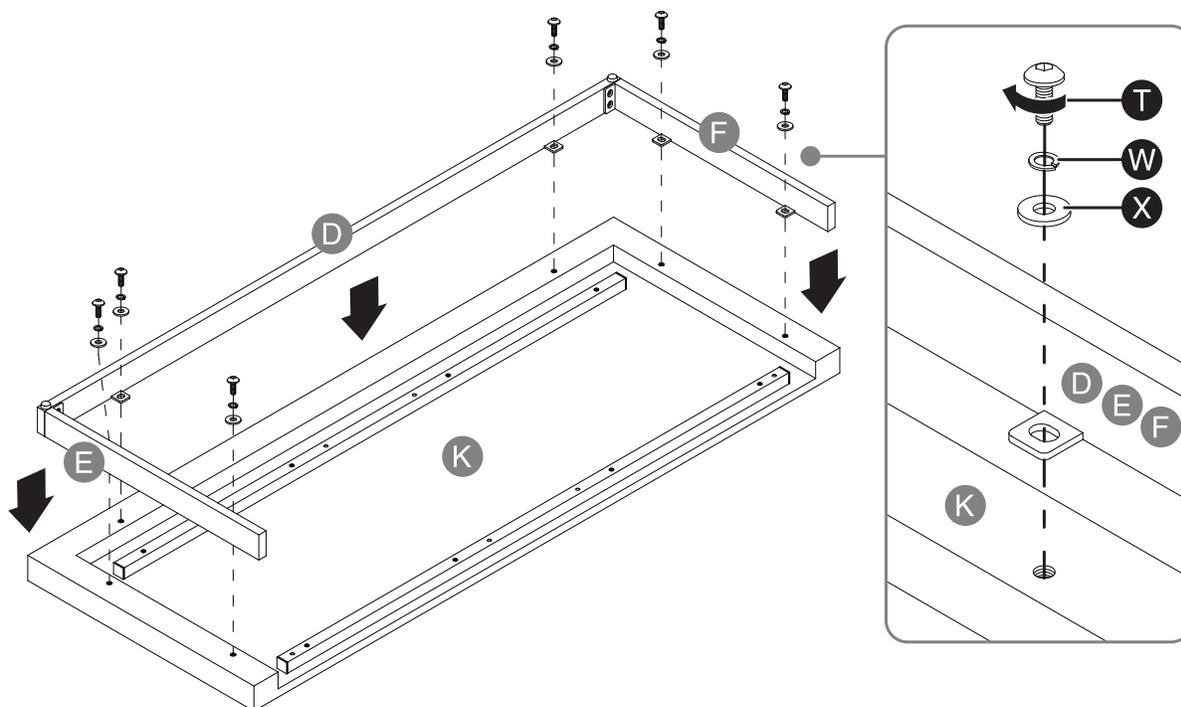

### You'll need:

 


**T** (6)



**W** (6)



 
**X** (6)






**EE** (1)

### Step 7: Align and attach the bottom shelf to the side frames

- Insert four 2 1/4" bolts (V), with lock washers (W) and flat washers (X), through the drilled holes on the bottom rails of both side frames (A and B), then securely screw them into the threaded holes on the bottom shelf (K) with the 4 mm hex key (EE).

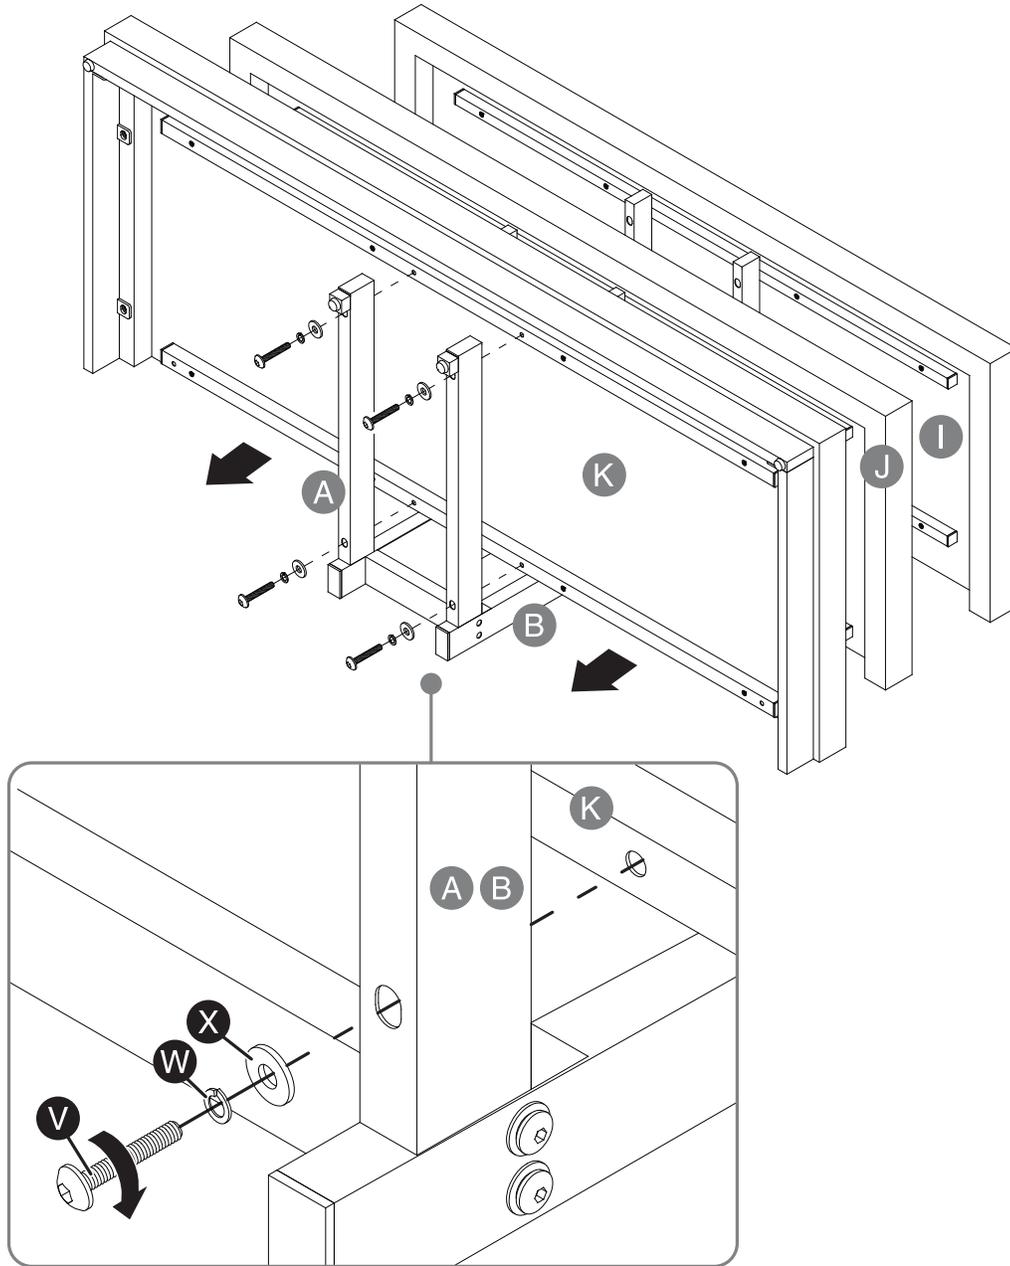


#### You'll need:

  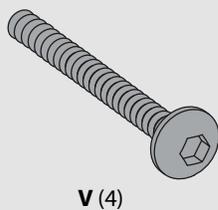

## Step 8: Attach the support legs to the bottom shelf


- 1 Securely screw two support legs (H) into the threaded holes on the back rail of the bottom shelf (K).
- 2 Stand the assembled frame upright.

**NOTE:** For swivel stand assembly, see "[SWIVEL STAND ASSEMBLY INSTRUCTIONS](#)" on page 26. For Wall Mount or Table Top assembly, continue to the next step.

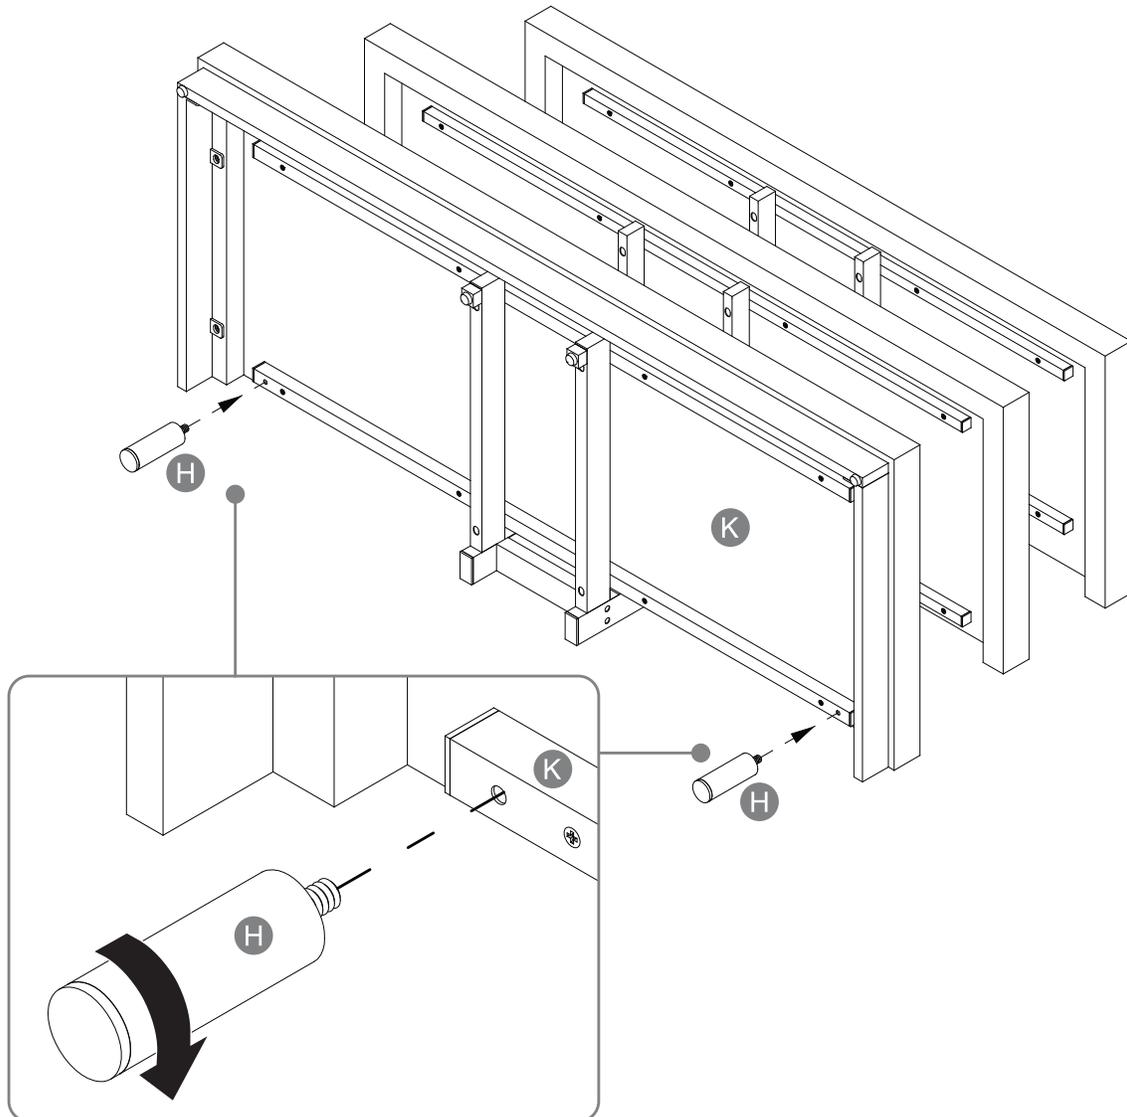

### Step 9: Attach the cable clips


- Attach two of the cable clips (**Q**) to the back of the side frames (**A** and **B**) with two 5/8" bolts (**T**) per cable clip using the 4 mm hex key (**EE**).

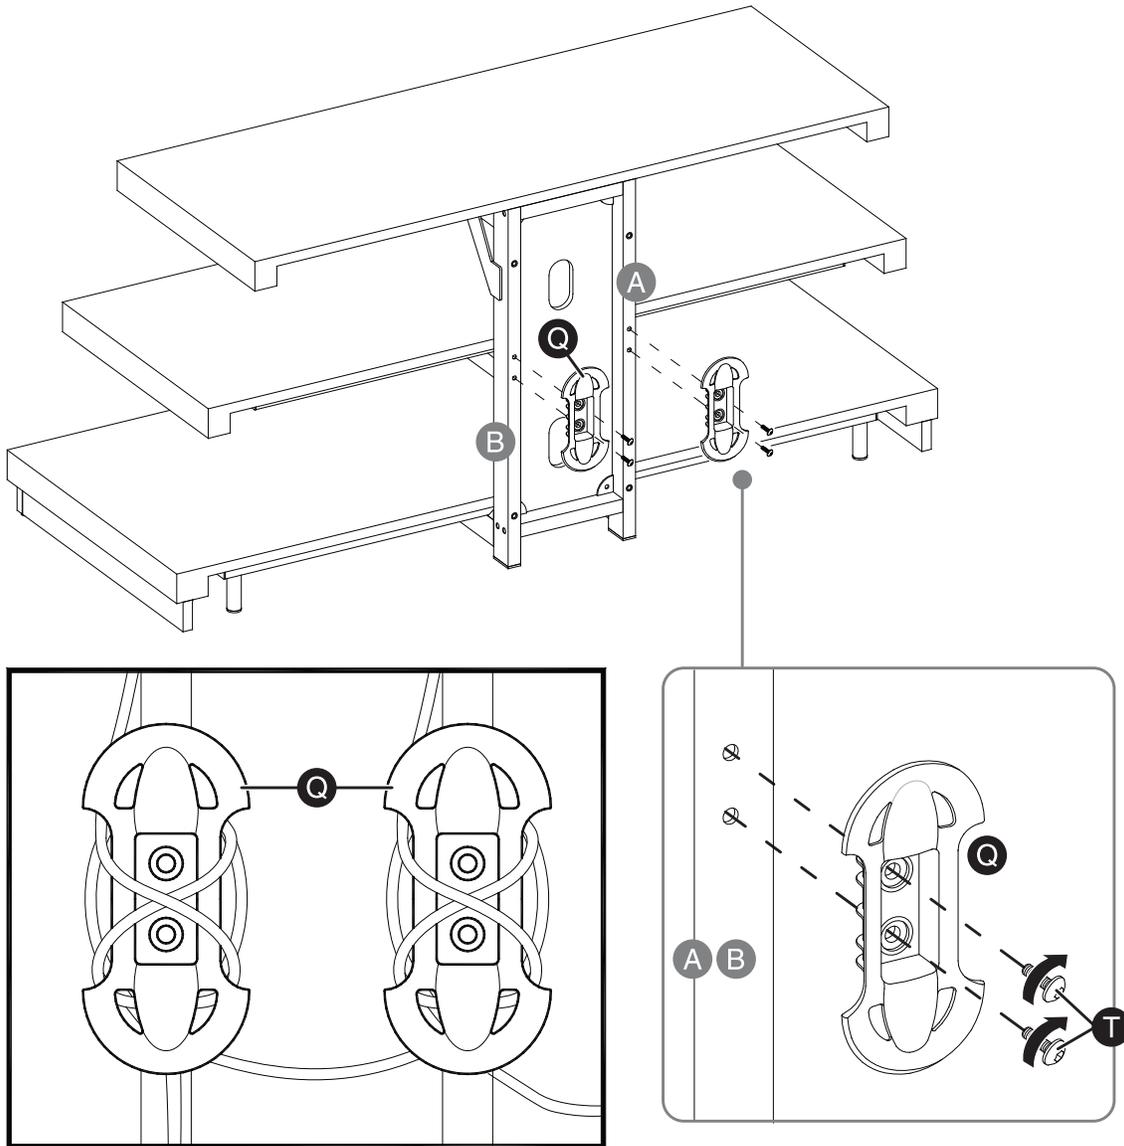

#### You'll need:



 **Q** (2)



**T** (4)




**EE** (1)

## FINAL TABLE TOP ASSEMBLY INSTRUCTIONS

### Step 10: Position the TV stand and install the tipping restraint hardware kit

- 1 Position the assembled stand against a wall where you plan to use it.
- 2 Adjust the leveling feet to level the TV stand.
- 3 Follow the instructions printed on the bag containing the tipping restraint hardware kit (GG) to attach the restraint hardware to the wall and the stand.

**WARNING:** It is very important that the tipping restraint be installed correctly. Failure to do this could result in your TV/stand assembly falling forward, resulting in damage to equipment or personal injury.

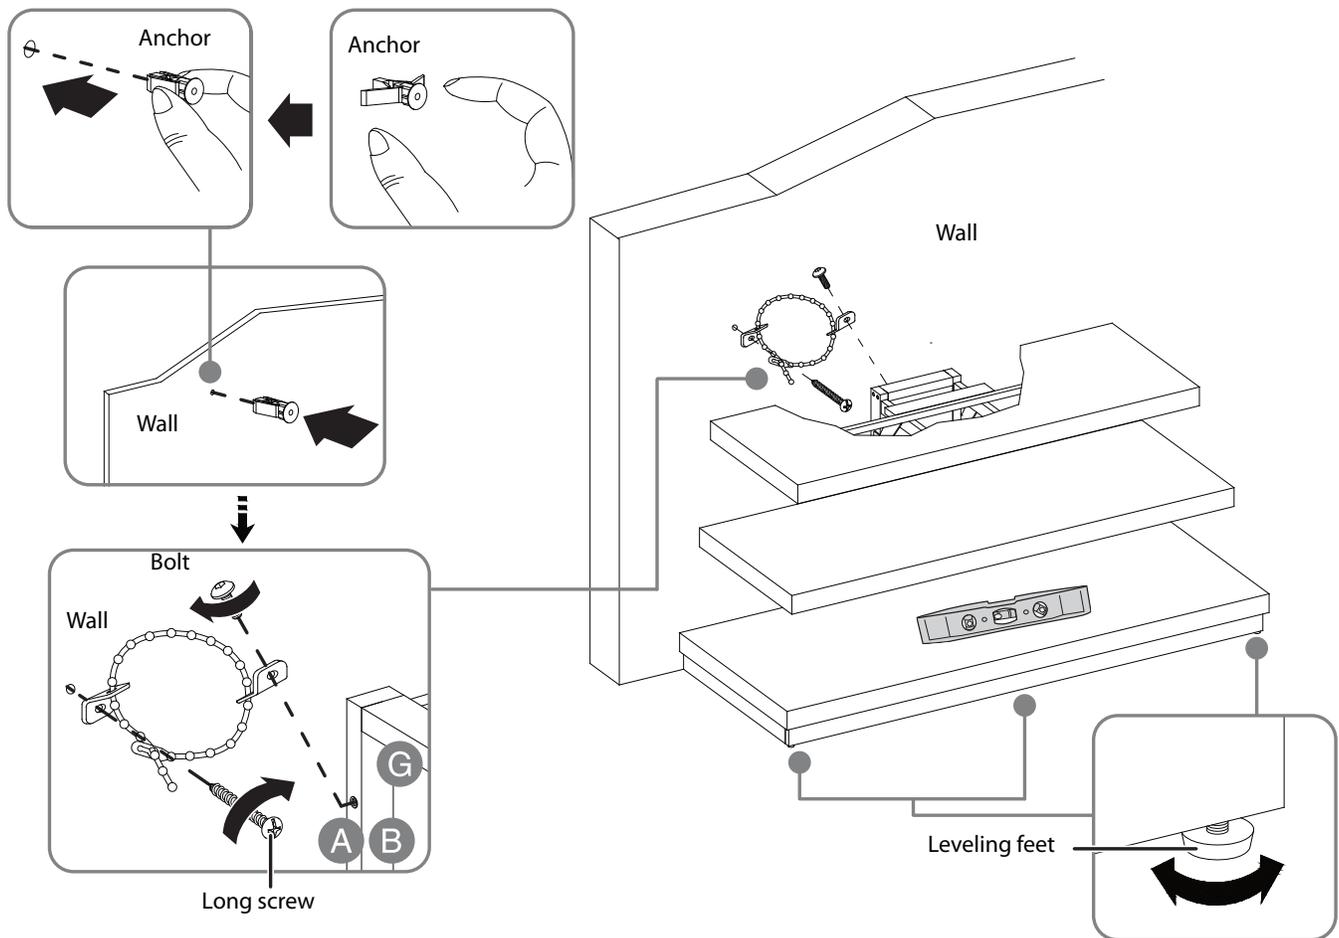

#### You'll need:



## WALL MOUNT ASSEMBLY INSTRUCTIONS

### Step 1: Select the correct bolts, washers, and spacers for your TV.

If you are in doubt about which size bolt to use, try one of the bolts in one of the four Vesa mounting holes on the back of your TV. A bolt that is too large will be obvious and not fit in the hole at all, but make sure that the bolt size you choose is not too loose. It should grip the hole threads evenly and not wobble. After you determine which size bolts to use, go on to the next step.

#### **M4 hardware assembly:**

- M4 x 12 mm bolts (**HH**) top screw holes
- M4 x 30 mm bolts (**II**) bottom screw holes
- M4 lock washers (**SS**)
- M4/M5 Flat washers (**YY**)
- Small spacers (**XX**)

#### **M5 hardware assembly:**

- M5 x 12 mm bolts (**JJ**) top screw holes
- M5 x 30 mm bolts (**KK**) bottom screw holes
- M5 lock washers (**TT**)
- M4/M5 flat washers (**YY**)
- Small spacers (**XX**)

#### **M6 hardware assembly:**


- M6 x 12 mm bolts (**LL**) top screw holes
- M6 x 35 mm bolts (**MM**) bottom screw holes
- M6 lock washers (**UU**)
- M6/M8 flat washers (**ZZ**)
- Large spacers (**WW**)

#### **M8 hardware assembly:**


- M8 x 16 mm bolts (**NN**) or M8 x 20 mm bolts (**PP**) top screw holes
- M8 x 40 bolts (**QQ**) or M8 x 50 bolts (**RR**) bottom screw holes
- M8 lock washers (**VV**)
- M6/M8 flat washers (**ZZ**)
- Large spacers (**WW**)

## Step 2: Determine whether your TV has a flat back or an irregular or obstructed back or a curved screen


- 1 Carefully place your TV screen face-down on a cushioned, clean surface to protect the screen from damages and scratches.
- 2 If your TV has a table-top stand attached, remove the stand. See the documentation that came with your TV for instructions.
- 3 Temporarily lay the TV brackets (P) vertically on the back of your TV.
- 4 Align the screw holes in the TV brackets with the mounting screw holes on your TV.
- 5 Identify which type of back your TV may have:
  - **Flat back:** The brackets lay flush against the back of your TV and do not block any jacks. You do not need spacers when assembling the wall mount.

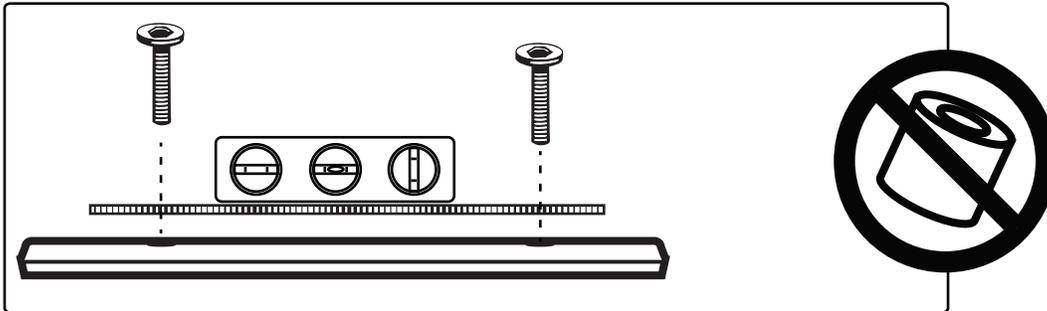

- **Obstructed back:** The brackets block any of the jacks on the back of your TV. You will need spacers when assembling the wall mount.

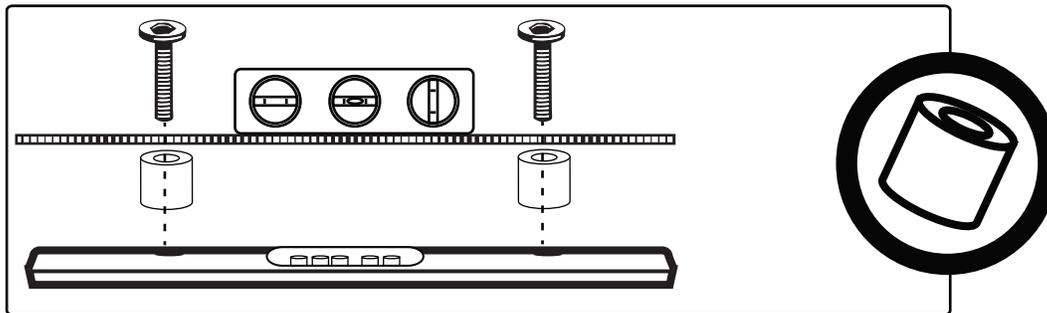

- **Irregularly-shaped back or curved screen TVs:** There is a gap between the bracket and some part of the back of your TV. You will need spacers when assembling the wall mount.

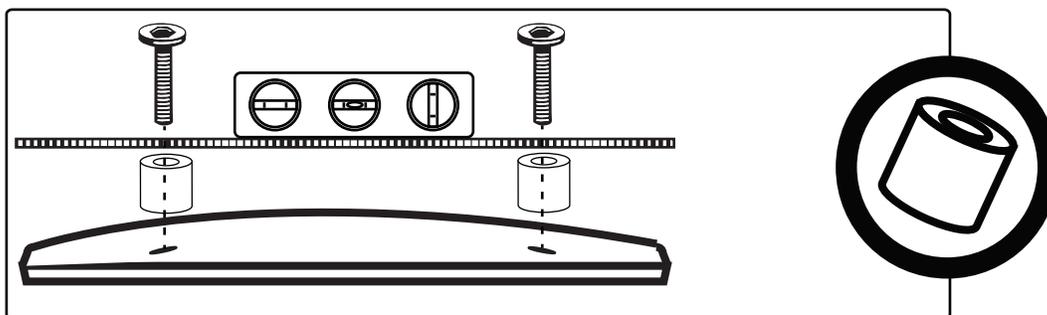

- 6 Remove the brackets.


### Step 3: Option 1 - Mounting bracket instructions for a TV with a flat back

**To mount the TV brackets:**


1 Insert the selected bolts through the washers and proper mounting holes on the TV brackets (P) (for the 100 x 100 mm vesa pattern you'll need to lift the bracket hangers to insert the screws), then finger tighten them into the threaded holes on the back of your TV. Make sure the TV brackets are centered and level with each other and the hooks face the bottom of the TV.

**NOTE:** Lean the TV up against a wall or other solid surface when attaching with the TV brackets. DO NOT place the TV face down on the glass, this may cause permanent damage.

2 Tighten the bolts until they are snug against the TV bracket using a Phillips screwdriver. DO NOT over tighten.

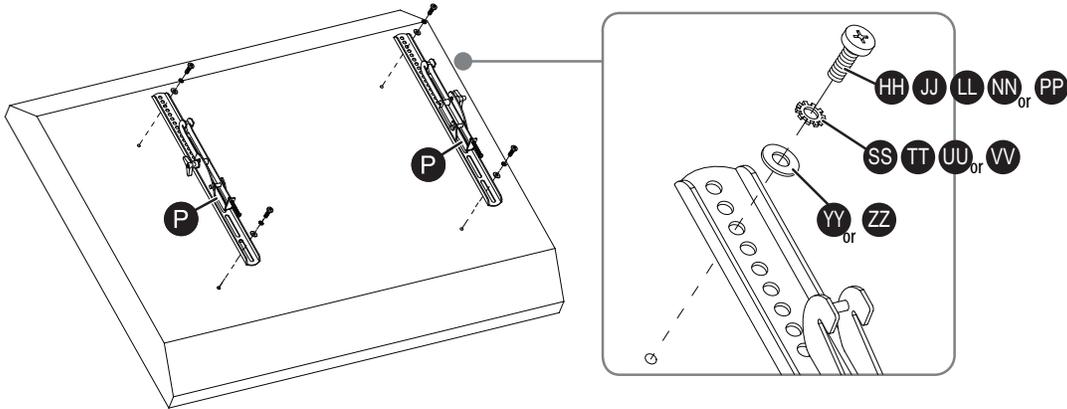


Installing the mounting brackets for the 100 x 100 mm vesa hole pattern

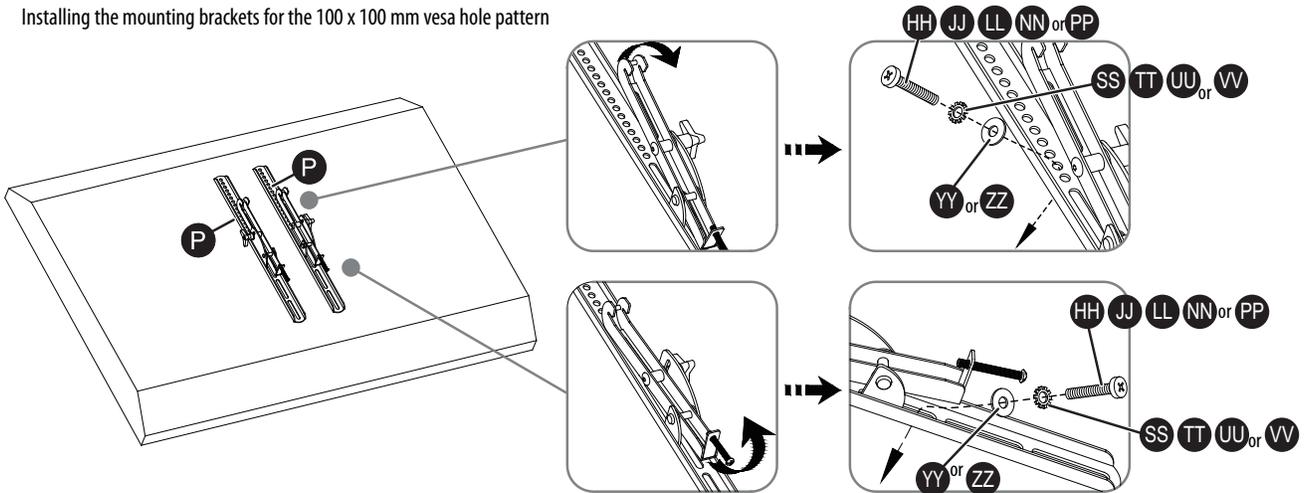

**You'll need:**

Bolts & Washers

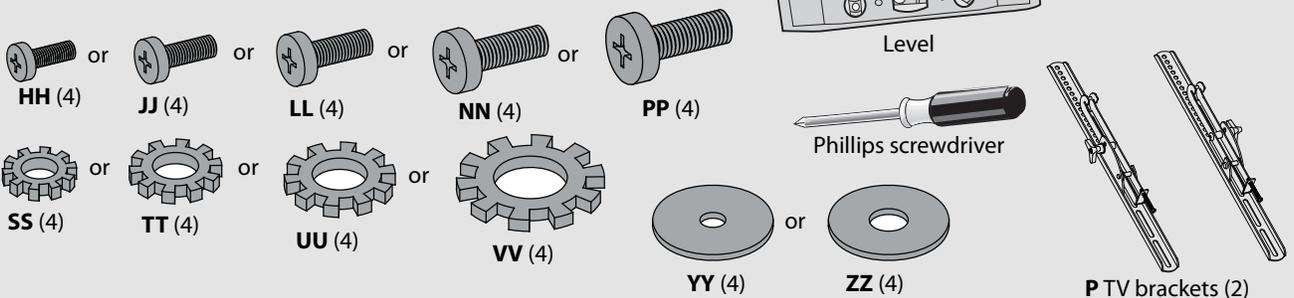


### Step 3: Option 2 - Mounting bracket instructions for a TV with an irregularly shaped or obstructed back or curved screen TVs.


- 1 Insert the selected bolts through the washers and proper mounting holes on the TV brackets (P) (for the 100 x 100 mm vesa pattern you'll need to lift the bracket hangers to insert the screws), then finger tighten them into the threaded holes on the back of your TV. Make sure the TV brackets are centered and level with each other and the hooks face the bottom of the TV.

**NOTE:** Lean the TV up against a wall or other solid surface when attaching with the TV brackets. DO NOT place the TV face down on the glass, this may cause permanent damage.

- 2 Tighten the bolts until they are snug against the TV bracket using a Phillips screwdriver. DO NOT over tighten.





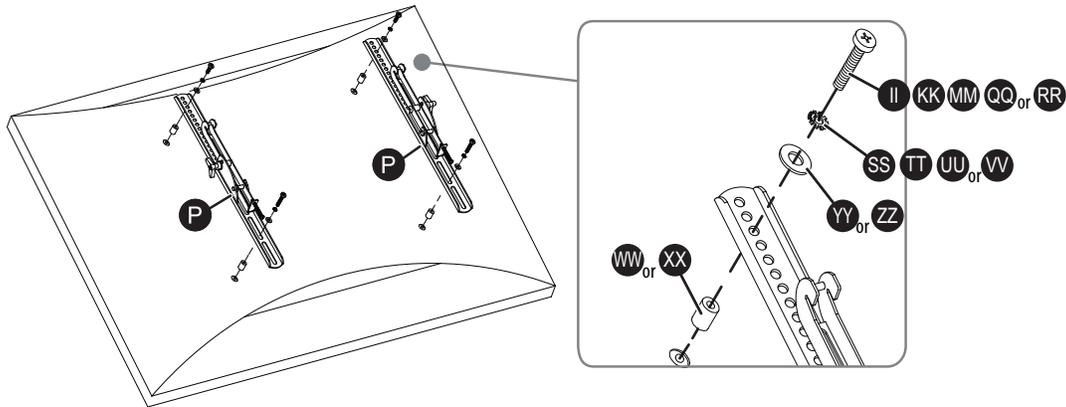


Installing the mounting brackets for the 100 x 100 mm vesa hole pattern

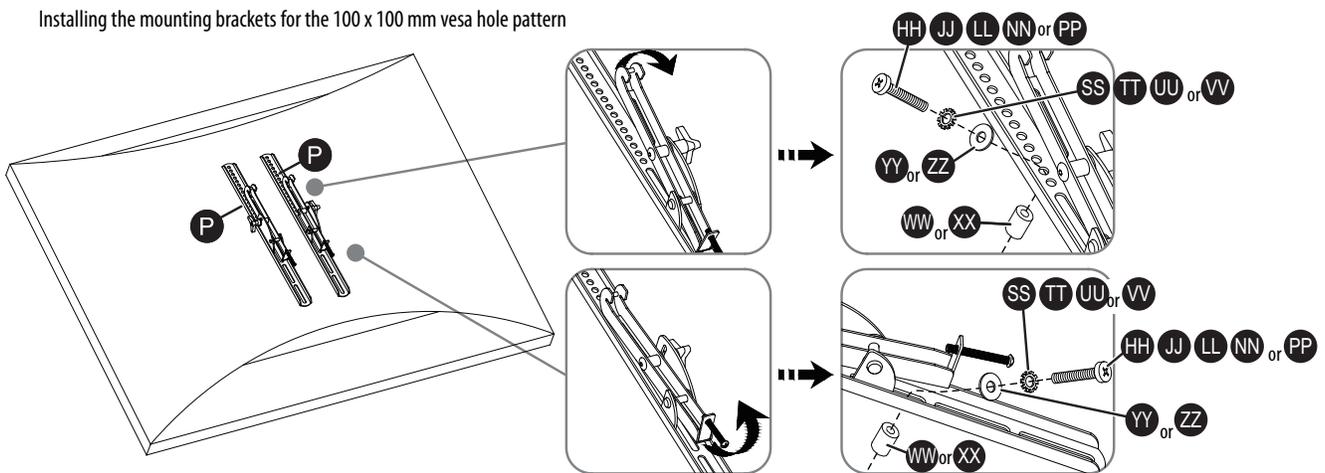

#### You'll need:

   Bolts & Washers

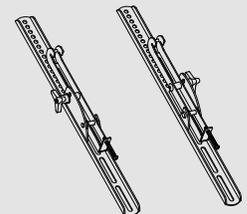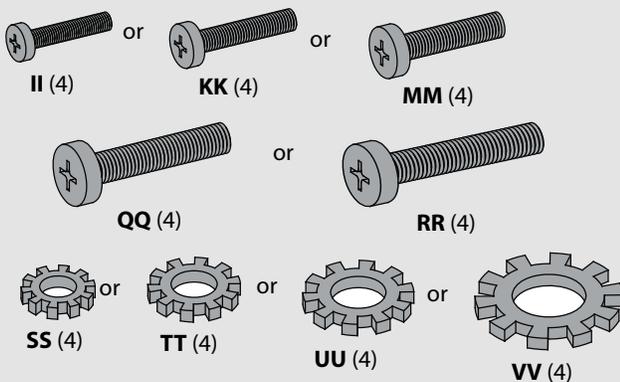


## Step 4: Option 1 - Mount the frame to a stud wall


**NOTE:** See Step 4: Option 2 for instructions on mounting the frame to a concrete wall.

- 1 Use a stud sensor to locate two adjacent wall studs, then position the mounting frame (N) exactly between the two studs.
- 2 Use a level to make sure that the mounting frame is level, then mark the four mounting holes. Remove the mounting frame.
- 3 Drill four 3/16" (4.76 mm) holes 2.5" (64 mm) deep.
- 4 Align the mounting frame (N) with the pilot holes, then secure it to the wall with four lag bolts (AA) and four washers (BB).


**CAUTION:** Make sure that the lag bolts are tight and secure, but do not overtighten them.

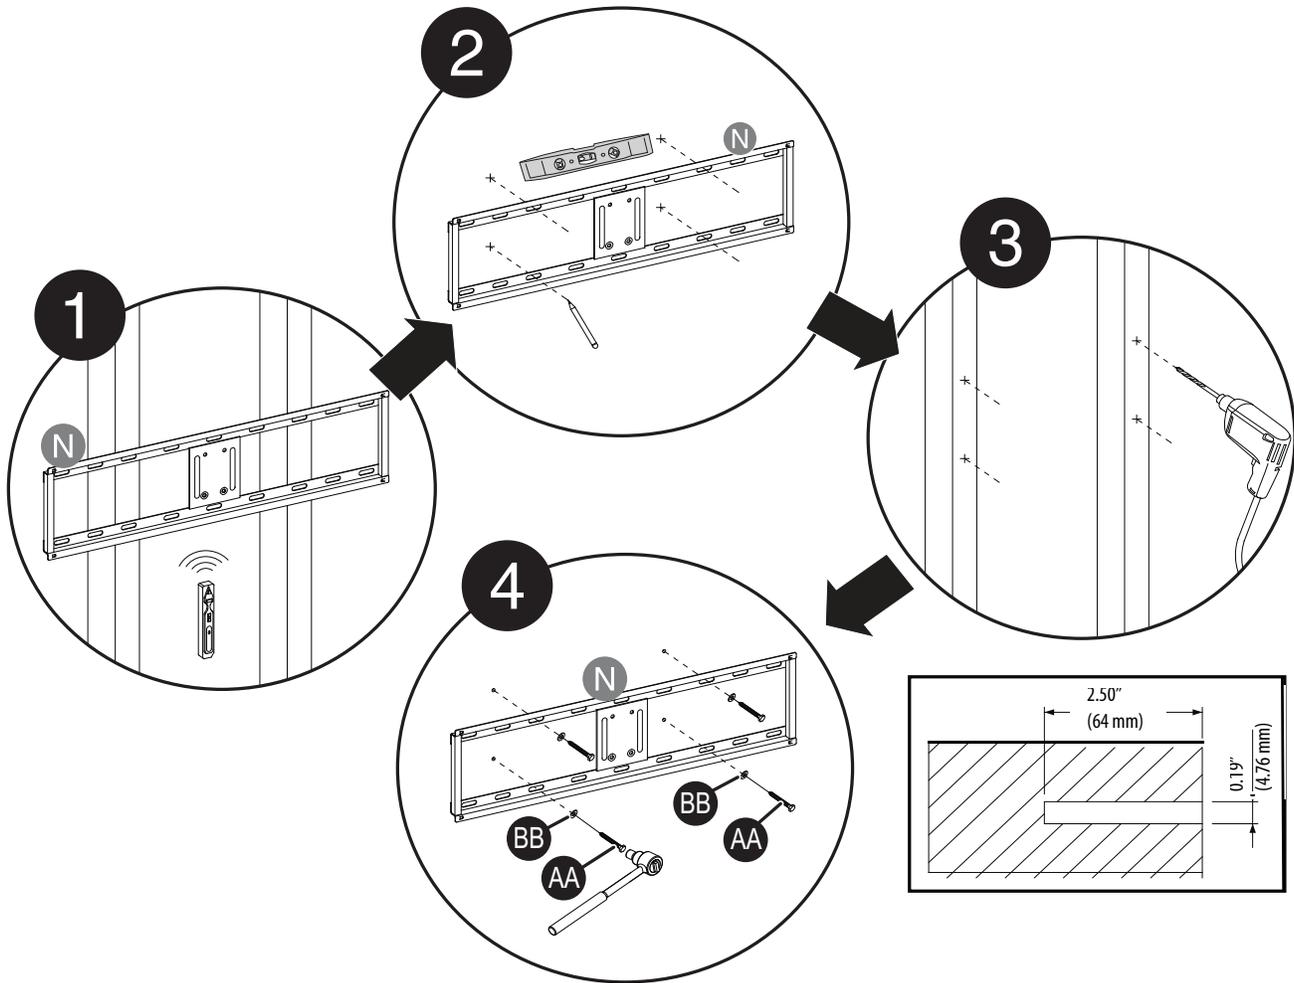


### You'll need:

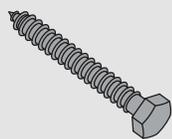


AA (4)

 


BB (4)

 


Level

 

Edge-to-edge  
stud finder

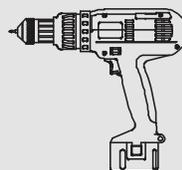

Drill

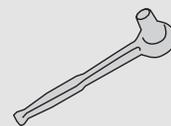

1/2" Socket wrench



3/16" drill bit





Pencil


## Step 4: Option 2 - Mount the frame to a block or concrete wall

- 1 Place the mounting frame (**N**) against the wall where you intend to mount the TV. Use a level to make sure the mounting frame (**N**) is level, then mark the four mounting holes on the wall. Never locate the mounting holes into the mortar between blocks. Remove the mounting frame.
- 2 Drill four 7/16" (11 mm) holes through the screw marks to a depth of 2.5" (64 mm).
- 3 Insert a concrete anchor (**CC**) into each of the screw holes using a hammer.
- 4 Align the mounting frame over the concrete anchors.
- 5 Place a washer (**BB**) over one of the mounting frame screw holes, then insert a lag bolt (**AA**) and tighten.
- 6 Repeat the previous step for the other three screw holes.

**CAUTION:** Make sure that the lag bolts are tight and secure, but do not overtighten them.

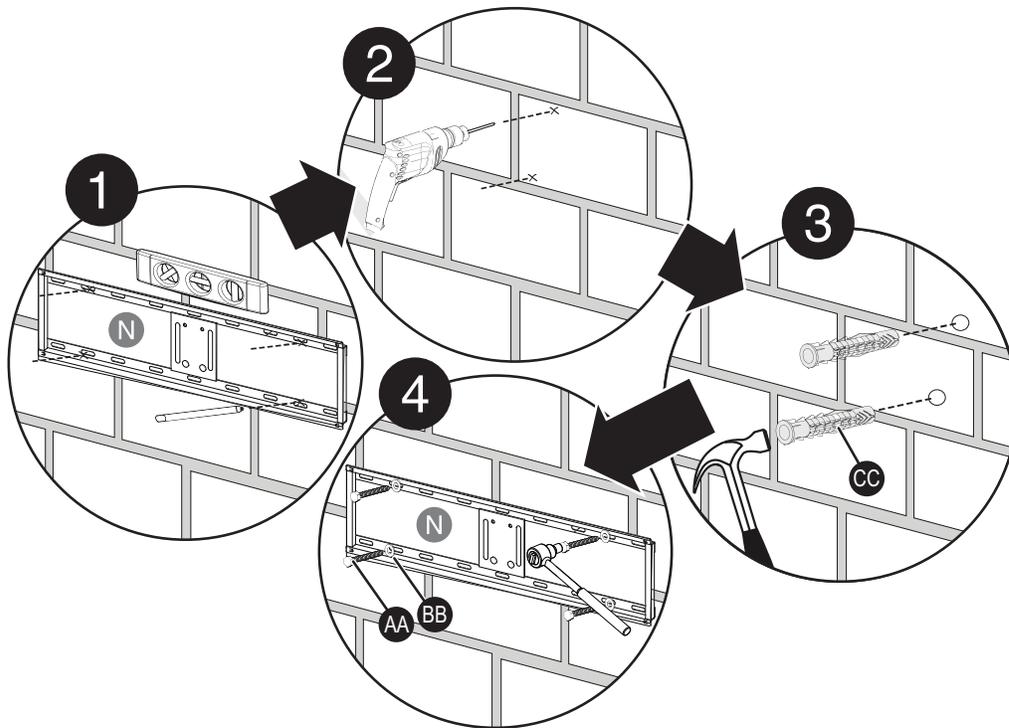
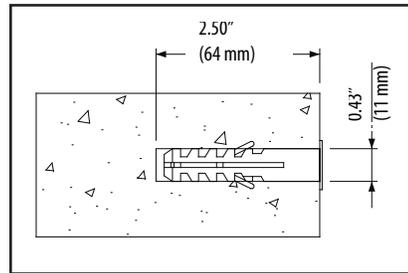


### You'll need:

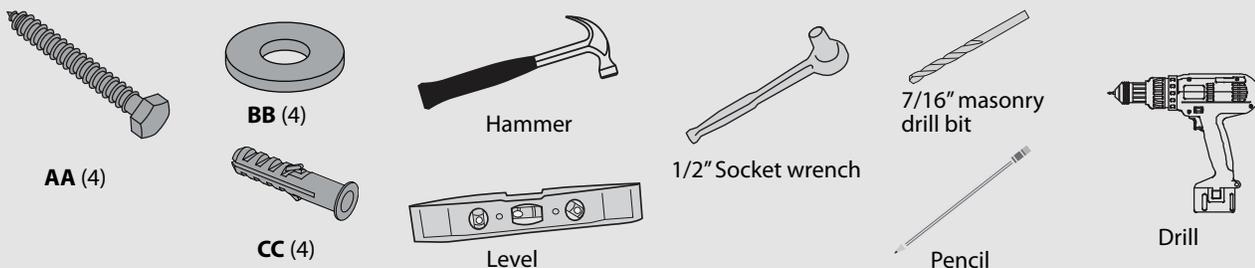


## Step 5: Attaching the TV to the mounting frame on the wall


- 1 Lift the TV up to the mounting frame (N).
- 2 Set the hooks on TV brackets (P) over the mounting frame, then lower the hooks onto the bars on the mounting frame.
- 3 Center the TV, then secure it in place using a screwdriver to tighten the safety bolt on the bottom hooks.
- 4 Place the stand with the glass shelves under the TV.

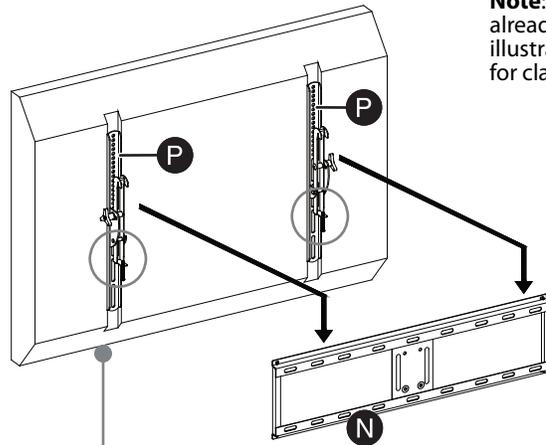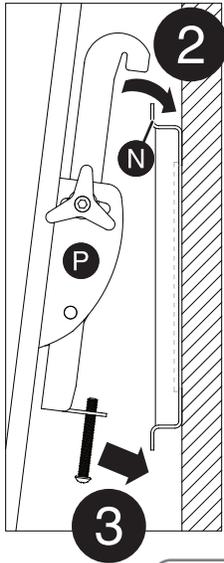

**Note:** In this step the mounting frame has already been mounted to the wall. This illustration shows the TV from the back view for clarity.

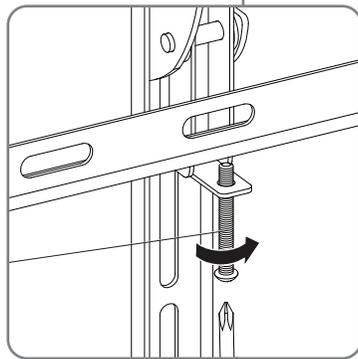

Tighten until the safety bolt hits the underside of the mounting frame.

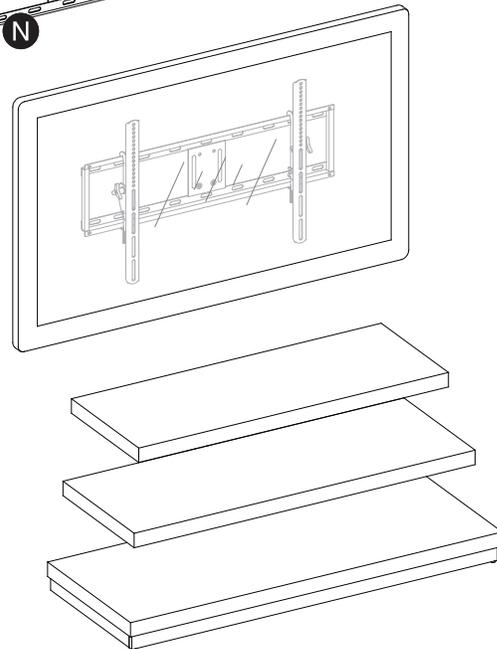

### You'll need:




Phillips screwdriver


## Step 6: Adjusting the tilt

The TV brackets (**P**) allow you to make a tilt adjustment of up to 11° down and 5° up to provide optimum viewing and minimize glare.

- 1 Loosen the tension knobs on both TV brackets (**P**), then grasp the edge of the TV and move it up or down to the position you want.
- 2 Turn the tension knob clockwise to secure the brackets in position. Use the the 4.76 mm hex wrench (**Z**) to tighten the tension knobs, if necessary.

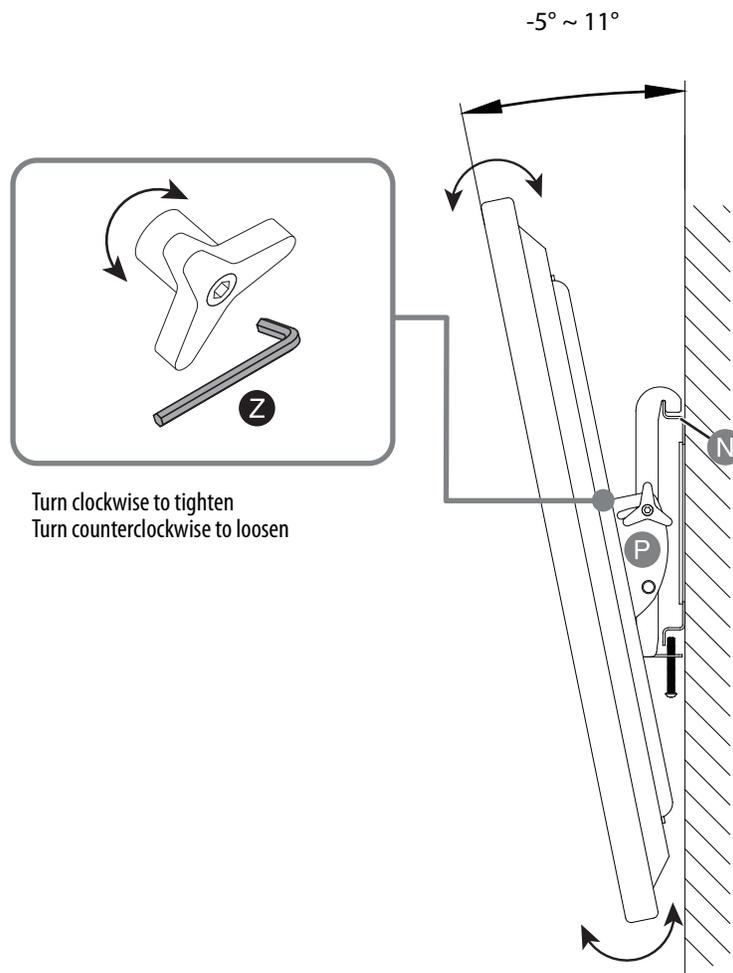


### You'll need:

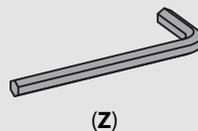

## Step 7: Position the TV stand and install the tipping restraint hardware kit

- 1 Position the assembled stand against a wall where you plan to use it.
- 2 If necessary, adjust the leveling feet to level the TV stand.
- 3 Follow the instructions printed on the bag containing the tipping restraint hardware kit (**GG**) to attach the restraint hardware to the wall and the stand.


**WARNING:** It is very important that the tipping restraint be installed correctly. Failure to do this could result in your TV/stand assembly falling forward, resulting in damage to equipment or personal injury.

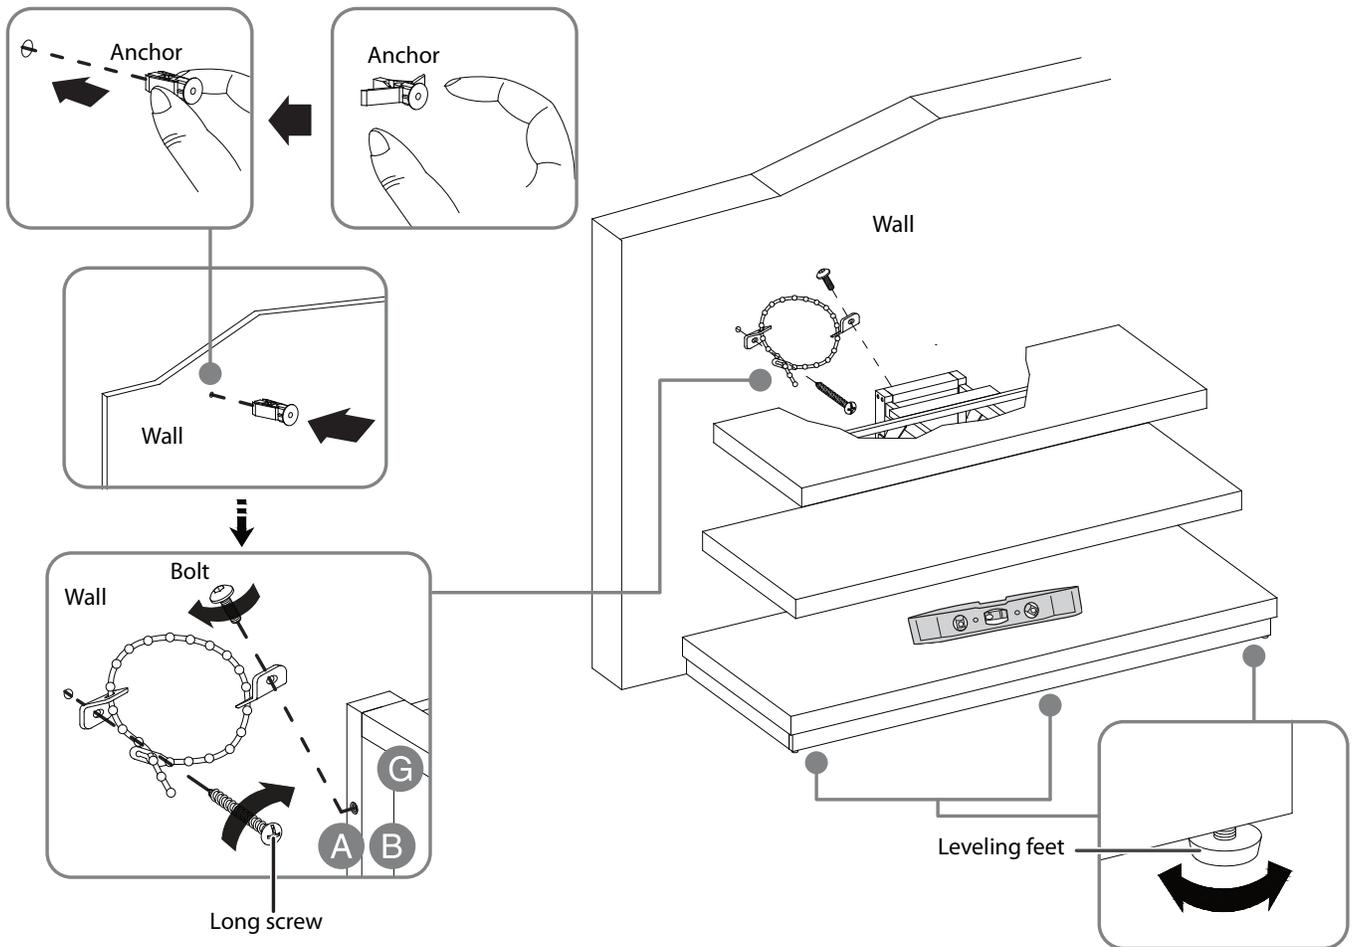

### You'll need:



**GG** (1)

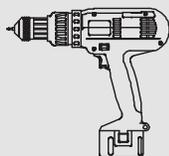

Power drill



3/8" masonry or  
wood drill bit




Level

## SWIVEL STAND ASSEMBLY INSTRUCTIONS


### Step 1: Align and attach the long rear support

- Insert four 2¼" bolts (**V**), with lock washers (**W**) and the flat washers (**X**), through the drilled holes in the long rear support (**C**), then securely screw them into the threaded holes of the side frames (**A** and **B**) with the 4 mm hex key (**EE**).

**NOTE:** Make sure that the sockets for the cable clips face backward.

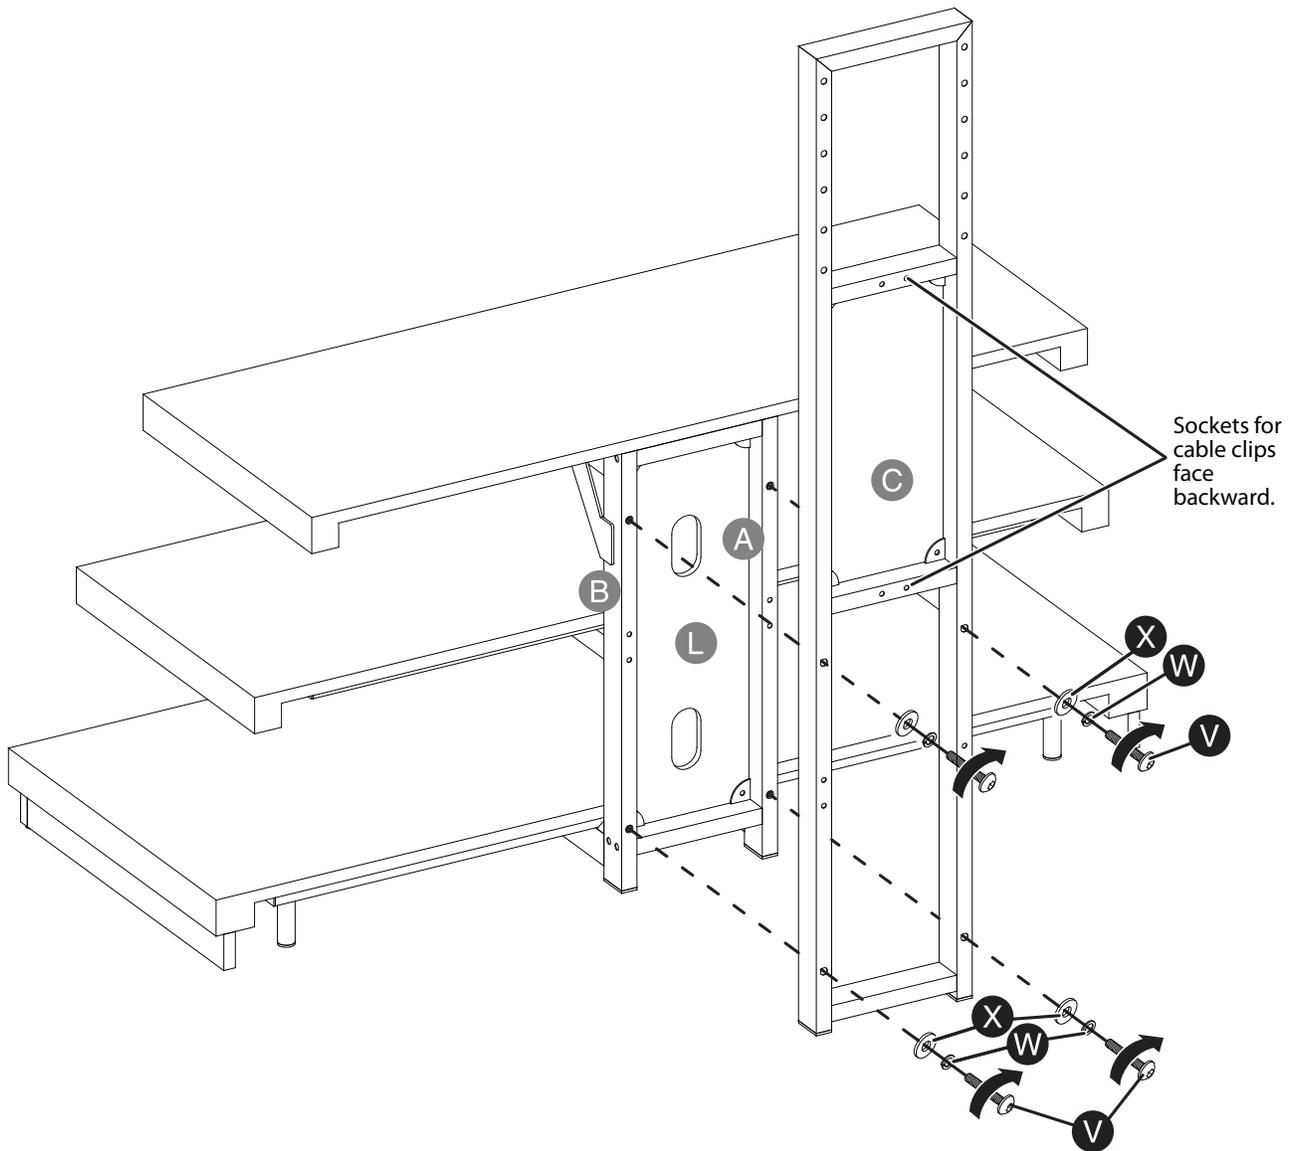

#### You'll need:

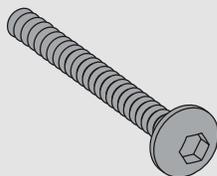

**V** (4)



**W** (4)



**X** (4)




**EE** (1)


## Step 2: Attach the swivel bracket

- 1 Align the swivel bracket (**M**) at the height you would like the center of your TV to be.
- 2 Insert a 2¼" bolt (**V**), with a lock washer (**W**) and a flat washer (**X**), through the swiveling bracket (**N**) and the long rear support (**C**).
- 3 Place a second flat washer (**X**) and a lock washer (**W**) onto the end of the threaded bolt, then finger tighten a hex nut (**Y**) onto the bolt.
- 4 Repeat this procedure for the three remaining holes.
- 5 Securely tighten with the open end wrench (**DD**) and 4 mm hex key (**EE**).

**NOTE:** The swivel bracket allows your TV to swivel from side to side, but will not allow your TV to tilt up or down.

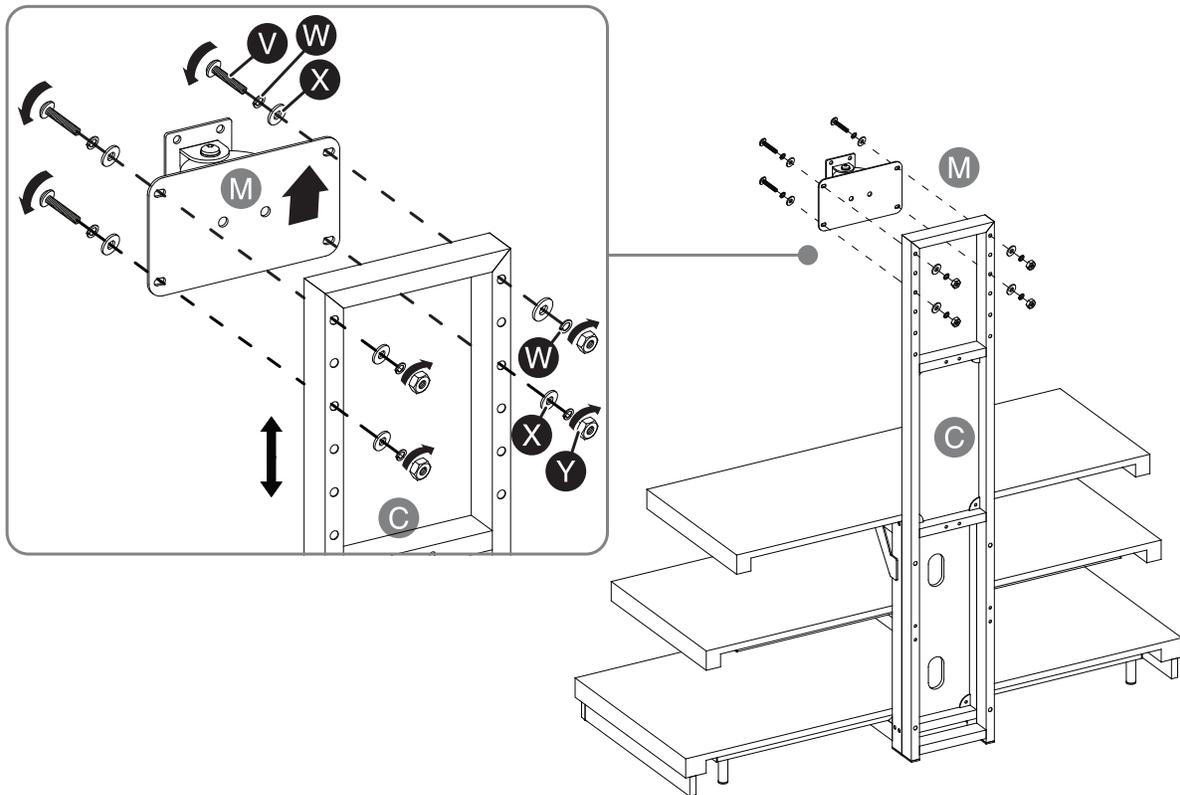

### You'll need:

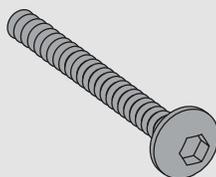

**V** (4)



**W** (8)



**X** (8)



**Y** (4)




**DD** (1)



**EE** (1)

### Step 3: Attach the mounting frame to the swivel bracket

- 1 Hold the flat side of the mounting frame (**N**) against the swivel bracket (**M**), aligning the holes. Make sure that the two recessed holes on mounting frame (**N**) are at the bottom.
- 2 Insert a 1/2" bolt (**S**), with a lock washer (**W**) and a flat washer (**X**), through the hole in the swivel bracket (**M**), then screw it into the threaded hole on the mounting frame (**N**).
- 3 Repeat this for the three remaining holes joining the swiveling bracket (**M**) to the mounting frame (**N**).
- 4 Securely tighten with the 4 mm hex key (**EE**).

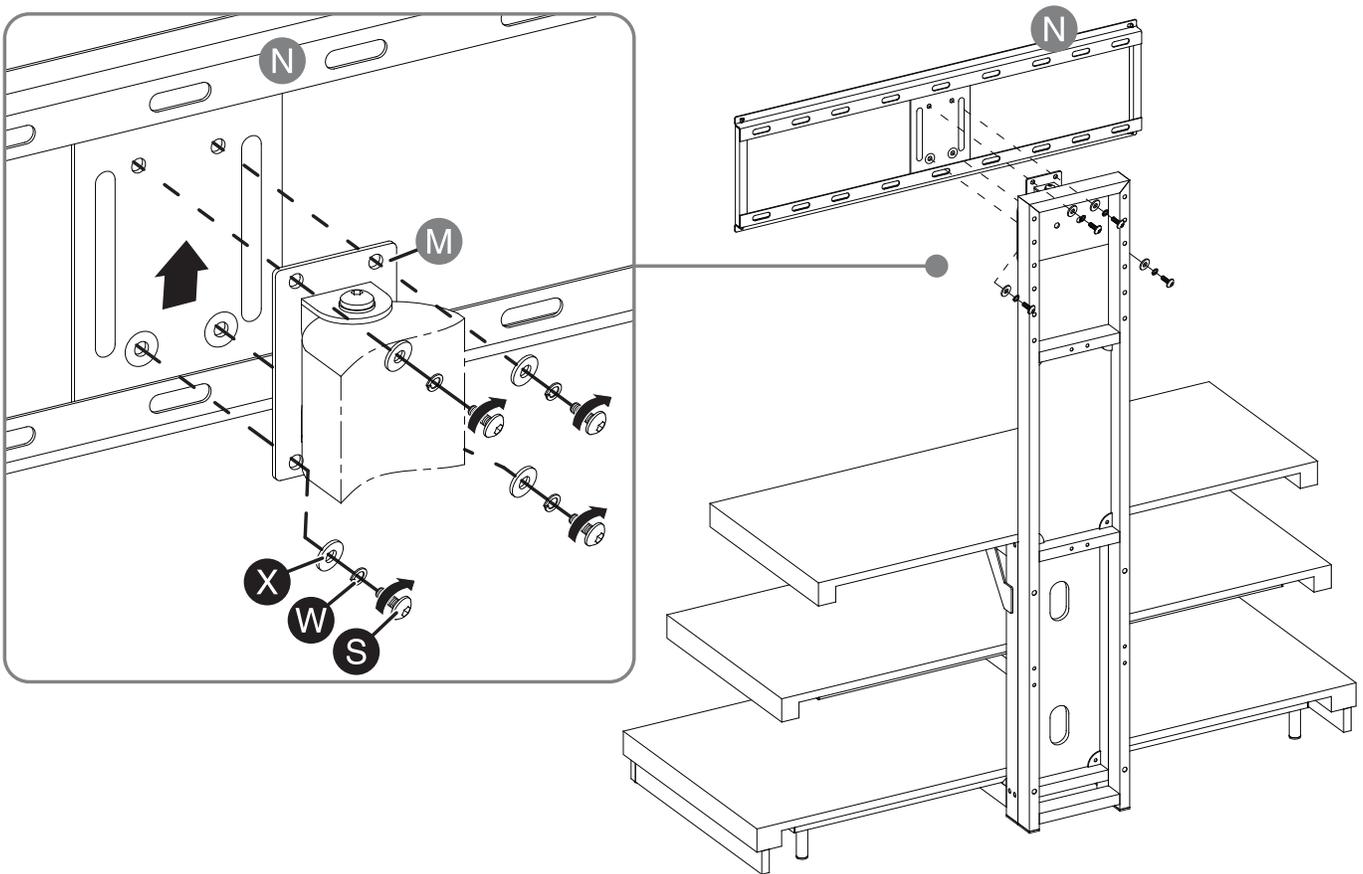


#### You'll need:



S (4)



 W (4)




X (4)



EE (1)

### Step 4: Attach the cable clips


- Attach the cable clips (Q) to the back of the long rear support (C) in two of four possible locations with two 5/8" bolts (T) per cable clip.

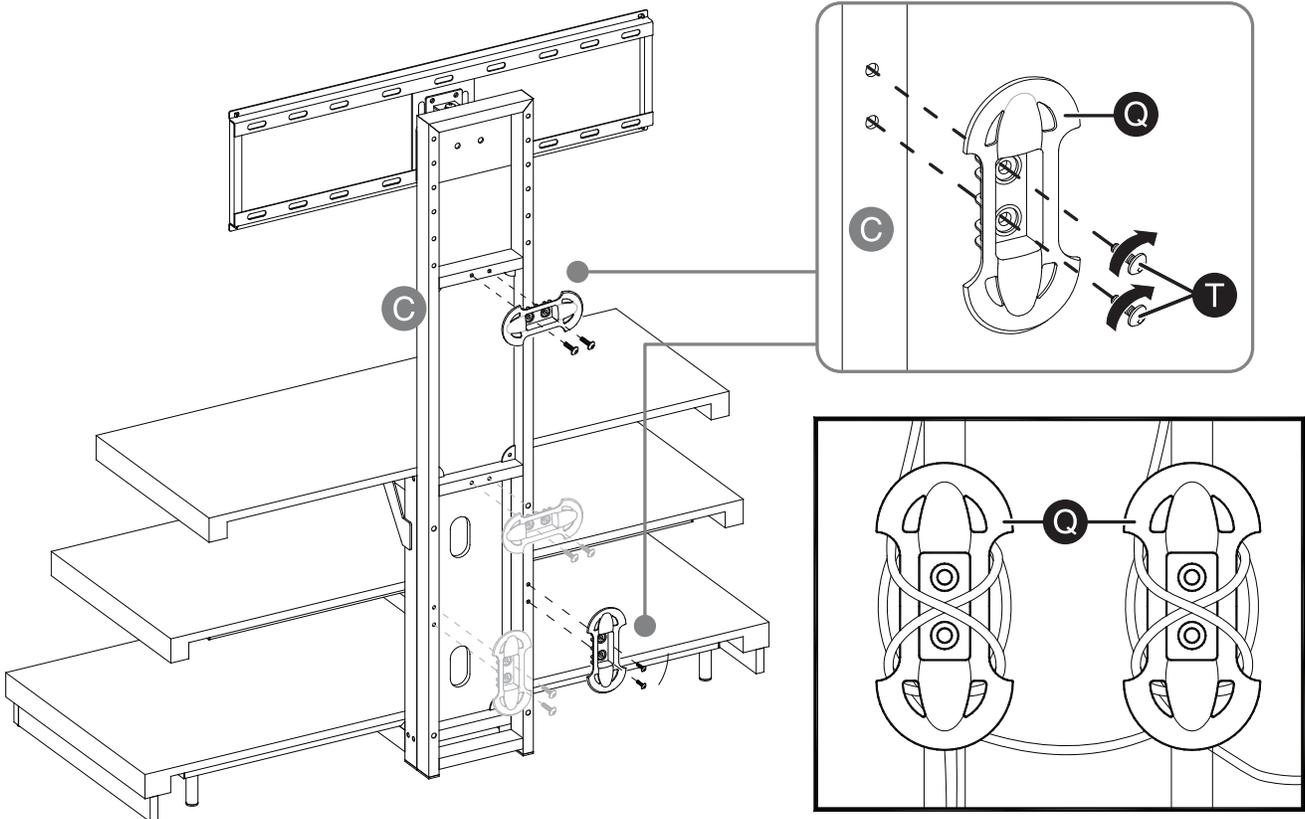

#### You'll need:



 Q (2)




T (4)



EE (1)

## Step 5: Attaching the TV to the mounting frame on the swivel bracket

- 1 Attach the TV brackets (P) to the back of the television following the steps on pages 18, 19, and 20, depending on the type of TV that you own.
- 2 Lift the TV up to the mounting frame (N).
- 3 Set the hooks on TV brackets (P) over the mounting frame (N), then lower the hooks onto the bars of the mounting frame.
- 4 Center the TV, then secure it in place using a screwdriver to tighten the safety bolt on the bottom hooks. Tighten until the safety bolt hits the underside of the mounting frame.

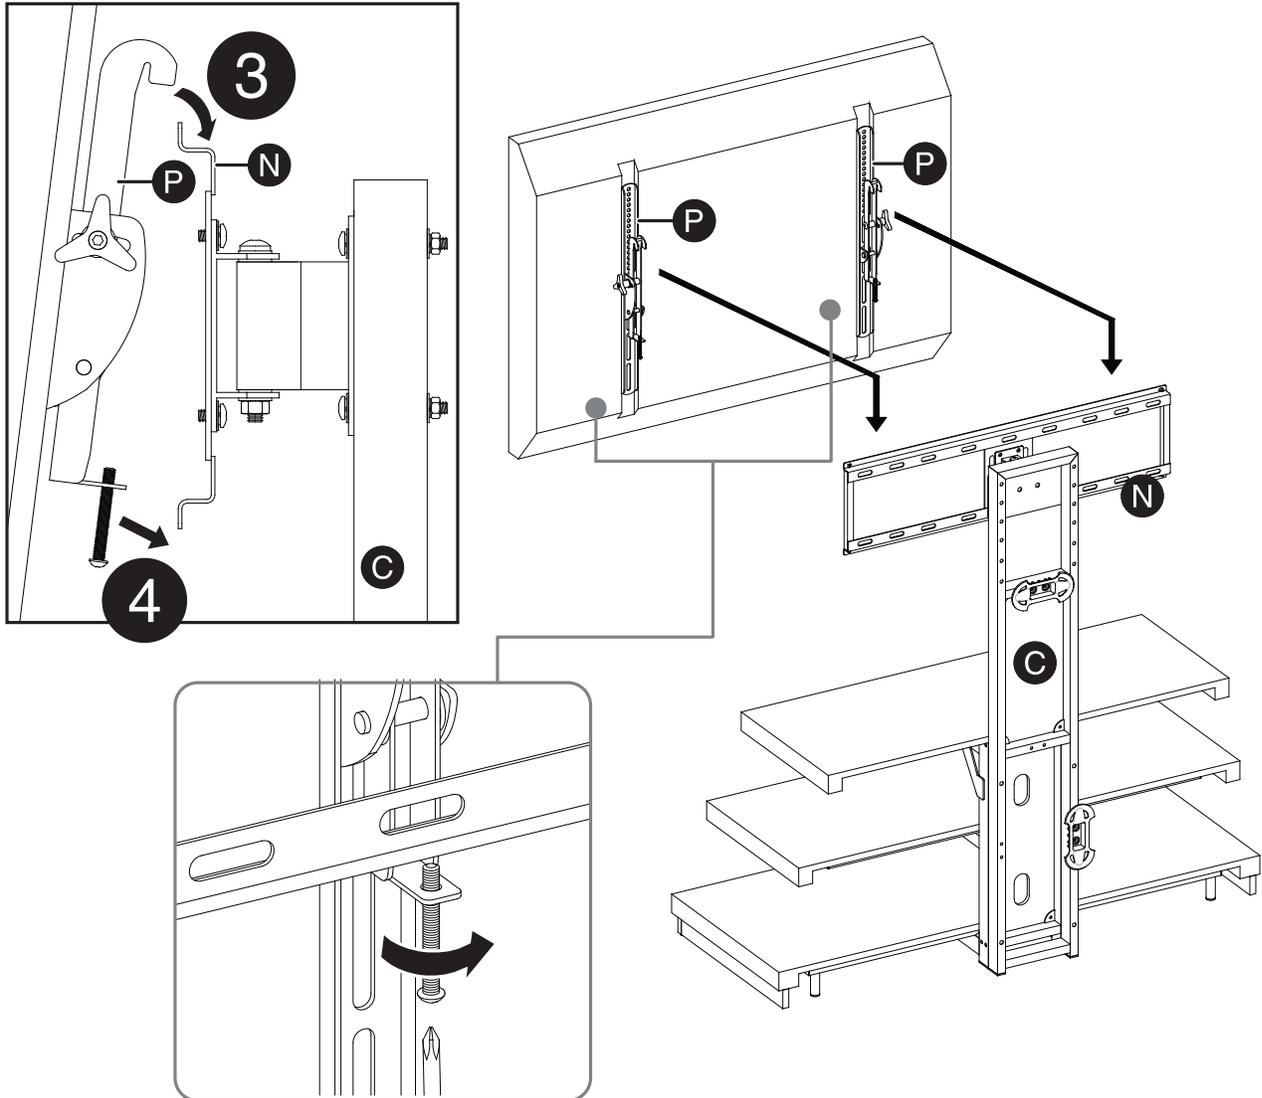

### You'll need:




Phillips screwdriver


## Step 6: Adjusting the tilt

The TV brackets (P) allow you to make a tilt adjustment of up to 11° down and 5° up to provide optimum viewing and minimize glare.

- 1 Loosen the tension knobs on both TV brackets (P), then grasp the edge of the TV and move it up or down to the position you want.
- 2 Turn the tension knob clockwise to secure the brackets in position. Use the the 4.76 mm hex wrench (Z) to tighten the tension knobs, if necessary.

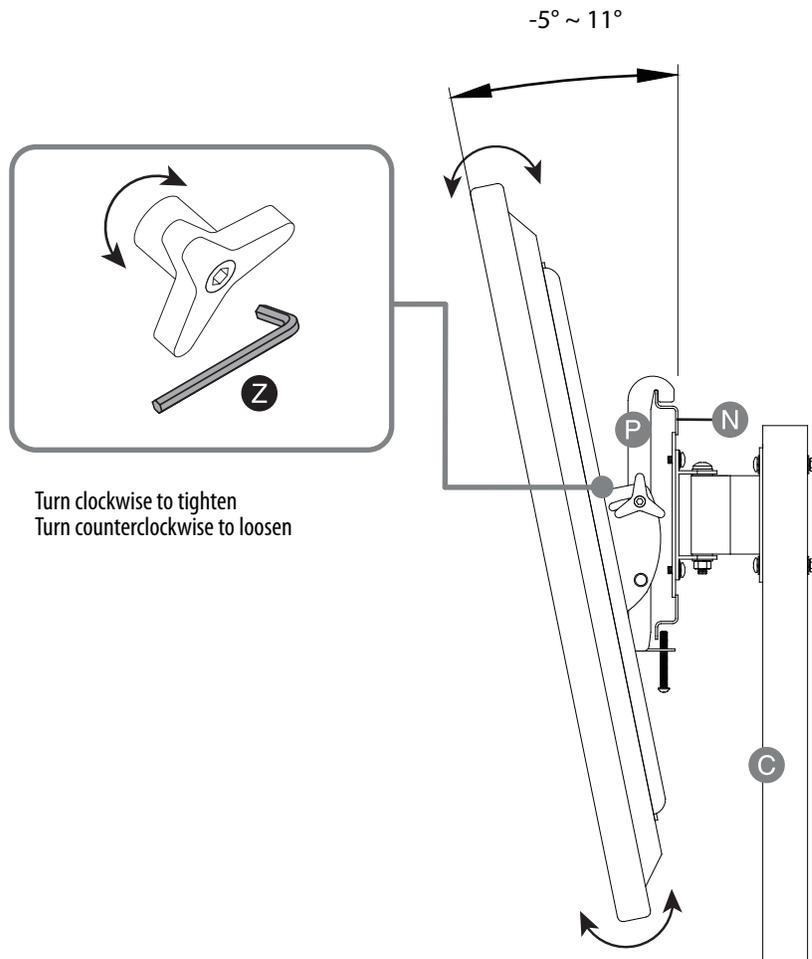


### You'll need:

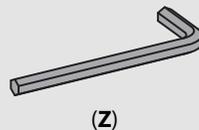

### Step 7: Position the TV stand and install the tipping restraint hardware kit

- 1 Position the assembled stand against a wall where you plan to use it.
- 2 If necessary, adjust the leveling feet to level the TV stand.
- 3 Follow the instructions printed on the bag containing the tipping restraint hardware kit (GG) to attach the restraint hardware to the wall and the stand.


**WARNING:** It is very important that the tipping restraint be installed correctly. Failure to do this could result in your TV/stand assembly falling forward, resulting in damage to equipment or personal injury.

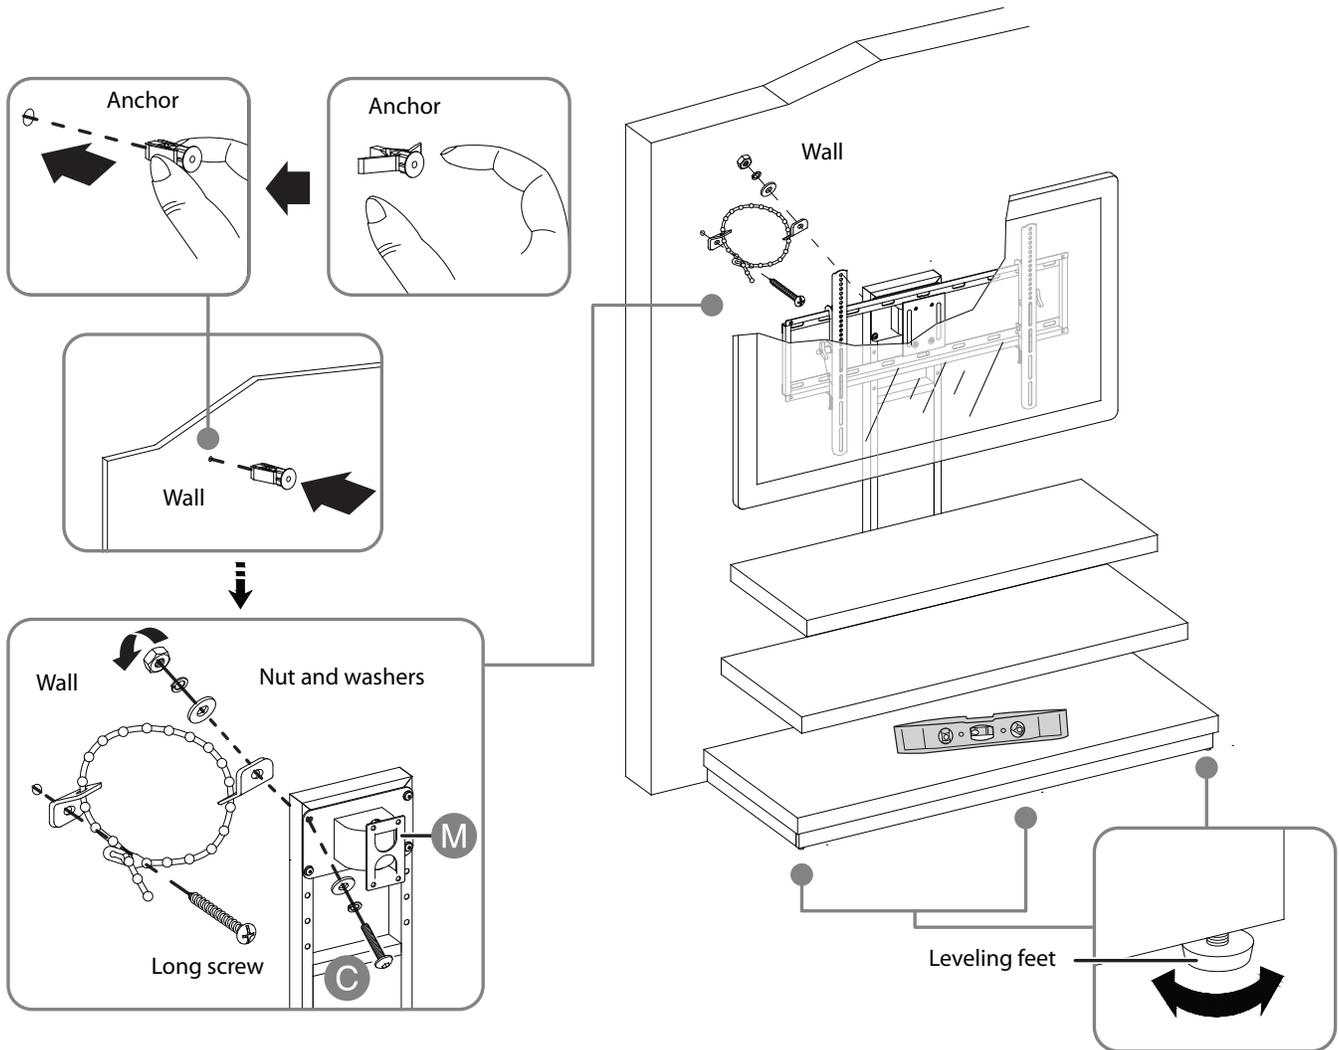

**You'll need:**



GG (1)

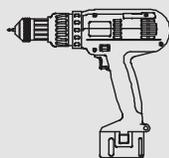

Power drill



3/8" masonry or wood drill bit



Level

# CARE AND MAINTENANCE

## Wood/Laminate

- Use your favorite type of furniture polish.
- Do not spray polish directly onto the stand. Spray onto a soft cloth then wipe the stand.
- Always test any polish in a discrete location first, such as the back of the stand, to make sure that there is no adverse reaction.
- Dust frequently with a soft cloth.
- Never slide objects across surfaces. Lift objects from the top surface rather than dragging them across the finish when moving them.
- Do not expose your stand to direct sunlight, drying heat sources, or dampness.

## Glass

- Use a commercial liquid glass cleaner and a soft cloth.
- Do not use harsh powders or any other abrasive substances as they will scratch the glass.
- Clean spills immediately with a soft, damp cloth.
- Protect surfaces by using felt, leather, or cork under accessories.
- Use a protective pad when using your stand as a writing surface (especially when using a ballpoint pen).
- Dust frequently with a soft cloth.

### WARNING

Please use your stand correctly and safely. Improper use can cause safety hazards or damage to your furniture or household items. Carefully read the following chart.

Look out for:	What can happen:	How to avoid the problem:
<ul style="list-style-type: none"> <li>• Children climbing on the stand.</li> <li>• A child may try to reach a toy or other object by climbing on the stand.</li> <li>• Children will play and be active near the TV.</li> </ul>	<ul style="list-style-type: none"> <li>• Risk of injury or death.</li> <li>• A child climbing on the stand can make it top-heavy and cause it to tip over.</li> <li>• A child playing with a TV can cause it to tip over.</li> </ul>	<ul style="list-style-type: none"> <li>• Never allow children to climb on or play with the stand.</li> <li>• Do not place toys or food on the top shelves. Children may try to climb to reach them out of curiosity.</li> </ul>
<ul style="list-style-type: none"> <li>• Improper use of the stand to support TVs.</li> <li>• The stand is designed for use with TVs will specify the maximum weight rating and recommended size of the TVs it will safely support.</li> </ul>	<ul style="list-style-type: none"> <li>• Risk of injury or death.</li> <li>• TVs can be very heavy. Note, older CRT TVs tend to be unbalanced and prone to tipping forward.</li> </ul>	<ul style="list-style-type: none"> <li>• A TV must only be set on furniture specifically designed to support a television.</li> <li>• Never use a TV that exceeds the weight ratings or size guidelines specified for the stand.</li> </ul>
<ul style="list-style-type: none"> <li>• Overloaded shelves.</li> </ul>	<ul style="list-style-type: none"> <li>• Risk of injury.</li> <li>• Top-heavy furniture can tip over.</li> <li>• Overloaded shelves can break.</li> </ul>	<ul style="list-style-type: none"> <li>• Never exceed the weight limits shown in the instructions.</li> <li>• Work from the bottom to the top when loading shelves.</li> <li>• The bottom shelves can only support 50 lbs. while the top can support 135 lbs.</li> </ul>
<ul style="list-style-type: none"> <li>• Improperly moving the stand.</li> </ul>	<ul style="list-style-type: none"> <li>• The stand can tip over or break if improperly moved.</li> <li>• Risk of injury.</li> </ul>	<ul style="list-style-type: none"> <li>• Unload shelves from the top to the bottom before moving the stand.</li> <li>• Do not push the stand, especially on a carpeted floor. Have a friend help you lift the item and set it in place.</li> <li>• Do not lift the stand using the top shelf. Lift from the frame or leg assembly.</li> <li>• Remove the TV before moving the TV stand.</li> </ul>
<ul style="list-style-type: none"> <li>• The TV/stand assembly tipping forward.</li> </ul>	<ul style="list-style-type: none"> <li>• Risk of injury.</li> <li>• Top-heavy furniture can tip over.</li> <li>• The TV and stand could be damaged.</li> </ul>	<ul style="list-style-type: none"> <li>• Use the tipping restraint hardware provided and install it properly.</li> </ul>

# ONE-YEAR LIMITED WARRANTY

## Definitions:

The Distributor\* of Insignia branded products warrants to you, the original purchaser of this new Insignia-branded product ("Product"), that the Product shall be free of defects in the original manufacture of the material or workmanship for a period of one (1) year from the date of your purchase of the Product ("Warranty Period").

For this warranty to apply, your Product must be purchased in the United States or Canada from a Best Buy branded retail store or online at [www.bestbuy.com](http://www.bestbuy.com) or [www.bestbuy.ca](http://www.bestbuy.ca) and is packaged with this warranty statement.

## How long does the coverage last?

The Warranty Period lasts for 1 year (365 days) from the date you purchased the Product. Your purchase date is printed on the receipt you received with the Product.

## What does this warranty cover?

During the Warranty Period, if the original manufacture of the material or workmanship of the Product is determined to be defective by an authorized Insignia repair center or store personnel, Insignia will (at its sole option): (1) repair the Product with new or rebuilt parts; or (2) replace the Product at no charge with new or rebuilt comparable products or parts. Products and parts replaced under this warranty become the property of Insignia and are not returned to you. If service of Products or parts are required after the Warranty Period expires, you must pay all labor and parts charges. This warranty lasts as long as you own your Insignia Product during the Warranty Period. Warranty coverage terminates if you sell or otherwise transfer the Product.

## How to obtain warranty service?

If you purchased the Product at a Best Buy retail store location or from a Best Buy online website ([www.bestbuy.com](http://www.bestbuy.com) or [www.bestbuy.ca](http://www.bestbuy.ca)), please take your original receipt and the Product to any Best Buy store. Make sure that you place the Product in its original packaging or packaging that provides the same amount of protection as the original packaging.

To obtain warranty service, in the United States and Canada call 1-877-467-4289. Call agents may diagnose and correct the issue over the phone.

## Where is the warranty valid?

This warranty is valid only in the United States and Canada at Best Buy branded retail stores or websites to the original purchaser of the product in the county where the original purchase was made.

## What does the warranty not cover?

This warranty does not cover:

- Customer instruction/education
- Installation
- Set up adjustments
- Cosmetic damage
- Damage due to weather, lightning, and other acts of God, such as power surges
- Accidental damage
- Misuse
- Abuse
- Negligence
- Commercial purposes/use, including but not limited to use in a place of business or in communal areas of a multiple dwelling condominium or apartment complex, or otherwise used in a place of other than a private home.
- Modification of any part of the Product, including the antenna
- Display panel damaged by static (non-moving) images applied for lengthy periods (burn-in).
- Damage due to incorrect operation or maintenance
- Connection to an incorrect voltage or power supply
- Attempted repair by any person not authorized by Insignia to service the Product
- Products sold "as is" or "with all faults"
- Consumables, including but not limited to batteries (i.e. AA, AAA, C etc.)
- Products where the factory applied serial number has been altered or removed
- Loss or Theft of this product or any part of the product
- Display panels containing up to three (3) pixel failures (dots that are dark or incorrectly illuminated) grouped in an area smaller than one tenth (1/10) of the display size or up to five (5) pixel failures throughout the display. (Pixel based displays may contain a limited number of pixels that may not function normally.)
- Failures or Damage caused by any contact including but not limited to liquids, gels or pastes.

REPAIR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS YOUR EXCLUSIVE REMEDY FOR BREACH OF WARRANTY. INSIGNIA SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR THE BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT, INCLUDING, BUT NOT LIMITED TO, LOST DATA, LOSS OF USE OF YOUR PRODUCT, LOST BUSINESS OR LOST PROFITS. INSIGNIA PRODUCTS MAKES NO OTHER EXPRESS WARRANTIES WITH RESPECT TO THE PRODUCT, ALL EXPRESS AND IMPLIED WARRANTIES FOR THE PRODUCT, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTIES OF AND CONDITIONS OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE WARRANTY PERIOD SET FORTH ABOVE AND NO WARRANTIES, WHETHER EXPRESS OR IMPLIED, WILL APPLY AFTER THE WARRANTY PERIOD. SOME STATES, PROVINCES AND JURISDICTIONS DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS, WHICH VARY FROM STATE TO STATE OR PROVINCE TO PROVINCE.

Contact Insignia:

**1-877-467-4289**

[www.insigniaproducts.com](http://www.insigniaproducts.com)

INSIGNIA is a trademark of Best Buy and its affiliated companies.

\*Distributed by Best Buy Purchasing, LLC

7601 Penn Ave South, Richfield, MN 55423 U.S.A.

©2019 Best Buy. All rights reserved.

# INSIGNIA™

1-877-467-4289 (U.S. and Canada) or 01-800-926-3000 (Mexico)  
[www.insigniaproducts.com](http://www.insigniaproducts.com)

INSIGNIA is a trademark of Best Buy and its affiliated companies.  
Registered in some countries.

Distributed by Best Buy Purchasing, LLC  
7601 Penn Ave South, Richfield, MN 55423 U.S.A.  
©2019 Best Buy. All rights reserved.

U.S. Patents 8,079,311 & 8,191,485  
U.S. Patent 9,215,927



Mount WH60™ meets public  
safety requirements as designated  
by the Underwriters Laboratories  
in both US & Canada

V5 ENGLISH  
19-0691