



GFI27DBXA

GAME MONITOR

USER MANUAL



In order to continue serving our customers and providing the best products, our product information including our user manuals may receive updates from time to time. Please check our website for the latest user manuals and product materials.

Table of Contents

- Section 1: Safety Precautions.....4**
- Section 2: Box Contents.....5**
- Section 3: Product Overview6**
 - 3.1 – Monitor Buttons6
 - 3.2 – Monitor Ports.....7
- Section 4: Stand Installation.....7**
- Section 5: Mount Installation9**
- Section 6: Basic Operation10**
- Section 7: Indicator Light10**
- Section 8: OSD11**
 - 8.1 – OSD Menu Functions12
- Section 9: ECO Modes and Gameplus14**
- Section 10: Troubleshooting15**
- Section 11: Specifications16**
- Section 12: Three-Year Limited Hardware Warranty17**

Section 1: Safety Precautions

Read and observe the following warnings and information below.


1. Before cleaning, always unplug your monitor. It is recommended that you use dry cloth or lightly damp cloth to clean your monitor. Dry cloth is, however, the safest. If using damp cloth, wait for your monitor to completely dry before plugging it in again.
2. Do not use alcohol or ammonia-based cleaner and/or liquids to clean your monitor.
3. This monitor features ventilation openings on the back of the unit. Avoid blocking these openings to prevent the monitor from overheating.
4. Avoid placing this monitor near any heat sources, e.g., portable heaters or heating vents, as this may cause damage to your monitor.
5. Do not spray cleaner and/or any kind of liquid directly onto the monitor's screen or any part of the monitor.
6. Do not insert anything into any part of the monitor especially the ventilation openings.
7. Always make sure your monitor is placed on a secure, level surface to prevent it from falling and sustaining damage.
8. Unplug your monitor during any extended periods of non-use.
9. Do not place heavy items on the monitor or monitor cables.
10. Do not attempt to disassemble or remove parts from the monitor. Any disassembly or modification etc. not performed by an authorized technician can result in damage to the monitor and/or possible exposure to high voltage electricity which may lead to serious injury or death.

VIOTEK® shall not be held responsible for injury or damage of products or persons due to failure to adhere to the aforementioned precautions or any others noted hereafter.




The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing Administrator, Inc. in the United States and other countries.

Section 2: Box Contents

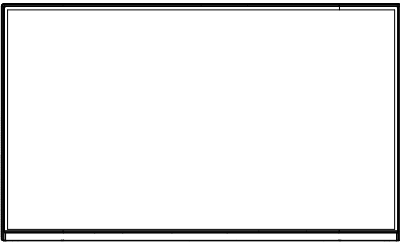

Monitor x 1

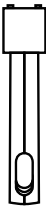

Stand Stem x 1



Stand Base x 1



Power Cable x 1
(AC 100-240V, 50/60Hz)



DP Cable x 1



Screw x 1




User Manual x 1

Section 3: Product Overview

3.1 – Monitor Buttons

Rocker Button

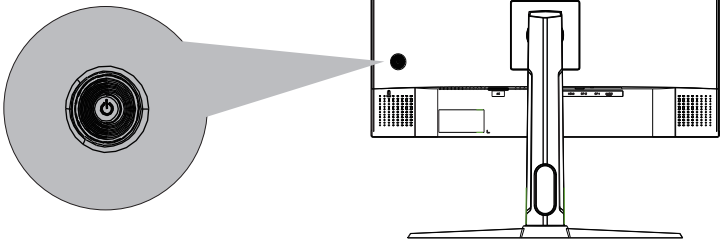


Actions	Description
Rocker Up	Gameplus timer shortcut key
Rocker Down	Gameplus sight shortcut key
Rocker Left	Display mode menu shortcut key
Rocker Right	Signal source selection menu shortcut key
Press Rocker	Press and hold for ~6s to turn on or off the monitor. Quick-press to enter the OSD menu. Quick-press to Confirm operations / settings

Menu Navigation:


Actions	Description
Rocker Up	Move up
Rocker Down	Move down
Rocker Left	Return to previous menu/ Adjust value
Rocker Right	Enter next menu / Adjust value

3.2 – Monitor Ports

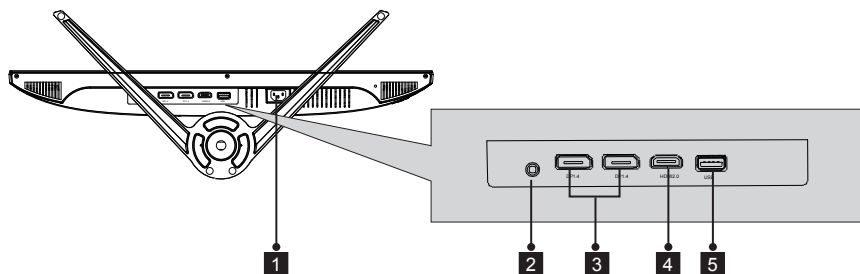


- 1 Power Connector:** Insert the power cable to supply power to the monitor.
- 2 Audio Output:** Insert the audio cable for output of audio signals.
- 3 DP Connectors:** Insert one end of the DP cable into the computer's DP output and connect the other end to the monitor's DP port.
- 4 HDMI Connector:** Insert one end of the HDMI cable into the computer's HDMI output and connect the other end to the monitor's HDMI port.
- 5 USB Port:** The USB port is only for firmware update using USB portable device. Do not insert any other equipment.


Section 4: Stand Installation

 Keep the foam underneath the monitor before attaching the stand.


1. Open the package and take out the monitor with foam still attached. Gently place it face-down on a desktop or table.
2. Take out the stem and base. Use the included screwdriver and one screw to fasten base to the stem.

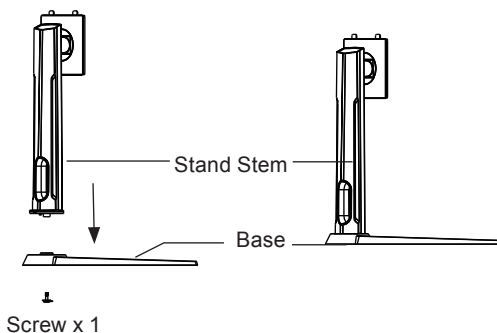

3. Remove the foam covering the back of the monitor. Locate the two top slots of the opening on the back of monitor. Insert the mounting plate into the two top slots. Continue to press in until it clicks into place to make sure the stand is installed in place.

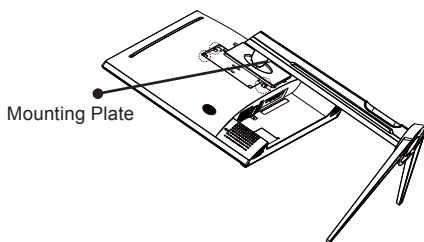


4. Place the monitor on your desktop or table after completing the installation and carefully adjust monitor's height, angle and/or orientation as desired.

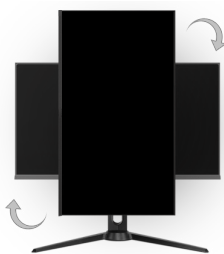

Orientation adjust 90°
* (Base must be raised to complete 90° rotation.)



Height adjust 5.31 in. (135 mm)

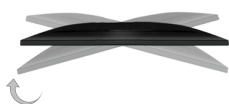


Pivot adjust 20°



Tilt adjust +5° / -15°


5. With the stand fully assembled, remove the remaining foam on monitor and stand it up on a flat, level desktop or table. Press the button to remove the monitor from the bracket if mounting.

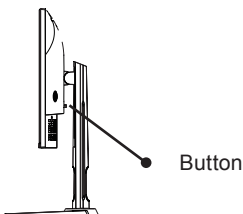


Make sure the monitor is laid on a flat surface before removing the stand.

Section 5: Mount Installation


1. Open the package and take out the product with foam still attached. Gently place it on a desktop or table. Remove the extra parts and the foam covering the monitor. If the monitor is already attached to the stand, remove the stand.

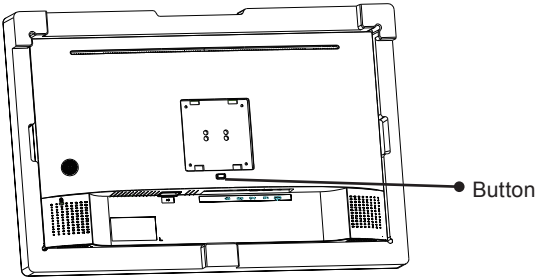

2. Tighten four screws (not included) onto the mounting holes on back of monitor.

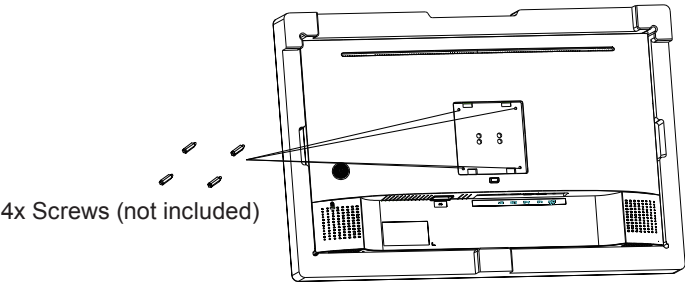


3. Install the monitor on the wall, mount, or fixture as desired.

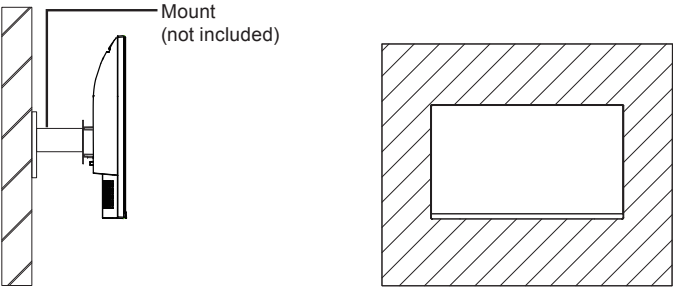

Section 6: Basic Operation

1. Insert one end of the DP cable (included) into your PC's graphics card. An HDMI cable (not included) may also be used.
2. Connect the other end of the cable to the corresponding port on your monitor.

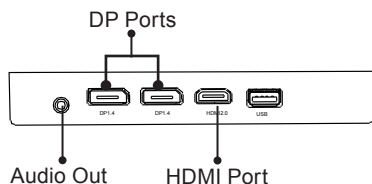


3. Connect the power cable to your monitor, then connect the other end to your power source. It is recommended that you use a surge protector with adequate voltage if a wall outlet cannot be reached directly.
 4. Locate the power button on the monitor and press and hold it for ~6s to turn the monitor on.
- ⓘ If you cannot locate the power button, please refer to Section 3.1. Connecting an audio device (headphones, external speaker, etc.) through the audio out port may disable other audio devices.

AMD FreeSync


The feature itself is off by default. In order to use this feature, please note you must have hardware with FreeSync capability, a DP cable, and the latest graphic drivers. To use this feature, connect your computer and monitor with a DP cable. After connecting, you may receive a prompt to enable the feature on your computer. If you do not receive the prompt, you may need to enable the function in your graphics card menu. See your graphics card manufacturer's documentation for instructions on how to turn on and/or enable FreeSync.

Section 7: Indicator Light

Solid blue light indicates power is on and the monitor is operating normally. Flashing blue light indicates no video source, no horizontal or vertical signal has been detected or voltage is low. Please ensure your computer is on and all video cables are fully inserted and/or connected.

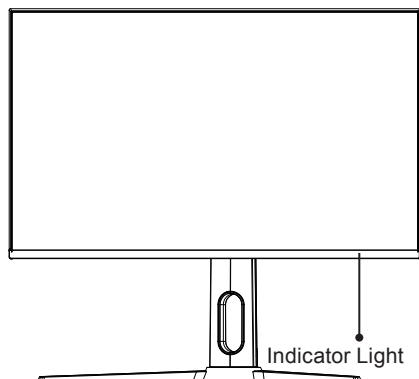


Section 8: OSD

The On-Screen Display (OSD) Menu may be used to adjust your monitor's settings and appears on screen after turning on the monitor and pressing the **Rocker**  button on back of the monitor.



When using the monitor for the first time, settings will automatically adjust to optimal settings according to your computer's standard configuration settings.

 1. Press the **Rocker**  button to enter the OSD screen.

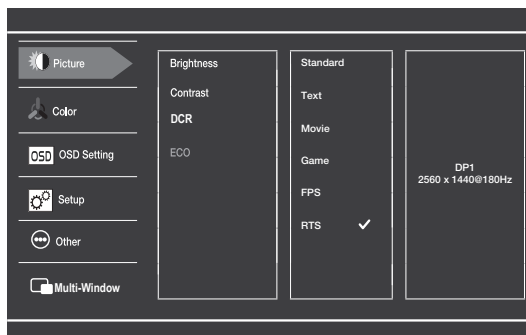

2. Push the Rocker button **up** or **down** to browse functions.
 - a. Highlight the functions you want to set and push the Rocker button to the **right** to enter the sub-menu.
 - b. Push the Rocker button **up** or **down** to browse the sub-menu. Then push the Rocker button to the **right** to highlight the functions you want to set.
 - c. Push the Rocker button **up** or **down** to highlight the options. Then push the Rocker button to the **right** to confirm the settings and exit the current screen.
3. Push Rocker button to the **left** to return to exit the current screen and return to the previous menu.


8.1 – OSD Menu Functions

Main Menu	Sub-Menu	Options	Description
Picture	Brightness	0~100	Adjust display brightness
	Contrast	0~100	Adjust display contrast
	DCR	On	Turn on DCR function
		Off	Turn off DCR function
	ECO	Standard, Text, Movie, Game, FPS, RTS	Set visual display mode
Color	Color temperature	Normal, Warm, Cool, User	Set the display color temp. based on your preference
	Red	0~50	Customize RGB components
	Green	0~50	
	Blue	0~50	
OSD Setting	Language	English, 简体中文, 한국어, Español, Русский, 日本語, Français	Set OSD language
	OSD H-Postion	0-100	Adjust the OSD horizontal position
	OSD V-Postion	0-100	Adjust the OSD vertical position
	OSD Transparency	0-100	Set the OSD overall transparency
	OSD Time Out	0~60	Set how long the OSD remains open after non-use
Setup	Input Source	DP1, DP2, HDMI	Display and/or change the input signal
	Audio Source	N/A	Choose the audio source from different sources when multi-window is in use.
	Reset	N/A	Reset monitor configurations
	Firmware Update	N/A	Check for and download firmware updates for the monitor (must connect the monitor using the USB input and be connected to the Internet)


Main Menu	Sub-Menu	Options	Description
Other	Aspect Ratio	Wide Screen, 4:3, 1:1, Auto	Set aspect ratio
	Low blue light	Off, Low, Medium, MaxHigh	Set blue light filtering level
	Response Time	On, Off	Turn on or off response time
	FreeSync	On, Off	Turn the FreeSync/G-sync function on/off
	HDR	On, Off	Turn on or off HDR function
Multi-Window	Multi-Window	Off, PIP Mode, PBP 2Win, PBP 3Win	Select the corresponding combination of PIP/PBP according to the number of input signal channel.
	Sub Win2 Input	DP1, DP2, HDMI	Select Sub Win2 for PIP/PBP video source.
	Sub Win3 Input	DP1, DP2, HDMI	Select Sub Win3 for PIP/PBP video source.
	PIP Size	Small, Medium, Large	Adjust the PIP/PBP display window size
	PIP Position	Top Right, Top Left, Bottom Right, Bottom Left	Adjust the PIP/PBP window position
	Swap	N/A	Swap the PIP/PBP signal sources

Section 9: ECO Modes and Gameplus

1. Push the Rocker button to the **left** to switch ECO modes. These modes (Standard, Text, Movie, Game, FPS, and RTS) can be used to optimize settings according to your activity. Standard mode is suitable for most activities.

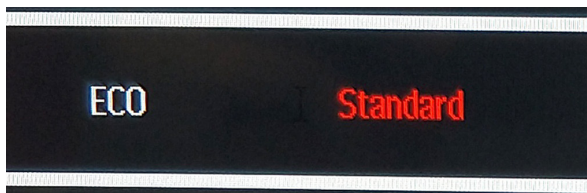


2. Push the Rocker button to the **right** to switch select signals input source.

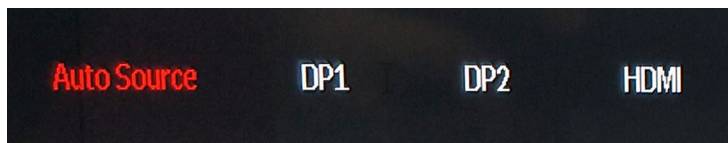

3. Push the Rocker button **up** to switch Gameplus modes. Choose the crosshair icon best suited for your game. These game icons are primarily designed to optimize your aim during shooting games, though they can be used for other purposes.



4. Push the Rocker button **down** to set the GAME TIME.

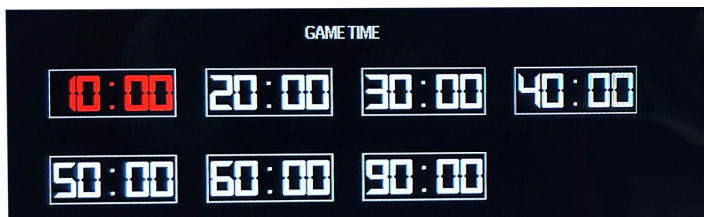

Section 10: Troubleshooting

The screen is blank

- Press the power button to turn on the monitor.
- Confirm the brightness and contrast settings are set normally.
- Check if the indicator light is flashing. If so, this indicates there is no signal from your video source.
- If your source is a notebook or laptop, be sure that its settings are in mirror or extension mode and the device itself is powered on.

The image is out of focus

- Ensure the video cable is inserted properly at both ends.

The screen is flashing

- Try an alternative power source. Insufficient current can be causing this issue.
- Ensure devices such as non-shielded speakers, fluorescent lighting, AC transformers, table fans, etc., are a safe distance away from your screen to avoid magnetic disturbances.

The color bleeds or visual effects appear unusual.

- If your screen is all red or blue, or any colors disappear, check to see that the cable is properly inserted. A loose connection can cause a bad signal.
- Try connecting to another video source for comparison.

The screen appears to be scrolling, rolling, or moving unusually.

- Check that your source frequency is within 60Hz.
- Reconnect and ensure your video cable is secure.

The monitor needs cleaning

- Make sure the monitor has been powered off before cleaning.
- Always use soft, non-abrasive cloth when cleaning.
- Use dry, non-abrasive cloth to gently remove debris or dust.
- If necessary, lightly dampen a non-abrasive cloth with water and gently clean the surface.
- Never use alcohol or ammonia-based cleaning solutions.
- Never spray liquid directly onto any part of the monitor.

The indicator light does not work

- Check that the power is on.
- Check that the power line connected with power.

Cannot plug and play.

- Ensure the monitor is compatible with PC.
- Ensure the graphics card is compatible with the monitor.
- Check that the pins in the interface are not curved.

Dim image

- Adjust the brightness and contrast ratio.

Image jitter/moire pattern

- Nearby electric equipment may interfere with the monitor.

Light indicator is on or flashing, but there is no image displayed on screen

- Check that the monitor power is on.

- Check that the graphics card is installed properly.
- Check that the signal line connects securely with the monitor.
- Check that the pins in the interface are not curved.

Color shortage (red, green, or blue)

- Check cable connectors for curved or damaged pins. Replace cables if needed.

Image position is not centered/the size is not right

- Please adjust Clock or Auto setting.

Color difference (colors are not optimized)

- Adjust RGB color or reset color temperature.

Section 11: Specifications

Item	Detail
Model Number	GFI27DBXA
Screen Size	27"
Display Type	IPS
Viewing Angle	178°(H) / 178°(V)
Aspect Ratio	16:9
Resolution	2560 x 1440p
Backlight	E-LED
LED Indicator	Power on: Blue (solid); Power saving: Blue (flashing)
Typical Brightness	600 cd/m ² (max.)
Default Color Temp.	Default: 7500K
Color Gamut	141% sRGB; 103% NTSC
Contrast Ratio	3000:1 (Static)
Pixel pitch	0.2331 x 0.2331 mm
Response Time	3ms (1ms OD)
Refresh Rate	180Hz (max.)
Ports	DP x 2, HDMI x 1, Audio out x 1, USB x 1
Power	100-240AC 50/60HZ
Power Consumption	Max: 45W; Standby <=0.5W
OSD Language	English, 简体中文, 한국어, Español, Русский, 日本語, Français
Usage Temp.	32°F~95°F (operating), -4°F~140°F (storage), 10-90% RH (non-condensing)
Tilt Angle	Forward 5°; Backward 15°
VESA Mounting	100 x 100 mm
Dimension (With Stand)	24.22 x (16.14-21.46) x 9.65 in (615.3 x 410-545 x 245 mm)
Weight	12.13 lb. / 16.53 lb. (incl. packaging)

Section 12: Three-Year Limited Hardware Warranty

Your VIOTEK® GFI27DBXA Flat Gaming Monitor ("Product") includes a Three-Year Limited Hardware Warranty ("Warranty"). The Warranty covers product defects in materials and workmanship under normal use. This Warranty is limited to residents of the United States and Canada only and is available only to original purchasers. This Warranty gives you specific legal rights and you may also have other rights which vary from state to state. This Warranty starts on the date of your purchase and lasts for three years (the "Warranty Period"). The Warranty Period is not extended if the Product is repaired or replaced. We may change the availability of this limited warranty at our discretion, but any changes will not be retroactive. Warranty services are provided by Viotek Warranty Pro ("WP"). If a hardware defect arises and a valid claim is received within the Warranty Period, at its option and to the extent permitted by law, WP will: (1) repair the hardware defect by using new or refurbished parts that are equivalent to new in performance and reliability; or (2) exchange the Product with a new product or a refurbished one that is substantially equivalent to the original product. This Warranty is for one replacement only of like-items and does not cover items out of production if the product is no longer made or stocked. This Warranty is not assignable or transferable. The original purchaser may call WP's toll-free number at 1-855-229-9472 for service requests. When a product or part is exchanged, any replacement item becomes your property and the replaced item becomes WP's property. This warranty only covers technical hardware defectiveness during the warranty period and under normal use conditions. WP does not warrant uninterrupted or error-free operation of this Product. This Warranty does not cover any damage due to: (a) transportation; (b) storage; (c) improper use; (d) failure to follow the product instructions or to perform any preventive maintenance; (e) modifications; (f) unauthorized repair; (g) normal wear and tear; (h) overclocking; or (i) external causes such as accidents, abuse, or other actions or events beyond our reasonable control.

Important: Do not disassemble the Product. Disassembling the Product will void this Warranty. Only WP or a party expressly authorized by WP should perform service on this Product.

DISCLAIMER OF WARRANTY: THE REMEDIES DESCRIBED ABOVE ARE YOUR SOLE AND EXCLUSIVE REMEDIES AND OUR ENTIRE LIABILITY FOR ANY BREACH OF THIS LIMITED WARRANTY. OUR LIABILITY SHALL UNDER NO CIRCUMSTANCES EXCEED THE ACTUAL AMOUNT PAID BY YOU FOR THE DEFECTIVE PRODUCT, NOR SHALL WE UNDER ANY CIRCUMSTANCES BE LIABLE FOR ANY CONSEQUENTIAL, INCIDENTAL, SPECIAL OR PUNITIVE DAMAGES OR LOSSES, WHETHER DIRECT OR INDIRECT. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU. THE DURATION AND REMEDIES OF ALL IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE LIMITED TO THE DURATION OF THIS EXPRESS LIMITED WARRANTY.

DECLARATION OF CONFORMITY

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC RELATED INFORMATION:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.



COPYRIGHT © 2021 VIOTEK. ALL RIGHTS RESERVED.