


# **ROKU®**

Pro Series TV

## **Quick Start Guide**

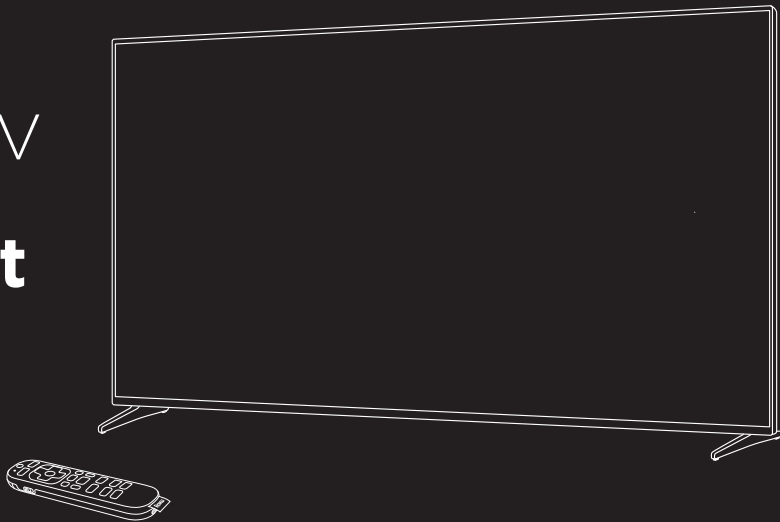

# Let's get started




© 2024 Roku, Inc. All Rights Reserved. Roku, the Roku logo, and the purple d-pad and purple fabric tag designs are trademarks or registered trademarks of Roku, Inc.


4100001069\_02

## What's included


---

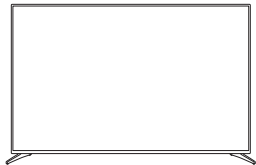

Roku Pro Series  
4K QLED TV

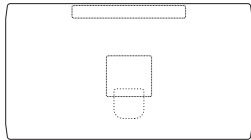

Cardboard  
TV placement guide

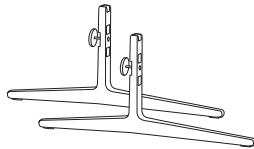

TV  
stands



Power  
cable



Remote  
charging cable



Roku Voice  
Remote Pro

## Need help?

---

For setup help or support, visit or call

**[go.roku.com/TV](https://go.roku.com/TV)**


---

**1-816-272-8106**

4:00 am – 8:00 pm PT



## STEP 1: Attach stands

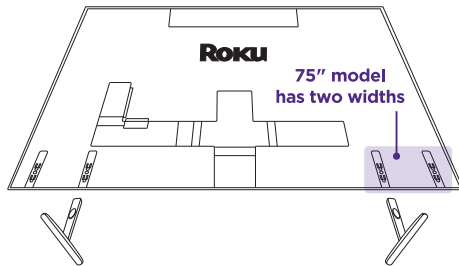


**Slide stands into slots and secure with included thumbscrews**

**Note:** Stands are adjustable.  
Choose from two different heights.


For mounting instructions,  
visit **[go.roku.com/TVmount](https://go.roku.com/TVmount)**

## STEP 2: Turn on & pair remote

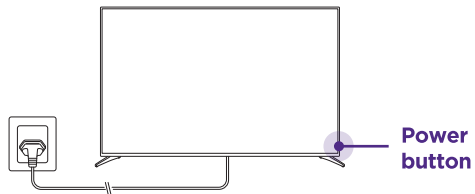

**Plug it in**

---

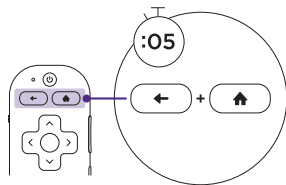

**Press and hold for 5 seconds to pair**


## STEP 3: Activate your TV



### Follow on-screen setup

**Note:** You'll need a internet connection to activate your TV.

# Get to know your remote

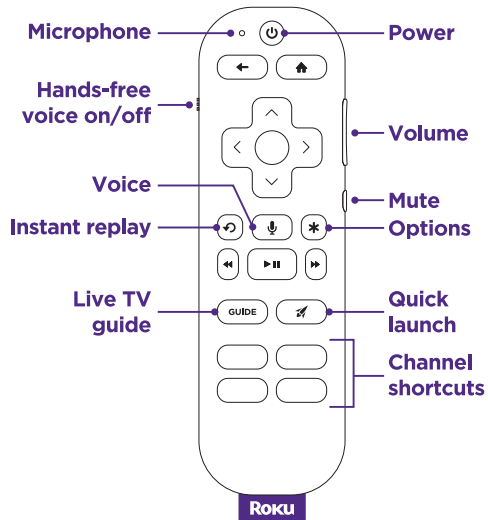



# Get to know your TV

## Video connections

### HDMI® 1 & 2

Game consoles

### HDMI 3

General video input

### Antenna/Cable

Digital antenna, cable connection

## Audio connections

### HDMI 4 eARC (recommended)

AV receivers, soundbars

### Optical

AV receivers, soundbars

## Other connections

### USB

Flash drive, charge your voice remote

### LAN

Wired internet connection

Lost remote  
finder button

