

DDP-80
Digital Piano Owner's Manual

Contents

English	1-9
Deutsche	10-18
Italiano	19-27
Français	28-36
Español	37-45
日本語	46-54

Dear Customer,

Thank you for ordering from Donner! This is Donner Customer Service Team.

After received the package, please test and see if there's any problem.

Any problem please feel free to contact us by amazon (the order page) or the email address below.



Welcome to Donner

Gmail : donnerdeal@gmail.com

Website: <https://www.donnerdeal.com/>

Thank you again for choosing Donner! Please enjoy making your own music.

***Best Regards
Donner Customer Service Team.***

FEATURES

Thank you for purchasing our digital piano. We will do our best to provide you with better service. Be sure to read this instruction carefully before using the instrument. Please keep all user documents properly for future reference when needed.

NOTE:

This is an electronic device. After power is switched on, it is common for certain current noises to be produced from the speakers (two speakers or one of the speakers, headphones). Please hold radio frequency gadgets and motorized devices, such as radios, routers, TV receivers, washing machines, and so on, away from interference sources.

DREAM Sound Source

In addition to a digital sampler, the latest top French DREAM sound source is adopted, bringing you a realistic auditory experience.

88-Key Progressive Hammer Action Keys


The 88-key progressive lever hammer keyboard, which gradually increases from treble to bass keys, gives the players a grand piano touch.

Headphone Jack


Plug your wired headphones into it while playing piano without disturbing others.

* When not used, the digital piano shuts down automatically after 30 minutes.

INSTALLATION

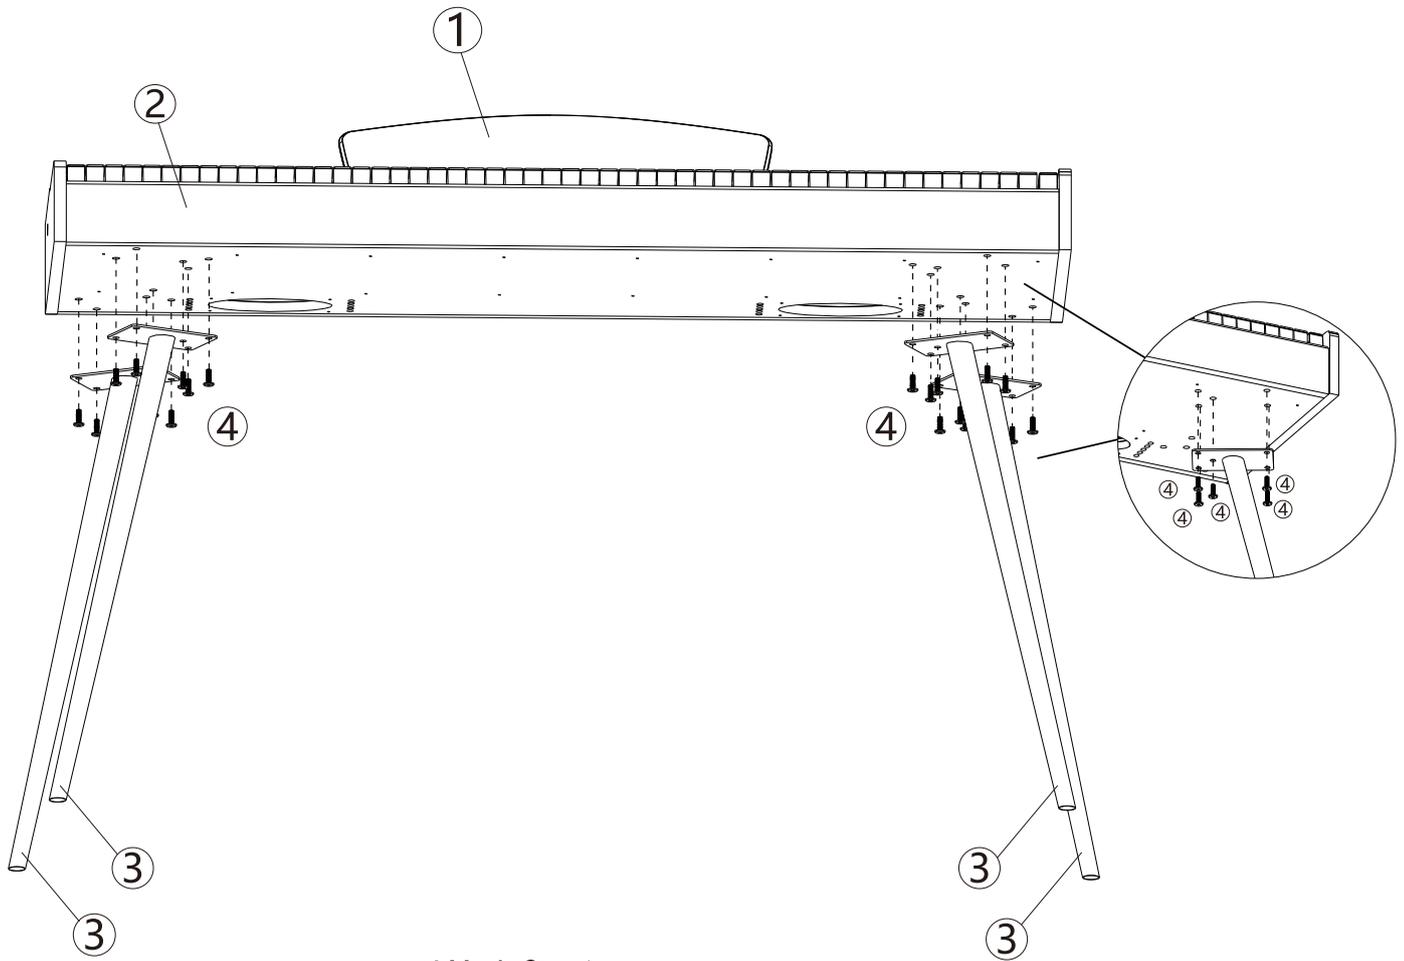


- 1. Music Stand
- 2. Piano Body
- 3. Stand board
- 4. Screws M6 x 14 (20PCS)

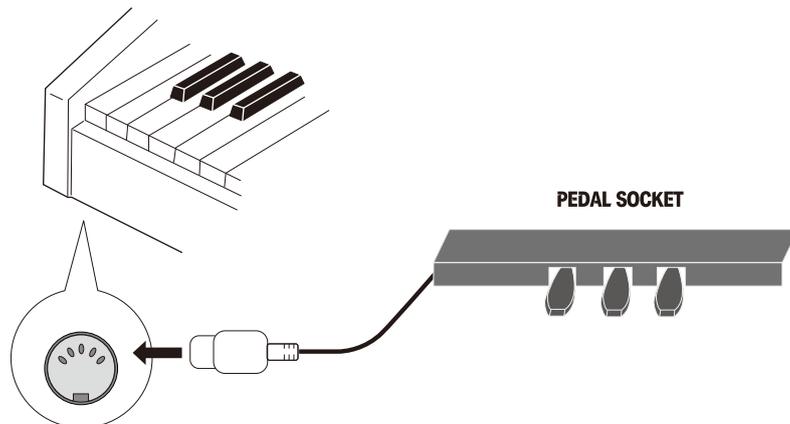

PIANO SOCKET

Rear Panel

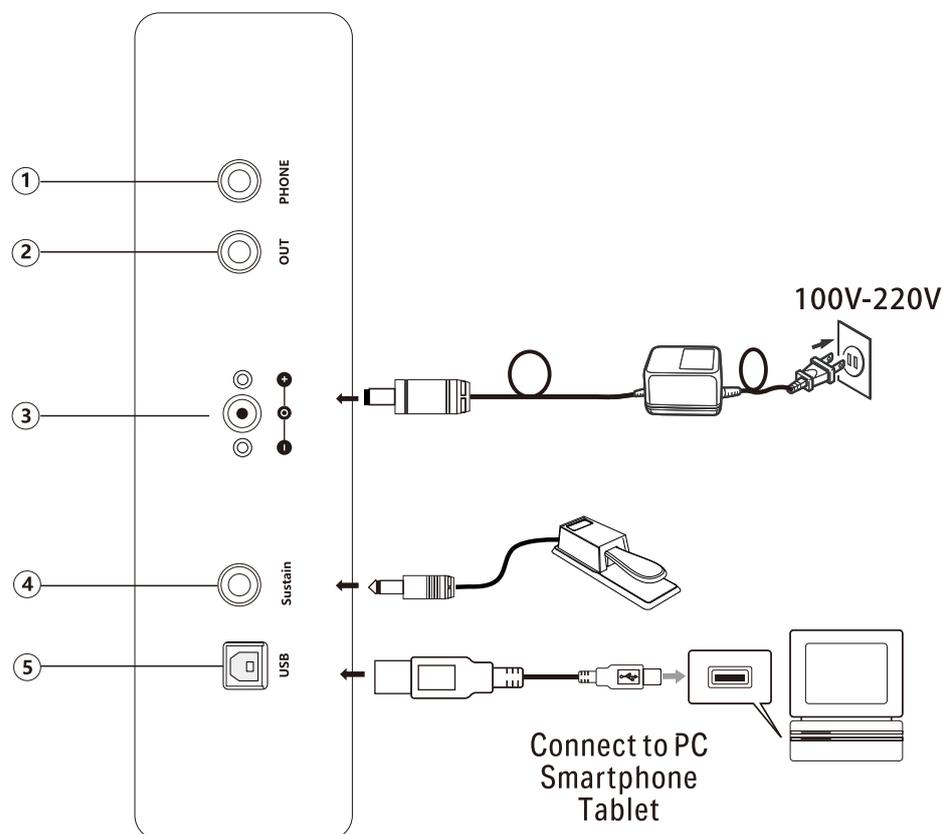

Headphone socket

If the headphones are connected, the output of the built-in speaker will be automatically cut off so you don't disturb others while playing.

Audio Output

Connect your piano to the large speaker device via this audio output socket.

When the product is not in use for an extended period of time, please unplug the power cord and store it properly.

Sustain Pedal socket

A sustain pedal is included with this digital piano. While playing, please step on the pedal as needed.

USB Port

The USB port on this digital piano allows it to be connected to a PC. You can practise, play, compose, store, and perform other functions on this piano with pre-installed music software on the PC. The edited music and the built-in accompaniment of the music software can be connected to the digital piano via the software for playback. Moreover, you can play along with the accompaniment music.

PRODUCT LIST

Name	Quantity
Piano Body	1 PC
Power Adapter	1 PC
Sustain Pedal	1 PC
Piano Stand	4 PCS
Screws	20 PCS
Manual	1 PC

MUSICAL INSTRUMENT PARAMETERS

KEY	88 key	Intonation	≤ 3 Cent
Range	A2-C5	Speaker System	$\geq 20W$ 2
Style	Vertical Piano	Power Source Parameter	DC 12V 3A

PIANO MAINTENANCE

Conscientiously do a good job in the maintenance and protection of this product. It plays an important role in prolonging the service life and reducing faults.

1.Avoid heat, dampness, or direct sunlight.

The product should not be exposed excessively to the direct sunlight, placed near the air conditioner or extremely hot places.

2.No use near TV or radio.

This product may cause video or audio interference to the reception of TV and radio. If this happens, it should be removed from the radio or TV products.

3.Don't use paint, diluent or similar chemicals to clean it.

Wet a soft towel with weak solution and detergent and wring it out until it dries. Clean the product with this towel.


4.No shaking and collision.

The product should be moved carefully. Violent shake and collision are prohibited to avoid damaging the shell or internal electronic components.

SECURITY CONSIDERATION

Power Adapter

This product can be supplied by standard indoor wall socket. Please use only the power cord specified by this product. When you do not use, please be sure to turn off the power supply. If you do not use it for a long time, please pull out the power cord and keep it properly.

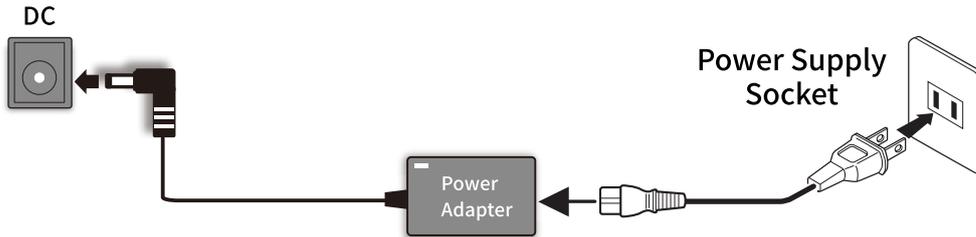

Sign

In order to ensure that you use this product safely and correctly, prevent damage to the user and other people and the financial issue. The specification and the product are marked with a series of safety signs. All kinds of signs and their meaning are as follows:

Warning

This sign indicates that, if you ignore the flag and error operation of this product, there is a fire hazard or serious injury to personnel.

Attention

This sign indicates that, if you ignore the flag and the wrong operation of this product, there is a potential risk of injury or other financial damage caused by personnel.

Logo example



This triangle mark indicates that the user should pay attention to the matters. (Left case shows "Be careful electric shock.")



The circular sign painting a slash said prohibited matters. The logo shows the specific content of the ban. (Left case shows "No Disassemble".)



Black dots indicate matters must be complied with. Icon in this sign indicates the specific content that must be followed. (Left case shows "The power plug must be pulled out of the socket.")