

Pet Grooming with the Rechargeable Clipper



Operating Instructions NiMH Rechargeable Trimmer and Li-Ion Rechargeable Trimmer

Made in USA

Part #92576
v.2020.03

For more information or Product Registration, visit WahlUSA.com

SERIES 9549, 9766, 9591-2100, 9179

BLADE MAINTENANCE

CLEANING:

To remove hair from between the blades, use the cleaning brush provided. **DO NOT USE WATER TO CLEAN THE BLADES.** For best results, after brush cleaning the blades, add Wahl clipper oil to the blades.

OIL:

The blades on your new clipper should be oiled every few haircuts. For best results, place three drops on front of the blade and one drop on each side of the blade as shown. Use only Wahl Clipper oil (a small bottle is included in this kit, additional oil can be purchased separately, see www.grooming.Wahl.com for details). **DO NOT USE HAIR OIL, GREASE, OR ANY OIL MIXED WITH KEROSENE OR ANY SOLVENT.**



CORD CARE

The cord should not be used to pull the clipper. Since freedom of movement needs to be maintained, care should be used to keep the cord untwisted and unobstructed. When stored, the cord should be coiled and the unit placed in original box or storage pouch (if provided), away from children.

Instructions for the use and care of RECHARGEABLE Wahl clippers

BATTERY TYPE: LITHIUM ION:

Model: APPL, APPL1, 9179

RECHARGEABLE OPERATION - CLIPPER USE AND MAINTENANCE

1. Remove the clipper, recharging transformer and accessories from the packing material.
2. Before the appliance is used for the first time, it should be charged for 3 to 5 hours. After the first charge, it will also take 3 to 5 hours to fully recharge the battery. During charging, the charging indicator is illuminated (NOTE: Not all kits have a charge indicator). Fully charged battery offers up to 60 minutes or better of run time. (varies by product)
3. After initial charge, clipper can be "Quick Charged" for 15 minutes. This should allow enough power for one haircut.
4. Plug the recharging transformer into any convenient electrical outlet at the correct voltage. If clipper is on, turn to off position when charging.
5. When clipper is not in use, it may be connected to the transformer and plugged into an outlet to assure maximum power is available when it is next used. This transformer is designed to charge the battery without overcharging.
6. The charge cord should be removed from the clipper when not charging. Leaving the power cord connected to the clipper without being plugged in may cause the battery to drain.
7. The charging indicator light will illuminate when your clipper is in the "OFF" position and connected to its charger. The clipper cannot be overcharged, so you may charge it as often as desired.

BATTERY REPLACEMENT, CLIPPER DISPOSAL AND RECYCLING:

- For battery replacement send the entire, intact clipper unit to:
Wahl Annex 3001 North Locust, P.O. Box 578, Sterling, IL 61081
- Do not attempt to remove the battery. Lithium-Ion batteries can explode, catch fire, and/or cause burns if disassembled, damaged, or exposed to water or high temperatures.
- If you choose not to replace the battery, the entire, intact clipper unit must be disposed. Do not attempt to remove the battery for disposal. Lithium-Ion batteries may be subject to local disposal regulations. Many locations prohibit disposal in standard waste receptacles. Check your local laws and regulations.
- For recycling contact a government recycling agency, waste disposal service, retailer, or visit online recycling sources, such as www.batteryrecycling.com or www.rbrc.org.

BATTERY TYPE: NICKEL METAL HYDRIDE:

Model: 9649

RECHARGEABLE CORD/CORDLESS OPERATION

1. Before use, the clipper must be fully charged for 12 to 15 hours.
2. Once fully charged, the unit may be used without cord. A fully charged clipper can deliver up to 60 minutes of continuous use.
3. After use, move the on/off switch to the "O" (OFF/CHARGE) position. Reconnect the clipper to the cord and recharge batteries by connecting the cord into any convenient electrical outlet.

NOTE: If the batteries have completely run out, the clipper can be used as a corded clipper (see the following "corded operation").

CORDED OPERATION

1. Be sure the on/off switch is in the "O" (OFF) position.
2. Connect the clipper to the cord, and plug it into an electrical outlet.
3. Move the on/off switch to the "I" (ON) position.
4. After use, disconnect cord from outlet.



CONTAINS SEALED, RECHARGEABLE NICKEL METAL HYDRIDE BATTERY. MUST BE RECYCLED OR DISPOSED OF PROPERLY.

The RBRC Battery Recycling Seal on the nickel metal hydride (NiMH) battery contained in this product indicates Wahl is voluntarily participating in an industry program to collect and recycle these batteries at the end of their useful life, when taken out of service in the United States or Canada. The RBRC program provides a convenient alternative to placing used NiMH batteries into the trash or the municipal waste stream, which is illegal in some areas. Please call 1-800-8-BATTERY for information on NiMH battery recycling in your area. Wahl's involvement in this program is part of our commitment to preserving our environment and conserving our natural resources.

CLIPPER/RECYCLING OF BATTERIES

Depending on use, your batteries should last five years. At the end of its life, when it can no longer take a full charge, it cannot be replaced. The clipper must be discarded, but first the battery must be removed & recycled properly. To do so, follow these steps.

1. Make sure the on/off switch is in the "O" (OFF) position and that the cord is NOT plugged into the clipper or any electrical outlet.
2. Remove blade assembly from clipper and remove screws and cover plate.
3. Remove cover plate by releasing visible cover "hooks" and pulling cover away.
4. Locate circuit board and battery and cut negative end of battery away from circuit board then positive end.
5. Apply tape to both ends of the battery before recycling or properly disposing of it.

CUTTING HAIR

The first time you cut hair, cut only a small amount until you become accustomed to how long each guide leaves the hair. Depending on your model, the following guide combs may be included in your kit.

Always start by placing the largest guide comb on the clipper, then use shorter combs if desired length is shorter.

Guide Comb #1—leaves hair approx. 1/8"

Guide Comb #2—leaves hair approx. 1/4"

Guide Comb #3—leaves hair approx. 3/8"

Guide Comb #4—leaves hair approx. 1/2"

To attach combs, hold comb with teeth up and snap it firmly to the bottom of the clipper blade.

For uniform cutting, allow the clipper to cut its way through the hair.

Do not force it through at a faster rate.

TIPS FOR ALL BREEDS OF DOGS

For specific breeds go to youtube.com/WahlHomeProducts

1) Before clipping your puppy for the first time, run the clipper near the puppy's ear for a short time so he gets used to the noise.

2) If clipping for the first time, the clipping process will be slow. Try to move with the dog when clipping. After a few grooming sessions, you will develop your own comfortable style and grooming will go faster.

3) Take your time when grooming, and use a lot of affection. Dogs know when you're in a hurry and will react by getting nervous, making grooming more difficult.

4) It is very important to trim out excess hair on the pads. Otherwise the pads will become dirty and matted, causing painful walking for the dog.

SAVE THESE INSTRUCTIONS

This Clipper Has Been Designed For Household Use Only

THIS APPLIANCE IS INTENDED FOR TRIMMING PURPOSES ONLY.

TROUBLESHOOTING

If your clipper does not seem to take a charge, check the following before returning it for repair:

1. Check outlet operation by plugging in another appliance.
2. Make sure the outlet is not connected to a switch which turns the power at the outlet off.
3. Be sure the clipper is properly connected to the recharging transformer, all connections are secure and the switch on the clipper is turned "OFF - 0."
4. If your electricity is connected to a master power switch, we suggest the clipper be disconnected from the charger anytime the master switch is off. Leaving the unit plugged into a dead outlet or an unplugged charger will drain the battery. Prior to storing, disconnect recharging transformer from the unit.
5. If clipper does not run and it is completely charged, turn the unit "ON - I" and pinch or push the blades manually. (Oil may have dried out between the blades, so they may be temporarily stuck together.)

WARRANTY - Valid in USA Only

5-YEAR LIMITED WARRANTY - CLIPPER

If your Wahl product fails to operate satisfactorily within five (5) years from the date of original purchase or receipt as a gift, Wahl will, at our option, repair or replace the product and return it to you FREE OF CHARGE.

HOW TO GET WARRANTY SERVICE

Do not return this product to store where purchased.

Email: Techsupport@wahlclipper.com

or

Call 1-800-729-9245 for assistance.

WHAT THIS WARRANTY DOES NOT COVER

This warranty does not cover products damaged by: (1) Modification or repair by anyone other than Wahl Clipper Corporation or a Wahl authorized service center; (2) Commercial (non-consumer) use or unreasonable use.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. No other written express warranty is given. No responsibility is assumed for incidental or consequential damages of any type or for the use of unauthorized attachments. Some states may not allow the exclusion or limitation of incidental or consequential damages, so the limitation may not apply to you. Warranty valid in U.S.A. only. Outside U.S.A., check with store for Wahl authorized distributor's warranty.

