
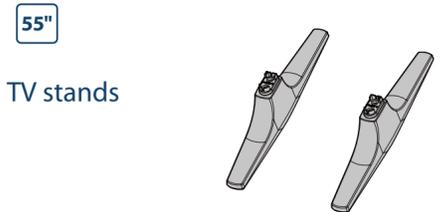
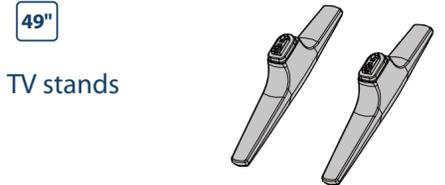


INCLUDED ACCESSORIES

Remote control and two AAA batteries

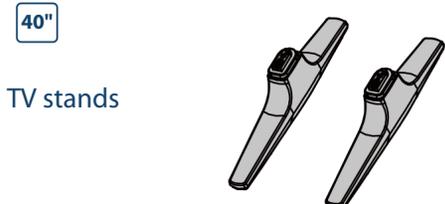

FIND YOUR USER GUIDE ONLINE!

- Go to www.insigniaproducts.com.
- Use the search bar to find **NS-40D420NA18**, **NS-49D420NA18**, or **NS-55D420NA18**.
- Select **Support & Downloads**.
- Next to **User Guide**, select the language you want.

STOP
Do not plug your power cord in until all other devices have been connected.


Before using your new product, please read these instructions to prevent any damage.

1 START HERE






How do I attach the stands to my TV? (not for wall mounting)

You'll need: Soft surface and Phillips screwdriver


A Place your TV face-down on a cushioned, clean surface.

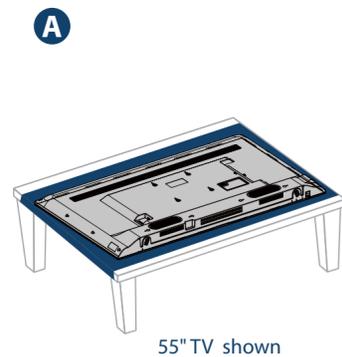

B Align the TV stands with the screw holes on the bottom of your TV, then secure the stands to your TV with the four provided screws.

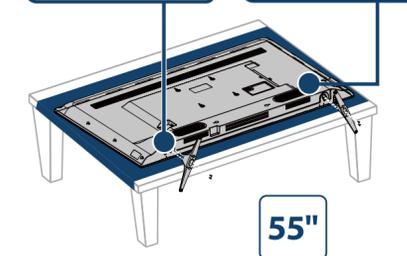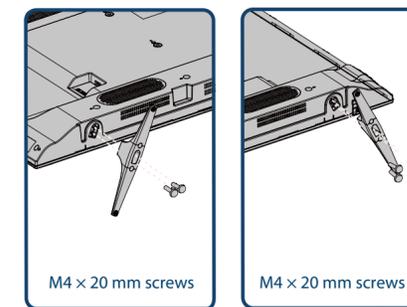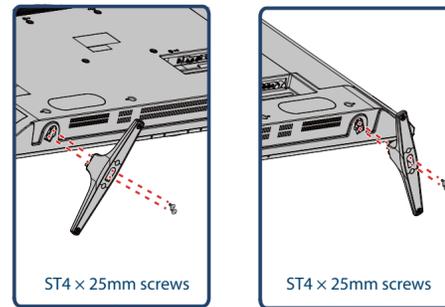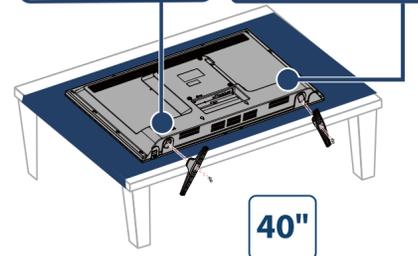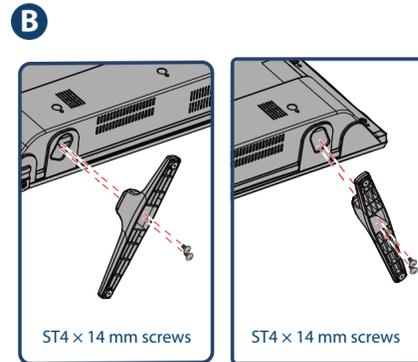


FEATURES

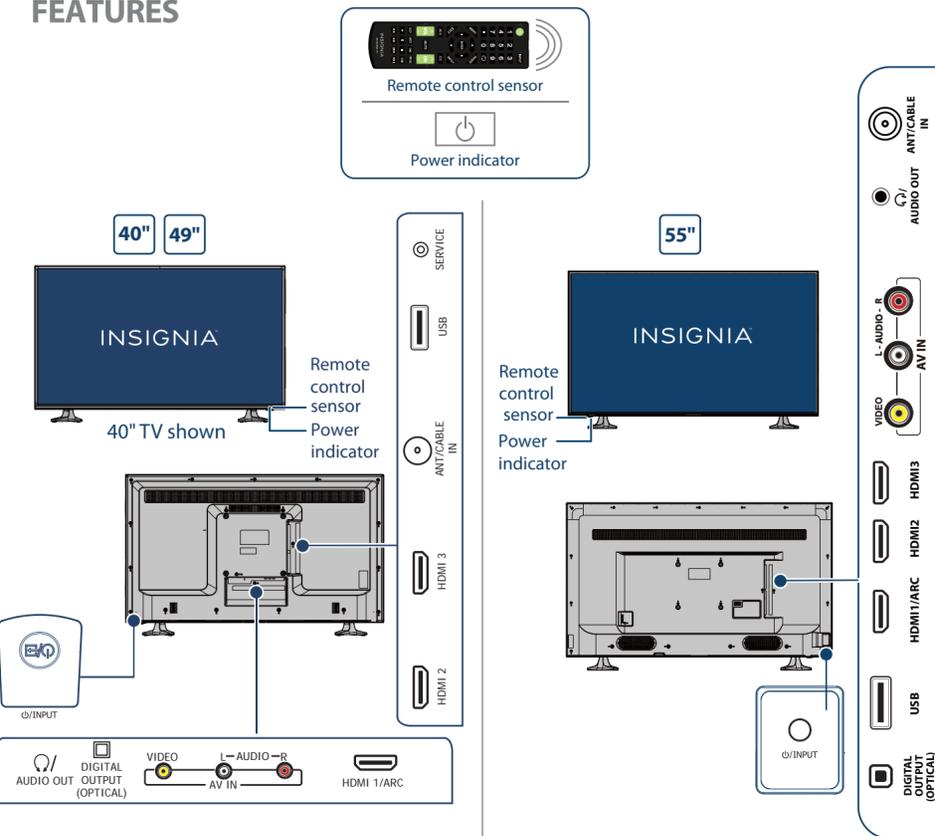

2 MAKING CONNECTIONS

How do I watch TV (cable, satellite, or antenna) or connect a device, such as a DVD or Blu-ray disc player or game console?

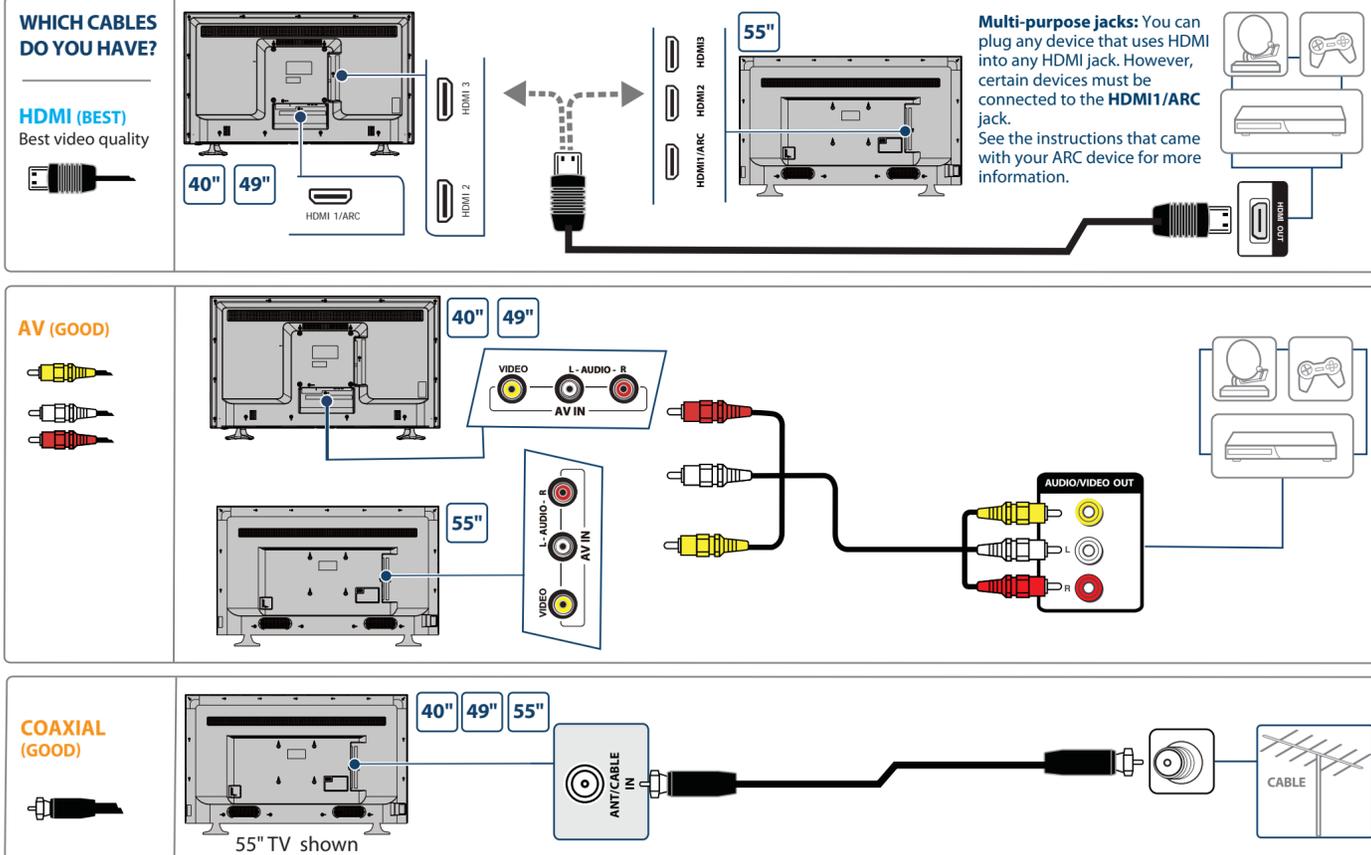


3

CONNECTING AUDIO DEVICES

How do I connect my TV to external speakers?


USING DIGITAL AUDIO

From your TV's **Audio** menu, select **Digital Audio Format/Audio Delay**, then set **Audio Format** to **PCM**.

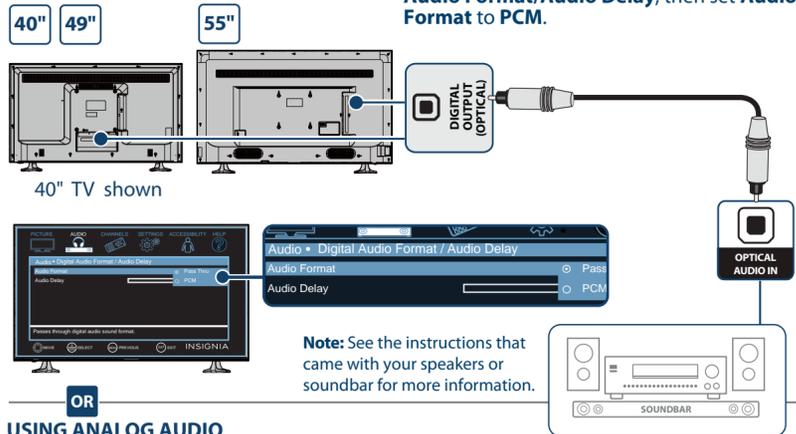

Note: See the instructions that came with your speakers or soundbar for more information.

OR USING ANALOG AUDIO

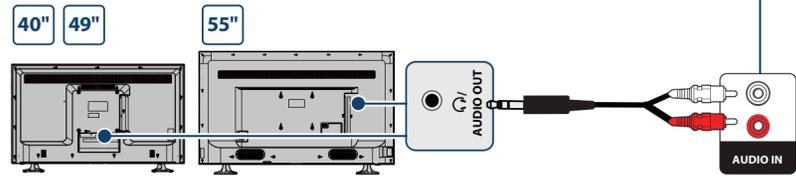


4

TURNING ON MY TV

When can I turn on my TV?


WHEN YOUR TV IS IN PLACE:

1 **40"** Plug the power cord into a power outlet.

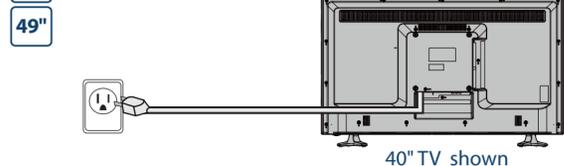


40" TV shown

55" Plug one end of the power cord into the power connector on the back of your TV and the other end into a power outlet.

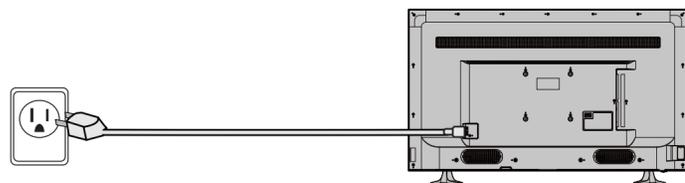

2 Remove the remote control cover and install the batteries.

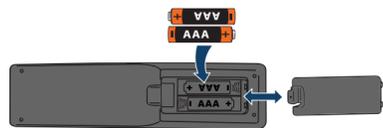


3 Press  (power) on your remote control.

4 Follow the on-screen instructions.



Note: Images do not necessarily represent the exact design of your television.

USING YOUR REMOTE CONTROL

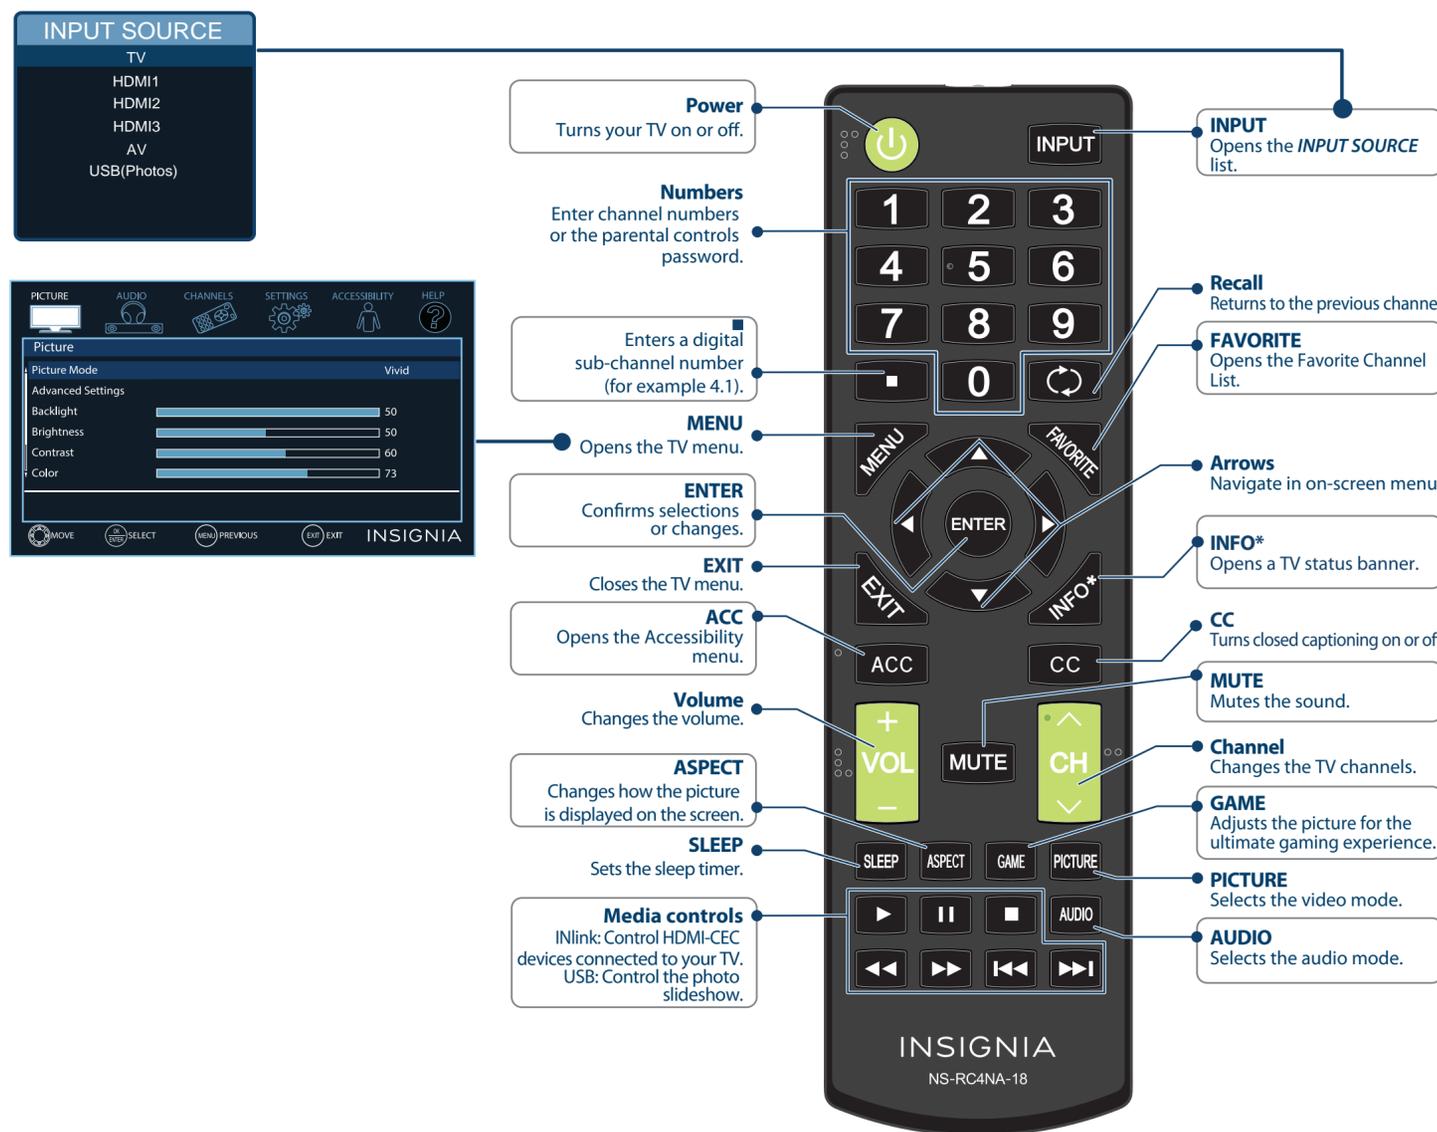

I already have a universal remote control. How do I make it control this TV?

If you already have a universal remote control that you would like to program to work with your TV and don't want to use the included Insignia remote control, see the table below for common codes.

UNIVERSAL REMOTE CONTROL CODES	
AT&T U-verse	1034, 1035, 1040, 1398, 1465, 1596, 1437, 1507, 12049, 11641, 11564, 11326, 11423, 11892, 11517, 10171, 10463, 11385, 11660, 11963, 12184, 13227
Cablevision	068, 069, 078, 096, 100, 164, 168, 229, 026
Charter	2002, 1204, 1423, 1517, 0171, 1963, 0463, 1463, 0842, 1326, 167, 415, 424, 450, 456, 461, 507, 523, 567, 577, 586
Comcast	10463, 10171, 11204, 11326, 11463, 11517, 11641, 11780, 11785, 11892, 11963, 12002, 01877, 00276, 01982, 01376, 00810, 01187, 01106, 00877, 00476
Cox	1326, 1463
DirecTV	10463, 10171, 11204, 11326, 11517, 11564, 11641, 11963, 12002, 11463, 12049
Dish Network	834, 720, 222, 898, 365, 777, 754
RCA	135, 12049, 11423, 11564, 10171, 10463, 11810, 11892, 11963, 12184, 12417
Rogers	0463, 1326, 2049, 1785, 1780, 1423, 1963
Time Warner	400, 450, 461, 456, 10463, 1463, 0463
Verizon	0198, 0490

For an up-to-date list of codes for other cable providers and universal remote brands, visit www.insigniaproducts.com/remotecodes

INSIGNIA™

ONE-YEAR LIMITED WARRANTY
Visit www.insigniaproducts.com for details.

NEED ADDITIONAL HELP?

- Find your **User Guide** online.
 - Go to www.insigniaproducts.com.
 - Use the search bar to find **NS-40D420NA18**, **NS-49D420NA18**, or **NS-55D420NA18**.
 - Select **Support & Downloads**.
 - Next to **User Guide**, select the language you want.
- Check out our **Support Community** at community.insigniaproducts.com for helpful information from other Insignia TV owners.

WE'RE HERE FOR YOU

For product inquiries or accessibility assistance, please contact us with the information below:
www.insigniaproducts.com
For customer service, call:
877-467-4289 (U.S./Canada)
01800-926-3080 (México)

U.S. and Canada:

INSIGNIA is a trademark of Best Buy and its affiliated companies. Registered in some countries. Distributed by Best Buy Purchasing, LLC 7601 Penn Ave South, Richfield, MN 55423 U.S.A.

México:

INSIGNIA is a trademark of Best Buy and its affiliated companies. Registered in some countries. México: 01-800-926-3080 Best Buy imports S. DE R.L. DE C.V. Avenida Santa Fe No. 440 Piso 2 Ofna 202 Y 203 P3 Y P4 Colonia Santa Fe Cuajimalpa, C.P. 05348, Cuajimalpa De Morelos, México, Ciudad De México

©2017 Best Buy. All rights reserved.
Made in China