

Storing your tripod

- 1 Remove your camera.
- 2 Loosen the center column set screw. Lower the column as far as it will go, then tighten the set screw.
- 3 Collapse the legs.
- 4 Pull out the angle adjusting tabs and push the legs in.
- 5 Store the tripod in the carrying case.

Important safety instructions

- Make sure that all leg locks are correctly tightened and that the legs are fully opened before use.
- Do not carry or transport your tripod with camera equipment attached (for example, over your shoulder or cradled in your arms).
- Do not expose your tripod to excessive heat or cold, or use near any flame or fire.
- Do not oil or grease any part of the tripod.
- Do not use any solvents or thinners to clean your tripod. Use only a mild detergent and wipe dry with a soft, lint-free cloth only.
- Do not exceed the load limit of this tripod.

Specifications

- Maximum operating height: 61 in. (157.5 cm)
- Minimum operating height: 17.3 in. (44 cm)
- Folded height: 22.4 in. (57 cm)
- Net weight: 3.0 lbs (1.4 kg)
- Max operating load: 6.6 lbs (3 kg)
- Number of leg sections: 4
- Quick release thread: 1/4 in. (0.6 cm)
- Panoramic angle: horizontal: 360° and vertical: 90°
- Material: aluminum alloy

One-year limited warranty

Visit www.dynexproducts.com for details.

Contact Dynex:

For customer service, call 800-305-2204 (U.S. and Canada) or 01-800-926-3020 (Mexico)
www.dynexproducts.com

DYNEX is a registered trademark of BBY Solutions, Inc.
Registered in some countries.
Distributed by Best Buy Purchasing, LLC, 7601 Penn Ave South, Richfield, MN 55423 U.S.A.
©2014 BBY Solutions, Inc. All Rights Reserved.

DYNEX  

DX-TRP61BL 61" Eco-Pro Tripod




Before using your new product, please read these instructions to prevent any damage.

Package contents

- Tripod
- Carrying case
- *Quick Setup Guide*

Features

- Universal head ball
- Two-angle leg setting
- Quick flip leg locking system
- Retractable hook
- Steady and easy operation

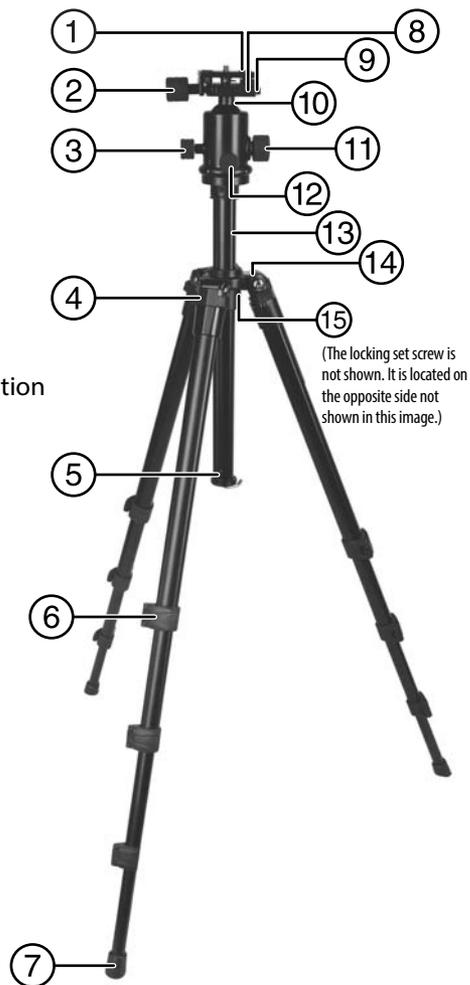

Setting up your tripod

- 1 Open the flip-lever leg locks on each leg. Open the leg sections from the top down (thickest section first) to the height you want. **Note:** Adjusting the thickest leg sections first gives your tripod more stability and support.
- 2 Close the flip-lever leg locks to lock each leg. **Caution:** Securing a leg lock incorrectly can cause a leg to retract unexpectedly and could result in damage to the tripod or equipment mounted on the tripod.
- 3 Set the angle position by pulling out the angle adjusting tab and lifting the tripod leg, then press the angle adjusting tab to lock the leg.



- 4 Adjust the height of the center column by loosening the center column set screw, raising the center column to the height you want, then tightening the set screw.
- 5 Loosen the quick-release plate locking knob, press the safety lock pin, then lift the mounting plate to remove it.
- 6 Align the bottom of your camera or camcorder with the 1/4" mounting screw, then secure your camera or camcorder to the plate with the screw. The screw should be tight.
- 7 Press the safety lock pin, then slide the plate onto the tripod head. Turn the quick-release plate locking knob until it stops to secure the plate.

Using your tripod

- 1 To adjust the ball head, turn the ball head locking knob counter-clockwise, adjust the ball head, then lock the ball head in place by turning the knob clockwise until tight.
- 2 To adjust the horizontal movement of the head, turn the horizontal pan locking knob counter-clockwise, move the ball head into the position you want, then lock the head in place by turning the knob clockwise until tight.
- 3 For low angle shooting, unscrew the retractable hook, then remove the center column. Reverse the direction of the center column, then insert the column into the base. Screw the retractable hook into place.



#	Item	Description
1	Quick-release mounting plate	Mount your device to this removable plate.
2	Quick-release plate locking knob	Locks the quick-release mounting base plate to the tripod.
3	Micro-adjustment knob	Adjusts the movement of ball head slightly.
4	Angle adjusting tab	Lets you adjust the leg angle position.
5	Retractable hook	Hang a heavy item on this hook to add stability to the tripod.
6	Flip-lever leg locks	Lift to adjust leg height, then close to lock.
7	Rubber foot	Provides a secure, non-slip footing for your tripod.
8	Mounting base plate	Slide the quick-release mounting plate into this base plate.
9	Safety lock pin	Prevents the mounting plate from falling out when the quick-release plate locking knob is released.
10	Variable angle ball head	Allows the ball head to be adjusted to any angle.
11	Ball head locking knob	Loosen to set the ball head at a different angle.
12	Horizontal pan locking knob	Loosen to adjust the horizontal pan movement. Tighten to lock the horizontal movement of the ball head.
13	Center column	Adjustable column provides a quick height adjustment.
14	Leveling bubble	The tripod base is level when the bubble is within the circle.
15	Center column set screw	Adjusts and secures the height of the center column.