




AUTOMATIC RECHARGEABLE WINE OPENER

MD-WOARCSS0

PACKAGE CONTENTS

- Wine opener
- Foil cutter
- Battery charging base
- AC adapter
- *Quick Setup Guide*

FEATURES

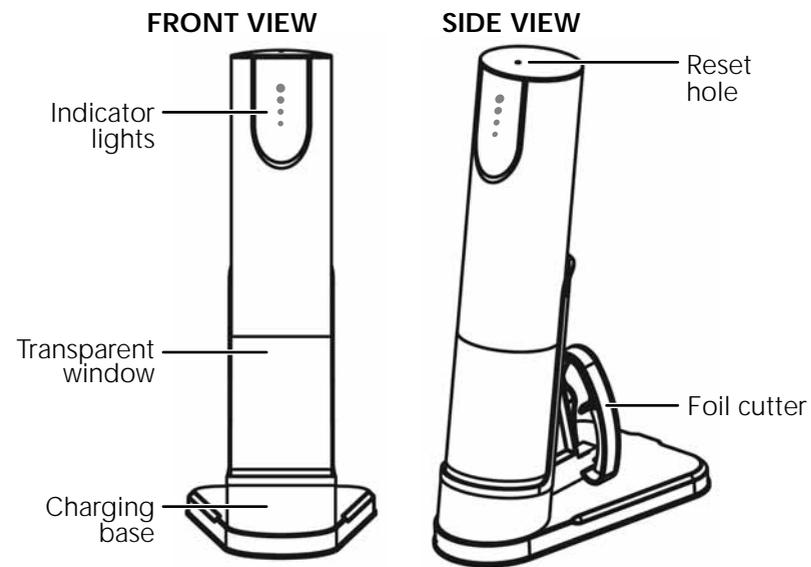


QUICK SETUP GUIDE

Before using your new product, please read these instructions to prevent any damage.

CHARGING YOUR WINE OPENER


Note: We recommend that you charge your wine opener for at least 15 hours before using it for the first time.

- 1 Plug one end of the AC adapter into the charging base and the other end into a wall outlet.

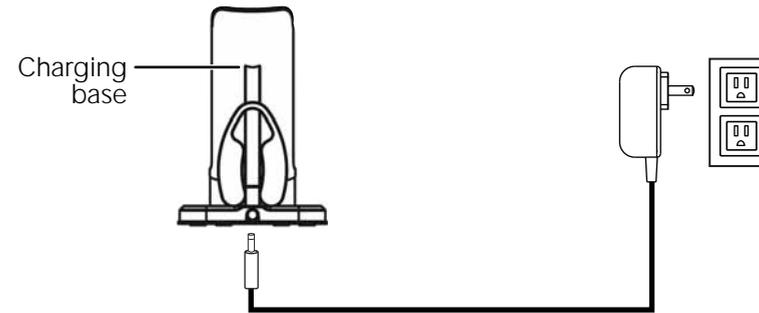

- 2 Place your wine opener into the charging base. Make sure that it is firmly in position and makes full contact with the base recharging connectors. While charging, the indicator lights light blue from the bottom to the top. When the battery is fully charged, all the indicator lights are blue.

Note: Your wine opener only fits into the charging base one way. The blue light turns on when your opener is seated correctly.

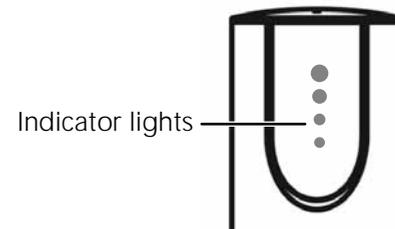

USING YOUR WINE OPENER


WARNING: The screw hook on your wine opener is sharp. Do not touch the screw hook when operating the wine opener in order to avoid injury.

Note: You can use your wine opener for bottles with a neck diameter of less than 1.1 inch (28 mm).

- 1 Place the foil cutter around the neck of the wine bottle.
- 2 Keep one hand on the lower part of the bottle, then turn the foil cutter in a twisting motion to cut the foil.



- 3 Remove the foil to expose the cork surface.
- 4 Place the transparent window on top of the wine bottle cork. Try to keep your wine opener vertical. If it is not vertical, it may not pull out the cork correctly.

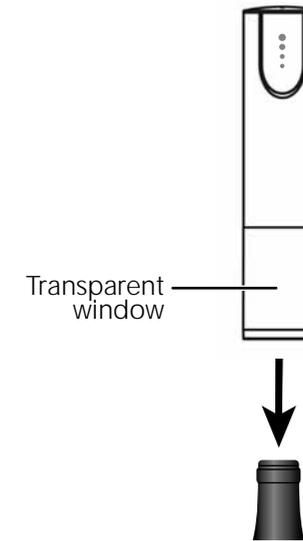

- 4 Gently press your wine opener down against the cork. The indicators light and the lights in the transparent window turn on. The screw hook turns and pulls the cork up.
- 5 When the cork is completely removed from the bottle, lift your opener up and away from the bottle. After ten seconds, the screw hook reverses automatically and releases the cork.
- 6 Place your wine opener on the charging base when finished.

CLEANING YOUR WINE OPENER

- Clean the exterior surface of your wine opener with a soft, damp cloth.
- Do not put your wine opener in water or a dishwasher. You may damage your wine opener.
- Do not use abrasive cleaners or solvents because they may damage your wine opener.
- Do not try to clean any inside surfaces of your wine opener.
- We recommend that you always return your wine opener to the charging base so that it is fully charged and available to use at any time.
- Store your wine opener on its base in a clean, dry place when it is not in use.

TROUBLESHOOTING

My wine opener stops in the middle of removing the cork.


- If your wine opener can't open a bottle or release the cork, the battery may be low. Wait a few minutes and reset your wine opener. Insert a small pin into the reset hole on the top of your opener and press down on the button inside the hole. Your opener releases the cork from the screw hook.
- Recharge your wine opener

The LED doesn't light.

- Make sure that the AC adapter is connected correctly.
- Make sure that your wine opener is inserted correctly into the charging base.
- Make sure that the power outlet is working.

The motor is making noises or not working correctly.

- Insert a small pin in the reset hole, then press the pin down on the switch inside the wine opener. After the motor reverses and stops, your wine opener returns to its normal working state.

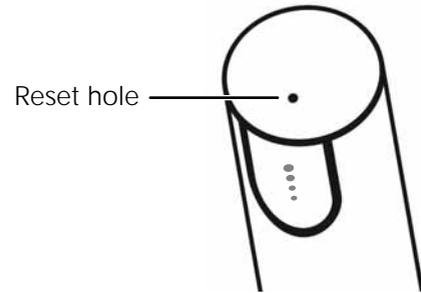

The cork broke off in the bottle.

- Use manual corkscrew to remove the broken cork. If that doesn't work, you may have to push the broken cork into bottle.

I reset my wine opener, but the cork is still stuck in my opener.

- Charge your wine opener for a few minutes, then reset.

SPECIFICATIONS

Battery type: Built-in Ni-MH rechargeable

Voltage: 3.6V

Adapter input: 100V~240V AC 50/60 Hz 0.5A Max

Adapter output: 6V 150mA

Charging time: Approximately 15 hours

Number of bottles per charge: 40

IMPORTANT SAFEGUARDS

When using the wine opener, always follow these safety precautions:

- To avoid damaging your wine opener, do not put the bottle opener in water or other liquids.
- Do not use this product around flammable and explosive gases.
- Do not use this product for other purposes.
- This product is only suitable for indoor use.
- Do not try to repair the product yourself.
- Do not press the bottle opener against the bottle or try to accelerate the speed of the bottle opener.
- Do not touch the screw hook. When using the bottle opener, hold the wine opener shell and wine bottle tightly.
- To avoid possible injury, do not let children play with the product.
- If your wine opener can't open a bottle or release the cork, the battery may be low. Insert a small pin into the reset hole on the top of the opener and press down on the button inside the hole.

ATTENTION: The corkscrew is sharp. Handle carefully. Keep hands and utensils out of the wine opener while operating to prevent the possibility of severe personal injury or damage to the product or property.

ONE-YEAR LIMITED WARRANTY

Contact Modal:

For customer support, call 1-800-499-3402 (U.S. and Canada)

www.bestbuy.com/modal

MODAL is a trademark of Best Buy and its affiliated companies.

Distributed by Best Buy Purchasing, LLC

7601 Penn Ave South, Richfield, MN 55423 U.S.A.

©2019 Best Buy. All rights reserved.

Made in China