



USER MANUAL

DRPTV430BC

43" Outdoor 4K UHD LED TV

Table of Contents

Read Before Use	2
Getting Started.....	4
Remote Functions.....	6
Hot Keys	8
Main Menu	10
Submenus.....	11
Connecting External Devices	22
Supported Signal Modes	28
Troubleshooting	29
Specifications	30
Need Help?.....	30
Warranty Information	31

Read Before Use

Read this instruction manual carefully and follow all requirements for safe operation.

- Do not cover or block ventilation openings with items such as newspaper, tablecloths, curtains, etc. Ensure adequate space around the device for sufficient ventilation.
- Do not place open flame sources, such as candles, on or near the device.
- Do not submerge the device in water.
- Do not place objects filled with liquids, such as vases, on the device.
- Do not expose batteries to extreme heat.
- Keep the power cord readily accessible in order to disconnect the device.
- Clean only with a soft, dry cloth.
- Do not install near any heat sources such as radiators, stoves or other devices (including amplifiers) that produce heat.
- Do not disregard the safety regulations of polarized or grounding-type plugs. A polarized plug has two blades, one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade and the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the dysfunctional outlet.
- Only use attachments/accessories specified by the manufacturer.
- Use device only with a cart, stand, tripod, bracket, or table specified by the manufacturer or sold with the device. When a cart is used, use caution when moving the combination of cart and device to avoid injury from tip-over.
- Unplug device during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when device has been damaged in the event that: the power supply cord or plug has been damaged, object(s) fall on device, device has been dropped, or device does not operate normally.
- Install in accordance with manufacturer's instructions.
- Avoid using device in an excessively humid environment.
- Use both hands when carrying the TV.

Note: Should the manual not correspond to the device, please refer to the device itself.

Never place the TV in an unstable installation area. The TV may fall and cause serious injury or death, particularly to children. Injuries can be avoided by taking the following precautions:

Read Before Use (Continued)

- Use mounts or stands recommended by the manufacturer.
- Use only furniture that can safely support the TV.
- Ensure that the TV does not overlap with the edge of the supporting furniture.
- Warn children regarding the danger of climbing on furniture when attempting to reach the TV or its controls.



⚠ CAUTION ⚠

- Batteries should not be exposed to extreme heat. Do not dispose of batteries in fire; batteries may explode or leak. Do not mix alkaline, standard or rechargeable batteries.
- Refer all servicing to qualified service personnel.
- To reduce the risk of electric shock, do not perform maintenance other than that specified in the operating instructions, unless you are qualified to do so.
- Avoid keeping a static picture or a picture with static elements on your TV for more than two hours at a time, as this may cause damage known as screen burn in. Decrease the chances of burn in by altering the picture size for a minute or two every couple of hours or reduce the display's contrast and brightness.
- Use caution when performing the installation to avoid injury. If using the included wall mount, refer to the wall mount instructions for details on installation.

Getting Started

Inputs and Connections


- 1 Optical Out x 1
- 2 HDMI® Inputs x 3
- 3 Mini Line Out x 1
- 4 AV In x 1
- 5 Audio In x 1
- 6 Video In x 1
- 7 RF/Antenna In x 1
- 8 USB Port x 1
- 9 YPbPr In x 1

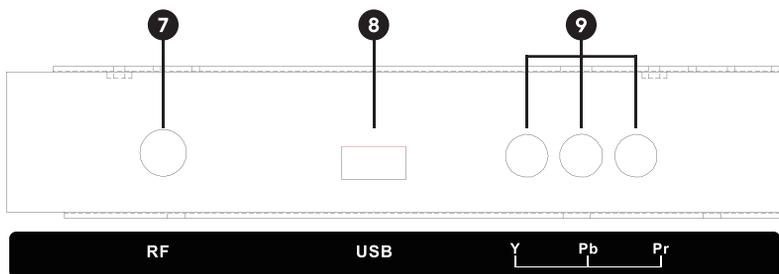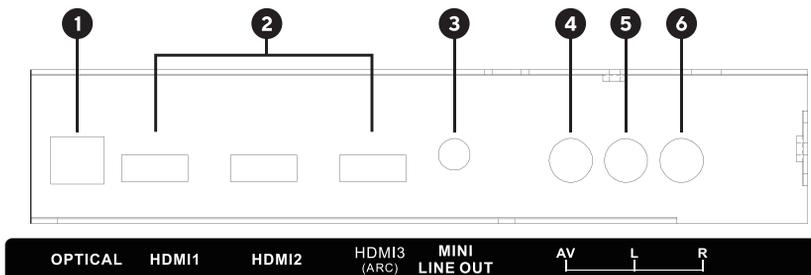


What's in the Box?

- Outdoor TV
- IP55 Waterproof Remote (including CR2025 battery)
- Wall Mount Kit
- User Manual
- Quickstart Guide
- Warranty Card

Getting Started

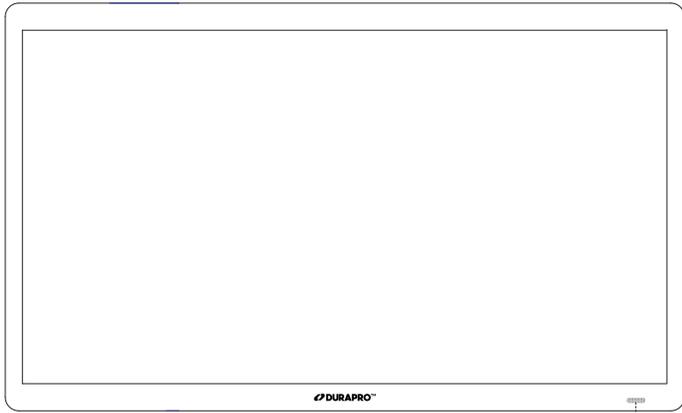


Power Indicator Light
and IR Receiver

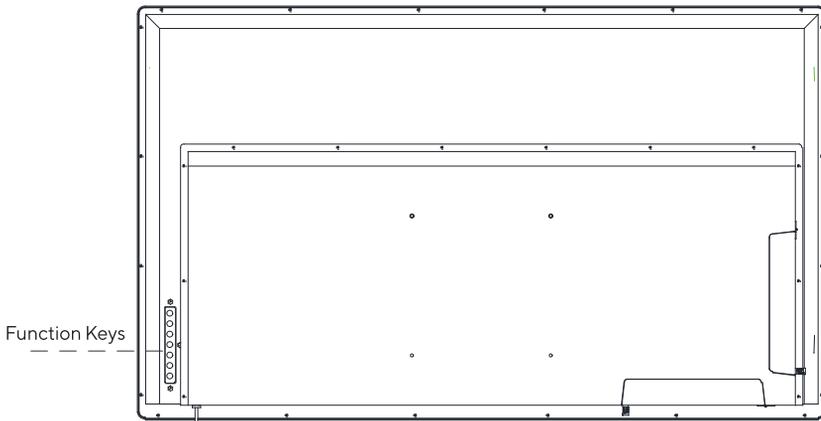


Function Keys

 Power Cable



- VOL+: Increase volume
- VOL-: Decrease volume
- CH+: Switch to next channel
- CH-: Switch to previous channel
- Menu: Enter TV menu
- Source: Enter Source Menu
- Power: Turn TV on/off

Remote Functions

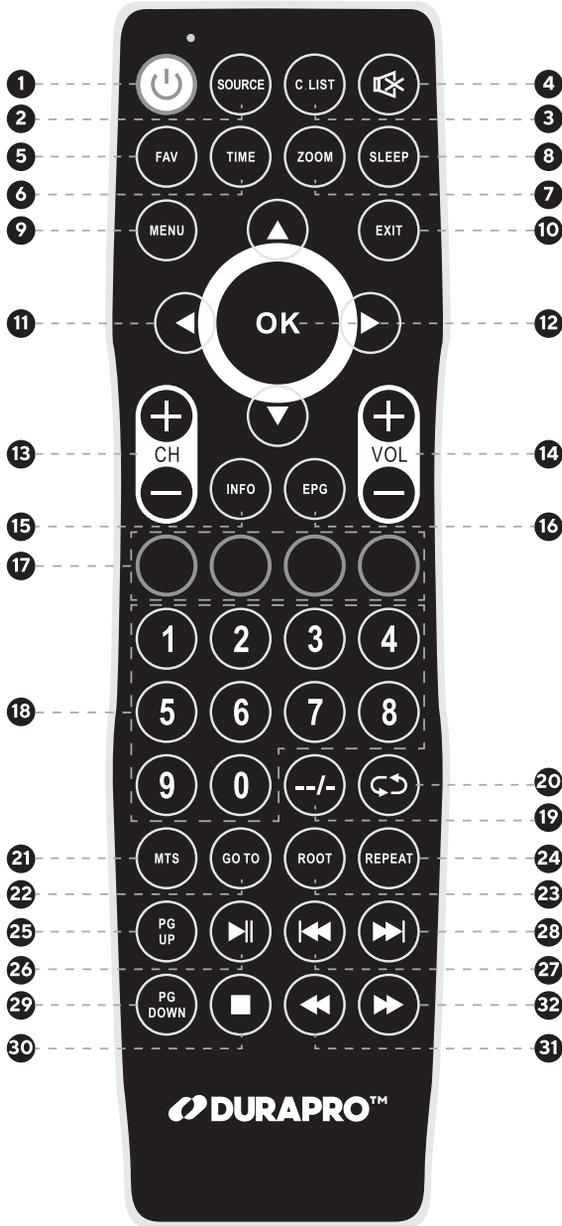


Note:

This remote requires 1 CR2025 battery (sold separately).

Remote Functions


- 1. POWER** Turn TV on/off
- 2. SOURCE** Select various input sources (TV/HDMI®/USB)
- 3. C.LIST** Channel list
- 4. MUTE** (🔇) Mute/unmute sound
- 5. FAV** Favorites menu
- 6. TIME** Time settings
- 7. ZOOM** Change aspect ratio
- 8. SLEEP** Set display to sleep mode
- 9. MENU** Operations menu
- 10. EXIT** Exit the selected menu item
- 11. ◀/▲/▼/▶** Navigation keys
- 12. OK** Confirm or enter
- 13. CH+/-** Scroll through channels
- 14. VOL+/-** Increase or decrease the volume
- 15. INFO** Display source or channel information
- 16. EPG** Enter Electronic Program Guide
- 17. ○○○○** Shortcut buttons
- 18. 0~9** Numeric buttons
- 19. --/-** Press once to enter a program with two digits; press twice to enter 3 digits
- 20. ↶↷** Return to previous channel
- 21. MTS** Multichannel TV Sound
- 22. GO TO** Jump to a specific time during playback
- 23. ROOT** Return to main menu
- 24. REPEAT** Repeat playback in USB mode
- 25. PG UP** TV channel up
- 26. ▶||** Press to pause playback; press again to resume
- 27. ◀◀** Previous chapter
- 28. ▶▶** Next chapter
- 29. PG DOWN** TV channel down
- 30. ■** Stop playback and return to menu
- 31. ◀◀** Rewind
- 32. ▶▶** Fast forward

Hot Keys

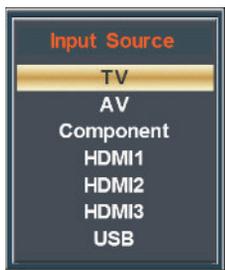

SOURCE

Press the SOURCE button on the remote control to enter the Input Source menu. Select the input source you want to display: TV, AV, HDMI®-connected devices or USB drive.

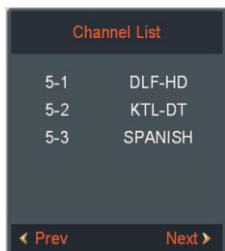

C.LIST and FAV

While viewing the Channel List or Favorite menu, select the desired channel using the arrow buttons. Press the OK button on the remote to start watching programs on that channel.



MUTE

- Press MUTE to close the MUTE menu.
- When CC Mode is ON, the MUTE menu closes.
- When CC Mode is CC ON MUTE, press MUTE to open MUTE menu. After three seconds, CC (closed captioning) content appears.



ZOOM

Use this button to adjust the aspect ratio of the picture displayed on the screen.



SLEEP

Press this button to select the amount of time you would like the TV to stay on before powering itself off. You can set the sleep timer for up to 240 minutes, after which the TV will turn off.


Hot Keys

INFO

Press INFO once to display the default menu.



Press INFO continuously, and a brief introduction to the program will appear. If the program does not have a short introduction, "No event information" will display. The window will close automatically after three seconds.

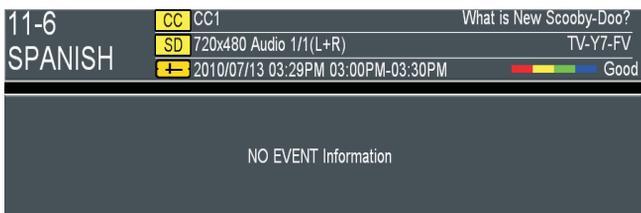

EPG

Press the EPG (electronic program guide) button to check what's showing on your TV and view program details.




MTS

a. DTV MTS: MTS key works only when there is a digital TV (DTV) signal. In the MTS menu, you can change the audio language options.

b. ATV MTS: MTS key works only when there is an amateur TV (ATV) signal. Enter the MTS menu to change MTS options: Stereo/Mono/SAP.

Main Menu

Main Menu Interface

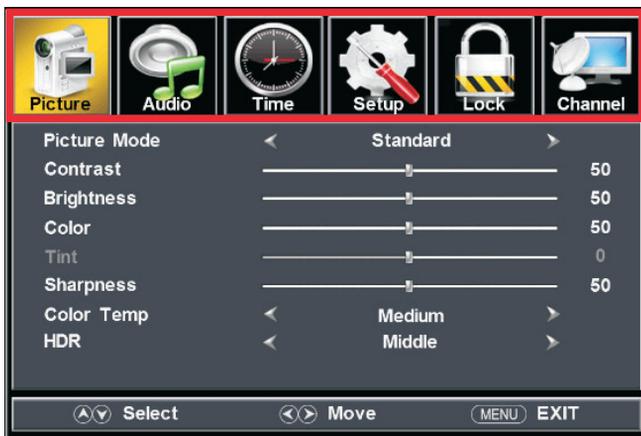


Main Menu Operation

Key	Main Menu Function	Submenu Function
Menu	Enter Main Menu	Return to Main Menu
Exit	Exit Main Menu	Exit Menu
▲ Up		Select previous item. If current item is first, skip to the last item.
▼ Down	Enter Submenu	Select next item. If current item is last, skip to the first item.
▶ Right	Change Submenu	Adjust item option or value; go to the next Submenu
◀ Left	Change Submenu	Adjust item option or value; go to the previous Submenu
OK/Enter	Enter Submenu	Enter next Menu

Submenus


I. Picture Submenu

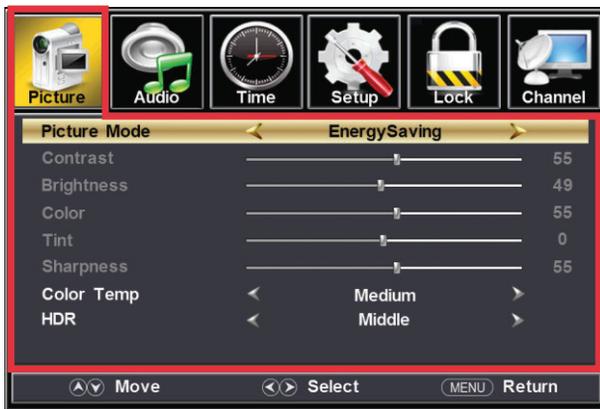

Item	Options	Default	Function
Picture Mode	Standard / Dynamic / Soft / User / Energy Saving	Standard	
Contrast	0 - 100	50	You can customize the image while viewing adjustments. When you close the Main Menu, a pop-up window will display, allowing you to adjust the image contrast.
Brightness	0 - 100	50	You can customize the image while viewing adjustments. When you close the Main Menu, a pop-up window will display, allowing you to adjust the image brightness.
Color	0 - 100	50	Adjust image saturation
Tint	-50 - 50	0	Only adjustable under NTSC signals. Remains at 0 on non-NSTC signals.
Sharpness	0 - 100	50	Adjust image sharpness
Color Temp	Medium / Warm / Cool	Medium	Adjust color temperature
HDR	Middle / Strong / Weak	Middle	Adjust high dynamic range settings

Submenus

II. Audio Submenu

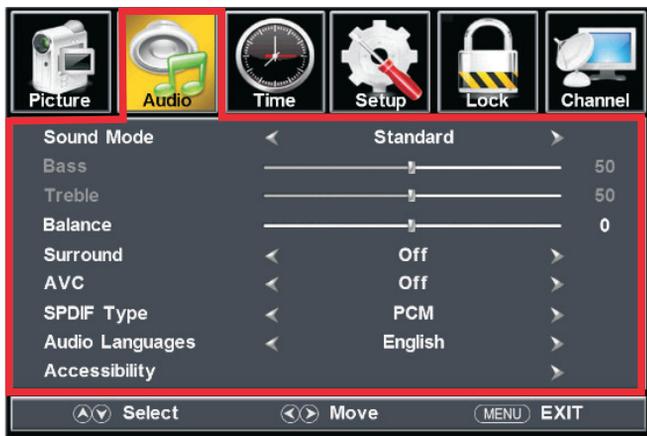

Item	Options	Default	Function
Sound Mode	Standard / Music / Movie / User	Standard	
Bass	0 - 100	50	Adjust bass levels
Treble	0 - 100	50	Adjust treble levels
Balance	0 - 100	50	Adjust left/right balance
Surround	Off / On	Off	Turn surround sound on/off
AVC	Off / On	On	Turn adaptive volume control on/off
SPDIF Type	RAW / PCM	RAW	Only available under DTV and HDMI signals
Audio Language	English / French / Spanish	English	Only available under DTV signals
Accessibility	Voice Guide (Off / On); Video Description (Off / On)	Off	Options once enabled: Volume (Middle / Strong / Weak) Speed (Middle / Strong / Weak) Pitch (Middle / Strong / Weak)

Submenus


Accessibility Introduction

The accessibility function is turned off by default. To enable it, enter the accessibility settings from the audio submenu. You may now enter the Voice Guide function.



Item	Options	Default	Function
Voice Guide			Enter the Voice Guide menu
Video Description	Off/On	Off	

Voice Guide

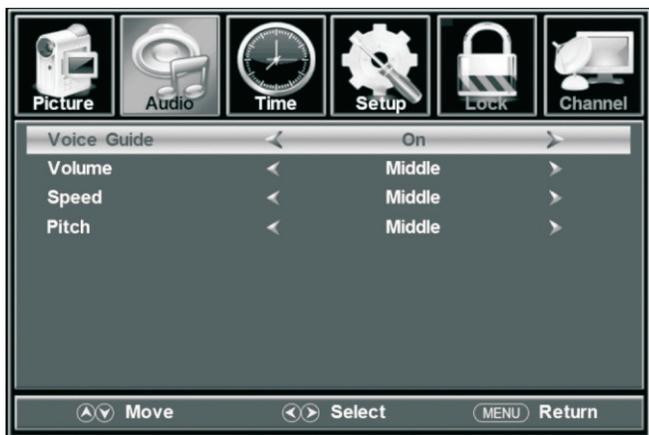

Submenus

Item	Options	Default	Function
Voice Guide	Off/On	Off	Enables text-to-speech function when turned on
Volume	Strong / Middle / Weak	Middle	
Speed	Strong / Middle / Weak	Middle	
Pitch	Strong / Middle / Weak	Middle	

III. Time Submenu



Item	Options	Default	Function
Sleep Timer	Off / 5 min / 10 min / 30 min / 45 min / 60 min / 90 min / 120 min / 180 min / 240 min	Off	Set your TV to automatically enter Sleep Mode after the selected amount of time
Time Zone	Pacific / Alaska / Hawaii / Atlantic / Eastern / Central / Mountain	Pacific	
Daylight Savings Time	On / Off	Off	Only adjustable under DTV signals
Time Format	Time Display Format		Set time format to 12-hour or 24-hour
Auto Clock	On / Off	On	
Clock			Shows current date and time

Submenus


IV. Setup Submenu



Item	Options	Default	Function
Menu Language	English / French / Spanish	English	
Transparency	On / Off	Off	Adjust the on-screen display transparency
Zoom Mode	Non - VGA Signals: Wide / Zoom / Cinema / Normal VGA Signals: Wide / Normal	Wide	
Noise Reduction	Off / Weak / Middle / Strong	Middle	
Closed Caption			Enter closed captioning settings
DLC	On / Off	On	Dynamic brightness control
Setup Wizard			Go to Wizard Menu
HDMI® CEC			Enter HDMI® CEC (Consumer Electronics Control) settings
EDID Switch	EDID	EDID 1.4	Extended Display Identification Data
Restore Default			Restore all settings to factory default

Submenus

IV-A. Setup Submenu (Advanced Setup)

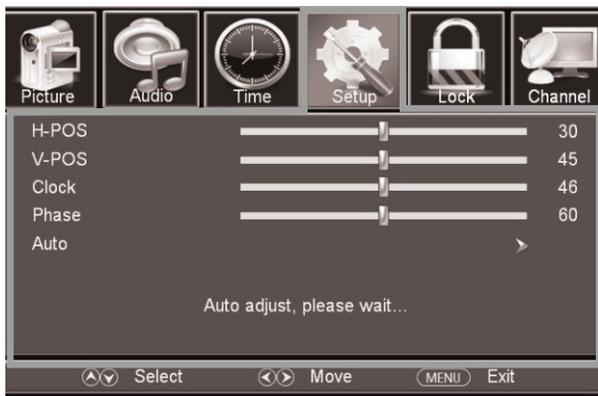

Item	Options	Function
H-Pos	0 - 100	In order to receive optimum values, we recommend using the Auto function instead of adjusting these settings manually.
V-Pos	0 - 100	
Clock	0 - 100	
Phase	0 - 100	
Auto		Adjusts settings automatically. This menu will close if the signal is lost while adjusting. This ensures that adjustments will not be made without a signal.

Submenus

IV-B. Setup Submenu (Closed Caption Setup)



Item	Options	Default	Function
CC Mode	Off / On / CC on Mute	Off	Select when closed captions should display
Basic Selection	CC1 / CC2 / CC4 / Text1 / Text2 / Text3 / Text4	CC1	
Advanced Selection	Service1 / Service2 / Service3 / Service4 / Service5 / Service6	Service 1	Only adjustable under DTV signals
Option			Only adjustable under DTV signals

Submenus

IV-C. Setup Submenu (Restore Default)

When restoring your settings to factory default, a prompt will appear asking you to confirm your changes. Use the left and right direction keys to choose No/Yes then press OK/Enter to confirm.



IV-C. Setup Submenu (Appearance)



Scroll through these settings to customize the menu's appearance.

Submenus

Item	Options	Default	Function
Mode	Default / Custom	Default	If this item is set to default, then the below settings will also be set to default
Font Style	Default / Font0 / Font1 / Font2 / Font3 / Font4 / Font5 / Font6 / Font7	Default	
Font Size	Default / Normal / Large / Small	Default	
Font Edge Style	Default / None / Raised / Depressed / Uniform / Left Shadow / Right Shadow	Default	
Font Edge Color	Default / Black / White / Red / Green / Blue / Yellow / Magenta / Cyan	Default	
FG Color	Default / Black / White / Red / Green / Blue / Yellow / Magenta / Cyan	Default	Change the menu foreground color
BG Color	Default / Black / White / Red / Green / Blue / Yellow / Magenta / Cyan	Default	Change the menu background color
FG Opacity	Default / Solid / Flashing / Transluscent / Transparent	Default	Change the menu foreground opacity
BG Opacity	Default / Solid / Flashing / Transluscent / Transparent	Default	Change the menu background opacity

Submenus

V. Lock Submenu

Input a four-number password to access further menu options. If the password is incorrect, you will be prompted to re-enter the correct password.

Note: Default password is 0000



Once you have entered the correct password, you may access additional settings.




Submenus

Item	Options	Default	Function
Set Password			Change the lock password.
System Lock	Off / On	Off	Turn V-chip off/on. Turning this option on allows you to block programs based on their ratings.
US			Select US program rating
Canada			Select Canadian program rating
RRT Setting			Set Rating Region Table
Reset RRT			Reset Rating Region Table settings
Clear Lock			Clear all lock settings

V-A. Lock Submenu (Lock > US >TV)

In this submenu, you may lock certain TV ratings of your choice. This will prompt you to enter a password before you can proceed to watch certain programs.

To create locks, use the left/right directional keys to navigate through the options below. Press OK/Enter to lock or unlock a TV rating.

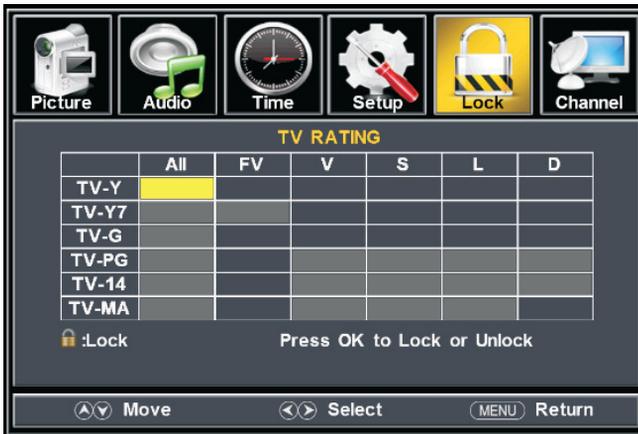

Submenus

VI. Channel Submenu




Item	Options	Default	Function
Air / Cable	Air / Cable	Cable	
Auto Scan			Auto scan for available programs
Favorite			Favorite a channel to easily navigate to it in the future
Show / Hide			Show/hide specific channels
Channel No.	List of searched channels		
Channel Label			Assign labels to channels to organize them into groups
DTV Signal			Displays the intensity of your DTV signal. This item cannot be customized.

Connecting External Devices

You may connect external devices (such as USB drives, laptops, speakers, gaming consoles, etc.) to your TV.


Media Playback via USB

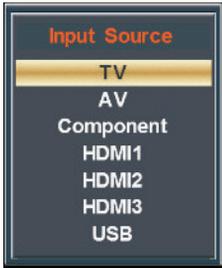

To play media from an external hard drive (sold separately), insert your USB drive into the USB port on the TV. Press the SOURCE button on your remote. Navigate to USB and press OK.


Note: The maximum storage capacity is 400 GB.

You may now view photos, play music, watch movies or read text documents from your flash drive.

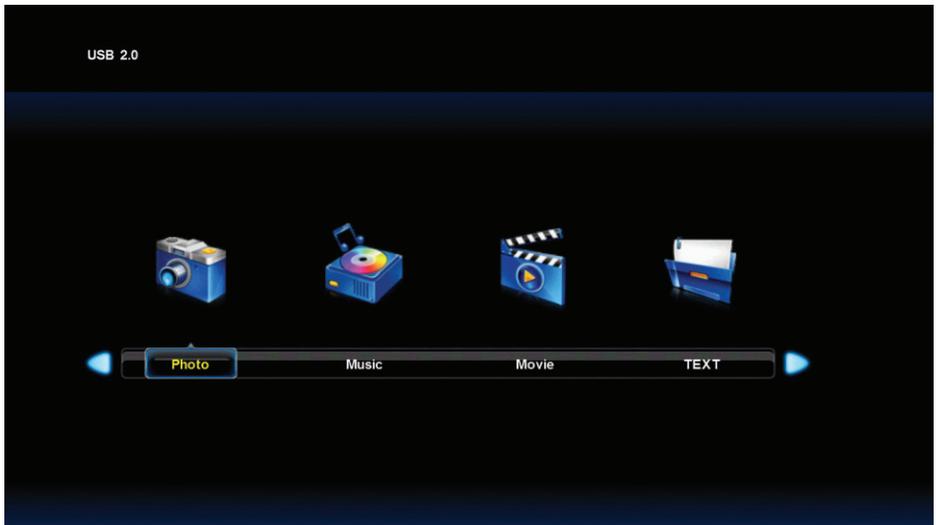

1. Viewing Photos

A photo viewer will display while viewing image files.

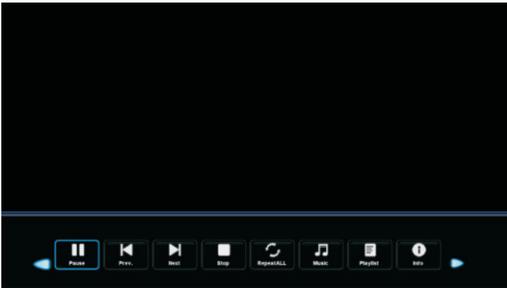


Key Functions:

1. Play / Pause - Play or pause the image slideshow
2. Prev. - Go to previous image
3. Next - Go to next image
4. Stop - Stop playing the image slideshow
5. Repeat (all/one/none) - set the repeat mode
6. Music - Background music
7. Playlist - Enter playlist
8. Info - Display information about the current photo
9. Go To Time - Select a position and play from there
10. Rotate (1) - Rotate clockwise 90°
11. Rotate (2) - Rotate counterclockwise 90°
12. Zoom In - Zoom into the photo
13. Zoom Out - Zoom out of the photo
14. Move View - Pan across a zoomed-in image
15. Slideshow - Customize the slideshow

Connecting External Devices

2. Playing Music Files

A music player will display while playing music files.

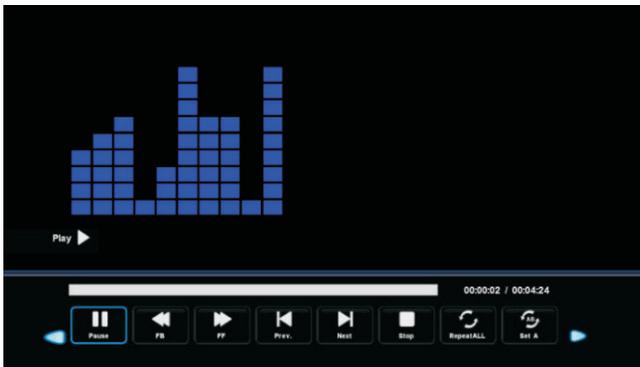

Key Functions:


1. Play / Pause - Play or pause the selected file
2. FB - Rewind the track
3. FF - Fast-Forward through the track
4. Prev. - Play previous track
5. Next - Play next track
6. Stop - Stop playing the current file
7. Repeat (all/one/none) - set the repeat mode
8. Set A - repeat the file from A to B
9. Playlist - Select playlist

Connecting External Devices



Connecting an Antenna to Your TV

Connect your antenna's output cable to the TV's antenna input to access over-the-air channels. Refer to your antenna's user manual for further instructions. Press the TV remote's SOURCE button until you reach "TV".

- 1 - Antenna (sold separately)
- 2 - Amplifier Antenna (external)
- 3 - Amplifier Antenna (internal)
- 4 - Antenna Amplifier Power Plug
- 5 - Plug Antenna (75 Ω)

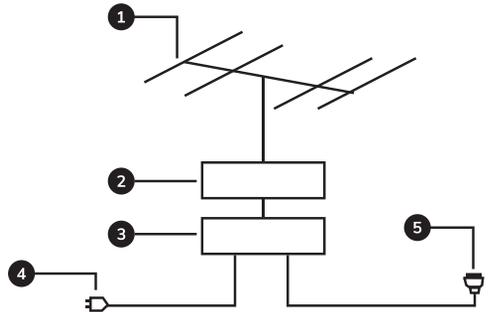


Connecting an External Device to Your TV via HDMI®

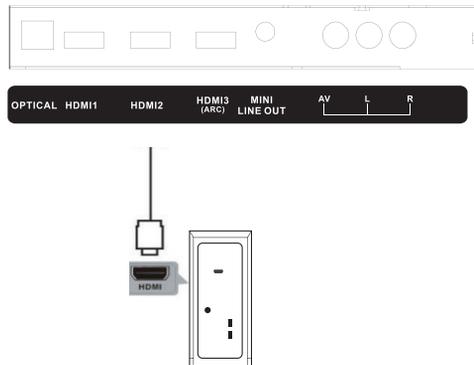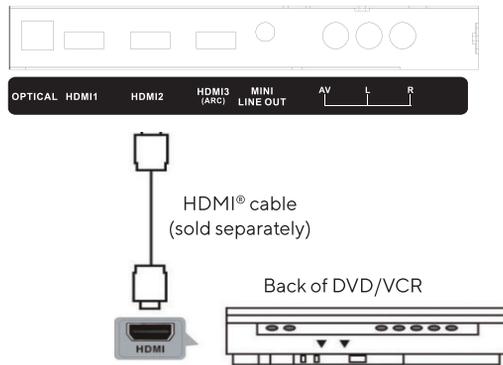

Use an HDMI® cable (sold separately) to connect an external device, such as a laptop or DVD player, to your TV.

Press the TV remote's SOURCE button until you reach "HDMI®". Be sure to select the specific HDMI® source (HDMI® 1/2/3) that matches the input to which the cable is connected.

Connecting External Devices

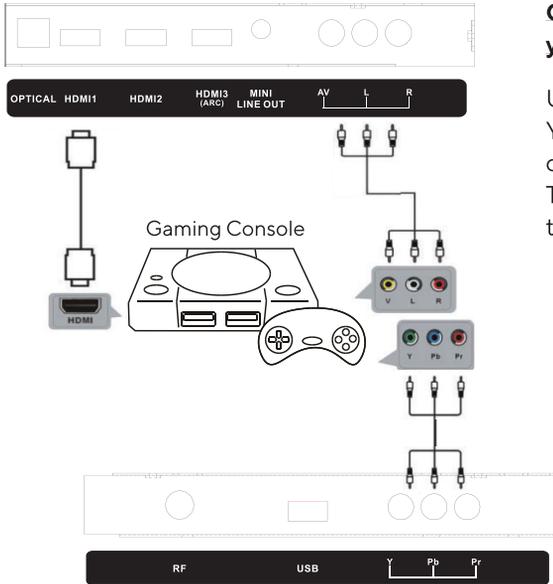


Connecting a gaming console to your TV

Use an HDMI® cable, AV cable and YPbPr cable (sold separately) to connect a gaming console to your TV. Be sure to match the cables to the proper inputs.

Connecting an external device to your TV via AV


Use the composite audio L/R (white/red) and video (yellow) cables (sold separately) to connect an external device, such as a speaker, to your TV.

Press the SOURCE button on your TV's remote until you reach "AV".

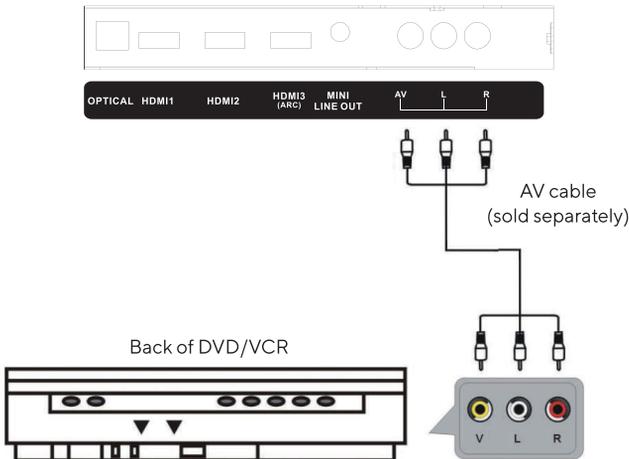


Connecting External Devices

Connecting an External Device to Your TV via YPbPr

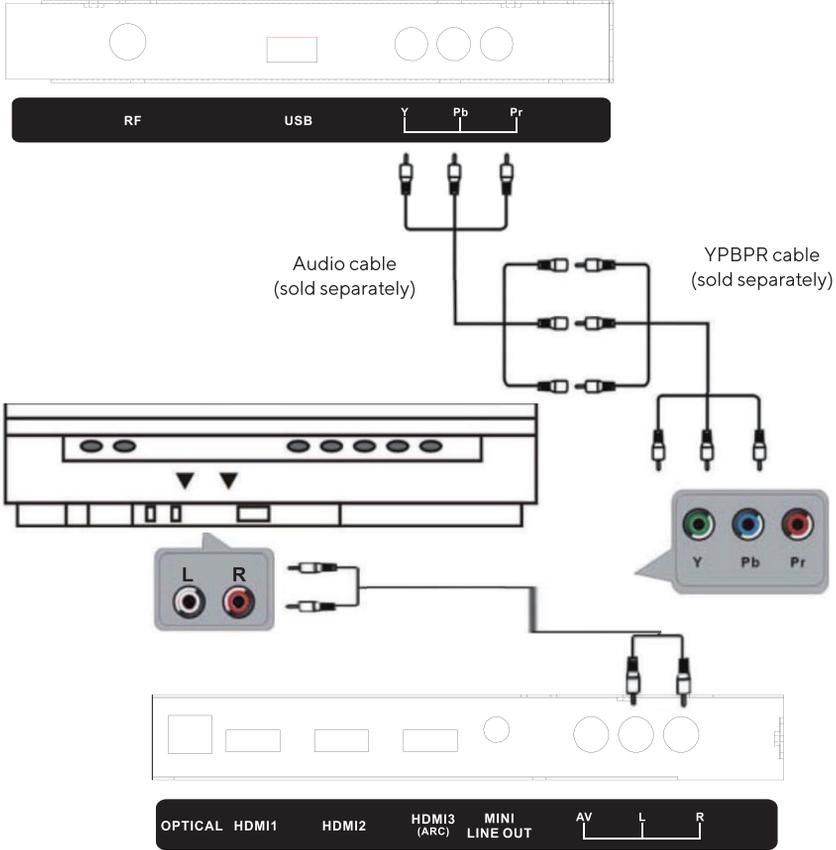

Connecting an External Device to Your TV via an Optical Cable

Use an optical cable (sold separately) to connect a soundbar or amplifier to your TV.

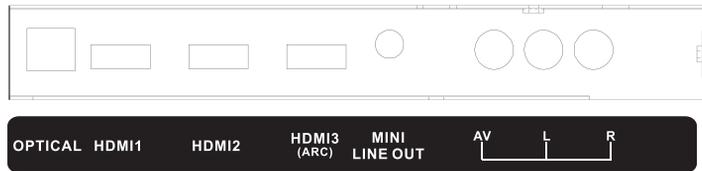

Supported Signal Modes

I. HDMI® Mode

Resolution	Horizontal Frequency (kHz)	Vertical Frequency (kHz)
480p	31.468	59.94
576p	31.2	50.00
720p	45.00	60.00
1080i	33.75	60.00
1080p (1920x1080)	67.50	60.00
2160p (3840x2160)	67.50	30.00
2160p (3840x2160)	135.00	60.00

Note: When a signal is received by the display and exceeds the allowed range, a warning message will pop up on the screen. You can confirm the signal on the screen.

Troubleshooting

Problem	Solution
TV will not power on (the power indicator does not light up)	Make sure that both ends of the power cable are plugged into the socket properly and that the wall socket is functioning. Be sure to point the remote directly at the IR sensor on the bottom right corner of the TV.
“No Input Signal” appears on the screen	<ul style="list-style-type: none">• Check that the signal line is properly connected.• Check that the connected device is powered on.• Check that the SOURCE input has been selected and matches the input signal.
The remote control does not function properly	<ul style="list-style-type: none">• Check that the battery is not drained. Replace with 1 CR2025 battery.• Check that the remote control is within the operating range.• Check that the remote control is pointed to the remote control window on the bottom right corner of the TV.• Make sure there aren't any objects obstructing the signal from the remote to the remote control window on the TV.
There are flashing spots or stripes on the screen	Try switching off sources of interference, such as appliances, baby monitors and more.
Image color or quality deteriorates	Check that picture settings (brightness, contrast, color, etc.) are adjusted appropriately.
Screen position and size are incorrect	Check that the screen position and size are adjusted appropriately.
Image or color is incorrect	<ul style="list-style-type: none">• Check that the signal line is connected properly.• When connecting a computer to the TV, you may need to change your computer's resolution to obtain the correct image. The computer's output signal may affect the image displayed.
A warning message appears on screen	<ul style="list-style-type: none">• Check that the input signal line is properly connected.• Select the correct input signal.• For more information, refer to Supported Signal Modes on page 29.

Specifications

Model No.	DRPTV430BC
Screen Size	43" Diagonal
VESA	200x200mm
Aspect Ratio	16:9
Power Supply	AC 100-240V (~50-60Hz)
Power Consumption	≤150W
TV System	NTSC MN, ATV
Audio Output Power	8Ω 8Wx2
Inputs	Antenna Input x 1 USB Port x 1 HDMI® Inputs x 3 Audio In x 1 Video In x 1 AV In x 1 YPbPr In x 1
Outputs	Mini Line Out x 1 Optical Out x 1
Operating Temperature	32° F~113°F
Operating Humidity	20%-80% non-condensing
Waterproof Rating	IP54

Need Help?

For customer support regarding your device, please submit a request by emailing **support@dpaudiovideo.zendesk.com**. You will be provided a ticket number regarding your inquiry, which you can refer to when contacting us further.

You may also reach a DuraPro customer service representative by calling **1-833-909-2673**. We are available Monday - Friday, 9am - 5pm PST, except on major holidays. DuraPro strongly urges customers to email their inquiry prior to calling, as this will enable us to better assist you.

Please make sure to note the model number and a description of your inquiry.

Thank you for purchasing a DuraPro product.

Warranty Information

Limited Warranty

DuraPro (the "Company") warrants this new product purchased and contained in this package (the "Product") against defects in material or workmanship for 90 Days (Parts & Labor) and 1 Year (Limited). In order for the Company to honor this limited warranty, you must present a valid proof of purchase (i.e. a receipt) of this Product. **IMPORTANT NOTE:** The customer is encouraged to carefully inspect the Product upon receipt after purchase – especially prior to any assembly, disassembly, mounting, installation or utilizing a third-party product of any kind, such as a decorative or protective cover or case.

This warranty is void if the Company deems, in its discretion, that the Product may have been damaged when the packaging was opened, through modification, improper transport, improper storage, improper use, improper assembly or disassembly, exposure to adverse elements, mounting or other installation, end user negligence, water damage or tampering of the barcode of the Product. This warranty does not apply: (a) to cosmetic damage, including but not limited to screen damage, a cracked display, scratches, dents and broken ports; (b) to damage caused by accident, abuse, misuse, fire, water vapor exposure, excessive exposure to humidity, water or other liquid contact, earthquake or other external cause; (c) to defects caused by normal wear and tear or otherwise due to the normal aging of the product; (d) if any serial number has been removed or defaced from the product; or (e) to damage caused by installation or mounting, assembly or disassembly, use with a third party device, cable, protective or decorative cover/case, component or product that does not meet the Company's product specifications. This warranty is a limited warranty for repair of the Product or replacement of the Product with a new or refurbished product,

Warranty Information

subject to the conditions set forth herein.

The Company is not liable for consequential, indirect, incidental, special or punitive damages and the Company's total liability hereunder shall not exceed an amount greater than the retail purchase price of the product.

90 Days Parts & Labor

The Company warrants to you as the original retail purchaser of the Product, that should the Product have any warranted defect out of the packaging, under normal conditions, such defect(s) will be repaired or replaced with a new or refurbished part (at the Company's sole discretion) without charge, if the Product is submitted to the Company within a period of ninety (90) calendar days from the date of purchase of the Product. The customer is responsible for transportation cost and insurance charges (if applicable) to the Company and must be able to document a clear proof of delivery to the Company as well as proof of registered receipt by the Company. It is the customer's responsibility to retain original packaging or provide like packaging in order to facilitate the warranty repair or replacement process. The Company will incur no liability whatsoever to provide packaging for warranty items. Should the product be damaged en route to the Company due to insufficient or improper packaging or improper transport, the warranty may be voided. You must receive a return authorization number (RMA#) before sending the unit in for service. This warranty only applies to manufacturer defects, and the Product must be returned to the Company in its original condition.

1 Year Limited Parts

If determined to be covered under warranty, the one (1) year limited parts warranty gives the customer the option to return the Product to the Company for repair or replacement. The customer will be responsible for labor charges. This warranty does not cover any incidental or indirect costs incurred as a result of a defect in the Product, including any consequential, incidental or indirect damages.

DuraPro intends to make this manual accurate and complete. However, DuraPro makes no claim that the information contained herein covers all details and conditions. The information in this document is subject to change without notice at any time. DuraPro assumes no responsibility for accuracy or completeness of the information contained in this manual.