

© Arlo Technologies, Inc. Arlo, Arlo logo, and Every Angle Covered are trademarks of Arlo Technologies, Inc. Any other trademarks are for reference purposes.


Si ce produit est vendu au Canada, vous pouvez accéder à ce document en français canadien à arlo.com/docs.

(If this product is sold in Canada, you can access this document in Canadian French at arlo.com/docs.)

For regulatory compliance information including the EU Declaration of Conformity, visit www.arlo.com/about/regulatory/.

 Arlo Technologies Intl. Ltd
Ground Floor, Building 3
University Technology Centre
Curraheen Road, Cork T12 EF21
Ireland

 September 2020




201-50479-01

Arlo Technologies, Inc.
2200 Faraday Avenue, Suite 150
Carlsbad, CA 92008 USA



 What's in the box



Rechargeable
battery




Battery charging cable (works
with most power adapters)

Note: To avoid the risk of water intrusion inside your wire-free Arlo Essential Video Doorbell, don't leave the doorbell outdoors without a battery inserted.

Charge and insert the battery

1

Charge the new battery to 100%.

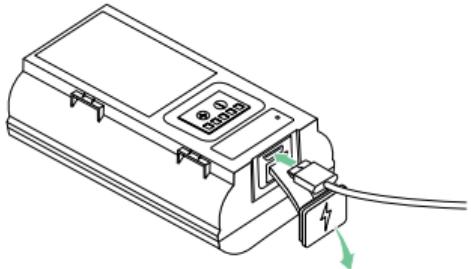

The LED lights red during charging, and then lights green.

2

Remove the existing battery from your doorbell and replace it with the new battery.

Need help?

We are here for you.

Visit www.arlo.com/support for quick answers and resources:

- How-to videos
- Troubleshooting tips
- Additional support resources