

INSIGNIA™

QUICK SETUP GUIDE

40"/55" 1080p
60Hz LED TV


NS-40D420NA20
NS-55D420NA20

ACCESSORIES

Remote control and two AAA batteries




40" TV stands

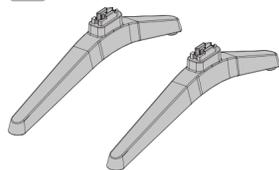

M4 screws
(20 mm length)
(4 pcs.)



55" TV stands

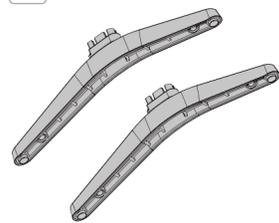

M4 screws
(20 mm length)
(4 pcs.)




Power cord



STOP
Before using your new product, please read these instructions to prevent any damage. Do not plug your power cord in until all other devices have been connected.


1 INSTALLING THE STANDS OR A WALL MOUNT

Place your TV face-down on a cushioned, clean surface.

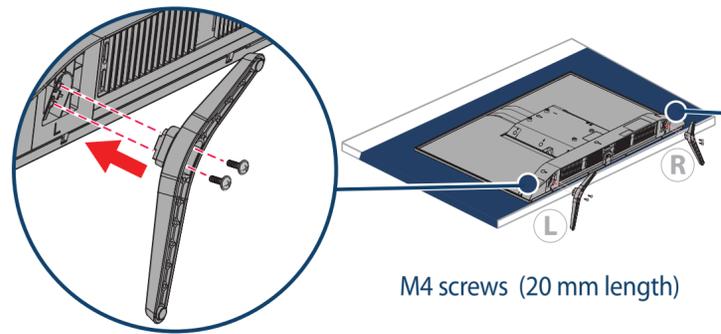

M4 screws (20 mm length)

40"

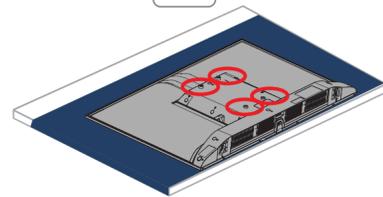

VESA Mounting Pattern

100 × 200 mm


Screws: type M6, 12 mm minimum length depending on the wall-mount.

This apparatus is intended to be supported by a UL Listed Wall Mount Bracket, marked with the minimum weight of 6.2 kg.

STANDS


1 Align the TV stand screw holes with the holes on your TV's bottom.

2 Use a Phillips screwdriver and two provided screws to secure each stand to your TV.

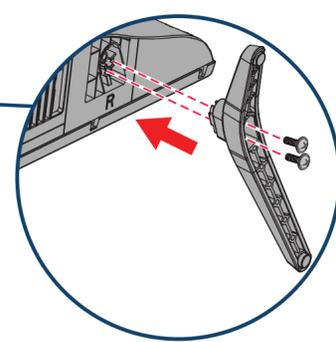

M4 screws (20 mm length)

55"

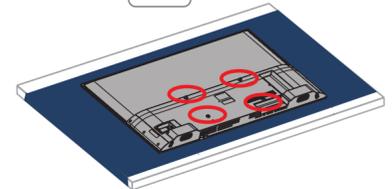

VESA Mounting Pattern

400 × 200 mm

Screws: type M6, 12 mm minimum length depending on the wall-mount.

This apparatus is intended to be supported by a UL Listed Wall Mount Bracket, marked with the minimum weight of 12.5kg

WALL MOUNT

Before you mount your TV, make sure that:

You remove the stands.


The wall-mount bracket supports the weight of your TV.

See the instructions that came with your wall mount for more information about how to correctly mount your TV.


WARNING: Your TV has four VESA mounting holes on the back. **You must secure a wall-mount bracket to all four holes.** If you do not use all four holes, your TV may fall and cause property damage or personal injury.

Note: Wall-mount screws are not included.

FEATURES

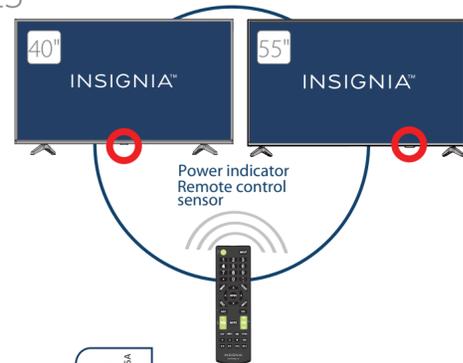


40"

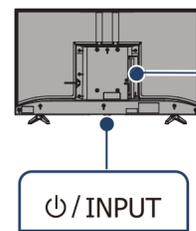

⏻ / INPUT

55"

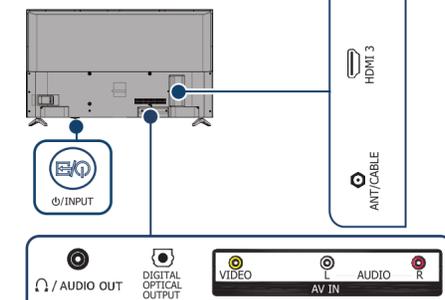


Note: Images do not necessarily represent the exact design of your television.

2 MAKING CONNECTIONS

HDMI (best video quality)



 AV (good video quality)



/AUDIO OUT

DIGITAL OPTICAL OUTPUT

VIDEO

AV IN

L

R

VIDEO

L-AUDIO-R

L

AUDIO

R

ANT/CABLE

VIDEO

L-AUDIO-R

L

AUDIO

R

ANT/CABLE

VIDEO

L-AUDIO-R

L

AUDIO

R

ANT/CABLE




HDMI OPTIONS

USING ANALOG AUDIO

AUDIO OPTIONS




USING DIGITAL AUDIO

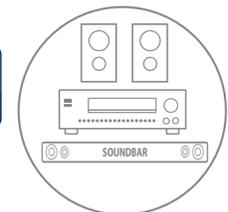

You can use the **DIGITAL OPTICAL OUTPUT** jack or the **HDMI 1 (ARC)** jack.
Note: If you need to change the digital audio format: From your TV's *Audio* menu, select **Audio Format/Audio Delay**, then press **ENTER**. Set **Audio Format** to **PCM**.


Coaxial (good video quality)

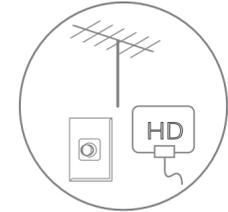


Connect an antenna to access live over-the-air TV.

3 TURNING ON YOUR TV

1 Plug the power cord into the back of your TV (55" model only) and a power outlet.

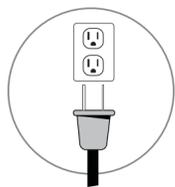

2 Remove the remote control cover and install the batteries.

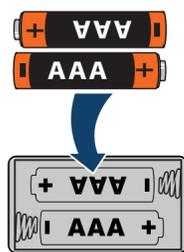

3 Press  on your remote.


4 Follow the on-screen instructions.



FIND YOUR USER GUIDE ONLINE

- 1 Go to www.insigniaproducts.com.
- 2 Use the search bar to find **NS-40D420NA20** or **NS-55D420NA20**.
- 3 Select **Support & Downloads**.
- 4 Next to *User Guide*, select the language you want.

USING YOUR REMOTE CONTROL

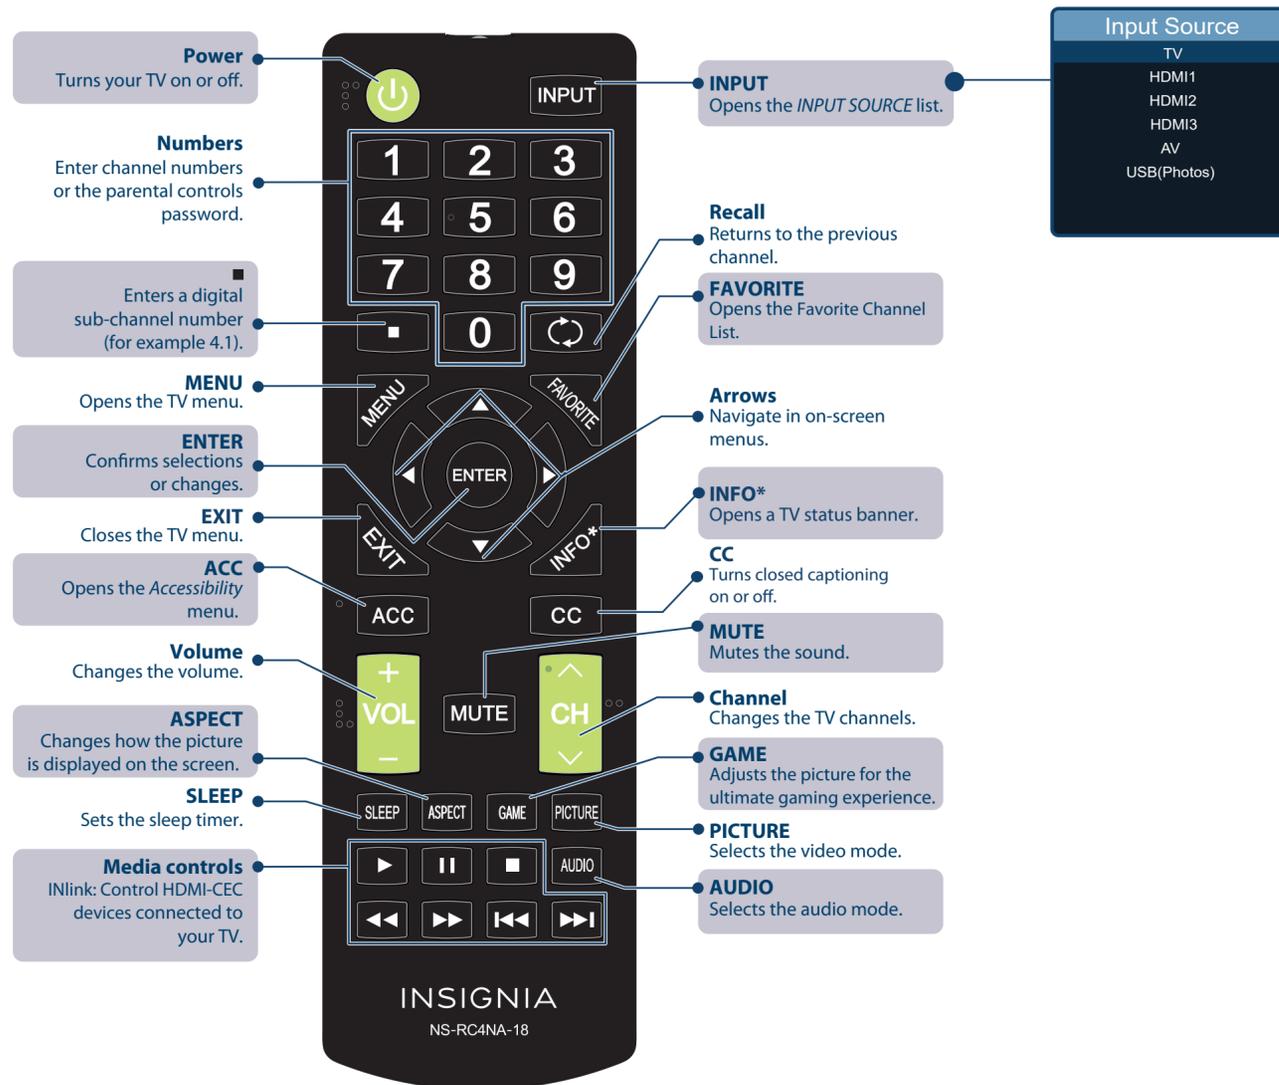

I already have a universal remote control. How do I make it control this TV?

If you already have a universal remote control that you would like to program to work with your TV and don't want to use the included Insignia remote control, see the table below for common codes.

UNIVERSAL REMOTE CONTROL CODES	
AT&T U-verse	1034, 1035, 1040, 1398, 1465, 1596, 1437, 1507, 12049, 11641, 11564, 11326, 11423, 11892, 11517, 10171, 10463, 11385, 11660, 11963, 12184, 13227
Cablevision	068, 069, 078, 096, 100, 164, 168, 229, 026
Charter	2002, 1204, 1423, 1517, 0171, 1963, 0463, 1463, 0842, 1326, 167, 415, 424, 450, 456, 461, 507, 523, 567, 577, 586
Comcast	10463, 10171, 11204, 11326, 11463, 11517, 11641, 11780, 11785, 11892, 11963, 12002, 01877, 00276, 01982, 01376, 00810, 01187, 01106, 00877, 00476
Cox	1326, 1463
DirecTV	10463, 10171, 11204, 11326, 11517, 11564, 11641, 11963, 12002, 11463, 12049
Dish Network	834, 720, 222, 898, 365, 777, 754
RCA	135, 12049, 11423, 11564, 10171, 10463, 11810, 11892, 11963, 12184, 12417
Rogers	0463, 1326, 2049, 1785, 1780, 1423, 1963
Time Warner	400, 450, 461, 456, 10463, 1463, 0463
Verizon	0198, 0490

For an up-to-date list of codes for other cable providers and universal remote brands, visit www.insigniaproducts.com/remotecodes

INSIGNIA™

ONE-YEAR LIMITED WARRANTY
Visit www.insigniaproducts.com for details.

NEED ADDITIONAL HELP?

Check out our **Support Community** at <http://community.insigniaproducts.com/> for helpful information from other Insignia TV owners.

WE'RE HERE FOR YOU

www.insigniaproducts.com
For customer service, call:
1-877-467-4289 (U.S./Canada)
01-800-926-3000 (México)

U.S. and Canada:

INSIGNIA is a trademark of Best Buy and its affiliated companies.
Registered in some countries.
Distributed by Best Buy Purchasing, LLC
7601 Penn Ave South, Richfield, MN 55423 U.S.A.

México:

01-800-926-3000
Best Buy Imports S. DE R.L. DE C.V.
Avenida Santa Fe No. 440 Piso 2 Ofna 202 Y 203 P3 Y P4
Colonia Santa Fe Cuajimalpa, C.P. 05348,
Delegación Cuajimalpa De Morelos, México,
Ciudad De México

©2019 Best Buy. All rights reserved.
Made in China