 


HARPER / PEARSON / THOMPSON

---

MEDIUM STORAGE CABINET

MODEL # 3AXCHRP-06

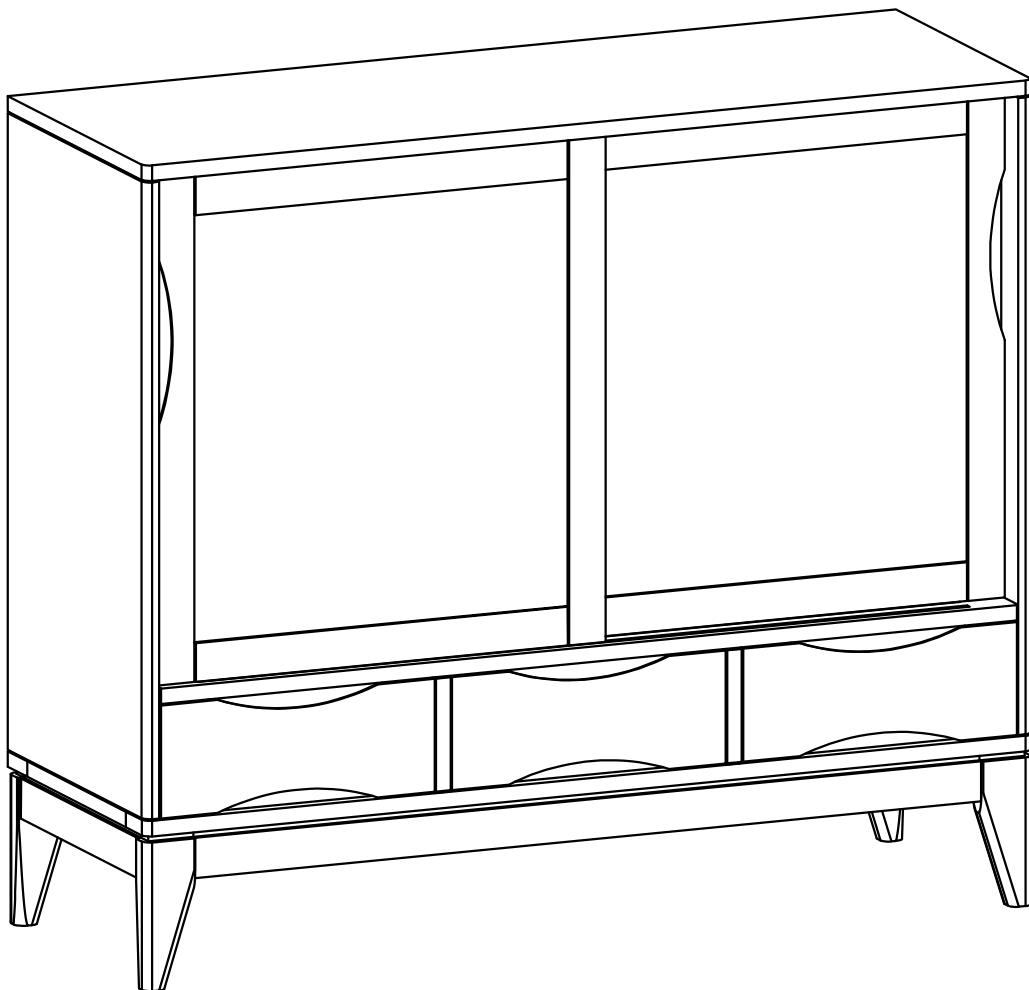



**FOR REPLACEMENT PARTS OR HELP WITH  
ASSEMBLY PLEASE CONTACT US AT:**

**[simpli-home.com/customer-support](https://simpli-home.com/customer-support)**

**PLEASE ENSURE TO HAVE THE MODEL #  
FROM THE PACKAGING OR INSTRUCTION BOOKLET**

**TO RETURN THE PRODUCT:  
PLEASE CONTACT THE RETAILER  
WHERE THE ITEM WAS PURCHASED FROM**



**ENTER  
TO WIN**

**Upload an image of our furniture  
in your home with a short review  
to our facebook page for a chance to**

**Win up to \$3000 of  
Simpli Home furniture!!!**

[www.facebook.com/simplihomefurnishings](http://www.facebook.com/simplihomefurnishings)



**IMPORTANT :** Please read this manual carefully before beginning assembly of this product. Keep this manual for future reference.

## SAFETY INFORMATION

Identify all the parts and hardware. Do not discard of the packaging until you have checked that you have all of the parts and hardware required. Hardware package may have spare parts.

**WARNING:** This item contains small parts which can be swallowed by children and pets. Keep children and pets away during assembly. To avoid danger of suffocation, always keep plastic bags away from children and pets. We recommend that you assemble this unit on a carpeted floor to avoid scratches. If using power tools, set the tool to low torque to avoid damage.

 
**May require 2 people for ease of assembly.**

## CARE and MAINTENANCE


To clean, use a soft or slightly damp cloth, then wipe with a clean, dry cloth. Dust with soft dry cloth.  
Do not use ammonia-based cleaning products, as they will damage the finish. Do not leave liquids or damp cloths on this furniture.  
To avoid dulling of the finish, do not place furniture in direct sunlight. Please inspect and tighten all screws or bolts on a regular basis to ensure proper performance and safety of your item.

## PART DESCRIPTION


A

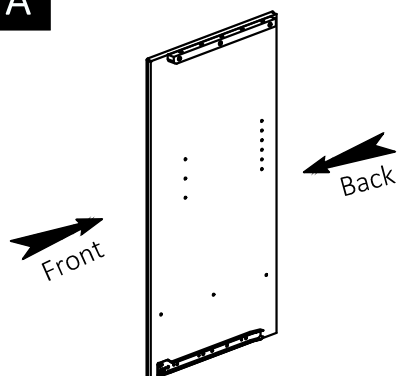SIDE  
QTY 1 PAIR

 
B

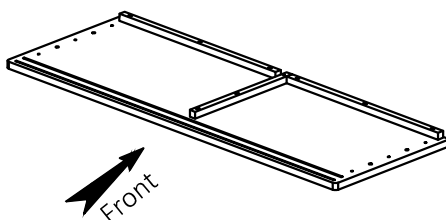TOP  
QTY 1

 
C

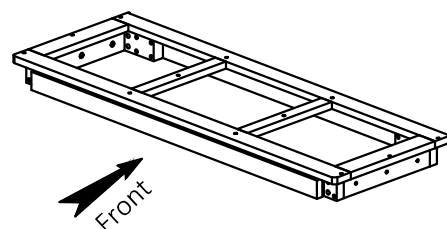BOTTOM  
QTY 1

 
D

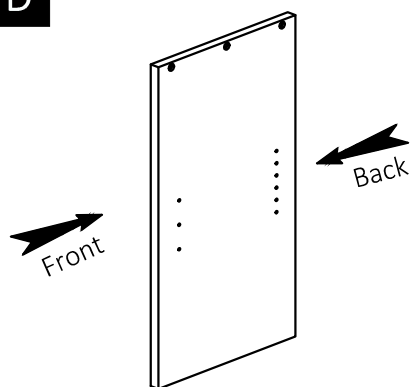DIVIDER  
QTY 1

 
E

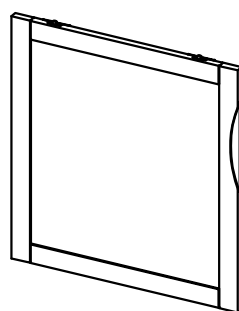DOOR  
QTY 1 PAIR

 
F

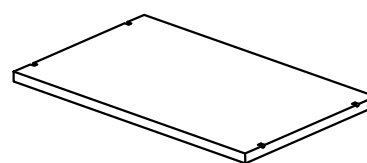CABINET SHELF  
QTY 2

 
G

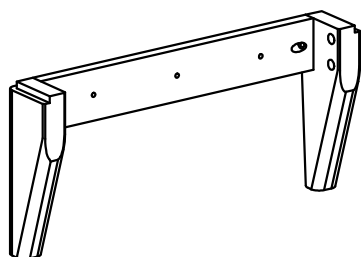LEG  
QTY 2

 H

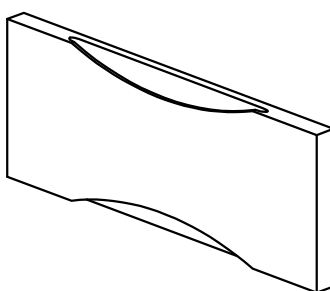DRAWER FRONT  
QTY 3

 
I

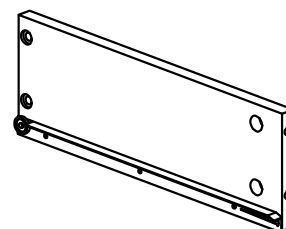DRAWER SIDE  
QTY 3 PAIRS

**NEED HELP?** For help with assembly or if you are missing a part,  
Please call customer service at 1-866-518-0120 ext. 262 (9 am to 4 pm EST)


PART DESCRIPTION

 J

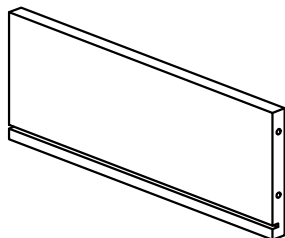


DRAWER BACK  
QTY 3

 K

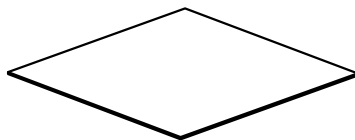


DRAWER BOTTOM  
QTY 3

 L

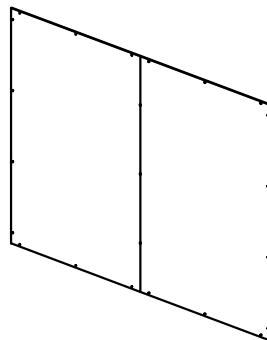


BACK PANEL  
QTY 1 PAIR

 M

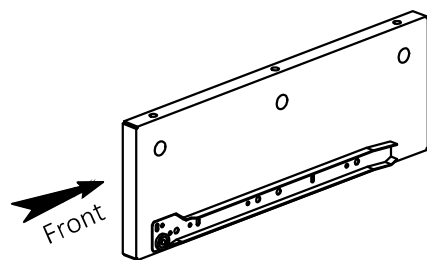

SMALL DIVIDER  
QTY 1 PAIR

 N

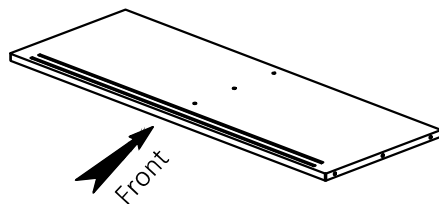


MIDDLE SHELF  
QTY 1

**NEED HELP?** For help with assembly or if you are missing a part,  
Please call customer service at 1-866-518-0120 ext. 262 (9 am to 4 pm EST)


## HARDWARE DESCRIPTION

 1




ALLEN KEY SCREW  
M6 X 30mm  
QTY 42

 2

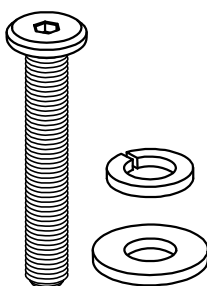


BOLTS AND WASHERS  
M8 x 50 mm  
QTY 8 SETS

 3



ALLEN KEY  
QTY 1

 4




PHILLIPS SCREW  
ROUND HEAD  
M4 X 15mm  
QTY 23

5



CAM LOCK PIN  
CAM LOCK  
QTY 24 SETS

 6



SHELF SUPPORT  
QTY 12

7



 



SMALL ALLEN KEY  
QTY 2


8




WOOD DOWEL  
Ø8 x 30 mm  
QTY 4

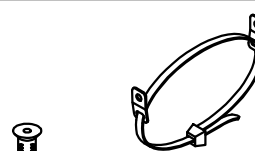9

 
- 
- a.  M4 X 25mm - QTY 1  
b.  M4 X 15mm - QTY 1  
c.  M4 X 25mm - QTY 1
- TIPPING RESTRAINT  
QTY 1 SET

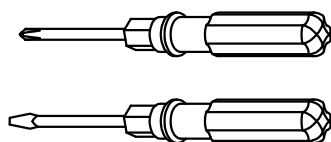

 Required -  
Flathead screwdriver  
Phillips screwdriver  
Rubber mallet  
**Not Included**

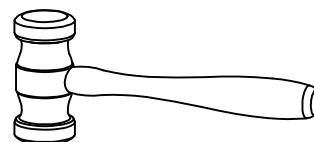


 **NEED HELP?** For help with assembly or if you are missing a part,  
Please call customer service at 1-866-518-0120 ext. 262 (9 am to 4 pm EST)

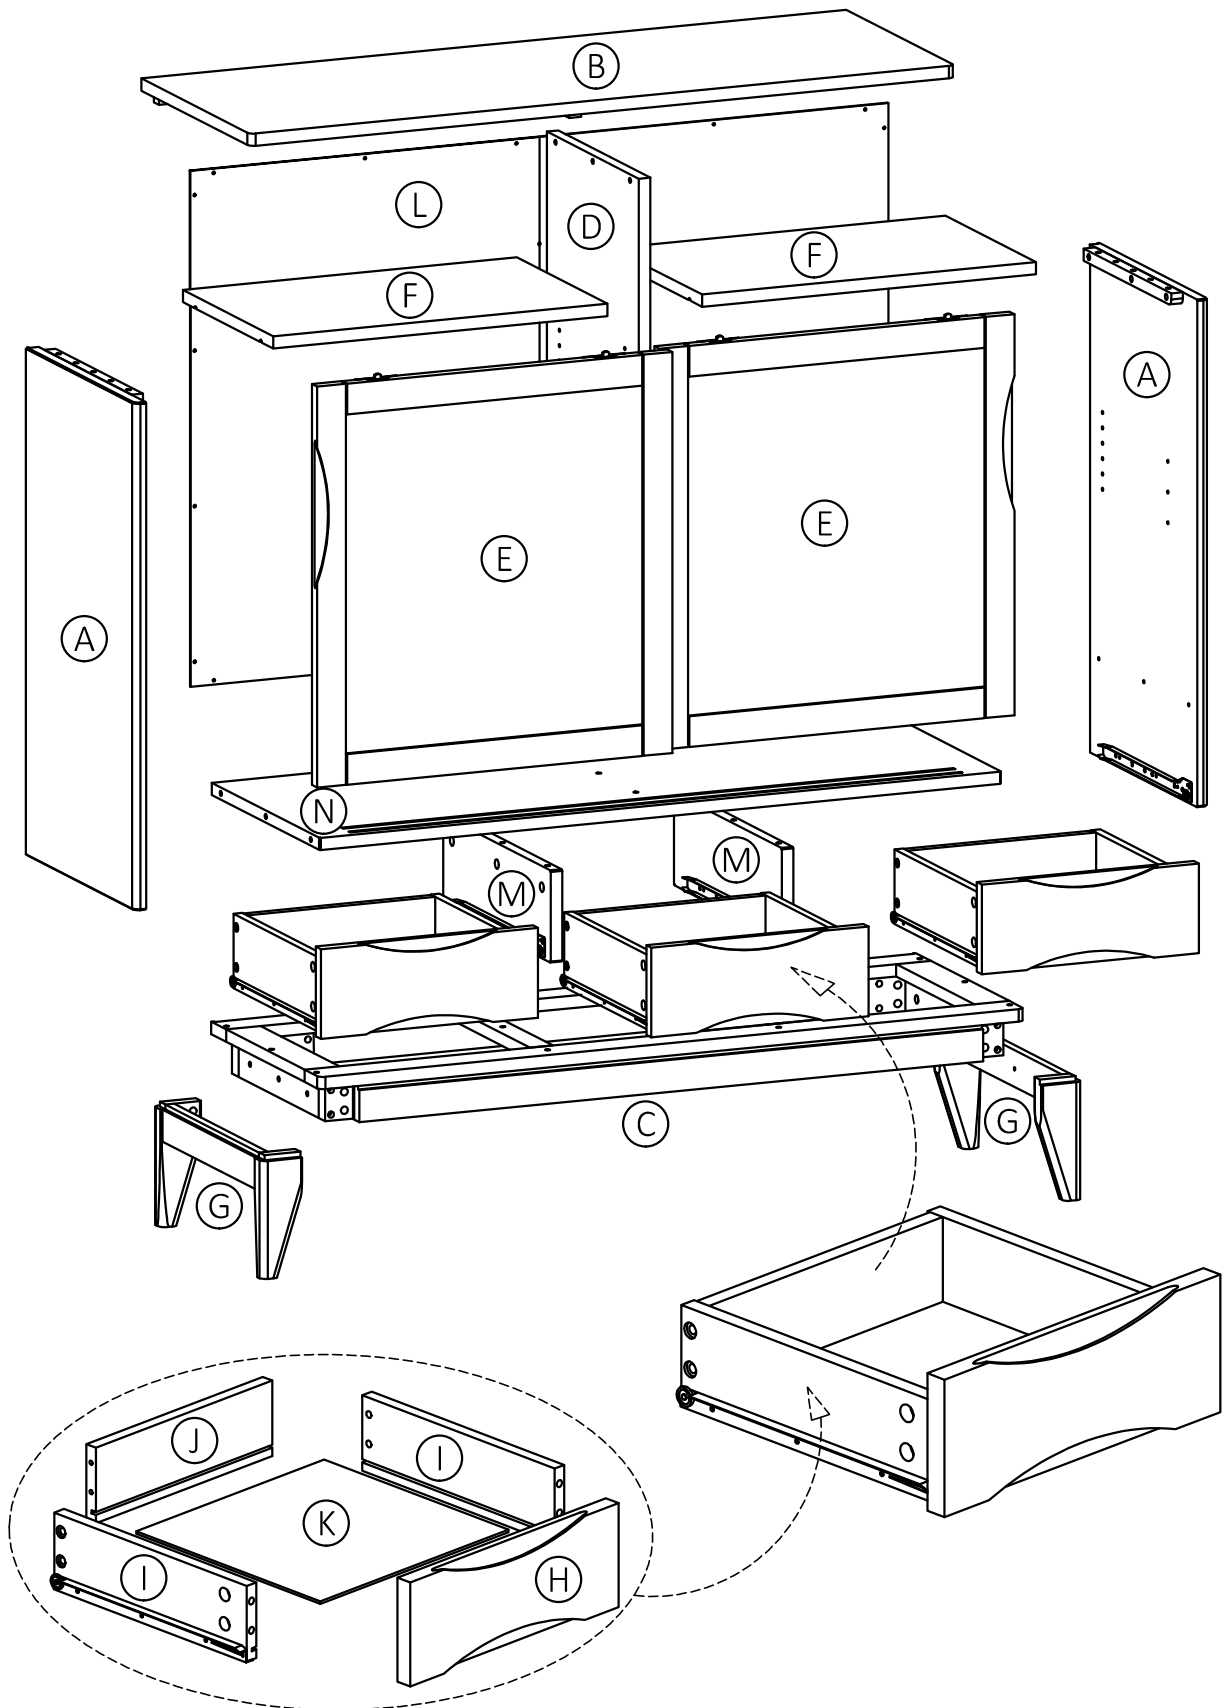




## STEP-1

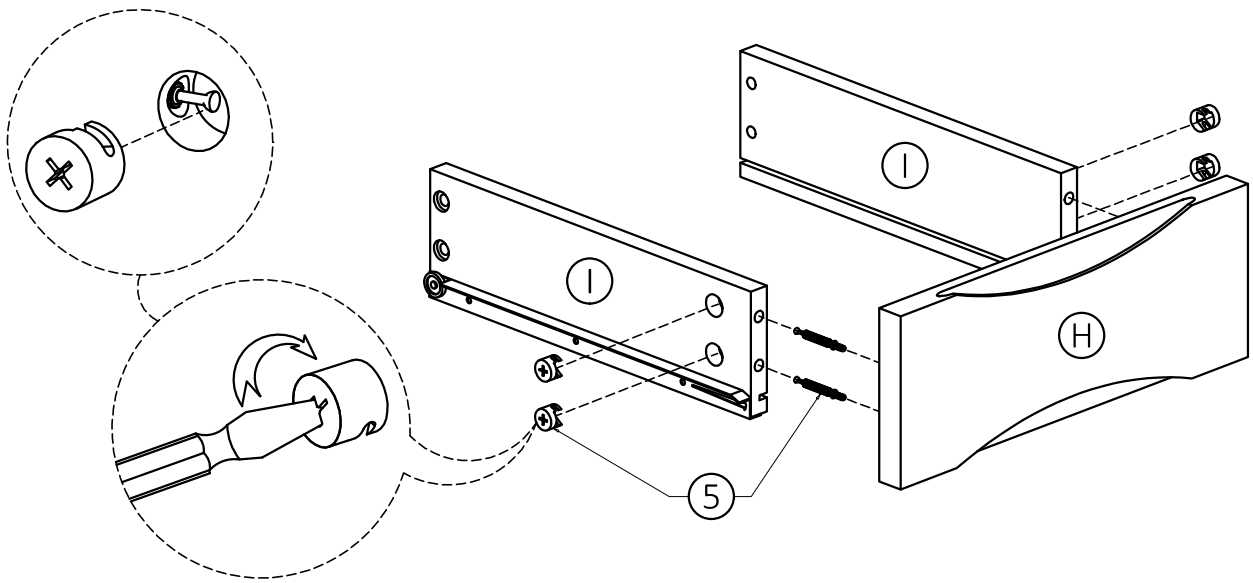 


1. Attach four Cam Lock Pins (5) to back of Drawer Front (H).
2. Align Cam Lock Pins with pre-drilled holes and attach Drawer Sides (I).
3. Insert two Cam Lock (5) into pre-drilled holes on each Drawer Side (I).
4. Use flathead screwdriver to secure Cam Locks.

## STEP-2

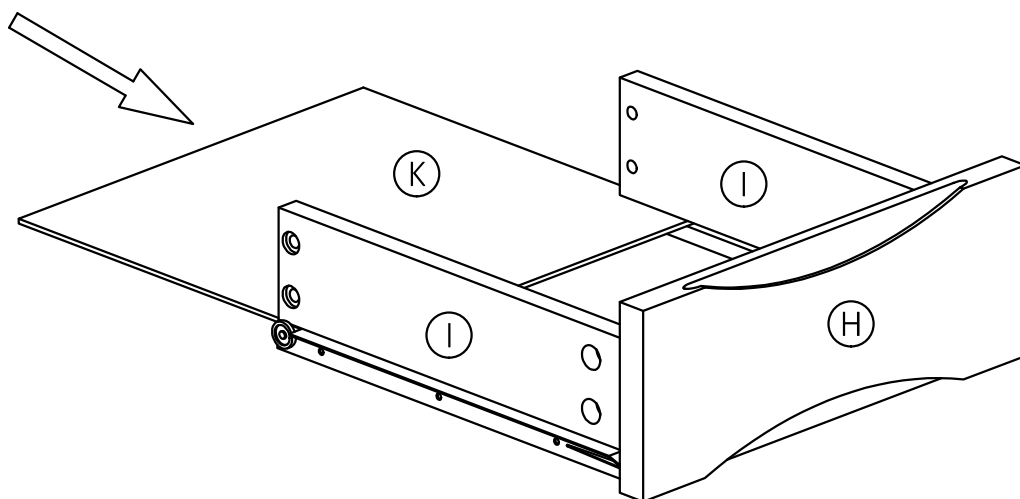 


1. Slide Drawer Bottom (K) firmly into slots on Drawer Sides (I) and Drawer Front (H).

## STEP-3

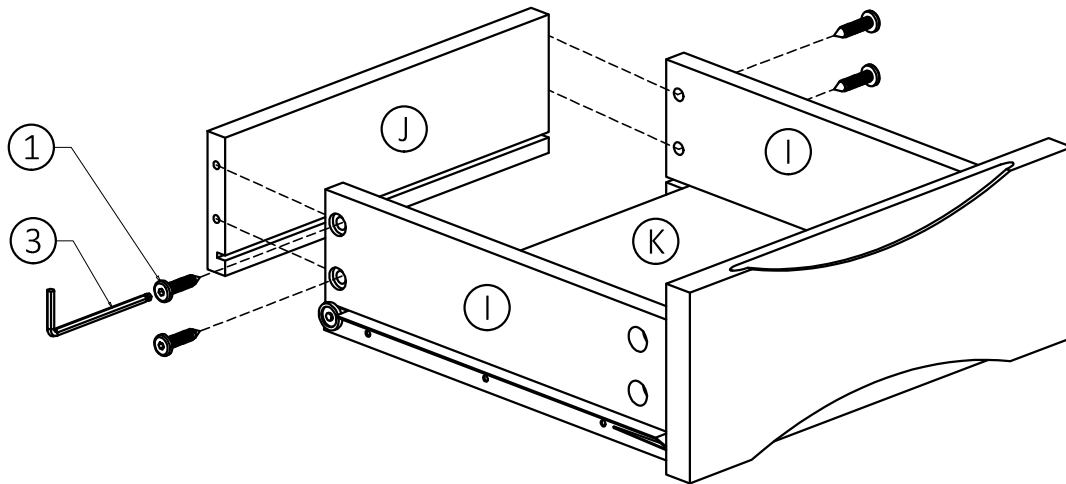 


1. Align Drawer Back (J) with Drawer Bottom (K) and press firmly into slot.
2. Attach Drawer Back (J) using two Allen Key Screws (1) through pre-drilled holes on each Side (I).
3. Use Allen Key (3) to tighten Screws. Do not over-tighten.

 Repeat Step 1-3 for the second and third drawer.

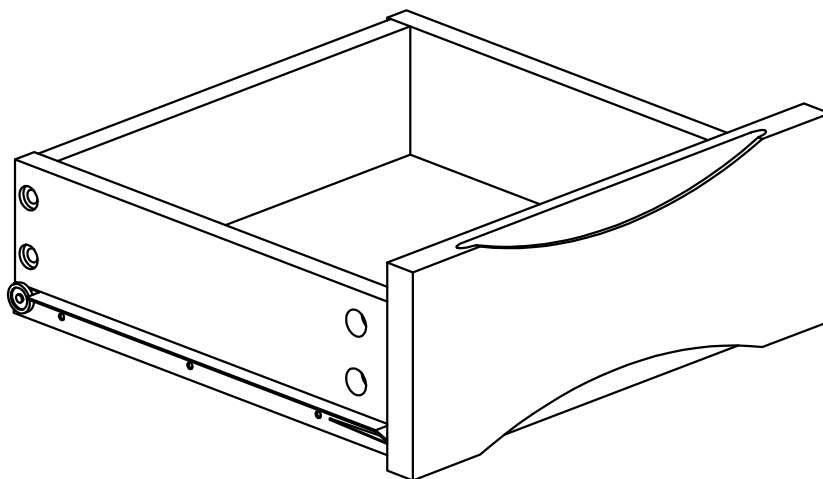


## STEP-4

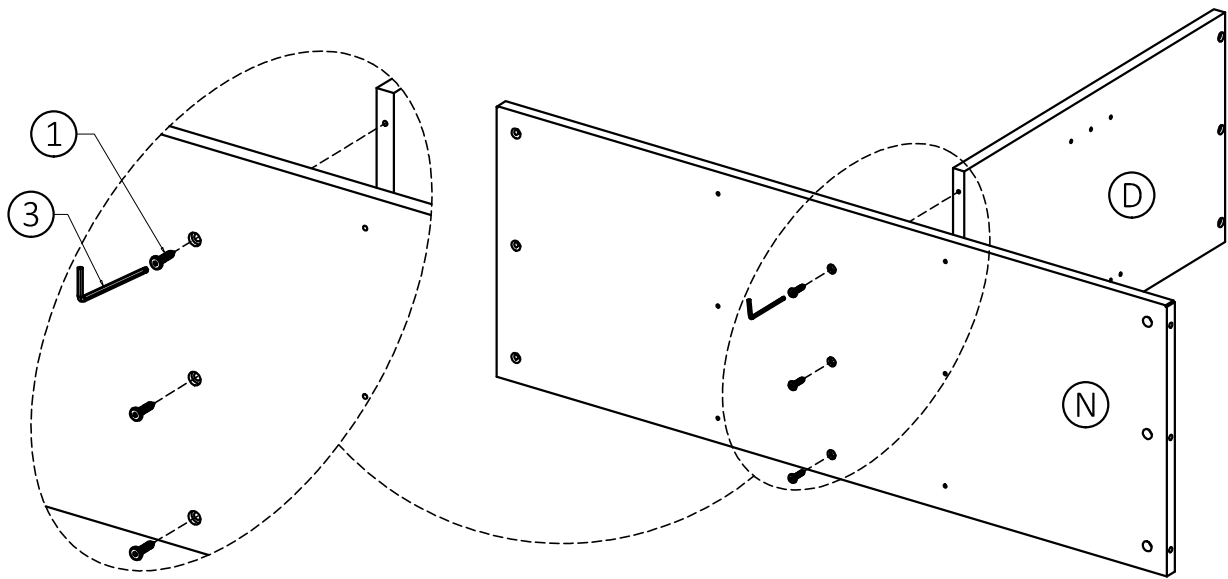 


1. Attach Divider (D) to Middle Shelf (N) using three Allen Key Screws (1).
2. Use Allen Key (3) to tighten screws. Do not over-tighten.

## STEP-5

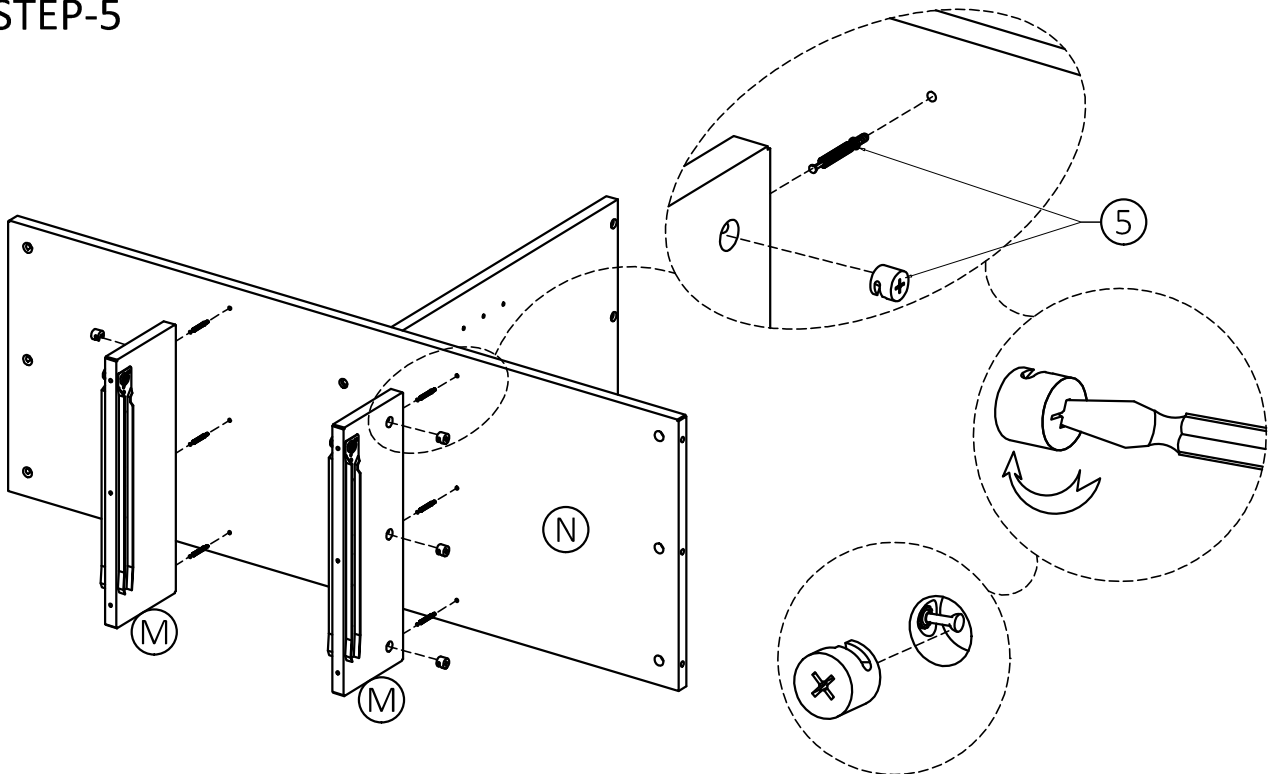 


1. Attach six Cam Lock Pins (5) to underneath of Middle Shelf (N).
2. Align Cam Lock Pins with pre-drilled holes and attach Small Dividers (M).
3. Insert three Cam Lock (5) into pre-drilled holes on each Small Divider (M).
4. Use flathead screwdriver to secure Cam Locks.

## STEP-6

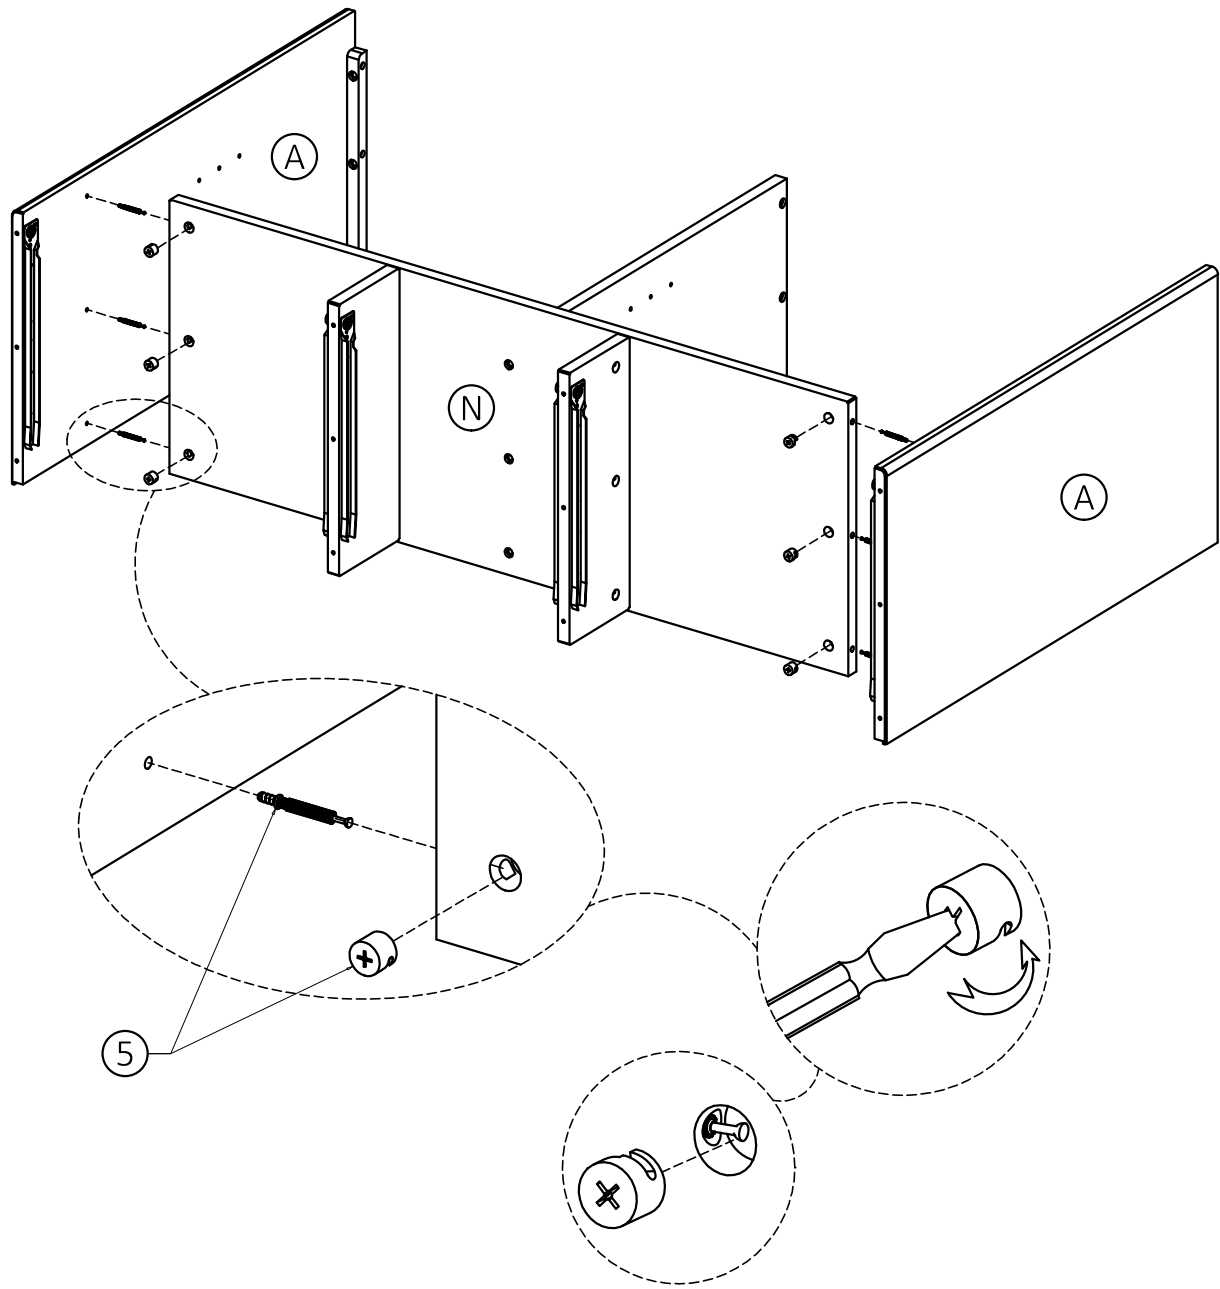 


1. Attach three Cam Lock Pins (5) to each Sides (A).
2. Align Cam Lock Pins with pre-drilled holes and attach Middle Shelf (N).
3. Insert six Cam Lock (5) into pre-drilled holes on Middle Shelf (N).
4. Use flathead screwdriver to secure Cam Locks.

## STEP-7

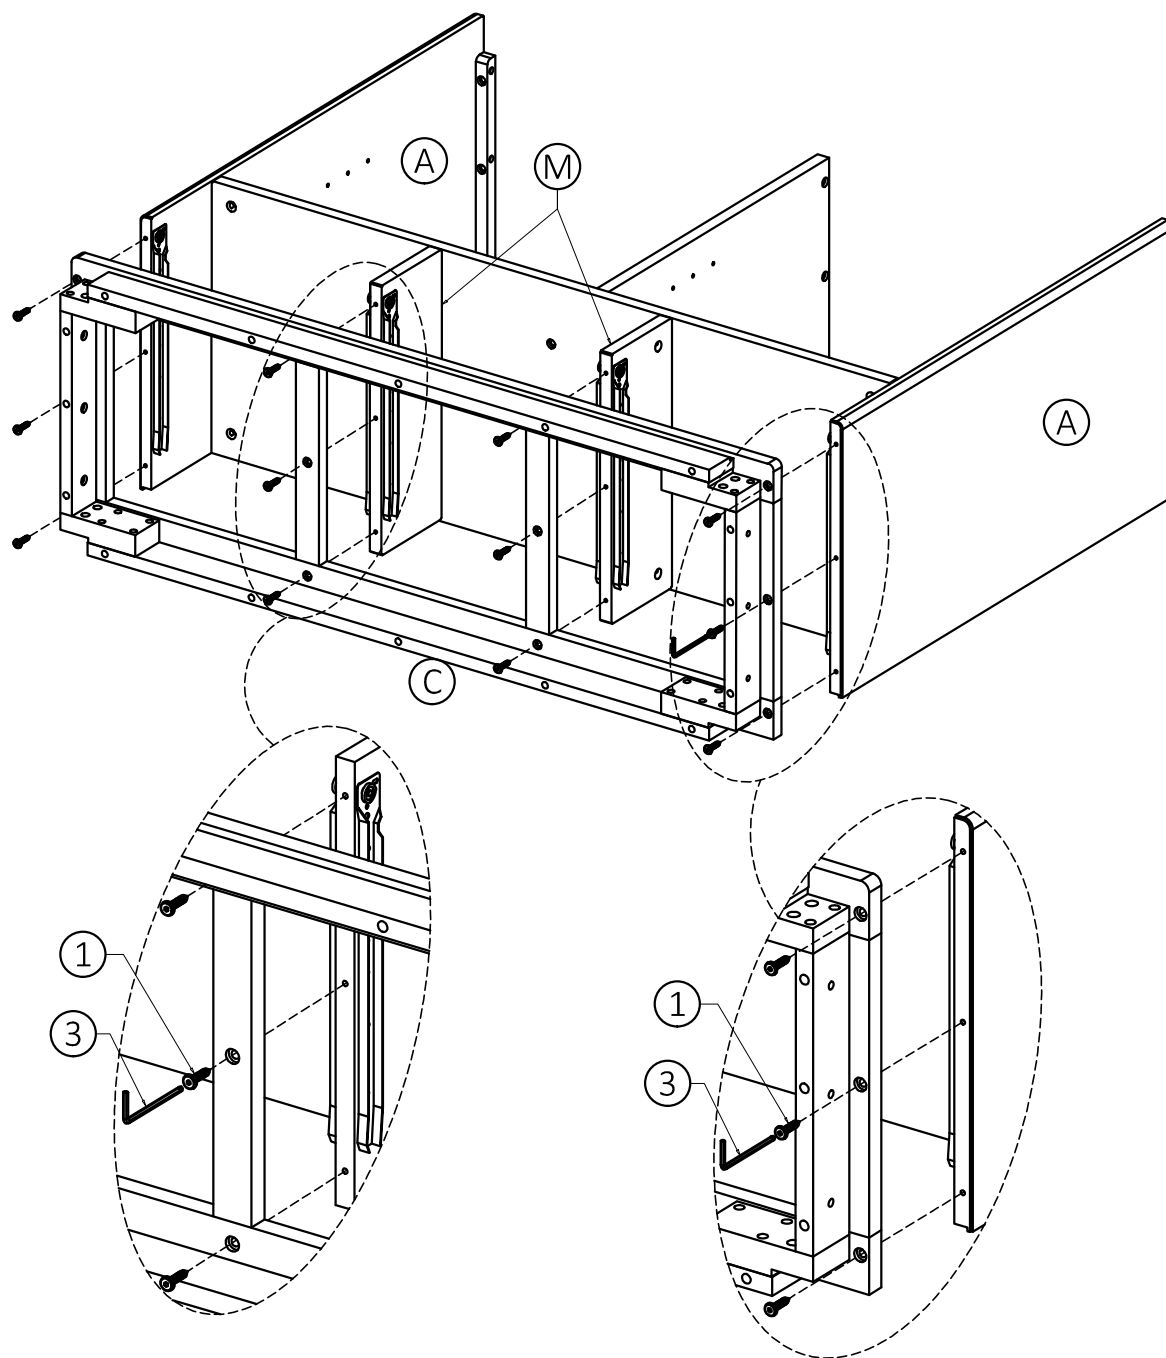 


1. Attach Bottom (C) to Sides (A) and Small Divides (M) using twelve Allen Key Screws (1) (three Screws on each Side and Small Divider).
2. Use Allen Key (3) to tighten Screws. Do not over-tighten.

## STEP-8

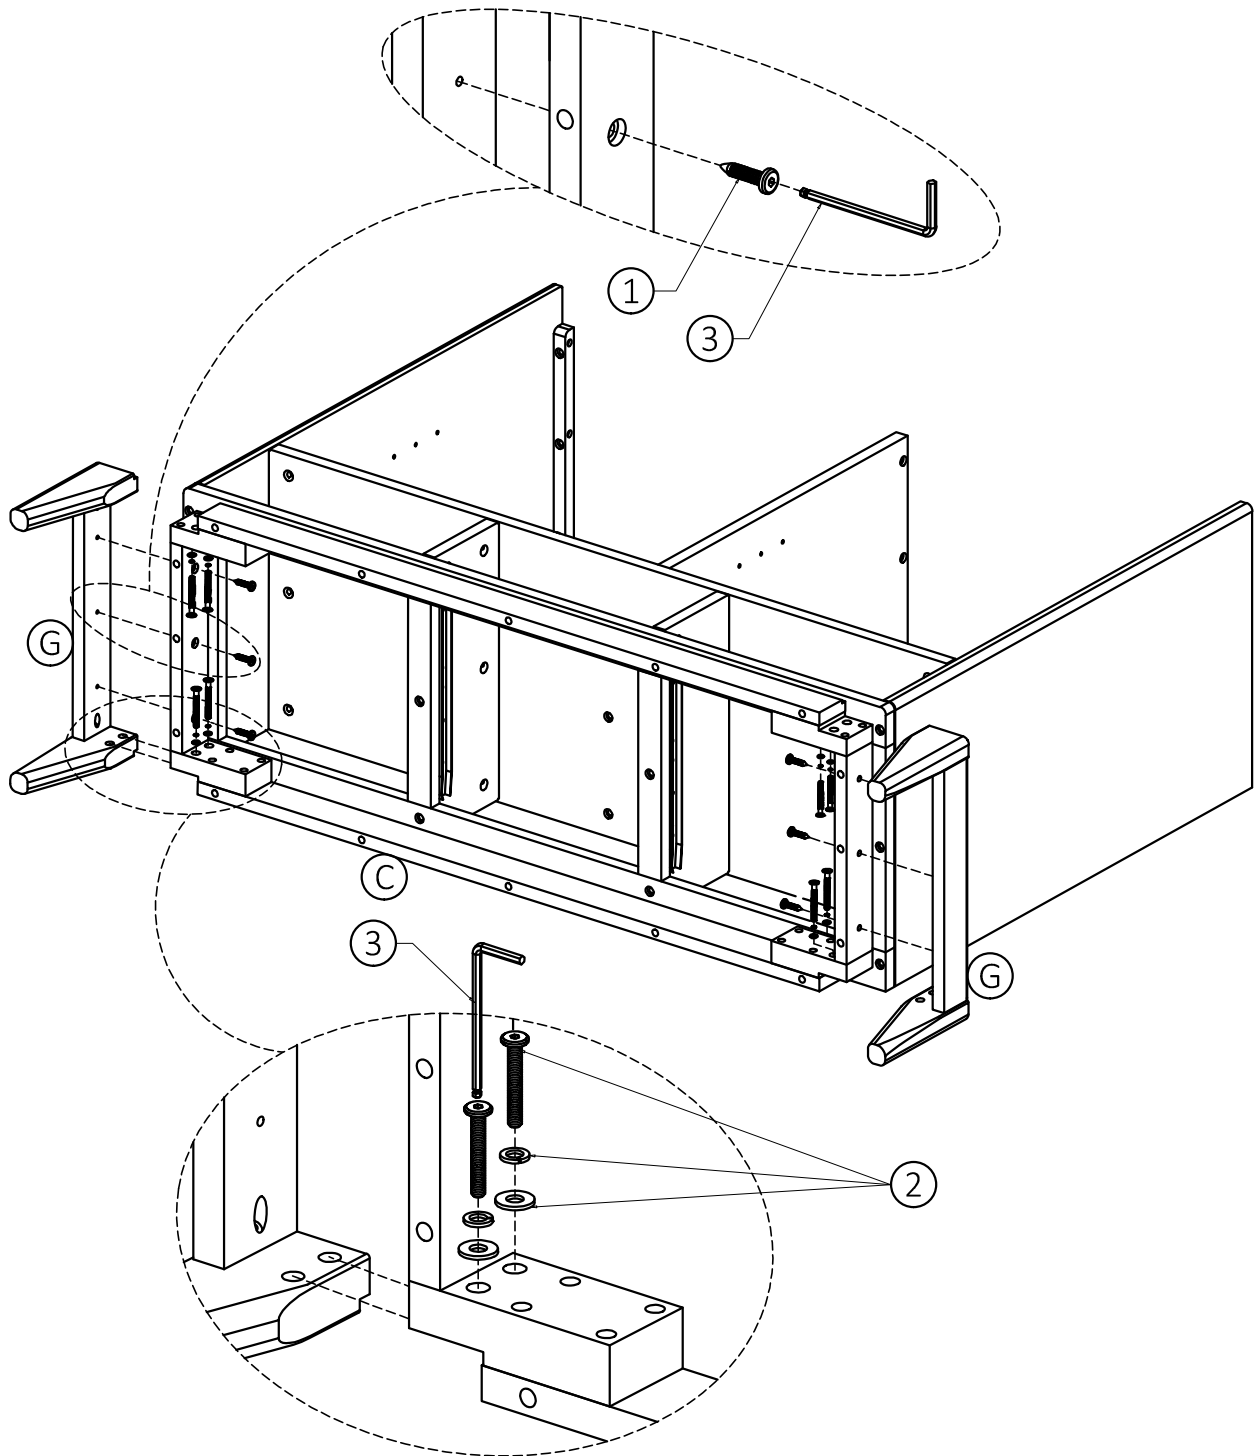 


1. Attach Legs (G) to Bottom (C).
2. Use xis Allen Key Screws (1) to secure part (C) and (G) (three Screws on each Leg)
3. Use eight sets Bolts and Washers (2) to secure part (C) and (G) (four sets on each Leg).
4. Use Allen Key (3) to tighten Bolts and Screws. Do not over-tighten.

## STEP-9

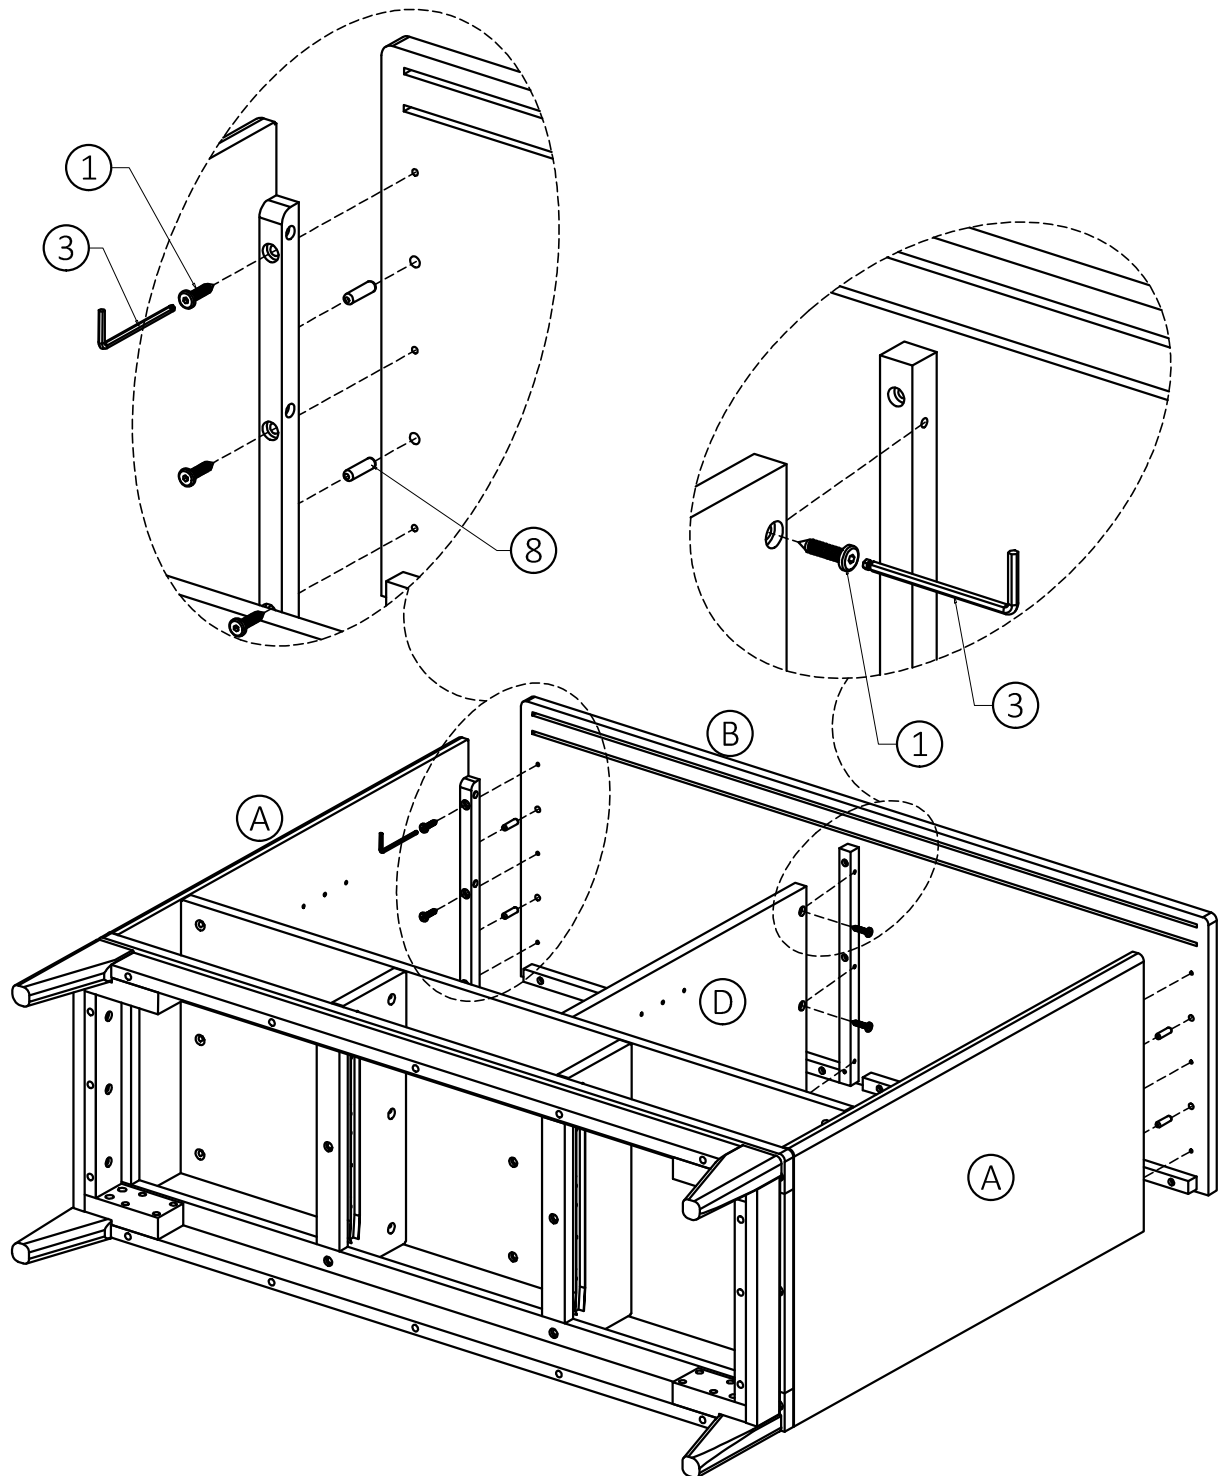 


1. Insert two Wood Dowels (8) into pre-drilled holes on each Side (A).
2. Use rubber mallet to tap Wood Dowels (8) into bottom of holes securely. 1/2 length of Dowels should be exposed.
3. Attach Top (B) to Sides (A) and Divider (D) using nine Allen Key Screws (1) (three screws on each Side and Divider).
4. Use Allen Key (3) to tighten Screws. Do not over-tighten.

## STEP-10

 

 
NOTE: The screwdriver is not included in the hardware pack.

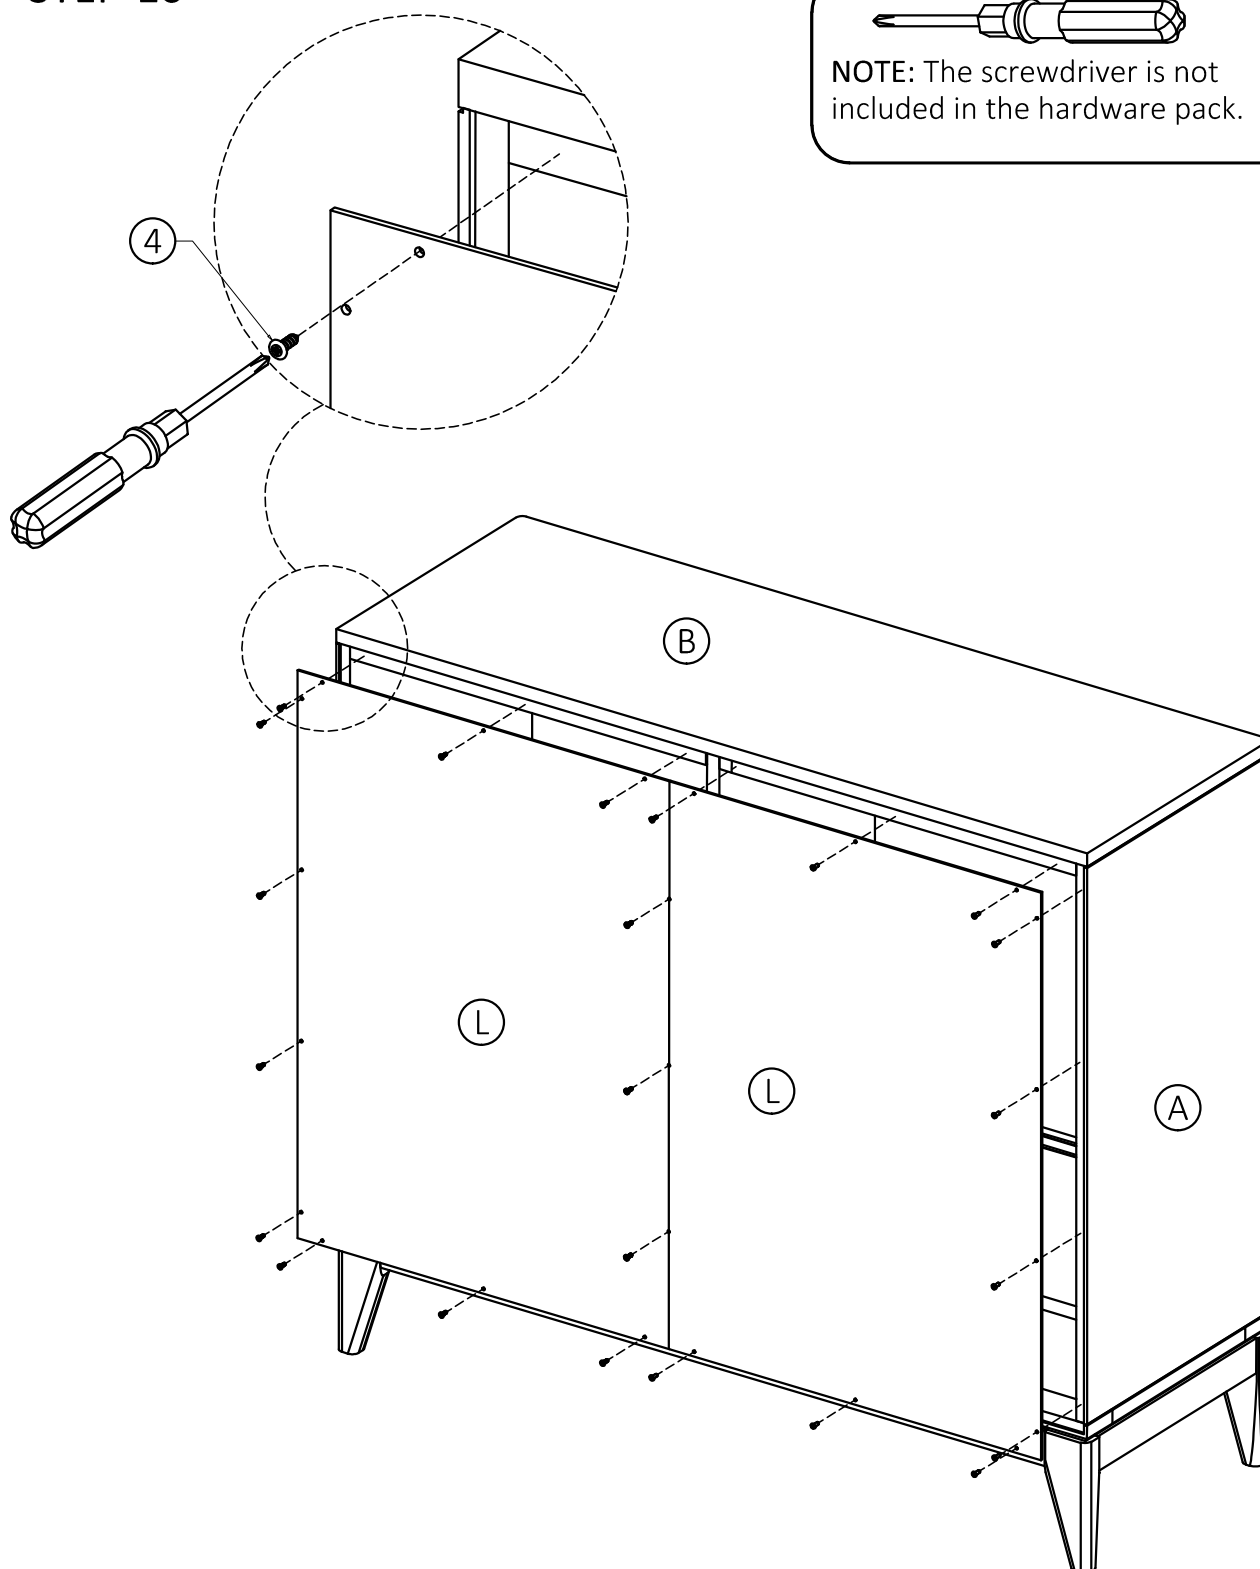

1. Attach Back Panel (L) to back frame of medium storage using twenty three Phillips Screws Round Head (4) through pre-drilled holes.





## STEP-11

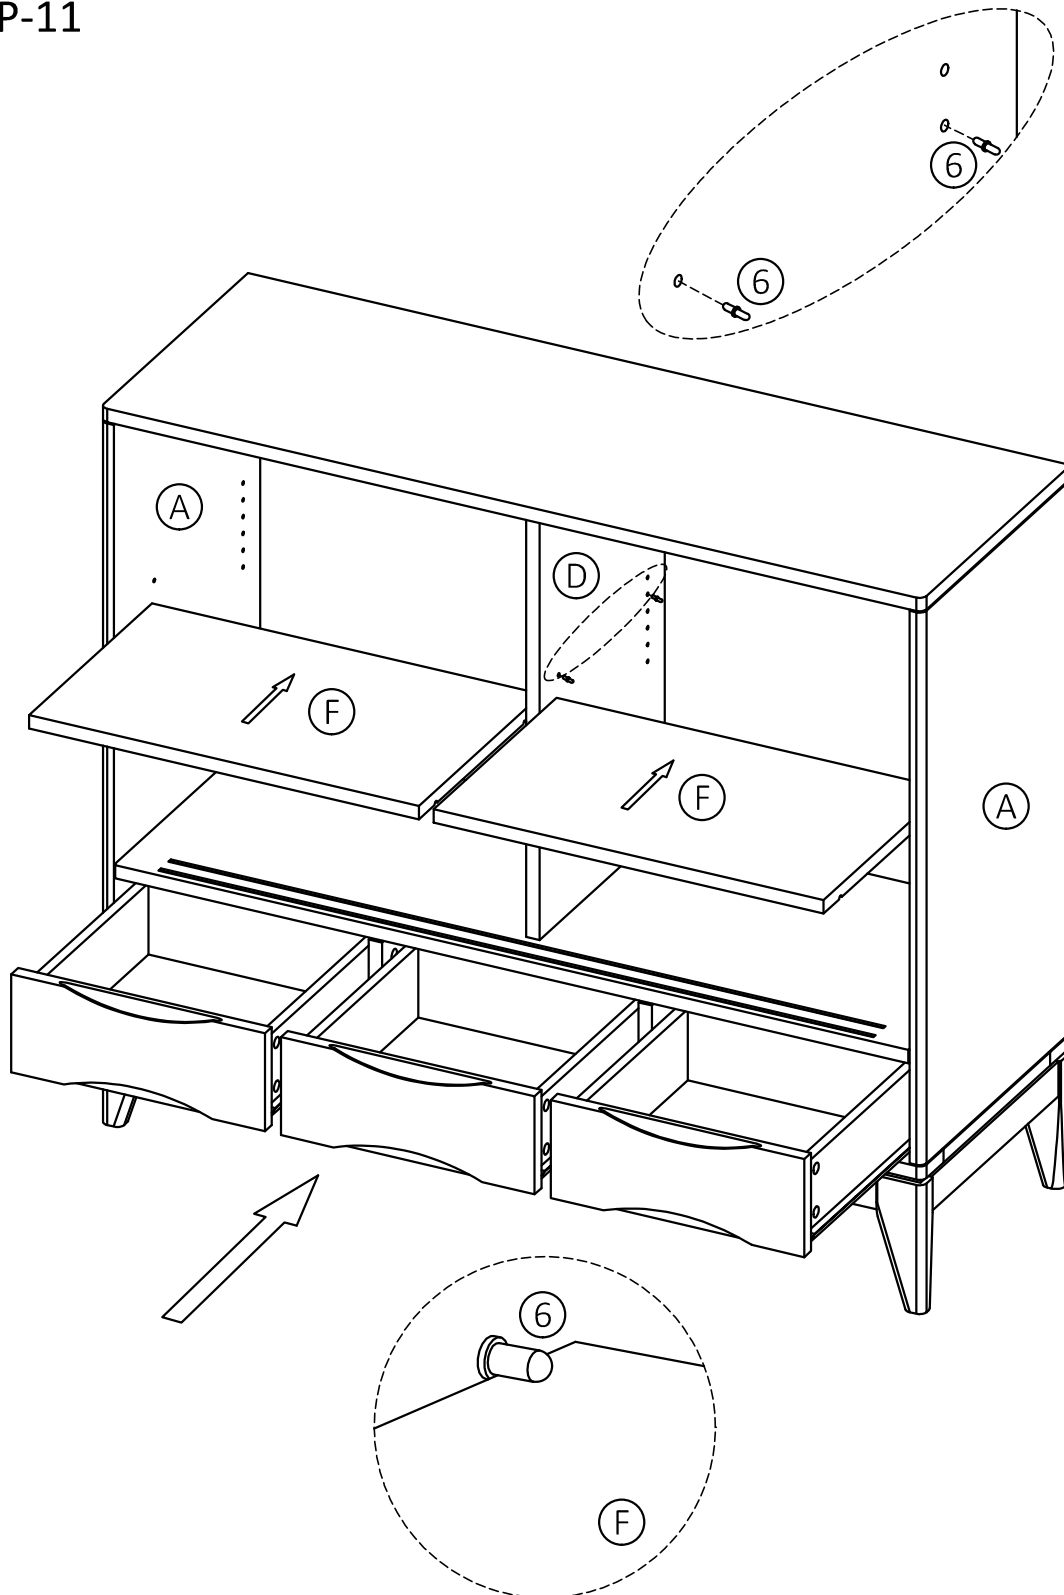 

1. Use four Shelf Supports (6) for each Cabinet Shelf (F) in desired location.
2. Two Shelf Supports (6) may be used on back top of each Cabinet Shelf (F) as a tipping restraint.
3. Insert assembly drawers into glides on assembly medium storage.

  
STEP-12

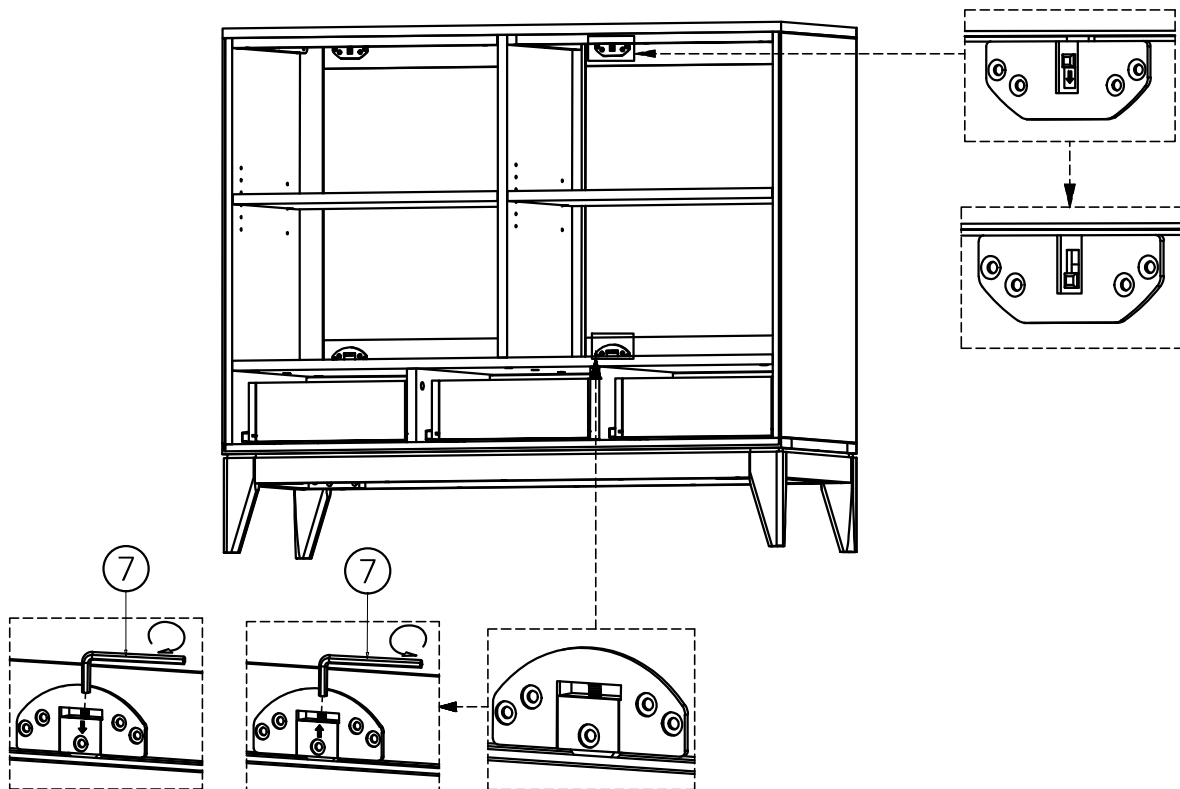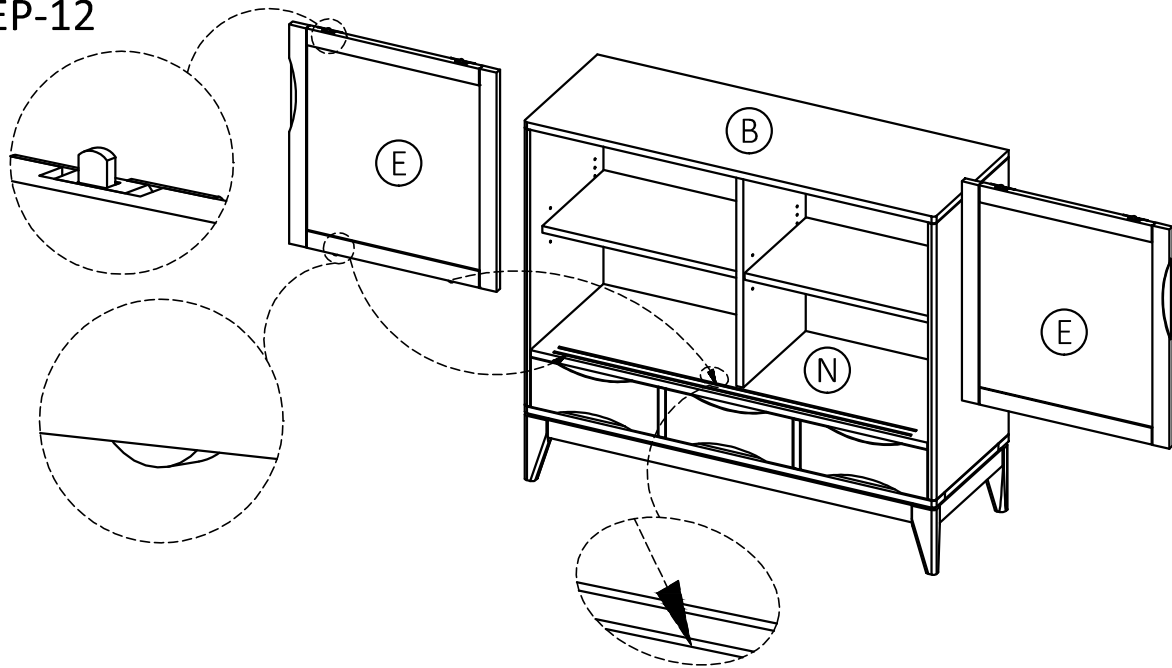


1. Slide the wheels on bottom of each door to the slots on Middle Shelf (N).
2. Pull down the pins on top of each door then place the door to be parallel with the medium storage side post. Afterward release the pins. The pins will be inserted into the slots underneath of Top (B).
3. To adjust the height of wheels up or down, use the Small Allen Key (7) to rotate the bolts on the wheels (Rotating clockwise will adjust the wheels higher, rotating counter clockwise will adjust the wheels lower).

NOTE: Injuries and damage can occur from furniture tip-over. It is important to use the safety bracket included. If the tipping restraint kit is not in the box, please contact our customer service department in order to obtain another kit before using the furniture.

## STEP-13

 

 NOTE: The screwdriver is not included in the hardware pack.

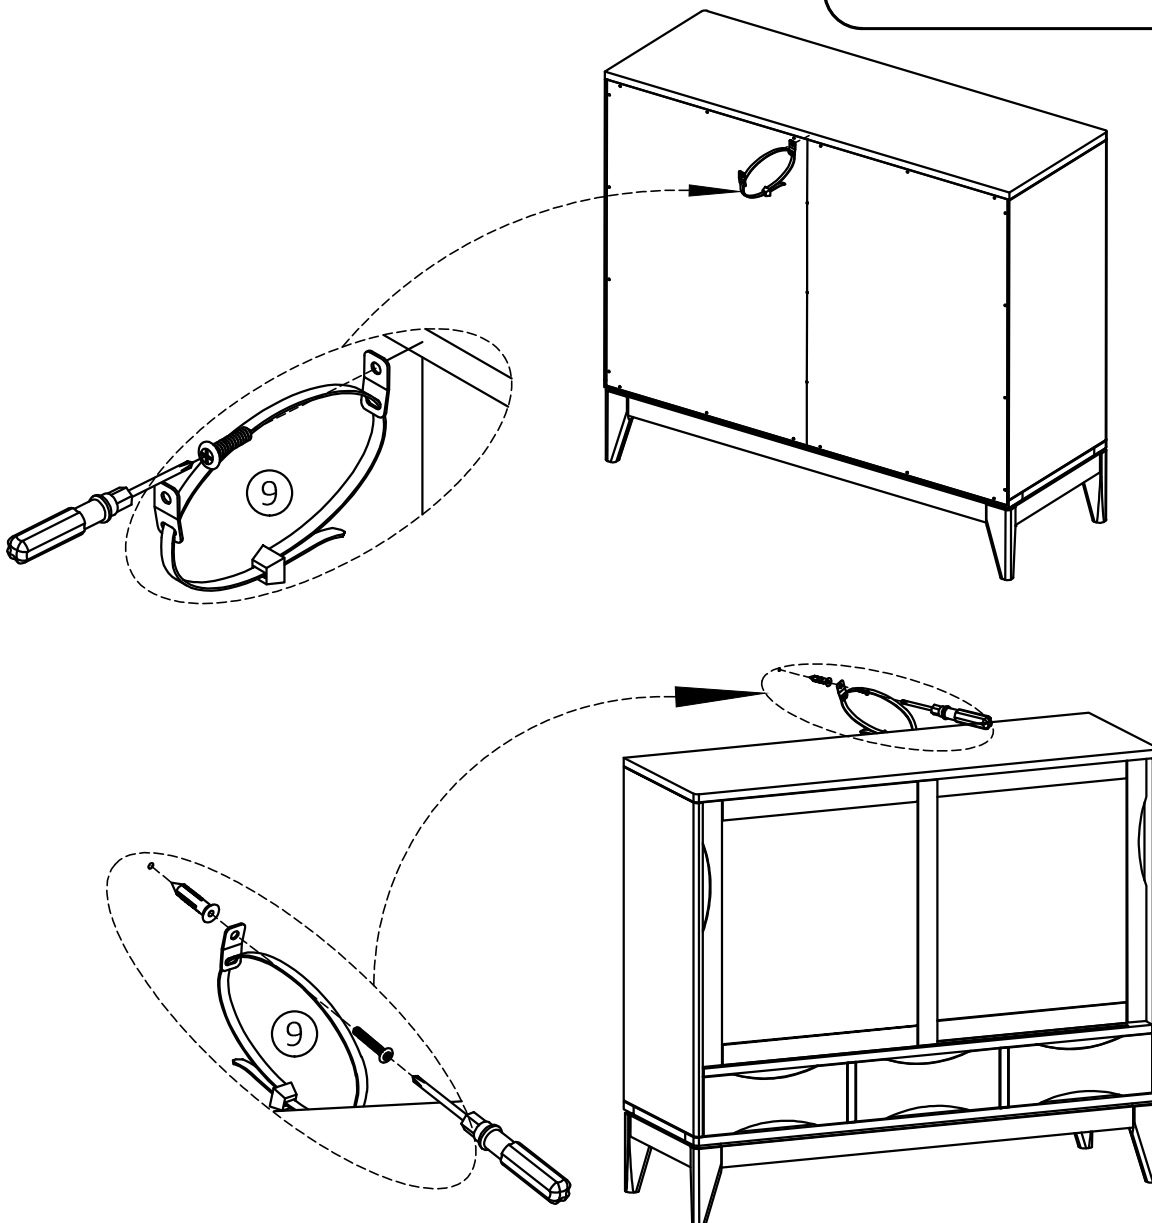

1. To attach Tipping Restraint (9) , follow instructions on Tipping Restraint package.

***When you determined the location for your unit, install the Furniture Tipping restraint. Carefully follow the instructions contained on the package.***



## WARRANTY

Thank you for purchasing a **Simpli Home – Wyndenhall – Brooklyn + Max** product. These products have been made to demanding, high-quality standards and are guaranteed for domestic use against manufacturing faults for a period of 12 months from the date of purchase. This warranty does not affect your statutory rights.

In case of any malfunction of your product (failure, missing parts, etc.) please contact us at our toll free service line at 1-866-518-0120 ext. 262 from 9 am to 4 pm, Monday to Friday, Eastern Standard Time or by email at [simpli-home.com/customer-support](https://www.simpli-home.com/customer-support).

We reserve the right to repair or replace the defective product, at its discretion.

This product is guaranteed for 12 months if used for normal purposes. Any warranty is invalid if the product has been overloaded or subject to neglect, improper use or an attempted repair by other than an authorized agent. Heavy-duty or daily professional/commercial usage are not guaranteed.

Due to continuous product improvement, we reserve the right to change the product specifications without prior notice.



**Questions, problems, missing parts?**

**Before returning your product**  
please email Customer Support at  
[simpli-home.com/customer-support](mailto:simpli-home.com/customer-support)

or call

Customer Support at 1-866-518-0120 ext. 262  
Monday to Friday between 9 am – 4 pm EST

For more information visit us on our website  
[www.simpli-home.com](http://www.simpli-home.com)

Like us on facebook  
[www.facebook.com/simplihomefurnishings](http://www.facebook.com/simplihomefurnishings)