 


Thank you for your purchase!



WICKER PATIO DINING SET

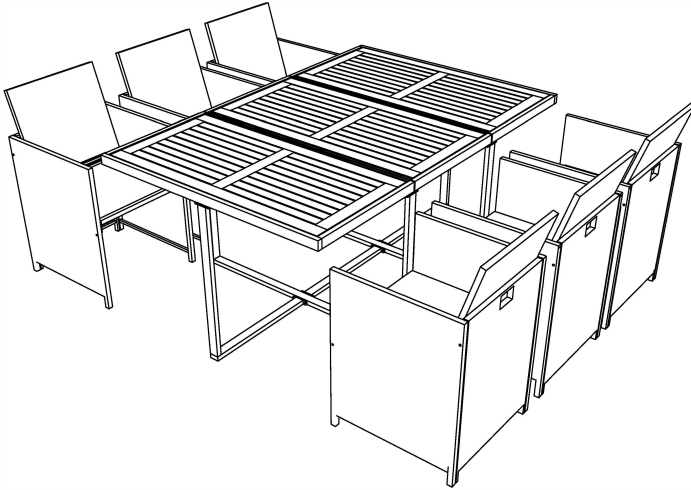

ASSEMBLY INSTRUCTIONS

Before You Begin:

Please identify all component parts and hardware pieces required before you begin. Carefully remove all of the components from the packaging and set aside for assembly. Assemble on a soft surface to prevent scratching during assembly.

Caution:

Tighten all components securely before use. Failure to do so may result in personal injury. DO NOT use any sharp objects to open plastic wrapped components as damage to product or components may result.

Warning:

CHOKING HAZARD - Small Parts. Adult Assembly Required.

DO NOT ALLOW CHILDREN TO CLIMB ON FURNITURE

Serious or fatal injuries can occur from furniture tipping over. You must install Tipping Restraint Hardware (where included) to help prevent the unit from tipping and causing accidental injury, instability, death or damage. The tipping restraint is intended only as a safety measure, it is not a substitute for proper adult supervision.

To help prevent furniture from tipping over it must be permanently attached to the wall. Anti-Tip Safety Wall Straps suitable for the unit weight and wall materials (if not included) should be purchased and installed.

Customer Service Email: CustomerExperience@belnick.com | Phone: 866-552-2810
TW-3WBE00-NAT-GG / TW-3WBE00-GY-GG

Have a Question/Concern?

Quality products and first-class customer service are the cornerstone of long-lasting consumer relationships. We strive toward excellence in all we do and want you to be completely satisfied with your purchase.

Please contact our exceptional Customer Experience Agents at the email address or phone number shown below to assist you with any product questions or issues before requesting a return.

We look forward to serving you in a friendly, efficient manner to resolve any issues you may have.

Customer Service Email: CustomerExperience@belnick.com

Customer Service Phone: 866-552-2810

Our Warranty Statement

 
This warranty covers manufacturing defects associated with your new product. The product is warranted from the original purchase date and to the original purchaser for normal usage, according to the below-referenced specifications and limitations.

- Non-moving metal parts are warranted for 5 years.
- Component parts including pneumatic cylinder, control mechanism, base and casters are warranted for 2 years.
- All other items are warranted for 1 year.


Normal usage means use in compliance with the restrictions and weight limits specified for the product. In the absence of product-specific restrictions and weight limits, normal usage means use for no more than forty hours per week by persons weighing 250 lbs. or less. Coverage terminates if the product is sold or otherwise transferred. Repairs made by parties other than Belnick also void this warranty.

This warranty will not cover: (1) labor, freight, or damage from misuse, abuse, negligence, alteration, assembly, installation, attachments, accident, vandalism, acts of nature or any other event beyond the control of Belnick; (2) tearing, scratching, scuffing, or blemishing of leather or fabric; (3) cosmetic damage that may result from normal usage; (4) damage attributable to use by persons exceeding specified weight limits or commercial use exceeding forty hours per week; or (5) rust or other damage caused by exposure to moisture. The user assumes all risk of injury resulting from use of this product. Liability for incidental or consequential damage is excluded. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.


PARTS LIST

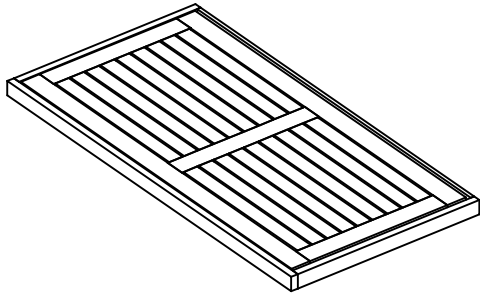


Left and Right Table Top **AX2**

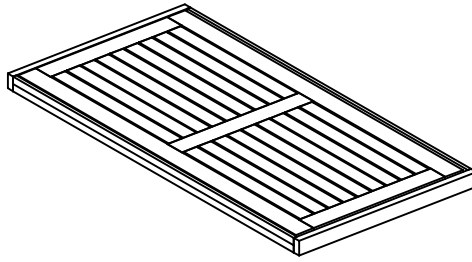 


Middle Table Top **BX1**

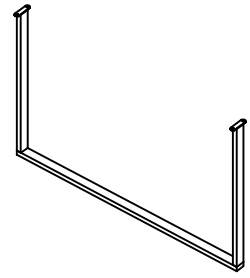 


Left and Right Table Legs **CX2**

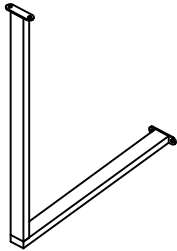 


Left and Right Table End Frame **DX2**

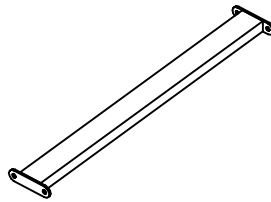 


Middle Table Support Leg **EX1**

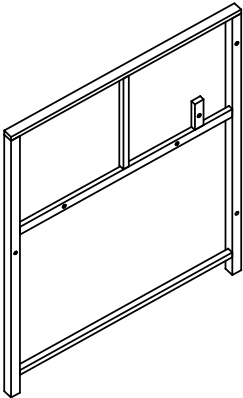 


Right Chair Frame **GX6**

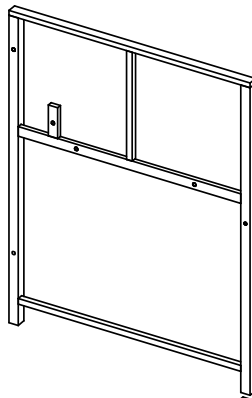 


Left Chair Frame **HX6**

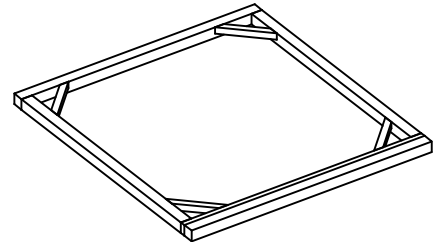 


Seat Frame **IX6**

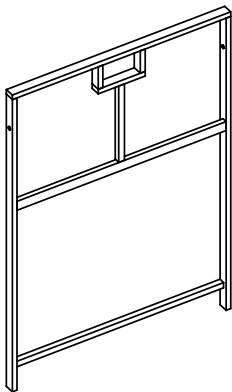 

Back Frame **JX6**

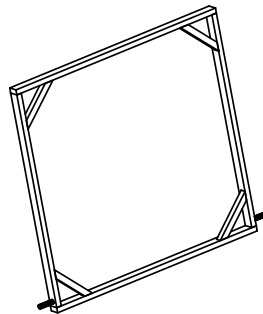 


Folding Seat Base **KX6**

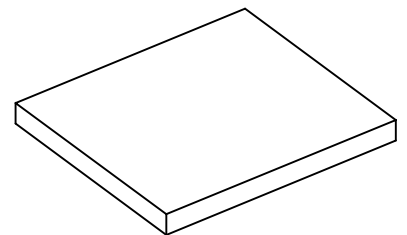 

Back and Seat Cushions **LX12**


HARDWARE LIST

 1



Bolt M6x35_62pcs

 2




Washer M6_106pcs

3




Bolt M6x15_44pcs

 4



Plastic Washer M6_12pcs

 5



Bracket_12pcs

6

 


Allen Wrench_2pcs

Step 1


PATIO TABLE ASSEMBLY

Attach the Left and Right Tabletops (Part A) to the Middle Table Top (Part B) using (8) M6x35 Bolts and (8) M6 Washers (Part 2). Hand tighten.

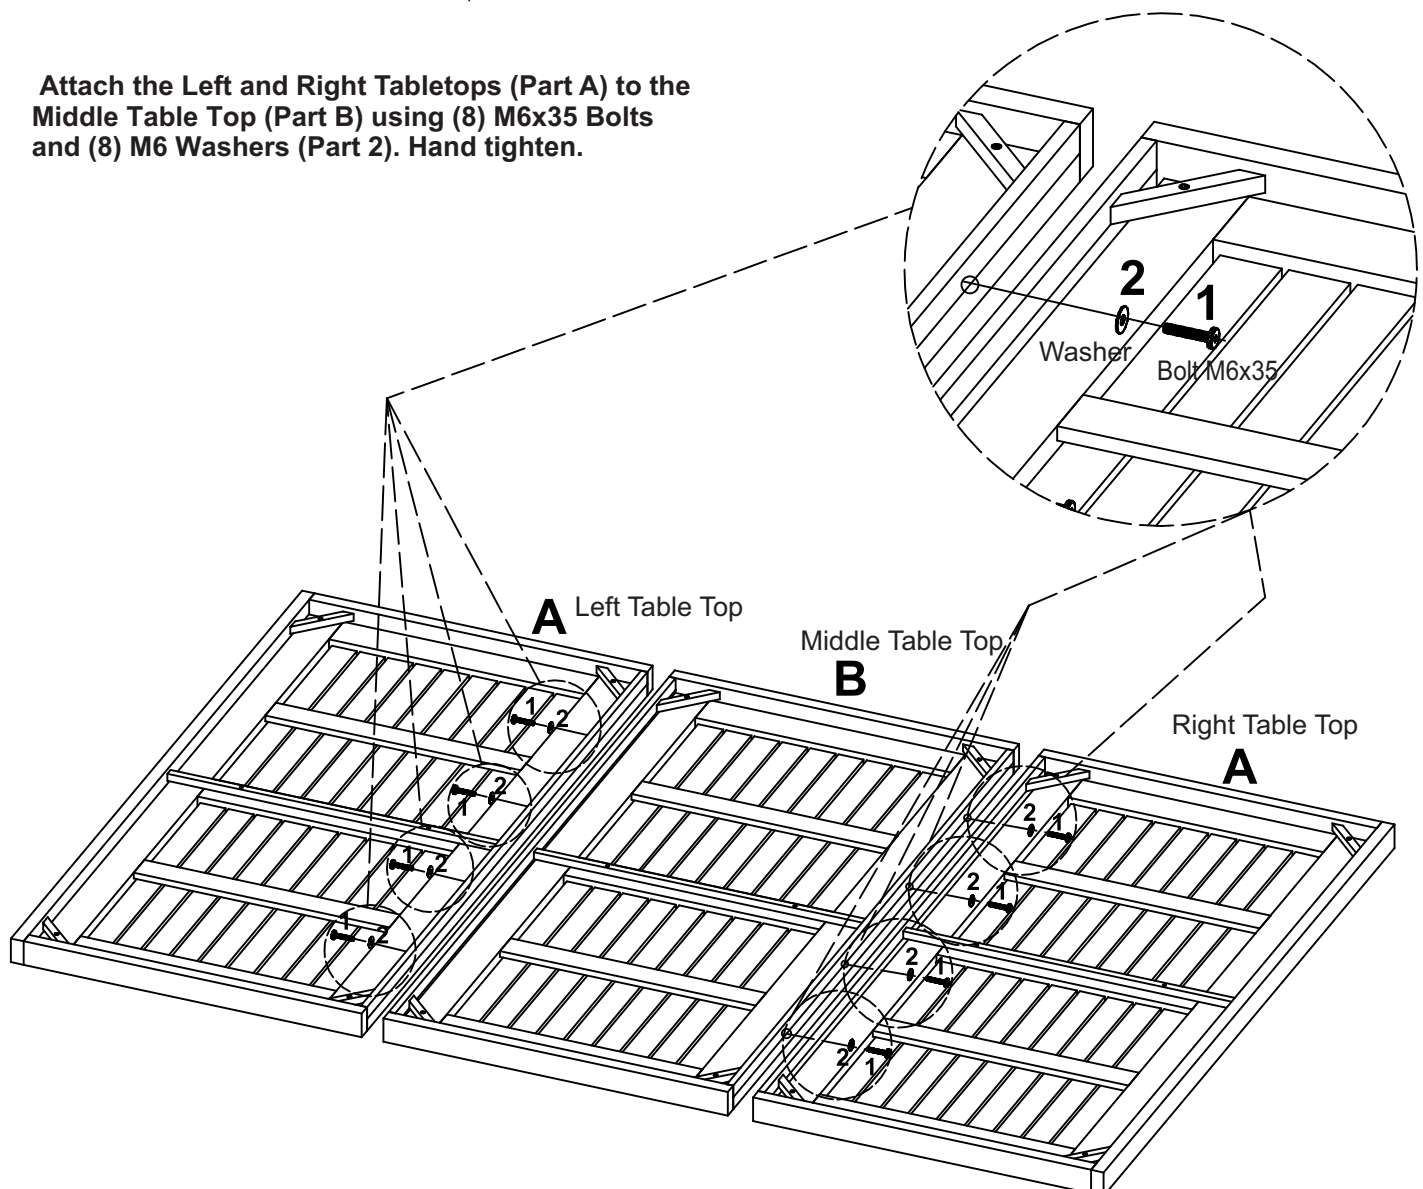


Step 2

 Attach the Left and Right Table Legs (Part C) to the Tabletop using (8) M6x15 Bolts (Part 3) and (8) Washers (Part 2). Hand tighten.

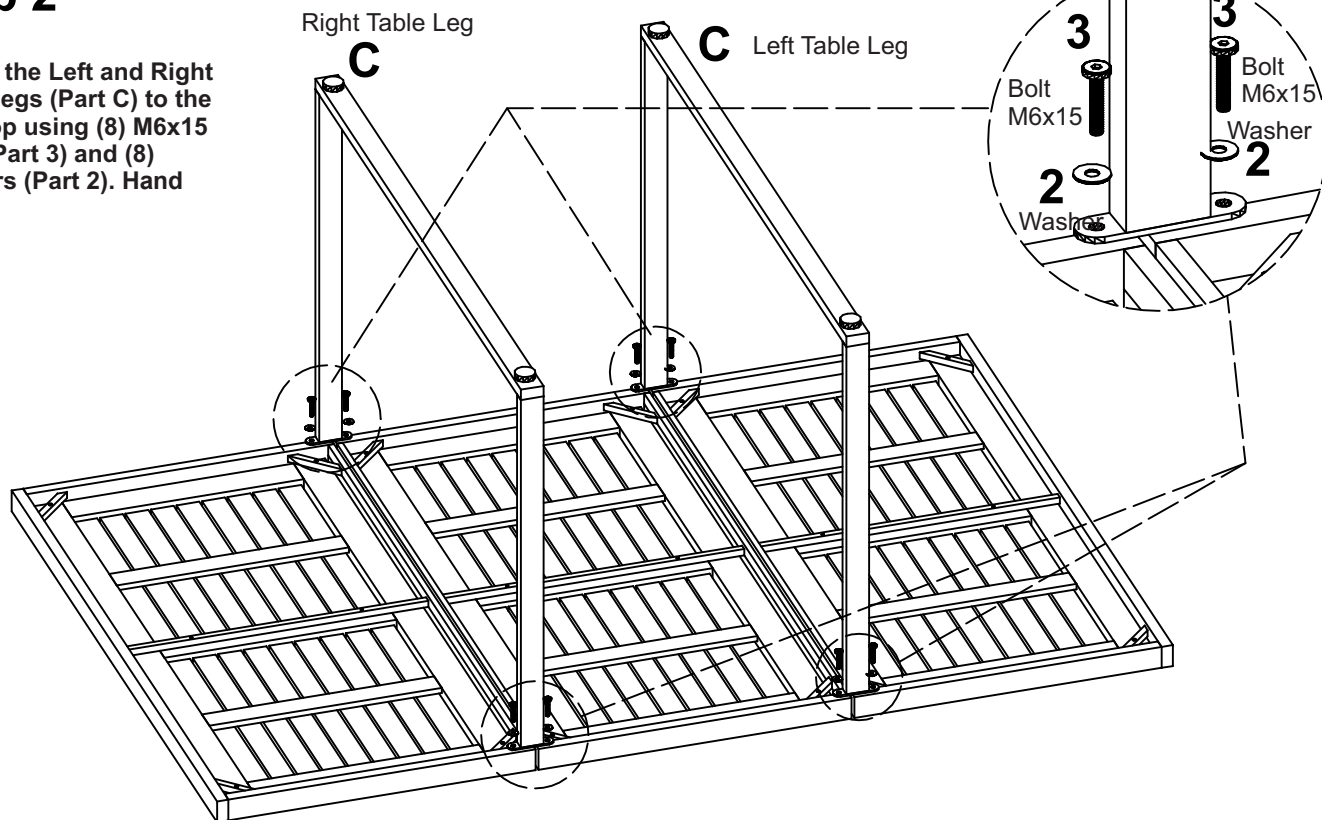

 
Step 3

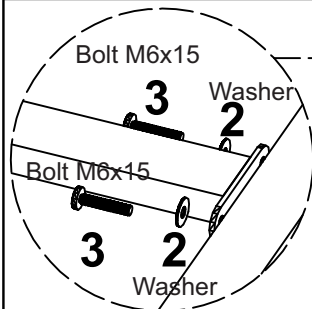


Left Table End Frame

Attach the Left and Right Table End Frames to the Tabletop and Left and Right Table Legs using (8) M6x15 Bolts (Part 3) and (8) Washers (Part 2). Hand tighten.

 
Right Table End Frame

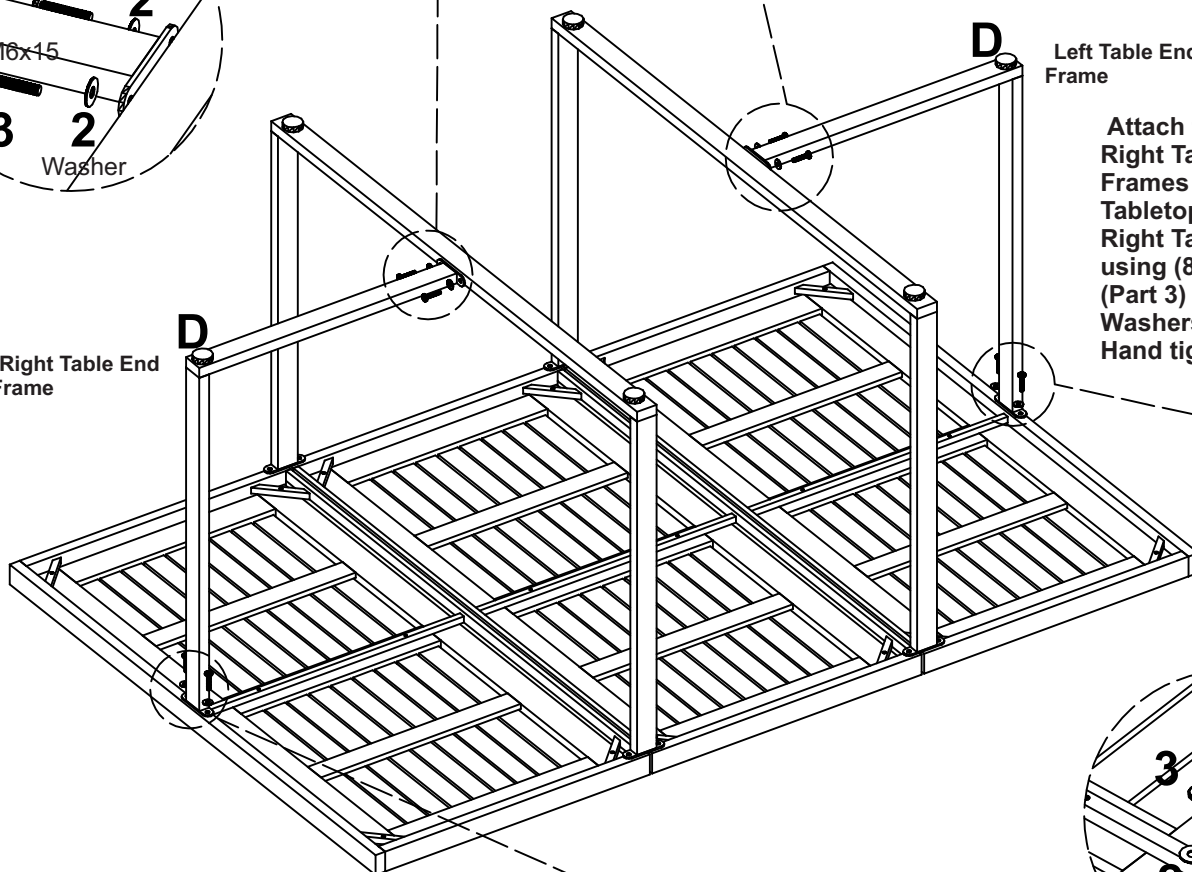

 Step 4

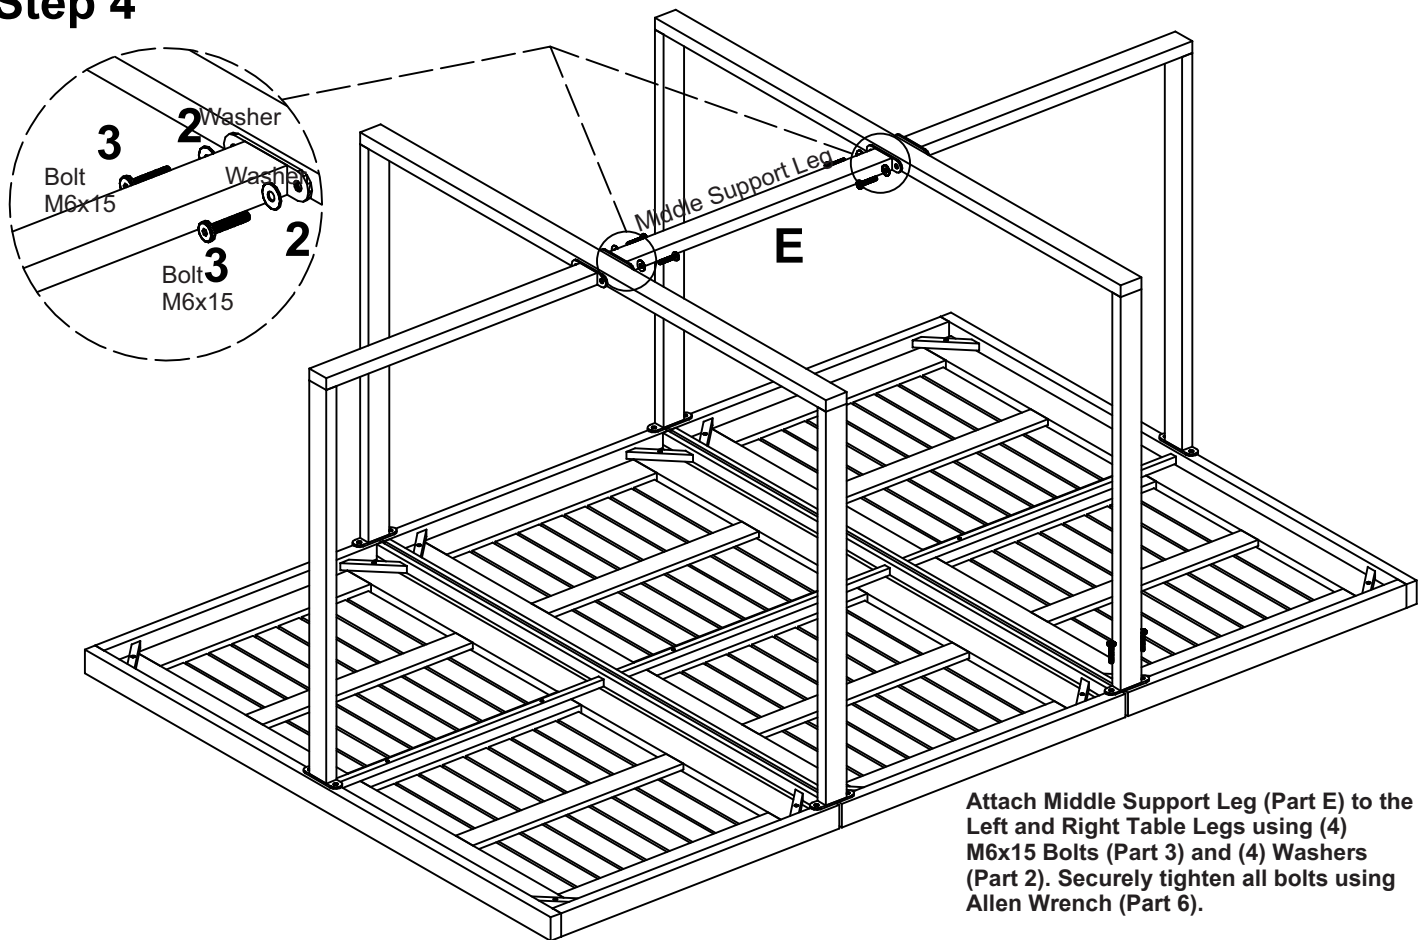

 
Step 5

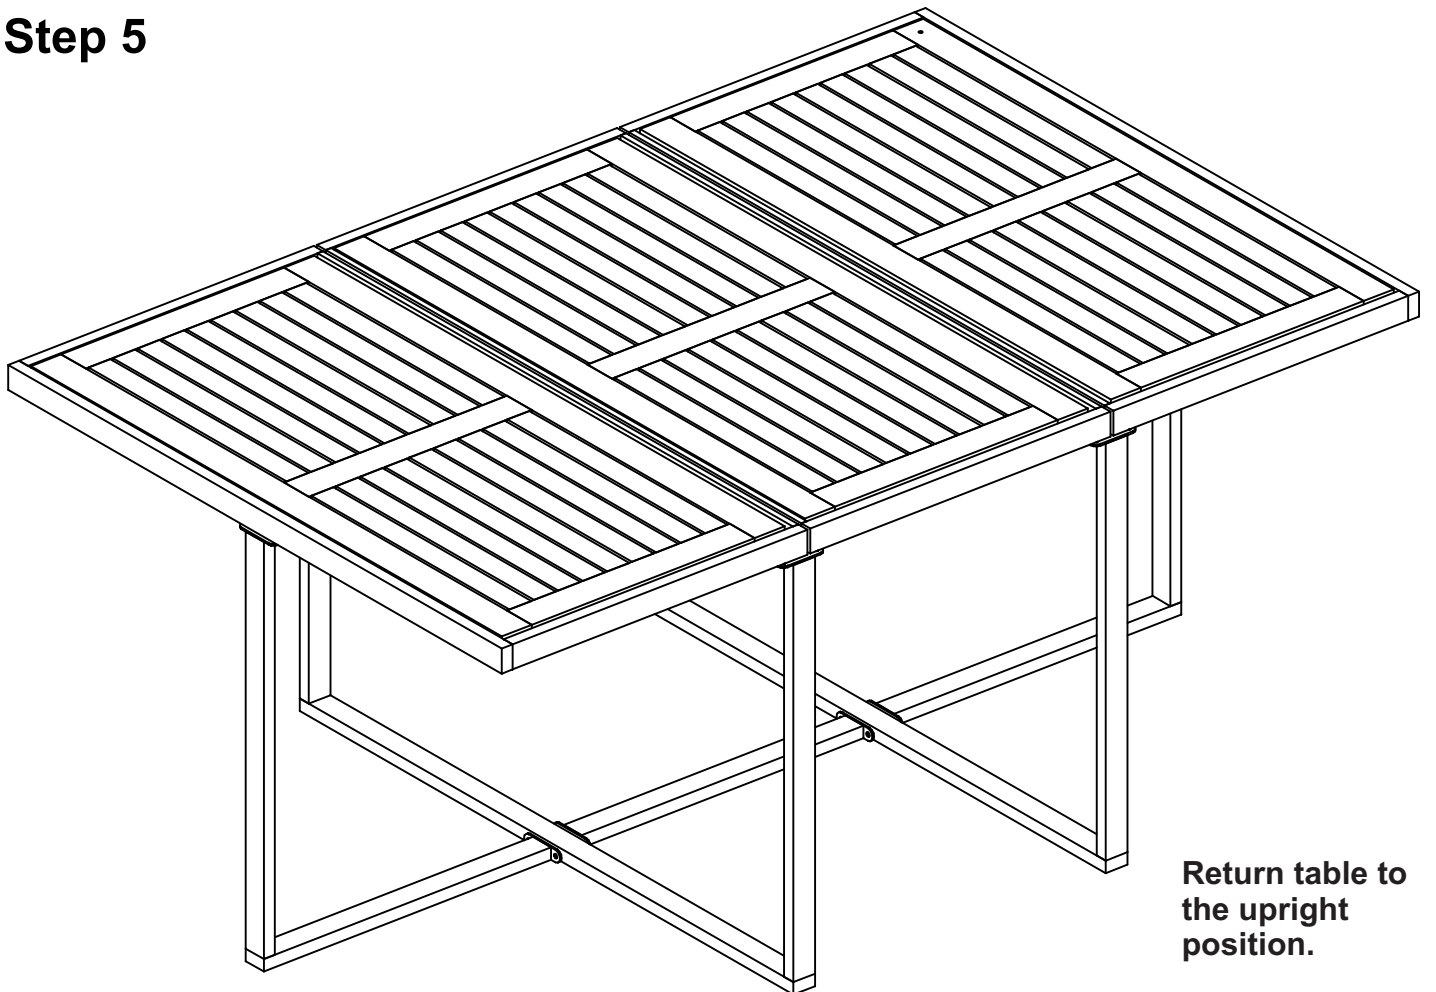

Step 6

PATIO CHAIR ASSEMBLY

 Attach the Right Chair Frame (Part G) to the Chair Back (Part J) using (2) M6x35 Bolts (Part 1) and (3) M6 Washers (Part 2). Hand tighten.

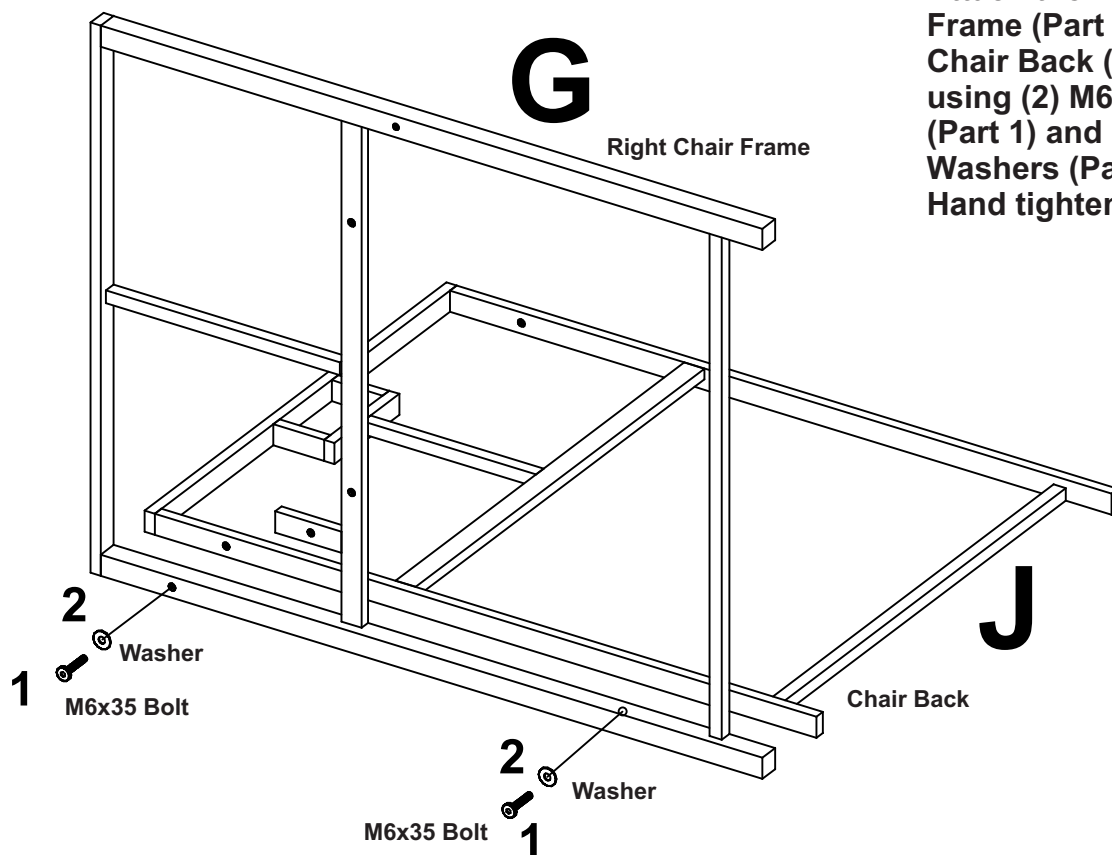


Step 7


Right Chair Frame

J
Chair Back

 G

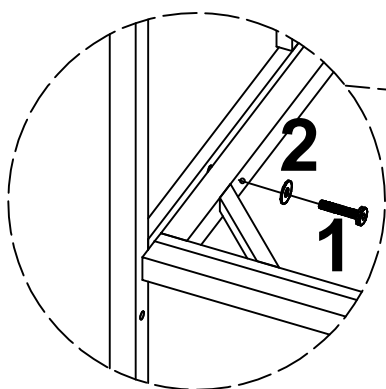

 
Attach the Seat Frame (Part I) to the Right Chair Frame (Part G) and the Chair Back (Part J) using (3) M6x35 Bolts (Part 1) and (3) M6 Washers (Part 2). Hand tighten.

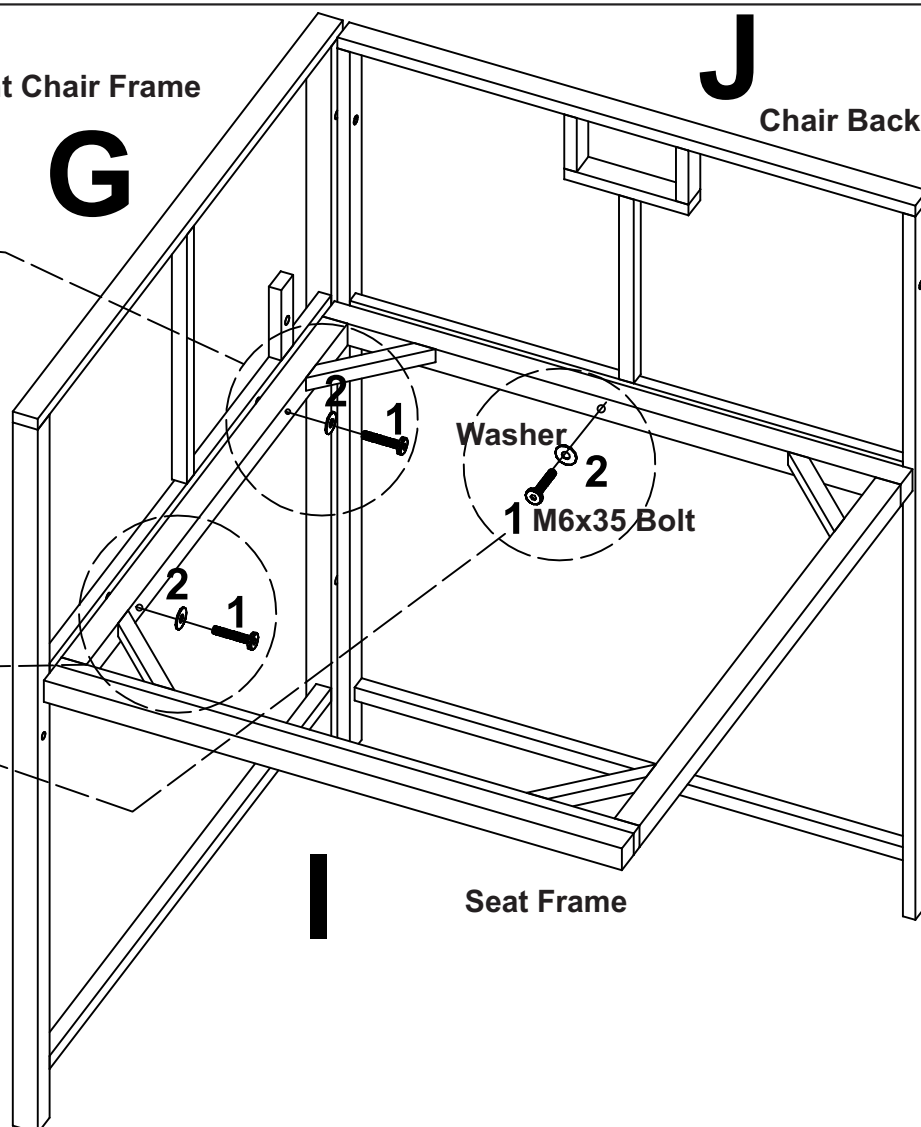

I
Seat Frame


Step 8

 Insert the peg on the Folding Seat Base (Part K) into the Plastic Washer (Part 4) then into the Right Chair Frame.

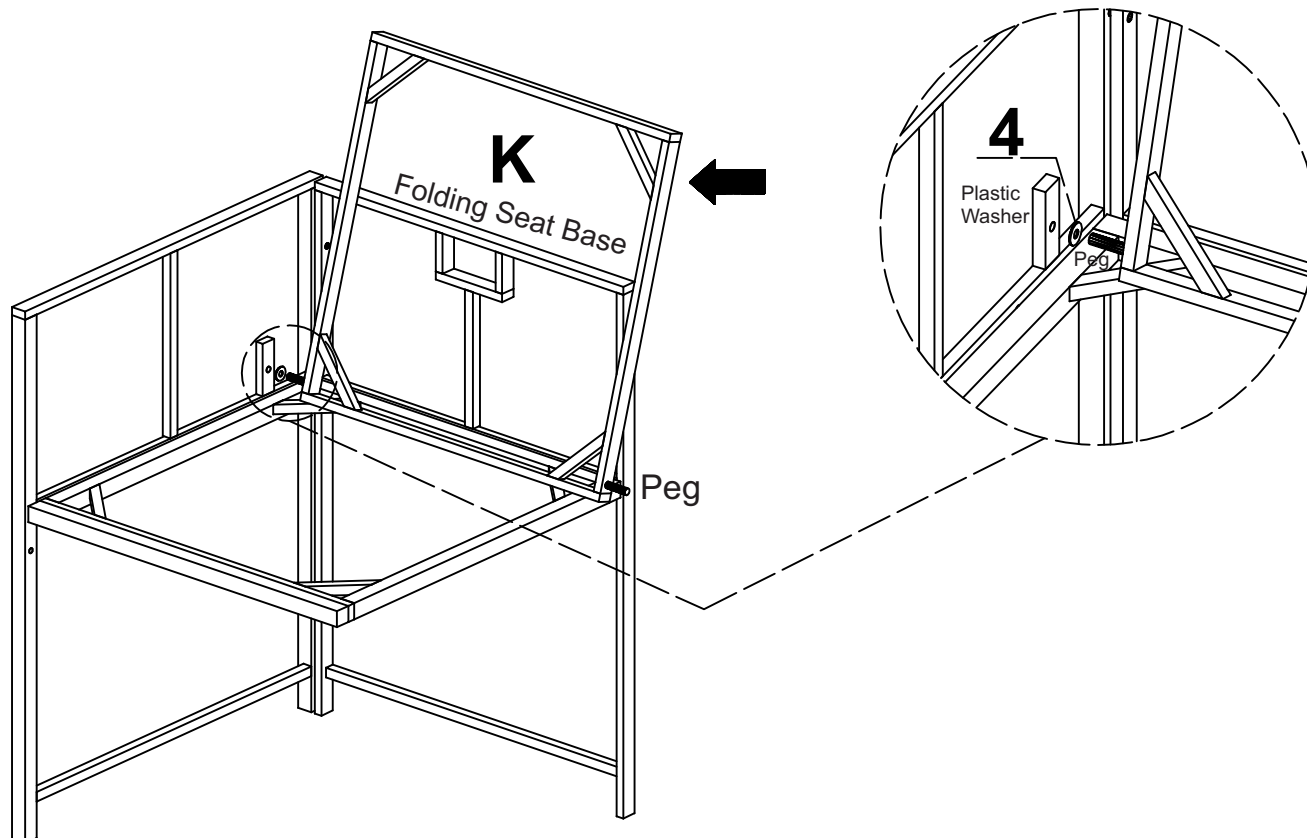


Step 9

 Insert the peg on the Folding Seat Base (Part K) into the Plastic Washer (Part 4) then into the Left Chair Frame.

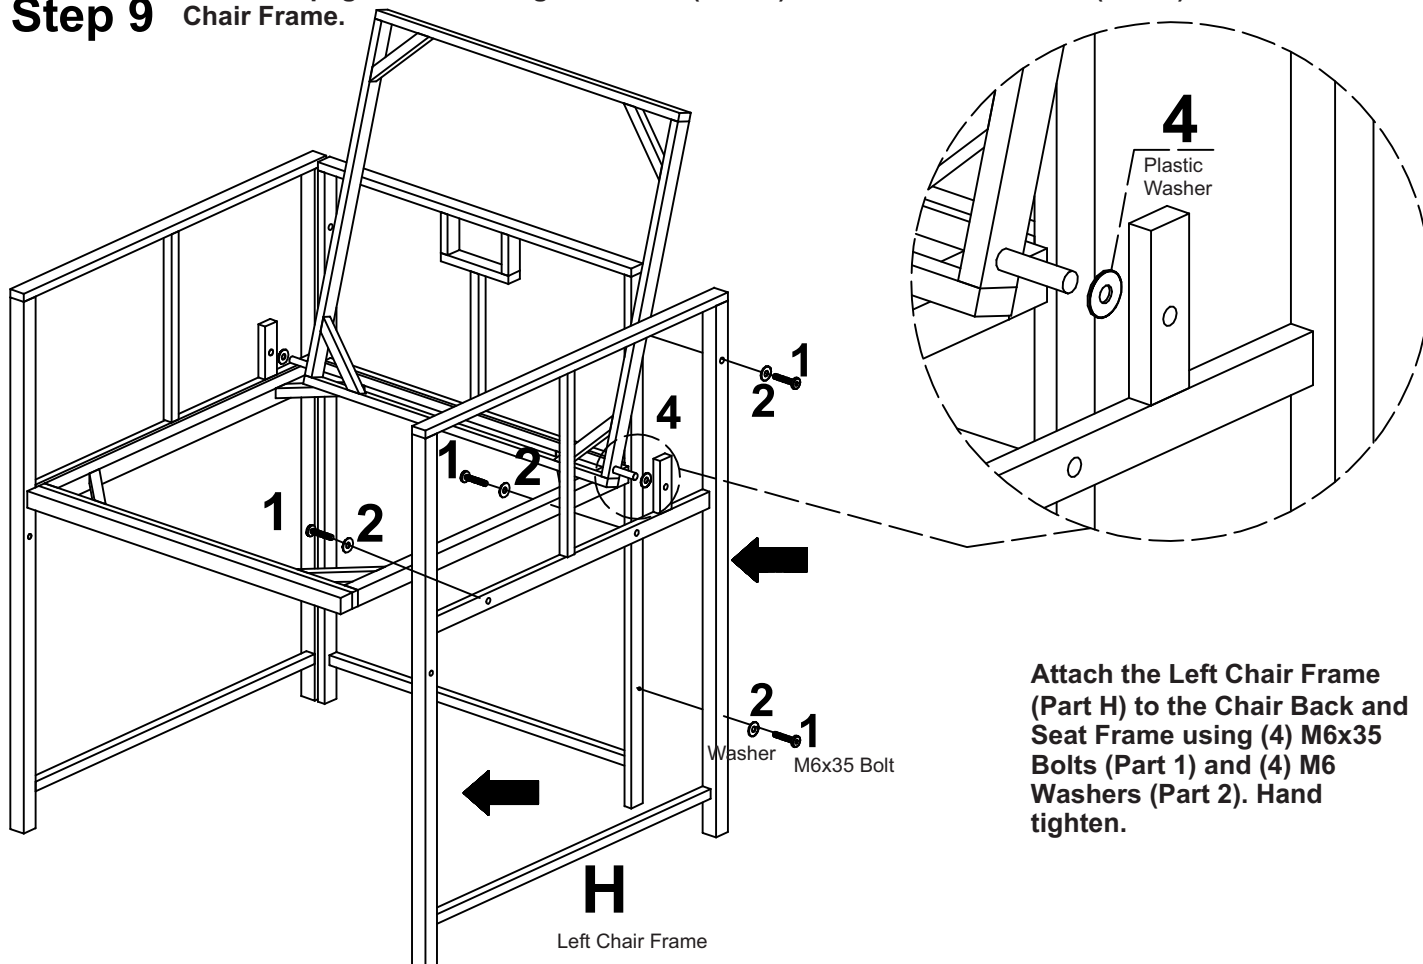


 Step 10

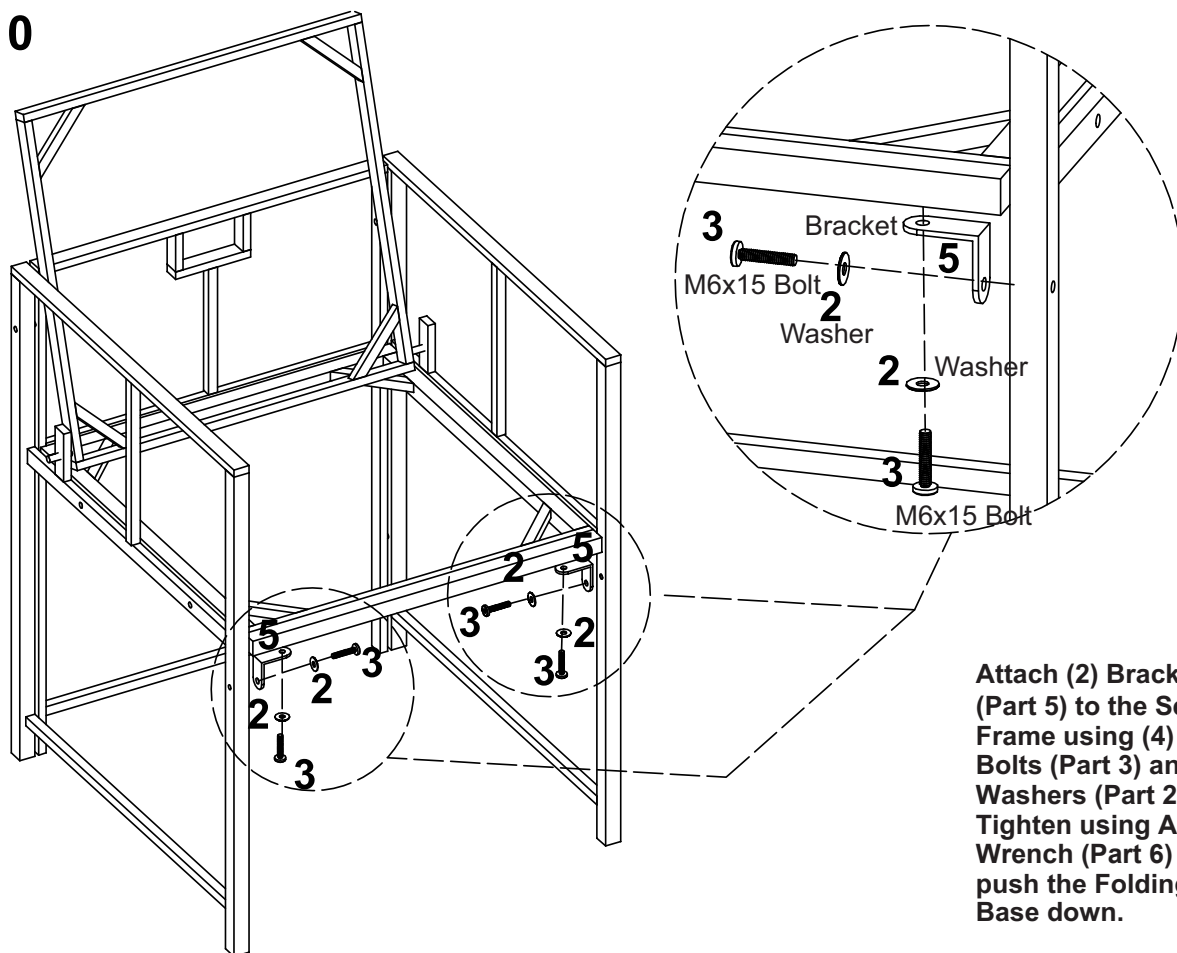

Attach (2) Brackets (Part 5) to the Seat Frame using (4) M6x15 Bolts (Part 3) and (4) Washers (Part 2). Tighten using Allen Wrench (Part 6) then push the Folding Seat Base down.

 Step 11

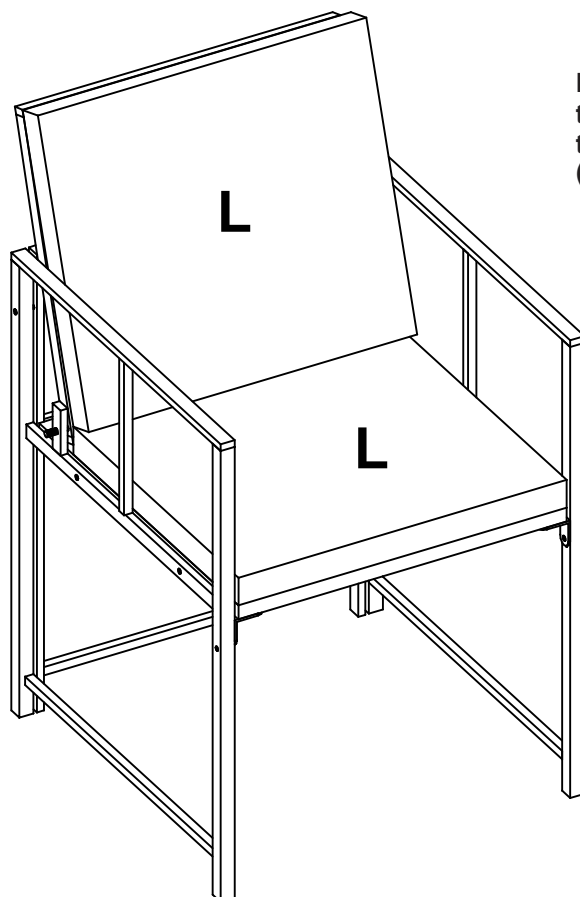

Ensure all bolts are securely tightened using the Allen Wrench then add Back and Seat Cushions (Part L).

CARE AND MAINTENANCE

Resin wicker furniture requires minimum maintenance. Follow these basic tips to prolong the life of your resin wicker furniture.

- * To help prevent fading, and prevent the build-up of leaves or other debris, store cushions indoors and cover furniture with a breathable cover when not in use.
- * For winter storage, move the furniture to a cool, dry location and cover. Ensure cushions are dry before storing and safe from animals.

CLEANING

Do not use harsh chemicals or abrasive materials to clean furniture.

CUSHIONS/PILLOWS

- * Brush or vacuum loose dirt.
- * For stubborn stains clean with a mild detergent and cool water using a soft bristle brush.

FURNITURE FRAMES

- * Brush, vacuum, or use a garden hose to remove loose dirt or debris. If using a hose with a spray nozzle, use a gentle or medium setting. Using a high pressure spray may damage the furniture and void the warranty.
- * Mix 1/4 cup of mild detergent to 1 gallon of warm water. Using a soft bristle brush gently scrub the resin wicker.
- * Spray with a garden hose or use a bucket of water to rinse all soap residue.

WOODEN SURFACES

- * Wipe down wooden surfaces with water only followed by a dry cloth. Do not use detergents.