


VANISH™

Deluxe Fabric Shaver

- Keep the appliance clean at all times
- The appliance will shut off if too much fuzz builds up and gets trapped within the blades. Turn the switch off and unscrew the fabric screen to remove the fuzz.
- Do not operate under a blanket or a pillow. Excessive heating can occur and cause fire, electric shock or injury.
- Close supervision is necessary when this appliance is used by, on or near children or disabled persons.
- Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
- DO NOT immerse the appliance in water or any other liquid.
- DO NOT place the appliance in direct sunlight or near heat or fire.
- DO NOT allow the removable screens to come into contact with sharp or hard objects, including fingernails. It is extremely thin and could be damaged.
- DO NOT drop or insert any objects into any openings in the appliance body.
- DO NOT operate where aerosol (spray) products are being used or where oxygen is being administered.
- If the product gets damaged in any way, discontinue use.
- Clean blades and shaver head with small brush, clean body with damp cloth and handle with care to prevent blade damage.
- Store in dry location away from children.
- DO NOT operate without the shaver screen or waste bin.
- Make sure the shaver screen is secured when in use.

Battery Warning:

- Use high quality Alkaline AA batteries.
- DO NOT mix old and new batteries.
- Non-rechargeable batteries are not to be recharged.
- The supply terminals are not to be short-circuited.

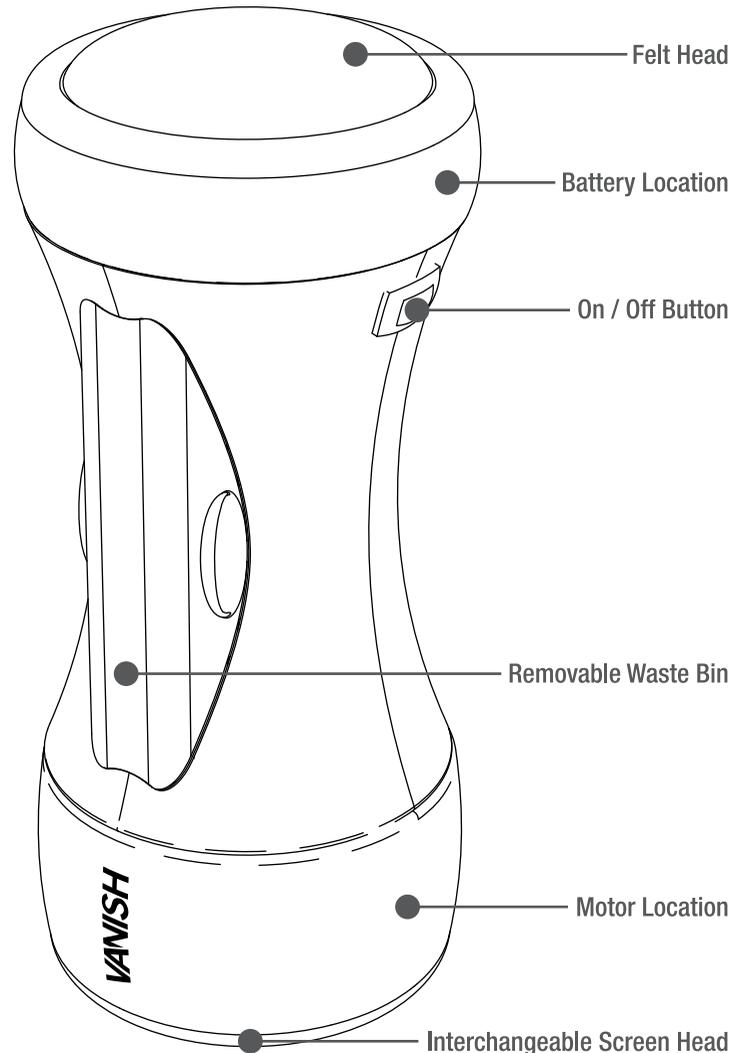

VANISH™

Operating your Deluxe Fabric Shaver

Congratulations on your purchase of the Vanish Deluxe Fabric Shaver. The easiest way to remove fuzz balls, pills, lint, thread and pet hair. The interchangeable Fabric Screens allow you to rejuvenate thick coarse garments and even the most delicate of fabrics. The triple action blade removes tough pills with ease. The sleek, portable, ergonomic design can go with you anywhere.

Please read all instructions and warnings in this manual prior to using your new Deluxe Electric Fabric Shaver.

Battery Installation:

Unscrew top felt cap (Turn Counter Clockwise). Insert two high quality AA Alkaline batteries in the polarity direction indicated. (Figure 1)

Fabric Screen Selection:

Determine what Fabric Screen to use. If the material is delicate use the Lightweight Screen (Small Holes), if the fabric is thicker use the Heavyweight Screen (Large Holes). Make sure the fabric screen is secure and screwed on straight. (Figure 2)

Operation:

Lay the garment out flat on a smooth surface. Inspect to make sure there is no pulled fabric. Turn on and lightly press moving in a circular motion against the fabric. Do not apply excessive pressure to the fabric shaver as it may cause damage to the fabric. Be sure to clean the shaver as much as possible for optimal use. Wipe the unit clean when you are done so you do not transfer fabric to another garment.

Empty the Waste Bin:

Never let the waste Bin become overly full. Press the two side tabs at the same time and pull away from the Fabric Shaver to remove. Empty and simply re-attach by pushing the Waste Bin back into the unit. The tabs will snap into place. (Figure 3)

Questions Call: 1-877-354-5457 or email LHLPcustomerservice@lhinc.com

For further instructions and more about you Deluxe Fabric Shaver visit www.vanishlint.com

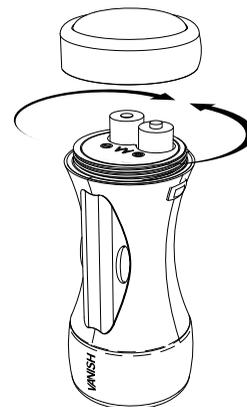


Figure 1

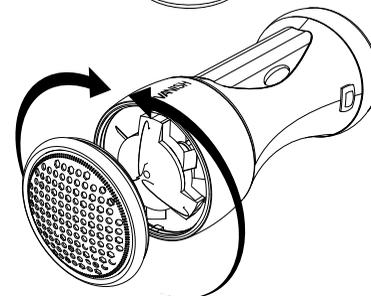


Figure 2

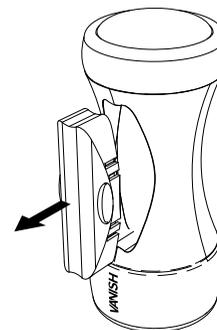


Figure 3