

VieAir
9 IN. HIGH VELOCITY FLOOR FAN
Model:
OWNER'S MANUAL



WARNING:

Read carefully and understand all this fan. Failure to follow the safety rules and other basic safety precautions may result in serious personal injury.



OPERATION INSTRUCTIONS before operating

READ AND SAVE THESE INSTRUCTIONS

INTENDED USE

Floor fans are useful devices that can help to reduce your overall energy costs when they are used properly. It provides superior cooling and ventilation quickly and efficiently.

TECHNICAL SPECIFICATIONS

Item	Description
Model	8" FLOOR FAN
VOLTAGE	120V AC, 60Hz

GENERAL SAFETY RULES

WARNING: Read and understand all instructions listed below may result in



instructions. Failure to follow all serious injury.

CAUTION: Do not allow persons to and have developed a thorough understanding of



operate this fan until they have read this manual how the fan works.

WARNING: The warnings, cautions, instruction manual cannot cover all



and instructions discussed in this possible conditions or situations that

could occur. It must be understood by the operator that common sense and caution are factors that cannot be built into this product, but must be supplied by the operator.

SAVE THESE INSTRUCTIONS

IMPORTANT SAFETY CONSIDERATIONS

FAN USE AND CARE

- Do not modify the fan in any way. Unauthorized modifications may impair function and/or safety and could affect the life of the equipment. There are specific applications for which the fan was designed.
- Always check of damaged or worn out parts before using the fan. Broken parts will affect the fan's operation. Replace or repair damaged or worn parts immediately.
- **Store idle fan.** When fan is not in use, store it in a secure place out of the reach of children. Inspect it for good working condition prior to storage and before re-use.

OPERATING INSTRUCTIONS

Select a firm, level surface to situate the fan on. Ensure the fan is in the OFF position before plugging into a 120V/60Hz outlet.

This fan has a 4-position speed control located at the back of the fan:

- [0] Indicate the fan is powered OFF.
- [1] Indicate the fan is powered ON, operating at LOW speed setting.
- [2] Indicate the fan is powered ON, operating at MODERATE speed setting.
- [3] Indicate the fan is powered ON, operating at HIGH speed setting

TILT

To tilt the fan head so that the breeze is targeted in a specific area, steady the base of the fan with one hand and grip the handle of the fan with another, carefully tilt the head of the fan until it reaches the desired angle. Be careful as to not tilt the head back further than it is intended to go, doing so will damage the unit.

CAUTION: TO PREVENT ELECTRICAL SHOCK, ENSURE THE PLUG IS FULLY INSERTED INTO THE OUTLET. THE PLUG HAS A WIDE BLADE AND A NARROW BLADE. DO NOT MODIFY THE PLUG BLADES FOR ANY REASON.



ADDITIONAL OPERATION INSTRUCTIONS

When using electrical appliances, basic precautions should always be followed to reduce the risk of fire, electrical shock and injury to persons or property, including the following:

1. Do not use this fan outdoors or in rooms where there is water, such as the bathroom or laundry room.
2. DO NOT use fan in or near a window. Rain may create an electrical hazard. Do not leave the fan operating adjacent to an area where water has collect to avoid the potential of electrical hazard.
3. Do not operate in the presence of explosive and/or flammable fumes.
4. Do not place fan or any parts near an open flame, cooking or other heating appliance.
5. Do not use fan near curtains, plants, window treatments, or where other objects can become caught in the blades.
6. The fan must operate standing upright.
7. Be sure the fan is on a stable, even surface when operating to avoid overturning.
8. This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electrical shock, this plug is intended to fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician to have a polarized outlet installed. Do not attempt to defeat this safety feature.
9. Do not immerse unit, plug or cord in water or spray with liquids.
10. Do not operate any appliance with a damaged cord or plug, after the appliance malfunctions or has been dropped or damaged in any manner; contact a qualified electrician should this happen. NOTE: Repairs made by unqualified electricians will void this product's warranty.
11. Never insert foreign objects such as fingers, pencils, etc. through the grille when fan is running.
12. Do not leave the appliance running or operable in a place where young children

or animals could have access to it without supervision. This fan is intended to be used on the floor only.

13. Do not run cord under carpeting. Do not cover cord with throw rugs, runners or similar coverings. Do not route cord under furniture or appliances. Arrange cord away from traffic area where it will not be tripped over.
14. Before plugging this appliance in an outlet, be sure the rating voltage and frequency of power source are the same as indicated on the product rating label.
15. Disconnect fan from electrical outlet when moving from one location to another, when removing grilles or for cleaning.
16. To disconnect, grip plug and pull from wall outlet. Never yank on cord.
17. Use this fan only as it is described in this manual. Any other use not recommended by manufacturer may cause fire, electric shock or injury to person.
18. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

NOTE: There are no serviceable parts in this unit. Do not attempt to disassemble the blade or motor components. The grilles can be removed for cleaning purposes only. Never operate the fan while the grilles are removed.

WARNING: To reduce the risk of fire or electric shock, DO NOT use this fan with any solid-state speed control device.

MAINTENANCE

- Maintain your fan. It is recommended that the general condition of any fan be examined before it is used. Have necessary repairs made by qualified service personnel.
- Always disconnect the cord from the electrical outlet before cleaning your fan.
- Light accumulated dust may be removed by using a soft cloth to wipe away the dust at the back grille of the fan.
- Wipe the exterior surfaces of the fan occasionally with a damp cloth (not dripping wet) and dry thoroughly with a soft dry cloth before operating the fan.
- Do not use harsh cleaners or materials to clean this unit, doing so will cause damages to it. Cleaning is required every 3-4 months. The grills can be removed for cleaning purposes only. Never operate the fan while the grills are removed.

CAUTION: do not immerse into water or allow water to run into the interior of the fan as this could create a fire or electric shock hazard. The fan motor is factory lubricated for life and will require no further lubrication. No other user maintenance is required or recommended. If service is required, send your fan to the nearest authorized service center.



STORAGE INSTRUCTIONS

- Retain the original packaging to store your fan.
- Always store in a dry place.
- Never store this fan while still plugged in.
- Never wrap cord tightly around the fan or put any stress on the cord where it enters the fan as it could cause the cord to fray or break.

TROUBLESHOOTING

If your fan fails to operate, please follow these procedures prior to contacting customer service:

PROBLEM	PROBABLE CAUSE	SOLUTION
Fan does not turn on.	Fan is not plugged into a 120 V AC, 60 Hz polarized outlet.	Ensure unit is in the OFF position. Plug in unit and attempt to turn on again.
	Breaker has been tripped or fuse has blown.	Please check your electrical box to confirm the breaker has not been tripped. Ensure unit is in OFF position. Plug in unit and attempt to turn on again. Attempt to plug unit in another receptacle in the house.
Fan is on but air coming out of it is not strong enough.	There is dust built up at the back of the fan.	Turn fan OFF and unplug. Using a soft, dry cloth, wipe the back of the grille to remove any dust build-up. Plug in unit and turn fan back ON to resume normal operation.

PLEASE DO NOT ATTEMPT TO OPEN OR REPAIR THE FAN YOURSELF. DOING SO COULD VOID THE WARRANTY AND CAUSE DAMAGE OR PERSONAL INJURY.