


BR008-110

Beverage Refrigerator

User Manual

SKU: BR008-110SH-USZX
BR008-110SI-USZX

MODEL: BR008-110SI
BR008-110SH

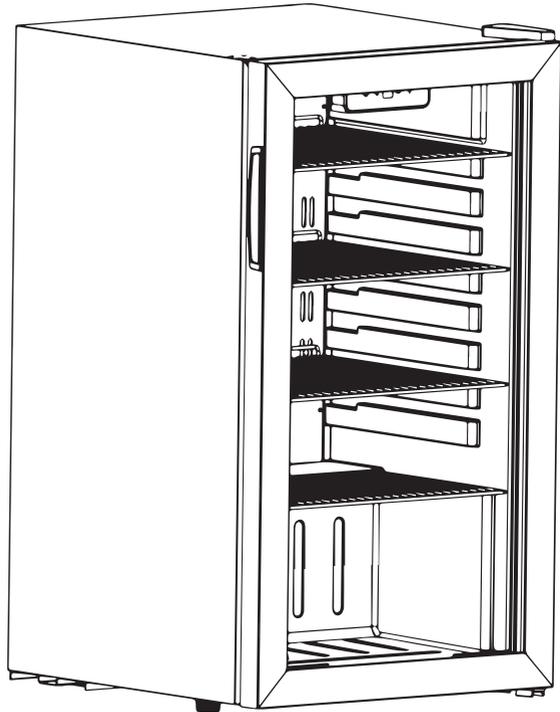

For Customer Service Support
Call: 1-833-632-0897
Email: support@homyd.com

THANK YOU FOR CHOOSING US

Thank you for choosing our product.

We sincerely appreciate your trust and support. Your satisfaction is our top priority, and we are committed to delivering high-quality products and attentive service.

If you have any questions or suggestions during use, please do not hesitate to contact us. We are always here to assist you.

Contact Information

Email: support@homyd.com (Replies within 24 hours on business days)

Toll-Free: 1-833-632-0897 (Monday to Friday, 9:00 AM – 6:00 PM ET)

We hope this product brings ease and enjoyment to your daily life.

Warranty Statement

This product is covered by a limited warranty that protects against defects in materials and workmanship under normal household use.

If your product develops a fault after the return period of your purchase platform has ended, please contact us directly. We will do our best to assist you based on the warranty terms.

For warranty-related inquiries, please reach out using the contact details listed above.

Contents

Important Safety Instructions	02
Key Components And Structure	05
Installation Guide	07
Door Reversal Instructions	09
Getting To Know The Beverage Refrigerator	11
Cleaning And Maintenance	13
FAQs	16
Troubleshooting	18
Specifications	21
Warranty Policy	22
Return Policy	23

IMPORTANT SAFETY INSTRUCTIONS

 Read and review instructions to understand the operation and use of the product.

 Indicates the presence of a hazard that can cause personal injury, death, or substantial property damage if the warning included with this symbol is ignored.

Warnings

Failure to follow these instructions could result in electric shock, fire, or burn hazards, which could cause property damage, personal injury, or death. When using electrical appliances, basic safety precautions should always be followed, including the following:

General Safety Instructions

1. Read all instructions before using the appliance.
2. Only use this appliance for its intended purpose as described in this user manual.
3. To prevent any hazards, all issues with the appliance must be resolved in accordance with the instructions in this manual.
4. Before using the appliance, it must be properly positioned and installed according to the instructions in the user manual. Please read the user manual carefully to reduce the risk of fire, electric shock, or injury during use.

Child Safety

5. Keep the appliance and its cord out of reach of children. **DO NOT** allow the appliance to be used by children. Close supervision is necessary when using near children.
6. If you will not use the appliance for an extended period, plan to store it, or dispose of it, please remove the doors and keep the shelves in place to prevent children from easily climbing inside and reduce the risk of entrapment.
7. To prevent children from becoming trapped, keep the appliance out of children's reach and away from the cooler.
8. Never allow children to operate, play with, or crawl inside the appliance.
9. The appliance can be used by individuals with reduced physical, sensory, or mental capabilities, or those lacking experience and knowledge, provided they have received supervision or instruction on the safe use of the appliance and understand the associated hazards.

Electrical Safety and Power Connection

10. It is recommended to use a dedicated circuit exclusively for this appliance. Please use outlets that cannot be turned off by a switch or pull chain.
11. Before cleaning or performing maintenance, ensure the appliance is unplugged to prevent electric shock or death.
12. **DO NOT** plug in or unplug the power cord with wet hands.
13. **DO NOT** attempt to repair or replace any parts of the appliance unless explicitly instructed in this user manual. All other servicing must be carried out by qualified service personnel.
14. **DO NOT** twist or pinch the power cord of the appliance.
15. **DO NOT** pull on the power cord when disconnecting the power plug of the appliance. Firmly grasp the plug and pull it straight out of the socket.
16. Please repair or replace any frayed or damaged electrical cords immediately. **DO NOT** use cords that show cracks or abrasion along their length, on the plug, or at the connector end.
17. **DO NOT** use an extension cord with this appliance. However, if you must use an extension cord, it is absolutely necessary that it be a UL-listed, 3-wire grounding-type appliance extension cord with a grounding-type plug and outlet, and that the electrical rating of the cord is 115 volts and at least 13 amperes.
18. The fuse (or circuit breaker) must be rated at 13 amperes.
19. If the power cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified personnel to prevent any safety hazards.
20. Please ensure that the power cord is not tangled or damaged during the installation process.
21. **DO NOT** place multiple portable outlets or power strips at the rear of the appliance.
22. Improper use of the grounded plug may result in an electric shock. This appliance must be properly grounded for your safety. Plug the power cord into a grounded 3-prong outlet. **DO NOT** remove the grounding prong, use an adapter, or use an extension cord.
23. The appliance must be connected to a standard power supply (**115V/60Hz**), properly grounded in accordance with the National Electrical Code and local regulations.
24. Always plug the appliance into its own individual outlet with a voltage rating that matches the rating label on the appliance. This helps ensure optimal performance and prevents overloading the household wiring, which could lead to overheating or fire.

25. Secure the power cord behind the appliance to prevent it from being exposed or dangling, which may cause accidental injury.
26. When moving the appliance, handle the power cord with care to avoid damage.

Fire and Overheating Prevention

27. **DO NOT** use or store gasoline or other flammable liquids near the appliance, and never use flammable liquids to clean the appliance, as vapors may cause fire or explosion.
28. **DO NOT** block the front door of the appliance with any objects to ensure proper ventilation. Install the appliance in a well-ventilated area with a temperature range of 10°C (50°F) to 32°C (90°F), and ensure it is protected from wind, rain, water spray, or drips.
29. **DO NOT** place this appliance near ovens, grills, or other high-temperature sources to prevent damage or safety hazards.
30. Keep ventilation openings in the appliance enclosure or built-in structure free of obstruction.

Installation and Transport

31. Use two or more people to move and install the appliance. Failure to do so may cause back or other injuries to the person handling the appliance.
32. **DO NOT** damage the refrigerant circuit.
33. The refrigerant circuit of this device contains isobutane (R600a), a flammable natural gas with high environmental compatibility. Please ensure that no part of the refrigerant circuit is damaged during transportation and installation.
34. To ensure proper operation, the appliance must be leveled. Please make any necessary minor adjustments to achieve a stable and level position.

Maintenance and Cleaning

35. **DO NOT** use hard brushes, wire brushes, abrasives, organic solvents, boiling water, or acidic or alkaline substances, as they may damage the surface and interior of the appliance.
36. This unit defrosts automatically. **DO NOT** use mechanical devices or other methods to speed up the defrosting process.
37. **DO NOT** leave the door open for extended periods, as this may cause a significant rise in internal temperature.
38. If the appliance will remain unused for an extended time, switch it off, defrost, clean, dry thoroughly, and leave the door open to prevent mold growth.



Risk of Fire or Explosion—Flammable Refrigerant Used

Dispose of the appliance following federal or local regulations. Follow all handling instructions to ensure safe disposal.

DO NOT use mechanical devices to defrost the unit.


DO NOT puncture refrigerant tubing.

Servicing must be performed by trained personnel only.

Clean and maintain the appliance regularly according to this manual's Cleaning & Maintenance section.

KEY COMPONENTS AND STRUCTURE

- ① Hinged Cover
- ② Control Panel
- ③ Shelf
- ④ Double-pane Glass Door with Stainless Steel Frame
- ⑤ Adjustable Leveling Legs

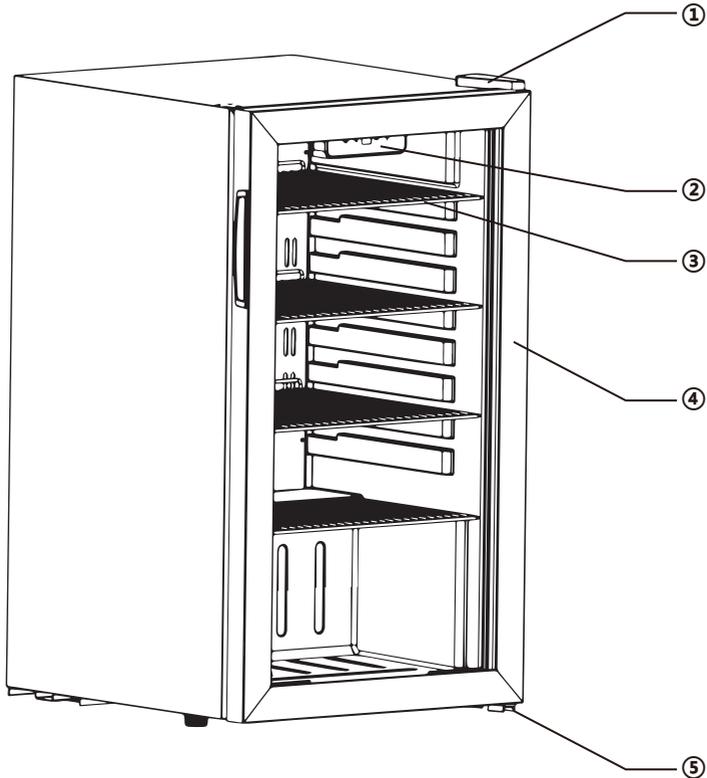

Accessories

Five Additional Plugs

INSTALLATION GUIDE

Unpack

1. Please remove the internal and external packaging, and verify that all parts are included, including five additional plugs and the user manual.
2. To ensure proper operation of the appliance, it's important to keep it level. Please adjust the leveling feet as needed to maintain stability.
3. Before connecting the appliance to the power source, let it stand upright for approximately 24 hours. This will reduce the likelihood of a malfunction in the cooling system due to handling during transportation.
4. Clean the interior surface using lukewarm water and a soft cloth.

Proper Installation and Air Circulation

To ensure this beverage refrigerator performs at its best, please follow these guidelines:

A. Freestanding Installation

This appliance is designed for freestanding installation.

B. Ventilation Requirements

Always install the appliance in an open and well-ventilated area. **DO NOT** place it in an enclosed space (such as a closed cabinet or closet).

To ensure proper air circulation, maintain the following minimum clearances around the unit:

Sides: **5 cm (2 inches)**

Top: **5 cm (2 inches)**

Back: **25 cm (10 inches)**

C. Avoid Overloading

DO NOT overfill the beverage refrigerator, as this may restrict airflow and affect cooling performance.


Installation Limitations

1. Place the beverage refrigerator on a sturdy floor that can support it when fully loaded.
2. Position the unit away from direct sunlight and heat sources (e.g., stoves, heaters, radiators). Direct sunlight may affect the acrylic coating, and heat may increase energy consumption.
3. Avoid placing the appliance in environments with extremely cold ambient temperatures, as this may affect its performance.

4. **DO NOT** install the unit in areas with high humidity or moisture.
5. Plug the beverage refrigerator into a dedicated, properly installed, and grounded wall outlet. Under no circumstances should the third (ground) prong be cut or removed from the power cord.

Removing or Reinserting the Shelf

1. To remove a shelf, gently tilt it upward and slide it forward until it is completely removed.
2. To reinsert the shelf, gently slide it back into its original position.

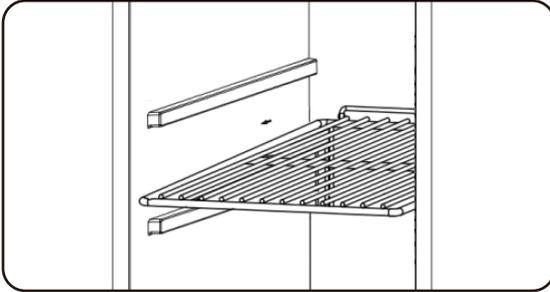

DOOR REVERSAL INSTRUCTIONS

Tools Required



Precautions Before Reversing the Door

1. The beverage refrigerator is shipped with the door hinge bracket installed on the right side by default, allowing the door to open from the left. However, if desired, the hinge can be relocated to the left side so that the door opens from the right.
2. If you plan to reverse the door hinge, **DO NOT** plug the beverage refrigerator into the power outlet until the door reversal has been completed.
3. Remove the shelves before beginning the door reversal process
4. **DO NOT** place the beverage refrigerator upside down during installation, as this may cause damage to the appliance.

Door Reversal Procedure:

Before the operation, please take care to store all remaining parts properly in case they are required at a later time.


Step 1: Use a flat-head screwdriver to gently remove the four plastic plugs on the upper left side of the beverage refrigerator and the screw on the door.

Step 2: Please first push the hinge cover on the top right backward, lift it up, and slide it forward to remove. Next, use a #2 Phillips screwdriver to unscrew the four screws, and then remove the upper hinge.

Step 3: To remove the lower right door hinge, carefully tilt the appliance 90° so that the door is facing upward. Use a #2 Phillips screwdriver to remove the four screws from the bottom right hinge and detach the hinge.

Next, use a #2 Phillips screwdriver to remove the four screws on the left side. Then, install the previously removed hinge in the corresponding position on the left and tighten the screws.

Finally, insert the screws removed from the left into the corresponding holes on the right side.

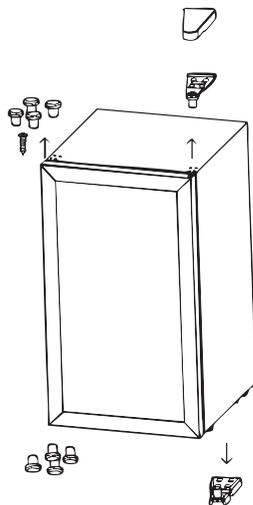

Step 4: Reinstall the top right hinge that was previously removed onto the left side, making sure to move the foot pad along with the hinge. Align the hinge holes with the holes on the top of the unit, then tighten the four screws to secure it. Finally, press down on the hinge cover to complete the installation.



Step 5: Finally, insert the plastic plug (previously removed from the left side) into the hole on the upper right side of the appliance and place the appliance upright.

IMPORTANT:


After completing the door reversal process, **DO NOT** plug in the beverage refrigerator for at least 24 hours. During the reversal procedure, the refrigerant and compressor oil may become mixed.

It is essential to allow sufficient time for these fluids to separate and settle, ensuring the compressor functions properly.

Failure to follow this instruction may result in serious mechanical damage—including potential failure of the compressor or motor—and will void the product warranty.

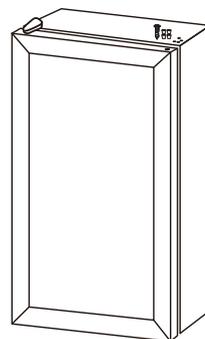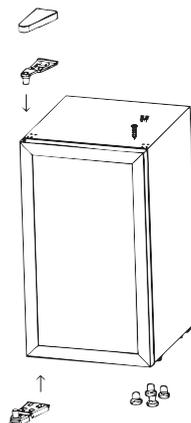

GETTING TO KNOW THE BEVERAGE REFRIGERATOR

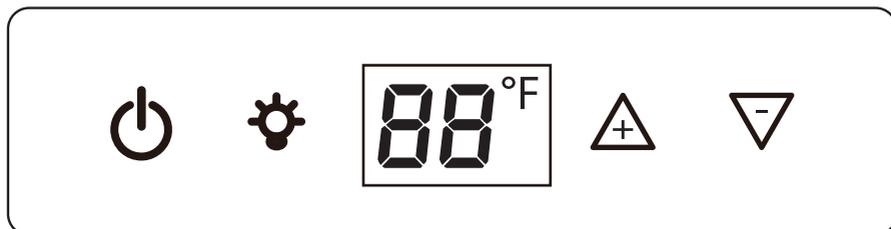

Power Button

The unit will turn on automatically once it is plugged into a power outlet.

To turn it off, press and hold the Power Button for 3 seconds. To turn it on manually, touch the Power button.

Light Button

Touch the light button to turn the internal LED light on or off.

Actual Temperature Display

The temperature display shows the actual internal temperature of the unit. When using the  or  buttons to adjust the temperature, the display will briefly show the set temperature and then return to displaying the current internal temperature.

Temperature Increase Touch Button

Press the button once to increase the set temperature by 1 degree.

Temperature Decrease Touch Button

Press the button once to decrease the set temperature by 1 degree.

Loading Beverages

When filling the beverage refrigerator to full capacity for the first time, we recommend following these steps to effectively cool a large number of beverages.

1. Use the Adjustable Thermostat Control to set a lower temperature.
2. Allow the beverage refrigerator to cool for a minimum of two hours.
3. Load the beverages.
4. After initially filling with beverages, the internal temperature will rise as indicated on the display.
5. Once the beverage refrigerator has cooled the beverages to **the previously set temperature**, use the Adjustable Thermostat Control to set your preferred temperature. The adjustable temperature range is **1°C (34°F)–18°C (64°F)**.
6. Allow several hours for the beverage cooler to cool to the desired lower temperature.
Note: Temperature variations inside the unit are normal. Areas near the door may be slightly warmer than the rest of the interior.

CLEANING AND MAINTENANCE

Cleaning the Machine

1. Turn off the appliance and unplug it from the power outlet. Then, remove all items inside, including the shelves.
2. Dissolve 3-4 teaspoons of baking soda in warm water. Use it to moisten a sponge or soft cloth and wipe the unit. Rinse with clean, warm water and dry with a soft cloth. Please avoid using hard brushes, wire brushes, abrasives, organic solvents, boiling water, or acidic or alkaline substances, as they may damage the surface and interior of the appliance.
3. When cleaning around the control panel and any electrical components, make sure the sponge or cloth is thoroughly wrung out to prevent moisture damage.
4. Clean the door seal every three months to maintain its effectiveness. Apply a thin layer of petroleum jelly on the hinge side to keep it soft and ensure a proper seal.
5. Regularly clean the interior walls and shelves of the appliance. If the unit has not been used for more than 48 hours, clean the drip tray located above the compressor.

Handling Power Interruptions

1. Power outages may occasionally occur due to storms or other causes.
2. Most interruptions are resolved within a few hours and should not significantly affect the appliance's temperature. During this time, try to keep the door closed as much as possible to help maintain a stable internal environment.
3. In the event of a power outage, unplug the appliance from the power outlet. When power is restored, plug it back in.
4. If the power outage lasts for an extended period, take appropriate measures to protect the contents.

Moving the Appliance

1. Remove all beverages from the appliance.
2. Secure any loose parts inside the refrigerator, such as shelves, with tape.
3. Turn all adjustable leveling legs upward toward the base to prevent damage during transport.
4. Please securely tape the door closed and ensure the appliance remains upright during transport. If horizontal transport is necessary, keep the door facing upward and wrap the exterior of the appliance with a blanket or similar protective material.

Defrosting the Appliance

1. Remove the drinks. Unplug the unit to allow the frost to melt. (**DO NOT** use mechanical devices or non-manufacturer-recommended methods to speed up defrosting.)
2. Allow the frost to melt naturally. Ensure the internal drain is not blocked.
3. During defrosting, the melted frost will flow through the internal drain tube into the drip tray located above the compressor. The heat from the compressor will help evaporate the water. (If the drip tray becomes too full, it must be emptied manually.)
4. Clean the interior using warm water and a soft cloth. Dry thoroughly, reset the temperature, and allow the unit to cool for 2 hours.
5. Reload beverages and adjust to your desired temperature.

Maintenance Preparation Before Holidays and Relocation

1. For extended holidays or when the beverage refrigerator is empty, unplug the power cord and clean both the interior and the door seal.
2. Keep the door open to ensure proper air circulation and prevent the formation of mildew and associated odors.
3. When moving the appliance, always keep it upright, as lying it flat may damage the sealed system.

Energy Saving Tip: Place the appliance in the coolest area of the room, away from heat sources and direct sunlight.

CORRECT DISPOSAL OF THIS PRODUCT



When the unit is taken out of service, its disposal and the handling of its materials must comply with national regulations.

FAQs

1. Is this rated for outdoor use? I see pictures of an outdoor island.

No, this beverage refrigerator is primarily designed for indoor use. You can place it on a balcony or near a door, but please avoid using it in open outdoor environments to ensure its proper operation and longevity.

2. Has anyone installed this under the counter? And does that void the warranty?

This model is not designed for under-counter installation. Placing it under the counter may affect its performance.

3. Is this unit quiet enough to keep in a bedroom?

This beverage refrigerator features a low-noise design that produces only 36 dB of noise when running, so it's quiet enough to put in your bedroom or any other quiet environment without disturbing your sleep.

4. Is it possible to change the direction of the door?

Yes, the orientation of the beverage refrigerator door can be changed. Our manual contains detailed tutorials.

5. Does this refrigerator need to be installed?

No, the beverage refrigerator does not require installation. After receiving the unit, let it stand for **24 hours** before powering it on.

6. What are the warranty specifications?

We provide a 12-month warranty and lifetime technical support for this beverage refrigerator. If you would like to learn more, please contact our customer service team.

7. Can the shelves inside the refrigerator be moved?

The shelves inside the beverage refrigerator are adjustable and can be moved.

8. Is it normal for a beverage cooler to get hot outside?

It is normal for a refrigerator to emit some heat on the outside. This happens because refrigerators work by transferring heat from inside the unit to the outside, keeping the inside cool.

9. Does it keep food securely cold?

The beverage refrigerator is primarily designed to store drinks, especially for chilling wine, beer, and other beverages. It features different temperature settings to keep drinks at their ideal temperatures.

It can also be used to store some food items that **DO NOT** require specific temperature settings.

However, for food items that require freezing, we recommend using a freezer specifically designed for food storage.

TROUBLESHOOTING

°F

Problem	Possible Cause	Solution
The appliance does not operate	There is a power failure, or the appliance is not plugged in	Ensure the appliance is plugged in and the power outlet has power
	The home's circuit breaker has tripped	Reset the circuit breaker
	The appliance fuse has blown	Replace the fuse
The appliance is not cold enough	The appliance is placed too close to a heat source	Adjust the temperature. Keep the appliance away from sunshine or other heat sources
	The door is opened too often	Close the door tightly and DO NOT open the door too frequently or for a long period of time
	The door gasket does not seal properly	Ensure the door gasket is not loose
	The refrigerant hasn't completely settled	Let the unit stand upright for 24 hours before plugging it in (to stabilize after transportation)
	The door is not closed completely	Check the door seal for any damage. If not, close the door tightly and wait for more than 2 hours. If the issue persists, please verify that the display still functions correctly and contact our after-sales team for further assistance
The light does not work	The unit is not plugged in	Plug in the unit
	Circuit breaker is tripped or fuse is blown	Check the circuit breaker or replace the fuse
	The light button is turned off	Touch the light button to turn it on

The appliance is vibrating	The appliance is not leveled correctly	Adjust the leveling legs to ensure the appliance is securely in place and stable
	Beverage bottles inside the appliance are vibrating	Reorganize the bottles to prevent them from touching each other or the walls
	There are foreign objects underneath the appliance	Check the bottom of the appliance and remove any objects
The appliance makes too much noise	The noise may originate from the flow of the refrigerant, and the expansion of the internal walls may cause popping and crackling sounds	It is normal to hear rattling or gurgling sounds as each cooling cycle ends, caused by the flow of refrigerant in the appliance. The high-efficiency compressor may make a pulsating or high-pitched sound
The door does not close properly	The appliance is not level	Ensure the unit is placed on a hard, level surface. Avoid placing it on carpeted or soft surfaces, and ensure the unit is level
	Something might be blocking the door	Ensure the unit is placed on a hard, level surface. Avoid placing it on carpeted or soft surfaces, and ensure the unit is level
	The door gasket is dirty	Clean the gasket with a soft cloth and mild detergent to ensure a proper seal
	The shelves are not positioned correctly	Reinstall the shelves properly to ensure the door can close fully
The unit is running too frequently	More cooling is required for the environmental conditions	In high-temperature and high-humidity environments, continuous operation may be normal as the unit works to maintain a stable internal temperature. For optimal performance, operate the unit in environments below 90°F (32°C)
	Frequent opening of the door allows warm air to enter	Reduce the frequency of opening the door

	Poor sealing causes cold air to leak	Check that the door seal is properly sealed
	A door that is not completely closed increases the running time	Make sure that the door is completely closed
Received a damaged product or missing accessories	This may have occurred during shipping	Please contact our customer service team, we're here to help and will resolve the issue as quickly as possible
Error Code E1 is displayed on the screen	This indicates a temperature sensor failure	Please contact our customer service team, we're here to help and will resolve the issue as quickly as possible
The fans turn on and off frequently	To circulate air and maintain the set temperature inside the cabinet, the fans cycle on and off approximately every 10 seconds even when the compressor is off. This is a normal operation called "semi-speed status"	This behavior is normal and requires no action. However, if the fans stop completely and DO NOT cycle on and off, it indicates a malfunction. Please contact customer service for assistance
The compressor turns on and off frequently	The room temperature is hotter than normal	Place the unit in a well-ventilated area away from heat sources
	A large number of items have been added to the unit	Avoid overloading the unit; reduce the amount of items added at one time
	The door is opened too often	Minimize door openings and avoid keeping the door open for long periods
	The door is not closed completely	Ensure the door is fully closed after use
	The temperature control is not set correctly	Adjust the thermostat to the recommended temperature
	The door gasket does not seal properly	Check the door gasket for damage and replace or repair it if necessary

SPECIFICATIONS

BR008-110 Beverage Refrigerator	
SKU	BR008-110SH-USZX
MODEL	BR008-110SH
VOLTAGE	115V~60HZ
RATED CURRENT	0.9A
REFRIGERANT	R600A, 0.63 Oz/18g
FOAMING	Cyclopentane
DIMENSIONS	17.5*18.9*31.2 inches
NET WEIGHT	51.8 LBS
GROSS WEIGHT	60.6 LBS

BR008-110 Beverage Refrigerator	
SKU	BR008-110SI-USZX
MODEL	BR008-110SI
VOLTAGE	115V~60HZ
RATED CURRENT	0.9A
REFRIGERANT	R600A, 0.63 Oz/18g
FOAMING	Cyclopentane
DIMENSIONS	17.4*18.9*31.2 inches
NET WEIGHT	52.9 LBS
GROSS WEIGHT	61.7 LBS

WARRANTY POLICY

1-Year Limited Warranty

Toll-Free Call: 1-833-632-0897 Mon to Fri, 9AM - 6PM (ET)

Email: support@homyd.com

Thank you for choosing our products. We provide a 1-Year Limited Warranty for items purchased through our official channels. Please kindly note that this warranty is for the original purchaser and is non-transferable. If you purchase from an unauthorized seller, please get in touch with them directly.

We are committed to ensuring that our products are free from defects in materials and workmanship for one year from the date of purchase, as long as they are used under normal household conditions and maintained according to the User Manual. **Please note that certain conditions and exclusions apply:**

Should you find any defects in the original product or its non-wearable parts, we will be happy to repair or replace the item within one year of purchase. If a replacement is necessary, the warranty period will continue from the original purchase date. Please be aware that normal wear and tear or damage due to mishandling, accidents, or failure to follow instructions are not covered. However, replacement parts are available for purchase. Feel free to contact us for more information.

Please also note that this warranty does not cover damage caused by exposure to liquids or foreign materials, unauthorized repairs or modifications, or use in commercial or non-household environments (unless specified for commercial use).

If you encounter any issues with your product, we are here to help. You can reach us by phone at **1-833-632-0897** or email us at **support@homyd.com**. For certain product categories, we also offer the option to upgrade your warranty to our VIP service.

Our friendly phone support team is available from **Monday to Friday, 9 AM - 6 PM (ET)**. To assist you more efficiently, please have your product with you when you call. We aim to respond to emails within 24 business hours. If you don't receive a reply after sending us an email within this time frame, kindly check your spam folder to ensure you don't miss our response.

In addition to the one-year warranty, we also offer lifetime technical support. After the warranty period, service is still available at an additional cost. Please don't hesitate to contact us with any questions or concerns.

RETURN POLICY

We offer a 30-day return policy for purchases made directly through our company. This policy is separate from and does not override the return policies of third-party platforms.

Return Eligibility

Items must be returned within 30 days of purchase.

Products should be in new or like-new condition, with original packaging and all accessories (manuals, handles, keys, etc.).

Returns not related to quality issues will require the buyer to cover return shipping costs, which will be deducted from the final refund.

How to Initiate a Return

Contact our customer service team for return authorization.

Provide the following information:

Proof of purchase (e.g., screenshot with platform name, order number, date, item, and amount)

After approval, we will send a return shipping label. Attach it to the product box and return via the designated carrier.

Once we receive and inspect your return, we will process your refund within **2–3 business days** (excluding original processing or handling fees).

***Note:**

- Returned products that are damaged or missing parts may not qualify for a refund.
- This return policy does not affect your warranty rights.
- For details, please refer to the “Return Policy” section of this manual or the return policy on your purchase platform.

SKU: BR008-110SH-USZX
BR008-110SI-USZX

