


Important Safety Instructions

1. Read these instructions - All the safety and operating instructions should be read before this product is operated.
2. Keep these instructions - The safety and operating instructions should be retained for future reference.
3. Heed all warnings - All warnings on the appliance and in the operating instructions should be adhered to.
4. Follow all instructions - All operating and use instructions should be followed.
5. Do not use this apparatus near water - The appliance should not be used near water or moisture - for example, in a wet basement or near a swimming pool, and the like.
6. Clean only with dry cloth.
7. Do not keep near any heat sources such as radiations, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
8. The use of Office Everywhere should be in moderate climate.
9. No open flame sources, such as lighted candles, should be placed on the Office Everywhere.
10. Please refer the label on back of the flap.

Functional description

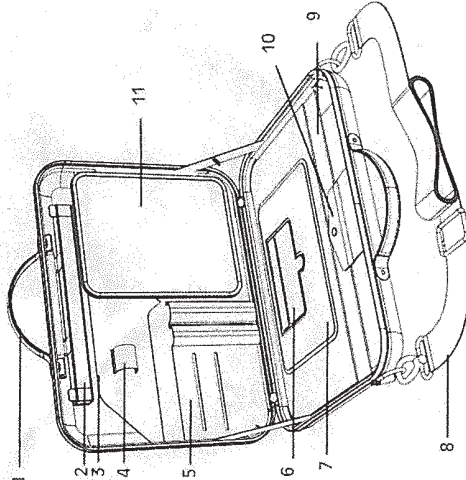

1. Hand strap

This bag has a comfortable Hand Strap, so that the laptop can travel with you easily, you can simply hold it wherever you go and enjoy work anywhere.

2. USB-powered LED light

This bag has an LED light designed to give you a better user experience.

When using, please fix the LED on the bracket. Then, use a TYPE-C USB cable to connect the LED to a laptop or an external power source.

There are High/Low brightness settings for the LED. At one end of the LED, there is a switch that adjusts the brightness of the LED lamp.

The LED light holder can sit on the top of the laptop which fits laptop lids with thickness within 8mm.

3. Pocket

The pocket to hold letter size papers.

4. Holder

To hold pens, markers, small power cards.

5. Accessory organizer

Accessory organizer, to hold:

As notebook

Phone stand

Pens/pencils;

business cards.

6. Folding tablet stand

Surface to prevent a laptop from overheating

7. Shoulder strap

Adjustable shoulder strap allow you to carry your bag better.

9. Pocket

Fits most laptops/ Tablets up to 15.6"

10. Flap

11. Whiteboard

Detachable dry erase whiteboard.

To be used only with a whiteboard pen.

NOTE: If you accidentally use a different type of pen, clean off the writing with a wet cloth dipped in alcohol.

Cell phone stand : The attachment contains a cell phone stand. It can be opened to facilitate the placement of the cell phone.

Cleaning your bag

Do not use corrosive cleaners.

Never use chemicals, detergents, or abrasives.

Specifications

USB power supply.....5V

Weight..... 1.72kg (approx.)

Accessories

A 1.2 meters USB Type C Cable

A USB-powered LED light

A Shoulder Strap

A Cell Phone Stand

An Instruction Manual

A Whiteboard

All the accessories are kept in the pockets of Office Everywhere. Please check the accessories when opening Office Everywhere for the first time.

FCC Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

California PROP 65 Warning



WARNING: This product can expose you to chemicals including lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to www.P65Warnings.ca.gov.

Returns

We offer a 30-day money back guarantee on all products purchased from workylife.com All items must be returned as new in their original packaging, including all accessories and cables. Missing items will be charged based on suggested retail prices. All returns must be accompanied by a valid return authorization number (RMA) issued by Worky. If an RMA is not obtained prior to shipping, the returned product will be refused and returned to sender. Shipping cost is not refundable and returns must be shipped prepaid by the customer. There is a 15% restocking fee that will be calculated based on the price of the product once the item is refunded. To set up a return for refund please email us at support@workylife.com. Please be sure to include your order # and reason for your return in your email.

Limited warranty

UNITED STATES

Worky (Worky Life, LLC) warrants to the original retail purchaser that this product will be free from defective materials and workmanship for one (1) year from the date of purchase, subject to the limitations below. This warranty period is not extended if we replace the product.