

7" and 9" Portable DVD Players



**QUICK SETUP GUIDE**

DX-P7DVD and DX-P9DVD


Congratulations on your purchase of a high-quality Dynex product. Your DX-P7DVD or DX-P9DVD represents the state of the art in personal DVD player design and is designed for reliable and trouble-free performance.

**Package contents**

- DVD player with 7" or 9" LCD monitor
- Remote control with battery
- AC to DC adapter
- Car adapter
- A/V cable
- Quick Setup Guide

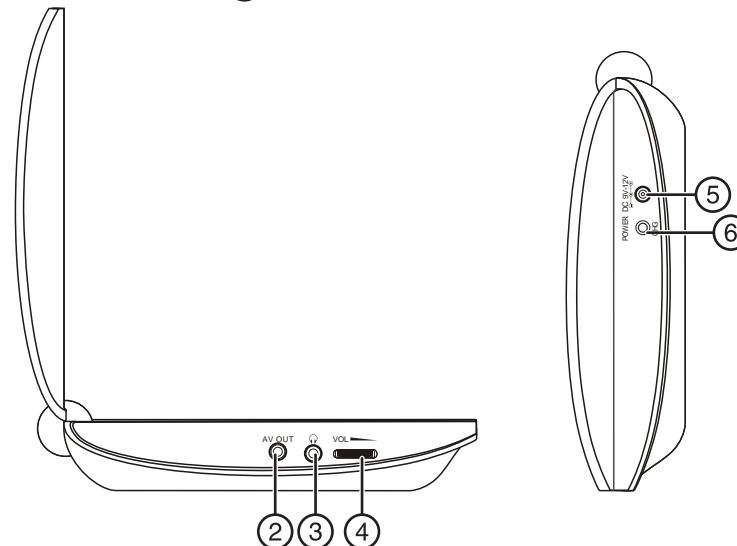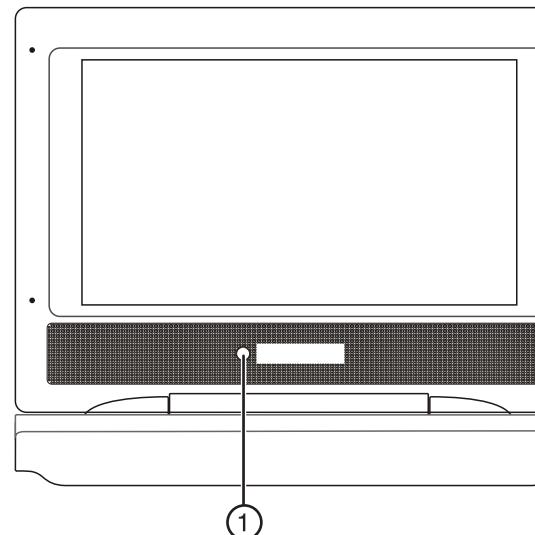**Front and side features**

1	Remote control sensor	Receives signals from the remote control. Do not block.
2	AV OUT jack	Use the included AV cable to connect your player to a TV or monitor.
3	Headphone jack	Plug headphones into this jack. When headphones are plugged in, sound does not come out of your player's speakers.
4	Volume control	Rotate to increase or decrease the volume.
5	DC input jack	Plug the AC to DC or car power adapter into this jack.
6	Power/battery charge indicator	Lights green when your player is on and flashes green when the battery power is low. Lights red when the battery is charging and flashes red when you turn off your player and connect it to the car power adapter.

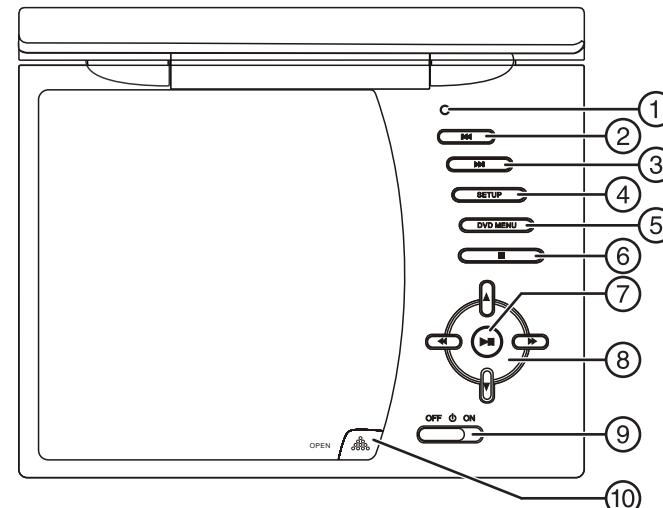**Inside features**

1	LCD screen shut off button	Press to turn off the LCD screen.
2	◀◀ (prev) button	Press to go to the previous chapter, track, or scene during disc playback.
3	▶▶ (next) button	Press to go to the next chapter, track, or scene during disc playback.
4	SETUP button	Press to open or close the Setup menu.
5	DVD MENU	Press to open the main DVD menu.
6	■ (stop)	Press to stop disc playback.
7	▶ II (play/pause) button	Press to start or pause playback.
8	▲ or ▼ buttons ◀◀ (fast rev) button ▶▶ (fast fwd) buttons	Press to navigate up or down on a menu. Press to fast reverse or navigate left on a menu. Press to fast forward or navigate right on a menu.
9	Power On/Off switch	Slide to turn your DVD player on or off.
10	OPEN button	Press to open the disc tray.

**Installing remote control battery**


The first time you use the remote control, remove the film between the battery and compartment cover to activate the remote.

**Charging the battery**

**NOTE:** During playback, an icon  appears on the screen, indicating the amount of power left in the battery. The power indicator on the side of the player will also alert you when the battery is low by flashing green.

The battery will charge only when the player is connected to a wall outlet (AC); it will not charge with the car adapter.

- 1 Plug one end of the wall adapter (AC) into the **DC** input jack on the side of your player.


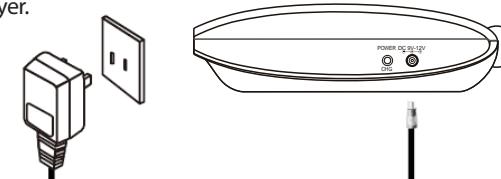


- 2 Plug the other end of the power adapter into a wall outlet.

## Connecting to a car cigarette lighter

**NOTE:** The car power adapter cannot be used to charge the battery

- 1 Plug one end of the car power adapter into the **DC** jack on the side of your player.

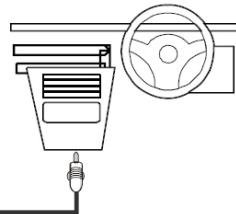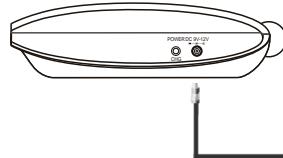

- 2 Plug the other end of the adapter into a 12V car power outlet or cigarette lighter socket.




- 3 Turn off your player. The red charge indicator will flash, reminding you that the battery cannot be charged with the car power adapter.

## Connecting headphones

- Plug headphones (not included) into the **headphone** jack. When headphones are plugged into the **headphone** jack, no sound comes from the built-in speakers.

## Connecting a TV or monitor

- 1 Plug the black connector end of the supplied A/V cable into the **AV** jack on your player.

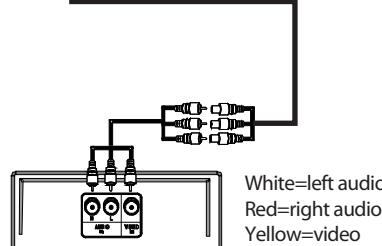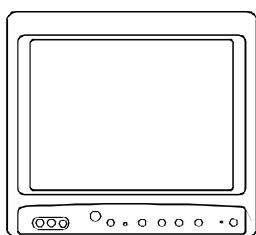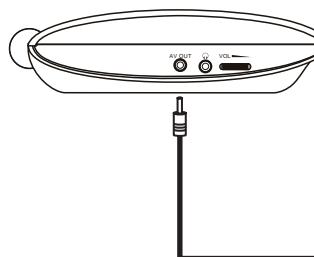

- 2 Plug the connectors on an RCA cable (not included) into the connectors on the other end of the supplied A/V cable. Make sure that the colors on the connectors match.

- 3 Plug the other end of the RCA cable (not included) into the A/V jacks on the TV or monitor. The white connector goes into the left audio jack. The red connector goes into the right audio jack. The yellow connector goes into the video jack.

## Using your player

### Playing a DVD or audio CD

**Note:** Most DVDs and your player have region codes that help control illegal distribution of DVDs. The region code for your player is **1**. You can only play DVDs with a region code of **1** or **ALL**. The region code for a DVD is printed on the DVD or the DVD packaging.

- 1 Make sure that your player is connected to power or that the battery is charged.
- 2 Slide the **ON/OFF** switch inside your player to the **ON** position.
- 3 Press the **OPEN** button inside your player. The disc tray opens.
- 4 Place a disc, label side up, in the disc tray, then close the tray. Make sure the disc is snapped completely into place. The disc starts playing automatically.

### Legal notices

#### FCC Part 15

This device complies with Part 15 of the FCC Rules. Operation of this product is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply within the limits for a class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

#### FCC warning

Changes or modifications not expressly approved by the party responsible for compliance with the FCC Rules could void the user's authority to operate this equipment.

#### Important safety instructions

- 1 Read these instructions.
- 2 Keep these instructions.
- 3 Heed all warnings.
- 4 Follow all instructions.
- 5 Do not use this apparatus near water.
- 6 Clean only with a dry cloth.
- 7 Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 8 Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9 Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10 Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11 Only use attachments/accessories specified by the manufacturer.
- 12 Unplug this apparatus during lightning storms or when unused for long periods of time.
- 13 Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- 14 To reduce the risk of fire or electric shock, do not expose this device to rain, moisture, dripping, or splashing, and no objects filled with liquids, such as vases, shall be placed on it.
- 15 When the wall (AC) adapter is powering the device, the wall plug on the adapter must be readily operable in order to safely disconnect the device from the wall outlet.
- 16 Batteries should not be exposed to excessive heat such as sunshine, fire, or the like.

**Caution:** Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.

**DYNEX™**

## 90-day limited warranty

Visit [www.dynexproducts.com](http://www.dynexproducts.com) for details.

## We're here for you

[www.dynexproducts.com](http://www.dynexproducts.com)

For customer service, call:

**800-305-2204 (U.S./Canada markets)**

Distributed by Best Buy Purchasing, LLC  
7601 Penn Avenue South, Richfield, MN USA 55423-3645  
RFC#BBIO802114Q2

© 2010 BBY Solutions, Inc. All Rights Reserved.

DYNEX is a trademark of BBY Solutions, Inc. Registered in some countries. All other products and brand names are trademarks of their respective owners.

ENGLISH 10-0035