

### IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- 1 Read all Instructions.
- 2 Do not touch hot surfaces. Use handles or knobs.
- 3 To protect against electric shock, do not immerse the cord, plugs, or electric griddle in water or other liquid.
- 4 Close supervision is necessary when any appliance is used by or near children.
- 5 Unplug from the outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the electric griddle.
- 6 Do not operate the electric griddle with a damaged cord or plug, or after the electric griddle malfunctions or has been damaged in any manner. Return the electric griddle to the nearest authorized service facility for examination, repair, or adjustment.
- 7 The use of accessory attachments not recommended by the electric griddle's manufacturer may cause injuries, fire, or electric shock.
- 8 Do not use outdoors.
- 9 Do not let the power cord hang over the edge of a table or counter, or touch hot surfaces.
- 10 Do not place on or near a hot gas or electric burner or in a heated oven.
- 11 Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- 12 Do not use the electric griddle for anything other than its intended use.
- 13 Make sure that your household voltage corresponds to the voltage stated on your electric griddle's rating label.
- 14 Allow your electric griddle to cool completely before moving it.
- 15 This appliance can be used by children aged from eight years and above and persons with reduced

physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

- 16 Children shall not play with the appliance.
- 17 Cleaning and user maintenance shall not be made by children without supervision.
- 18 Always attach the plug to the appliance first, then plug the cord into the wall outlet. To disconnect, turn any control to off, then remove the plug from the wall outlet.
- 19 Do not use the appliance for other than its intended use.

#### WARNING

The surface of this appliance may become very hot during operation, which may cause blemishes, discoloration, or stains on a tabletop. It is recommended that you place non-plastic pads between the appliance and the table top. This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.


- a) A short power-supply cord is to be provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord.
- b) Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use.
- c) If a long detachable power-supply cord or extension cord is used:
  - 1) The marked electrical rating of the cord or extension cord should be at least as great as the electrical rating of the appliance (1500 W);
  - 2) The longer cord should be arranged so that it does not drape over a countertop or table top, where it can be pulled on by children or tripped over unintentionally.

#### PACKAGE CONTENTS

- Electric griddle
- Drip tray
- Electric cord with control knob
- *Quick Setup Guide*

#### FEATURES

- Non-stick heating plate
- Includes drip tray and cord with control knob

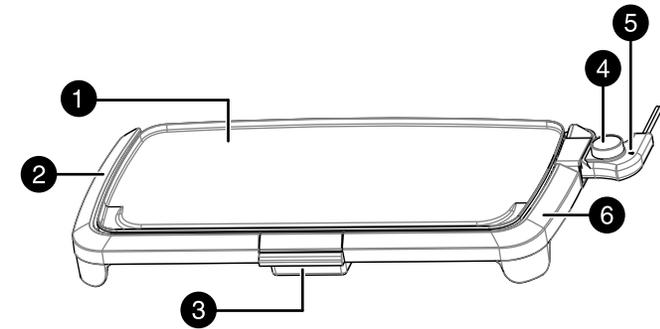

#	ITEM	DESCRIPTION
1	<b>Non-stick cooking plate</b>	Place the food to be cooked on the plate.
2	<b>Right handle</b>	Use to easily move and store the electric griddle when not in use.
3	<b>Drip tray</b>	Catches the fat and juices from bacon or other meats.
4	<b>Thermostat knob</b>	Controls the heat level of the griddle.
5	<b>Thermostat light</b>	Turns on when the heating element is on, and off when the heating element turns off.
6	<b>Left handle</b>	Use to easily move and store the electric griddle when not in use.

## SAVE THESE INSTRUCTIONS

## BEFORE USING YOUR ELECTRIC GRIDDLE FOR THE FIRST TIME

- 1 Remove all packaging materials.
- 2 Wipe the cooking plate with a sponge or cloth dampened in warm water.  
**Caution:** Do not immerse your electric griddle in water, and do not run water directly onto the cooking plate.
- 3 Dry the plate with a cloth or paper towel.

## USING YOUR ELECTRIC GRIDDLE

**Note:** The first time you heat your electric griddle, it may emit some smoke or odor, which is normal. This does not affect the safety of your electric griddle.

For best results, lightly coat the cooking plate with a little cooking oil or cooking spray.

- 1 Before use, make sure that the cooking plate is clean and free from dust and food particles. Wipe with a damp cloth if necessary.
- 2 Plug in the griddle and adjust the temperature. The red power light turns on.  
Preheating takes approximately ten minutes. When your electric griddle is heated, the power light turns off.
- 3 Make sure that the drip tray is in position. Place the food to be cooked on the griddle.  
Cooking time varies depending on what you are cooking and how well done you want your food.
- 4 After your food is cooked to your taste, remove it from the griddle with a plastic or wooden spatula. Never use metal utensils as this will damage the non-stick coating.
- 5 Disconnect the power cord. When the griddle has completely cooled, remove the drip tray. Then clean and replace it.

**Note:** Your griddle has an automatic shut-off that turns it off after three hours of continuous operation. To use your griddle after it shuts off, disconnect the power cord and plug it in again.

## MAINTENANCE AND CLEANING

- 1 Unplug your electric griddle and allow it to cool completely.
- 2 Immerse the drip tray into warm soapy water to clean, then rinse and dry. It is not recommended to place the drip tray in the dishwasher as the plastic material can deform and deteriorate over time.
- 3 Wipe all surfaces with an absorbent paper or toweling or a soft cloth. Never use abrasive cleaner to wipe the non-stick cooking plate.  
**Warning:** Never immerse the electric griddle into water for cleaning.

## STORING YOUR ELECTRIC GRIDDLE

- 1 Unplug your electric griddle. Make sure that your electric griddle is cool.
- 2 Clean and dry the griddle, if necessary.
- 3 Store the appliance in a safe clean place.

## SPECIFICATIONS

Measurements (H×W):	10 × 20 in (25.4 × 50.8 cm)
Maximum temperature:	400°F (204°C)
Wattage:	1500W
Voltage:	120V 60 Hz

## ONE-YEAR LIMITED WARRANTY

Visit [www.insigniaproducts.com](http://www.insigniaproducts.com) for details.

## CONTACT INSIGNIA:

For customer service, call 1-877-467-4289 (U.S. and Canada) or 01-800-926-3000 (Mexico)  
[www.insigniaproducts.com](http://www.insigniaproducts.com)

INSIGNIA is a trademark of Best Buy and its affiliated companies. Registered in some countries.  
Distributed by Best Buy Purchasing, LLC  
7601 Penn Ave South, Richfield, MN 55423 U.S.A.  
©2015 Best Buy. All rights reserved.  
Made in China