

Quick Start Guide

TC ELECTRONIC HALL OF FAME 2 REVERB

USB - Connects to your computer for firmware updates and TonePrint editing.

Power - Connect a 9V / >100 mA power supply.

Decay - Adjusts the length of the reverb.

Tone - Adjusts the brightness of the reverb.

MASH LED - Indicates intensity of MASH function.

Pre-Delay - Selects the amount of time between the dry sound and reverb.

Level - Adjusts the level of the reverb.

Reverb Type - Select reverb type or TonePrint 1-3*.

Outputs

Inputs

Footswitch - Tap footswitch to turn effect on or off. Push down and hold to engage MASH and control the selected parameter.



! READ THIS

***NO AUDIO ON TONEPRINT 3?**
The default TonePrint 3 setting mutes the output. Use the MASH switch like a volume pedal to increase volume gradually.

Visit tcelectronic.com to download the full manual