

INSIGNIA™

LED TV User Guide

Contents

CHILD SAFETY	4
IMPORTANT SAFEGUARDS	5
WARNING	5
CAUTION	6
Introduction	8
INlink	8
Game mode	8
Audio accessibility	8
TV components	8
TV front	8
Jacks	9
Remote control	11
Connecting a cable or satellite box	12
HDMI (best)	12
AV (good)	12
Coaxial (good)	13
Connecting an antenna or cable TV (no box)	13
Connecting a DVD or Blu-ray player	14
HDMI (best)	14
AV (good)	14
Connecting a game console	15
HDMI (best)	15
AV (good)	15
Connecting a computer	16
Connecting a USB flash drive	16
Connecting headphones	17
Connecting external speakers or a sound bar	17
Digital audio	17
Analog audio	18
Connecting power	18
Using a universal remote control	19
Programming universal remote controls	19
Viewing universal remote control codes	19
Turning on your TV for the first time	20
Understanding the basics	22
Turning your TV on or off	22
Selecting the video input source	23
On-screen menu overview	23
Selecting a channel	24

Adjusting the volume	24
Viewing channel information	24
Navigating the menus	24
Adjusting settings	25
Using INlink	25
Using a USB flash drive	26
Switching to USB mode	26
Adjusting the picture	27
Adjusting the TV picture	27
Automatically adjusting the aspect ratio	29
Setting the power on picture mode	29
Adjusting the sound	29
Adjusting sound settings	29
Selecting the audio out mode	30
Playing TV audio only	30
Changing channel settings	31
Setting parental controls	31
Locking the power button on your TV	33
Using closed captioning	33
Adjusting time settings	33
Adjusting menu settings	34
Adjusting accessibility settings	34
Maintaining	34
Cleaning the TV cabinet	34
Cleaning the TV screen	34
Troubleshooting	35
Using the HELP menu	35
Video and audio	35
Remote control	38
General	39
INlink (CEC-compatible) device	40
Legal notices	42
ONE-YEAR LIMITED WARRANTY	43

CHILD SAFETY

PROPER TELEVISION PLACEMENT MATTERS



THE CONSUMER ELECTRONICS INDUSTRY CARES

- Manufacturers, retailers and the rest of the consumer electronics industry are committed to making home entertainment safe and enjoyable.
- As you enjoy your television, please note that all televisions - new and old - must be supported on proper stands or installed according to the manufacturer's recommendations. Televisions that are inappropriately situated on dressers, bookcases, shelves, desks, speakers, chests, carts, etc., may fall over, resulting in injury.



TUNE IN TO SAFETY

- **ALWAYS** follow the manufacturer's recommendations for the safe installation of your television.
- **ALWAYS** read and follow all instructions for proper use of your television.
- **NEVER** allow children to climb on or play on the television or the furniture on which the television is placed.
- **NEVER** place the television on furniture that can easily be used as steps, such as a chest of drawers.
- **ALWAYS** install the television where it cannot be pushed, pulled over or knocked down.
- **ALWAYS** route cords and cables connected to the television so that they cannot be tripped over, pulled or grabbed.



WALL OR CEILING MOUNT YOUR TELEVISION

- **ALWAYS** contact your retailer about professional installation if you have any doubts about your ability to safely mount your television.
- **ALWAYS** use a mount that has been recommended by the television manufacturer and has a safety certification by an independent laboratory (such as UL, CSA, ETL).
- **ALWAYS** follow all instructions supplied by the television and mount manufacturers.
- **ALWAYS** make sure that the wall or ceiling where you are mounting the television is appropriate. Some mounts are not designed to be mounted to walls and ceilings with steel studs or cinder block construction. If you are unsure, contact a professional installer.
- Televisions can be heavy. A minimum of two people is required for a wall or ceiling mount installation.



MOVING AN OLDER TELEVISION TO A NEW PLACE IN YOUR HOME

- Many new television buyers move their older CRT televisions into a secondary room after the purchase of a flat-panel television. Special care should be made in the placement of older CRT televisions.
- **ALWAYS** place your older CRT television on furniture that is sturdy and appropriate for its size and weight.
- **NEVER** place your older CRT television on a dresser where children may be tempted to use the drawers to climb.
- **ALWAYS** make sure your older CRT television does not hang over the edge of your furniture.

Insignia LED TV

IMPORTANT SAFEGUARDS

Electric shock hazard

To reduce the risk of fire or electric shock, do not remove any cover or expose the device to rain or moisture. No user-serviceable parts are inside. Refer servicing to qualified service technicians.



This symbol indicates that dangerous voltage constituting a risk of electric shock is present within your TV. This label is located on the back of your TV.



This symbol indicates that there are important operating and maintenance instructions in the literature accompanying your TV.

- 1 Read these instructions.
- 2 Keep these instructions.
- 3 Heed all warnings.
- 4 Follow all instructions.
- 5 Do not use this apparatus near water.
- 6 Clean only with dry cloth.
- 7 Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 8 Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9 Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10 Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11 Only use attachments/accessories specified by the manufacturer.
- 12 Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
- 13 Unplug this apparatus during lightning storms or when unused for long periods of time.



S3125A

- 14 Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- 15 The *wall plug* is the disconnecting device. The plug must remain readily operable.
- 16 Remote control batteries should not be exposed to excessive heat such as sunshine, fire, or the like. Dispose of used battery promptly and correctly, according to local environmental laws and guidelines in force.
CAUTION: Risk of fire or explosion if the battery is replaced by an incorrect type. Use consumer grade, non-rechargeable carbon-zinc or alkaline batteries AAA or AA type.
- 17 The apparatus should not be exposed to dripping or splashing, and no objects filled with liquids, such as vases, should be placed on the apparatus.
- 18 No naked flame sources, such as lighted candles, should be placed on the apparatus.
- 19 Your TV has four VESA mounting holes on the back. If you attach a wall-mount bracket or TV stand to the back of your TV, **the bracket or stand must be securely attached using all four holes**. If you do not use all four mounting holes, your TV may fall and cause property damage or personal injury. See the documentation that came with your wall mount or TV stand for complete mounting instructions.

WARNING

Stability Hazard

A television set may fall, causing serious personal injury or death. Many injuries, particularly to children, can be avoided by taking simple precautions such as:

- ALWAYS use cabinets or stands or mounting methods recommended by the manufacturer of the television set.
- ALWAYS use furniture that can safely support the television set.
- ALWAYS ensure the television set is not overhanging the edge of the supporting furniture.
- ALWAYS educate children about the dangers of climbing on furniture to reach the television set or its controls.
- ALWAYS route cords and cables connected to your television so they cannot be tripped over, pulled or grabbed.
- NEVER place a television set in an unstable location.
- NEVER place the television set on tall furniture (for example, cupboards, or bookcases) without anchoring both the furniture and the television set to a suitable support.

- NEVER place the television set on cloth or other materials that may be located between the television set and supporting furniture.
- NEVER place items that might tempt children to climb, such as toys and remote controls, on the top of the television or furniture on which the television is placed.

If the existing television set is going to be retained and relocated, the same considerations as above should be applied.

Lightning

For added protection for your device receiver during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the power outlet and disconnect any antenna or cable system. This helps prevent property damage and personal injury from lightning and power line surges.

Power lines

An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, take extreme care to keep from touching such power lines or circuits as contact with them might be fatal.

Handling the LCD panel

- Your TV's screen is made of glass. Do not drop your TV or hit, jolt, or press hard against the LCD panel. If the screen breaks, be careful of broken glass.
- If the LCD panel is broken, make absolutely sure that you do not touch the liquid in the panel. This may cause skin inflammation.
- If the liquid gets in your mouth, immediately gargle, rinse, and consult with your doctor. Also, if the liquid gets in your eyes or touches your skin, consult with your doctor after rinsing for at least 15 minutes or longer in clean water.

Replacement parts

When replacement parts are required, make sure that the service technician uses replacement parts specified by the manufacturer that have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock, personal injury, or other hazards.

Safety check

After completing any service or repair to this device, ask the service technician to perform routine safety checks to determine that your TV is in correct operating condition.

Power source

Operate your TV only from the type of power source indicated on the marking label. If you are not sure of the type of power supplied to your home, consult an electrician or your local power company.

Servicing

These servicing instructions are for use by qualified service personnel only. To reduce the risk of electric shock, do not perform any servicing other than that contained in the operating instructions unless you are qualified to do so.

CAUTION


Damage requiring service

Unplug this TV from the power outlet and refer servicing to qualified service personnel under the following conditions:

- When the power supply cord or plug is damaged or frayed.
- If liquid has been spilled or objects have fallen into your TV.
- If your TV has been exposed to rain or water.
- If your TV does not operate normally by following the operating instructions. Adjust only those controls covered by the operating instructions because incorrect adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore your TV to its normal operation.
- If your TV has been dropped or damaged in any way.
- When your TV exhibits a distinct change in performance.

Outdoor antenna grounding

If an outside antenna or cable system is connected to your TV, make sure that the antenna or cable system is grounded to provide some protection against voltage surges and built-up static charges. Article 810 of the National Electrical Code, ANSI/NFPA No. 70, provides information with respect to correct grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding conductors, location of the antenna-discharge unit, connection to grounding electrodes, and requirements for the grounding electrode.

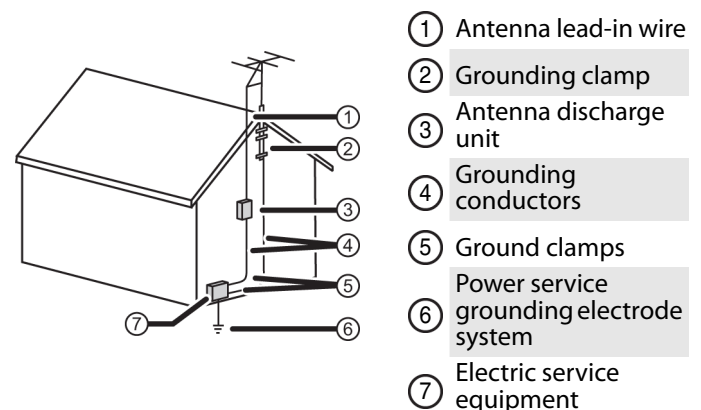

Note to CATV system installer

Article 820 of the National Electrical Code, ANSI/NFPA No.

Condensation

Moisture will form on the TV if the TV is brought from cool surroundings into a warm room or if the temperature of the room rises suddenly. When this happens, the TV's performance may be impaired. To prevent this, let the TV stand in its new surroundings for about an hour before switching it on, or make sure that the room temperature rises gradually.

Condensation may also form during the summer if the TV is exposed to the breeze from an air conditioner. In such cases, change the location of the TV.

Mobile telephone warning

To avoid interference with your TV picture and sound, operating problems, or even damage, keep your cordless and cellular telephones away from the TV.

End of life directives

Your TV may contain materials that are regulated for environmental reasons. Your TV also contains materials that can be recycled and reused. To help protect the environment, contact your local authorities for information about disposal or recycling and about finding a recycler in your area before you dispose of your TV.

Non-active pixels

The LCD panel contains almost 3 million thin film transistors, which provide exceptionally sharp video quality. Occasionally, a few non-active pixels may appear on the screen as a fixed blue, green, or red point. These non-active pixels do not adversely affect the performance of your TV, and are not considered defects.

Introduction

Congratulations on your purchase of a high-quality, Insignia TV. Your TV represents the state-of-the-art in LED TV technology and is designed for reliable and trouble-free performance.

INlink

Enjoy the benefit of having HDMI CEC-compatible products plug and play! No setup is needed! CEC technology lets different devices discover and communicate with each other. (See page 25 for instructions on how to use INlink.)

TV components

This section covers basic information for:

- TV front
- Jacks
- Remote control

TV front

You can find these items on the front of your TV.

ITEM	DESCRIPTION
Remote control sensor	Receives signals from the remote control. Do not block.
Power indicator	Turns off when your TV is on. Lights red when your TV is off (standby mode).

Game mode


 







Video games generally require adjustments to the TV picture settings to get the maximum experience. By simply pressing the **GAME** button on your remote control, your TV settings automatically adjust for video games. It couldn't be easier.

Audio accessibility

Your TV provides audio descriptions of menus and some remote control functions. Depending on the broadcaster, audio narration of key elements in programs may also be available. (See page 34 for instructions on how to turn on audio narration.)

Jacks

Your TV may have any of the following items:


ITEM	DESCRIPTION	FUNCTION
	Power/Input button	<p>Power—Press to turn on your TV when your TV is off (in standby mode). Press and hold to turn off your TV when your TV is on.</p> <p>Warning: When your TV is off, power still flows through it. To completely disconnect power, unplug the power cord.</p> <p>Input—When your TV is turned on, short press to open the <i>FUNCTION</i> list. Short press this button to move between functions and highlight the function you want, then press and hold this button to select the function. You can select:</p> <ul style="list-style-type: none"> • Exit to close the <i>FUNCTION</i> list. • Input Source to open the <i>INPUT SOURCE</i> list and select a video input source. • Channel List to open the channel list and select a channel. • VOL+ to increase the volume. • VOL- to decrease the volume.
	Digital OPTICAL output jack	Connect a sound bar, digital speaker system, or home theater system to this jack to listen to TV audio through external speakers. See Digital audio on page 17.
	Digital COAXIAL output jack	
	Headphone jack OR AUDIO OUT jack	On some TVs the headphone jack and audio out jack are combined into one jack. Connect headphones, a sound bar, analog speaker system, or a home theater system to this jack to listen to TV audio through external speakers. See Analog audio on page 18.
	Antenna/Cable in jack	Connect an antenna or cable TV to this jack. See Coaxial (good) on page 13 or Connecting an antenna or cable TV (no box) on page 13.
	Analog video and audio (AV) jacks	Connect the video and audio for an AV device to these jacks. See AV (good) on page 12, 14, or 15.
	USB	Connect a USB flash drive to this jack to view compatible JPEG picture files. See Connecting a USB flash drive on page 16 and Using a USB flash drive on page 26.
	HDMI	Connect an HDMI device to this jack. See HDMI (best) on page 12, 14, or 15, or Connecting a computer on page 16.
	HDMI/ARC	Connect an ARC-enabled home theater receiver to this jack. OR Connect an HDMI device to this jack. See HDMI (best) on page 12, 14, or 15, or Connecting a computer on page 16.

ITEM	DESCRIPTION	FUNCTION
	RESET	Press to reset your TV to the factory defaults. If this button is in a recessed hole, use a thin item, like a paper clip, to press the button.
	SERVICE	Do not connect a device to this jack. Do not insert anything into this jack.

CAUTIONS:

- Check the jacks for position and type before making any connections.
- Loose connections can cause poor audio or video quality. Make sure that all connections are tight and secure.
- The external audio/video equipment shown may be different from your equipment. If you have questions, refer to the documentation that came with your equipment.
- Always unplug the power cord when connecting external equipment.

Remote control

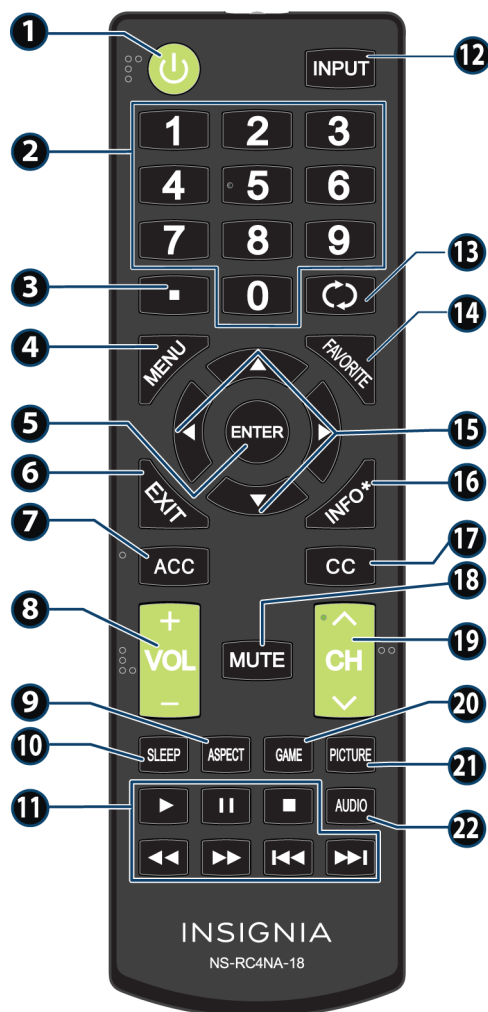

#	BUTTON	PRESS TO...
1	⏻ (power)	Turn your TV on or off (standby mode). Warning: When your TV is off, power still flows through it. To disconnect power, unplug the power cord.
2	Numbers	Enter channel numbers and the parental control password.
3	■	Enter a digital sub-channel number. See Selecting a channel on page 24.
4	MENU	Open the on-screen menu.
5	ENTER	Confirm selections or changes in TV menus.
6	EXIT	Close the on-screen TV menu.
7	ACC	Open the <i>Accessibility</i> menu. See Adjusting accessibility settings on page 34.

#	BUTTON	PRESS TO...
8	VOL+/VOL-	TV: Adjusts the volume. TV menu: Navigate left or right. USB: Control a photo slideshow.
9	ASPECT	TV: Change how the pictures appears on the screen. USB: Zoom when displaying a photo.
10	SLEEP	Set the sleep timer. You can select Off , 5 , 10 , 15 , 30 , 60 , 90 , 120 , 180 , or 240 minutes.
11	Media controls	Control INlink-compatible (HDMI CEC) devices. See Using INlink on page 25.
12	INPUT	Open the <i>INPUT SOURCE</i> list and select a video input source. See Selecting the video input source on page 23.
13	↺ (return)	Return to the previous channel.
14	FAVORITE	Set up the Favorite channel list or open the existing Favorite channel list. See the Favorite Channel Setup and Favorite Channel List options in Changing channel settings on page 31.
15	▲ ▼ ◀ ▶	TV menus —Navigate on-screen TV menus and adjust settings. USB —Control a photo slideshow.
16	INFO*	Display TV status information, such as the channel number, channel name (if available), or signal source. See Viewing channel information on page 24.
17	CC	Turn closed captioning on or off. You can select CC Off , CC On , or CC On when mute . See the Caption Control option in Using closed captioning on page 33.
18	MUTE	Mute or un-mute the sound.
19	CH▲/CH▼	TV: Change to the next higher or lower channel in the channel list. TV menu: Navigate up or down.
20	GAME	Change the picture mode to Game mode.
21	PICTURE	Select the picture mode. You can select Vivid , Standard , Energy Savings , Movie , Game , or Custom . See the Picture Mode option in Adjusting the TV picture on page 27.
22	AUDIO	Select the audio mode. You can select Standard , Theater , Music , News , or Custom . See the Audio Mode option in Adjusting sound settings on page 29.


Connecting a cable or satellite box

Many cable or satellite TV boxes have more than one connection type. To get the best video, you should use the best connection type available. See [Jacks](#) on page 9.

You can connect a cable or satellite box using:

- HDMI (best)
- AV (good)
- Coaxial (good)

HDMI (best)

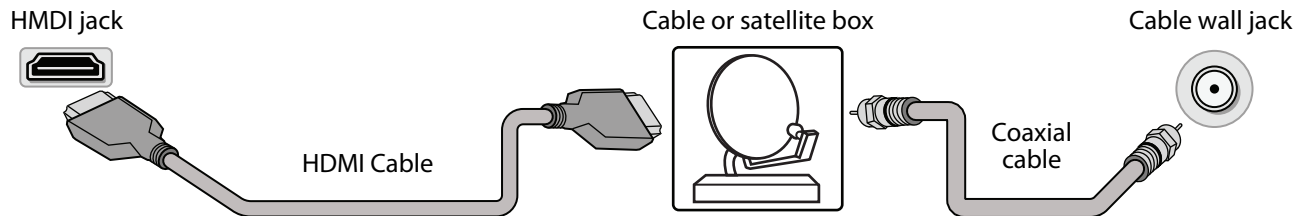


- 1 Make sure that your TV's power cord is unplugged and all connected equipment is turned off.
- 2 Connect a coaxial cable (not provided) to the cable wall jack and to the cable-in jack on the cable or satellite box.
- 3 Connect an HDMI cable (not provided) to one of the **HDMI** jacks on your TV and to the HDMI out jack on the cable or satellite box.
- 4 Plug your TV's power cord into a power outlet, turn on your TV, then turn on the cable or satellite box.
- 5 Press **INPUT** to open the *INPUT SOURCE* list, select the **HDMI** jack you connected the cable or satellite box to, then press **ENTER**.

Note: An HDMI cable carries both audio and video. You do not need to use any audio cables.

AV (good)

Note: Cables are often color-coded to match color-coded jacks.

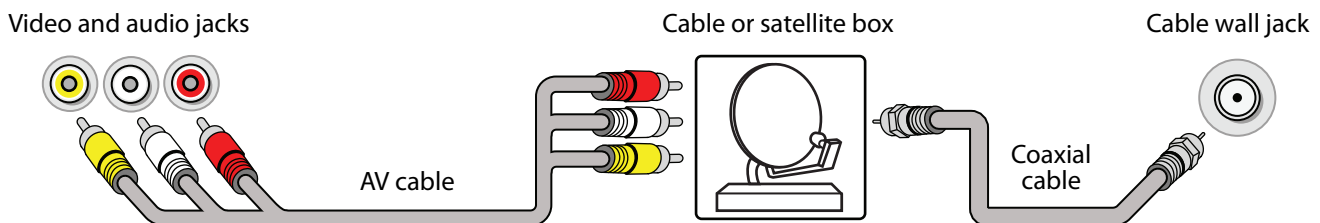


- 1 Make sure that your TV's power cord is unplugged and all connected equipment is turned off.
- 2 Connect a coaxial cable (not provided) to the cable wall jack and to the cable-in jack on the cable or satellite box.
- 3 Connect an AV cable (not provided) to the AV jacks on your TV and to the AV out jacks on the cable or satellite box.

IMPORTANT: When you connect the audio using the AV jacks, the audio output is analog.


- 4 Plug your TV's power cord into a power outlet, turn on your TV, then turn on the cable or satellite box.
- 5 Press **INPUT** to open the *INPUT SOURCE* list, select **AV**, then press **ENTER**.

Coaxial (good)

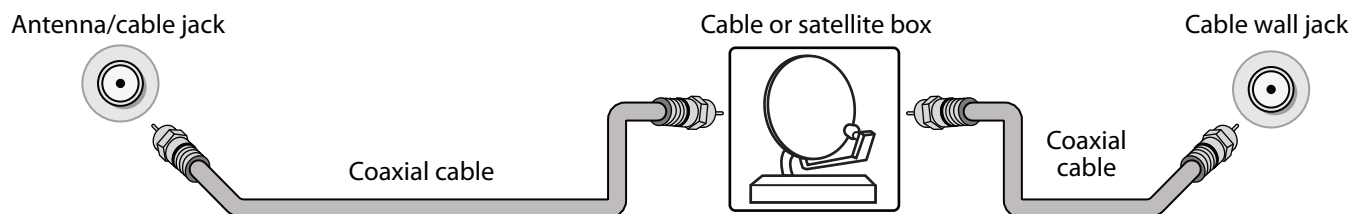

- 1 Make sure that your TV's power cord is unplugged and all connected equipment is turned off.
- 2 Connect the coaxial cable to the cable wall jack and to the cable-in jack on the cable or satellite box.
- 3 Connect a coaxial cable (not provided) to the antenna/cable jack on your TV and to the coaxial out jack on the cable or satellite box.
- 4 Plug your TV's power cord into a power outlet, turn on your TV, then turn on the cable or satellite box.
- 5 Press **INPUT** to open the *INPUT SOURCE* list, select **TV**, then press **ENTER**.
- 6 If you cannot tune to channels you know exist, scan for channels. See the **Auto Channel Search** option in [Changing channel settings](#) on page 31.

Connecting an antenna or cable TV (no box)

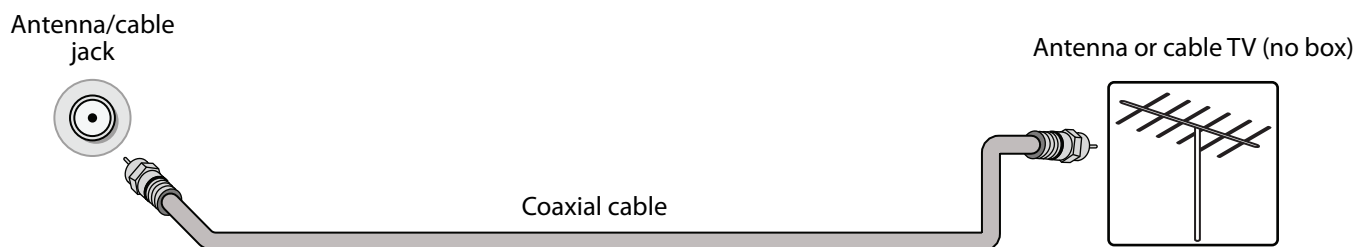

- 1 Make sure that your TV's power cord is unplugged and all connected equipment is turned off.
- 2 Connect a coaxial cable (not provided) to the antenna/cable jack on your TV and to the antenna or cable TV wall jack.
- 3 Plug your TV's power cord into a power outlet, then turn on your TV.
- 4 Press **INPUT** to open the *INPUT SOURCE* list, select **TV**, then press **ENTER**.
- 5 If you cannot tune to channels you know exist, scan for channels. See the **Auto Channel Search** option in [Changing channel settings](#) on page 31.

Notes:

- Use a coaxial cable to eliminate interference and noise from radio waves.
- If the antenna is not installed correctly, contact qualified service personnel to correct the problem.
- If the signal level for a channel is weak, the picture may be distorted. Adjust the antenna or use a highly directional outdoor or set-top antenna with a built-in amplifier.
- If the picture quality is good on some channels and poor on others, the problem may be caused by a poor or weak signal from the broadcaster or cable TV provider.
- If you connect to cable TV without a set-top box and experience poor picture quality, you may need to install a set-top box to improve signal reception and picture quality. Contact your cable TV provider about upgrading to a set-top box.
- Many high-definition (HD) channels upscale standard-definition (SD) content. The picture displayed on your TV is still displayed as SD, thus the picture quality will not be as clear or crisp as it would be if the content was originally recorded in HD.


Connecting a DVD or Blu-ray player

Many DVD or Blu-ray players have more than one connection type. To get the best video, you should use the best connection type available. See [Jacks](#) on page 9.

You can connect a DVD or Blu-ray player using:

- HDMI (best)
- AV (good)

HDMI (best)

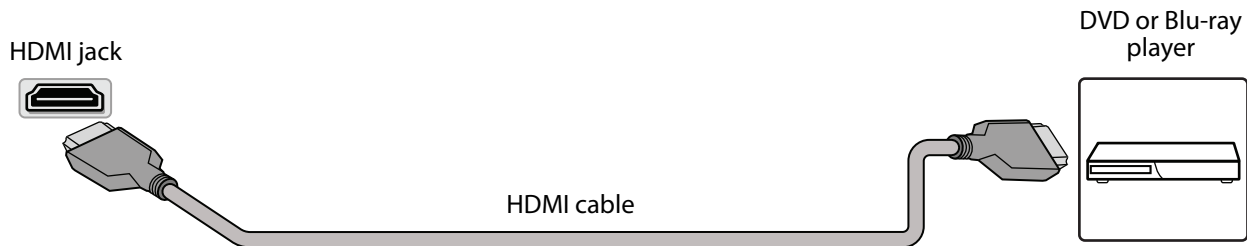


- 1 Make sure that your TV's power cord is unplugged and the DVD or Blu-ray player is turned off.
- 2 Connect an HDMI cable (not provided) to one of the **HDMI** jacks on your TV and to the HDMI out jack on the DVD or Blu-ray player.
- 3 Plug your TV's power cord into a power outlet, then turn on your TV and DVD or Blu-ray player.
- 4 Press **INPUT** to open the *INPUT SOURCE* list, select the **HDMI** jack you connected the player to, then press **ENTER**.

Note: An HDMI cable carries both audio and video. You do not need to use any audio cables.

AV (good)

Note: Cables are often color-coded to match color-coded jacks.

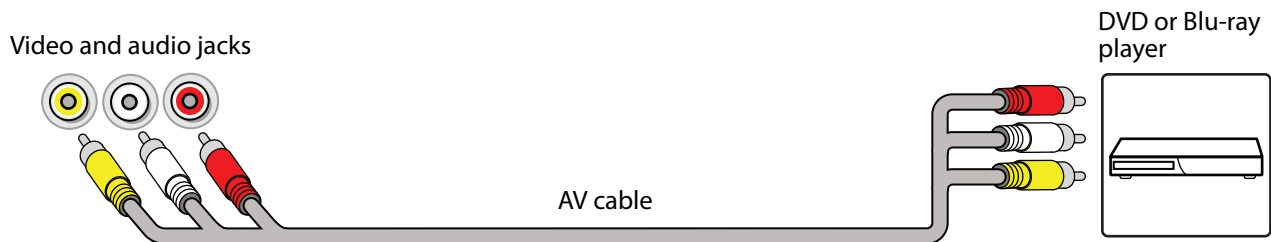

- 1 Make sure that your TV's power cord is unplugged and the DVD or Blu-ray player is turned off.
- 2 Connect an AV cable (not provided) to the AV jacks on your TV and to the AV out jacks on the DVD or Blu-ray player.

IMPORTANT: When you connect the audio using the AV jacks, the audio output is analog.


- 3 Plug your TV's power cord into a power outlet, then turn on your TV and DVD or Blu-ray player.
- 4 If needed, set the player to the correct output mode. See the documentation that came with the player.
- 5 Press **INPUT** to open the *INPUT SOURCE* list, select **AV**, then press **ENTER**.

Connecting a game console

You can connect a game console using:

- HDMI (best)
- AV (good)

HDMI (best)

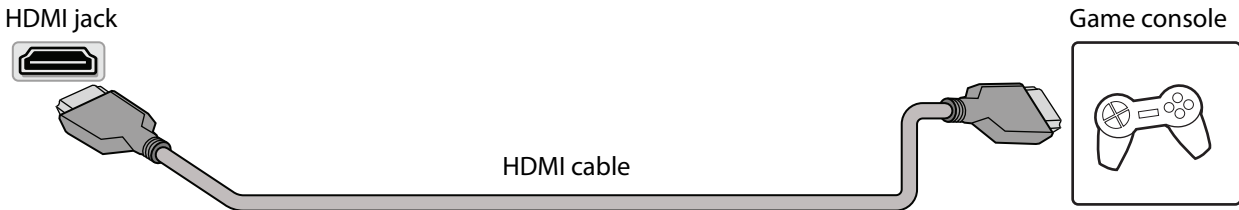


- 1 Make sure that your TV's power cord is unplugged and the game console is turned off.
- 2 Connect an HDMI cable (not provided) to one of the **HDMI** jacks on your TV and to the HDMI out jack on the game console.
- 3 Plug your TV's power cord into a power outlet, then turn on your TV.
- 4 Turn on the game console, then set it to the correct output mode. See the documentation that came with the console.
- 5 Press **INPUT** to open the *INPUT SOURCE* list, select the **HDMI** jack you connected the console to, then press **ENTER**.

Note: An HDMI cable carries both audio and video. You do not need to use any audio cables.

AV (good)

Note: Cables are often color-coded to match color-coded jacks.

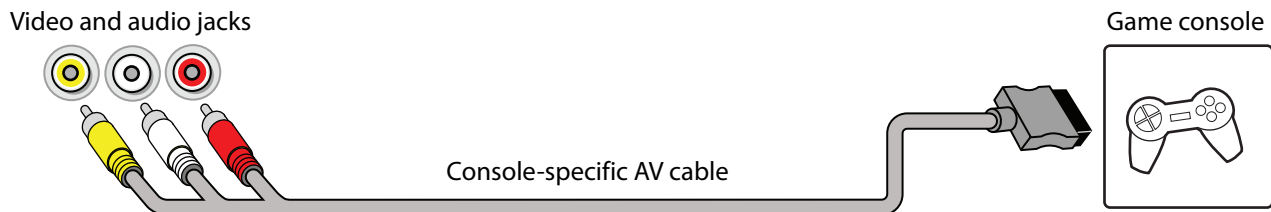


- 1 Make sure that your TV's power cord is unplugged and the game console is turned off.
- 2 Connect the console-specific AV cable to the AV jacks on your TV and to the AV jack(s) on the game console.

IMPORTANT:

- Some older game consoles come with a special AV cable. See the documentation that came with your game console or check the manufacturer's website.
- When you connect the audio using the AV jacks, the audio output is analog.


- 3 Plug your TV's power cord into a power outlet, then turn on your TV.
- 4 Turn on the game console, then set it to the correct output mode. See the documentation that came with the console.
- 5 Press **INPUT** to open the *INPUT SOURCE* list, select **AV**, then press **ENTER**.

Connecting a computer

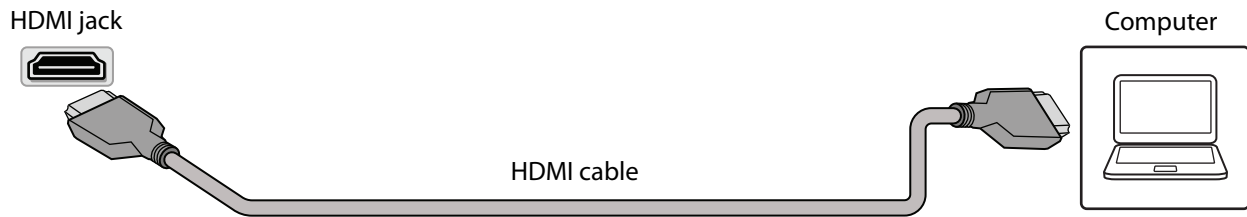

- 1 Make sure that your TV's power cord is unplugged and the computer is turned off.
- 2 Connect an HDMI cable (not provided) to one of the **HDMI** jacks on your TV and to the HDMI out jack on the computer.
- 3 Plug your TV's power cord into a power outlet, then turn on your TV and the computer.
- 4 Press **INPUT** to open the *INPUT SOURCE* list, select the **HDMI** jack you connected the computer to, then press **ENTER**.
- 5 Adjust the display properties on the computer, if necessary.

Connecting a USB flash drive

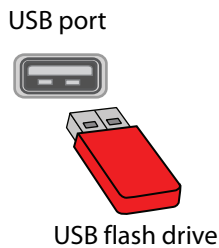

- 1 Plug a USB flash drive into the **USB** port on your TV.

CAUTION: Do not remove the USB flash drive or turn off the TV while using the USB flash drive. You may lose data or damage the USB flash drive.

- 2 Select **Yes** in the message that appears. The *PHOTOS* menu opens.

OR


If you switch to a different video input source after you plug in the USB flash drive and want to switch back to the drive, press **INPUT** to open the *INPUT SOURCE* list, select **USB(Photos)**, then press **ENTER**. The *PHOTOS* menu opens.

Note: The **Photos** viewer only supports JPEG format images (with ".jpg" file extensions) and not all JPEG files are compatible with your TV. See [Using a USB flash drive](#) on page 26.

Connecting headphones

When you connect headphones, the TV speakers are muted.

WARNING: Loud noise can damage your hearing. When using headphones, use the lowest volume setting on your headphones that still lets you hear the sound.

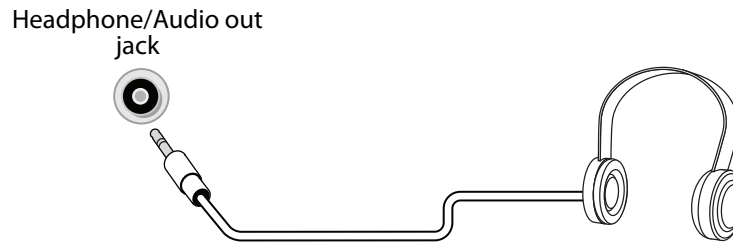

- 1 Connect the headphones to the headphone jack on your TV.
- 2 In the screen that opens, select **Headphones/Audio Out Variable**, then press **ENTER**. See [Selecting the audio out mode](#) on page 30.

Notes:

- If you connect headphones when your TV is turned off, then you turn on your TV, the TV speakers are muted and the audio plays through the headphones.
- You can also connect a home theater system, sound bar, or external speaker system to the headphone jack.


Connecting external speakers or a sound bar

You can connect external speakers or a sound bar using:

- [Digital audio](#)
- [Analog audio](#)

Digital audio

Depending on the model, your TV may have a digital optical or digital coaxial audio jack.

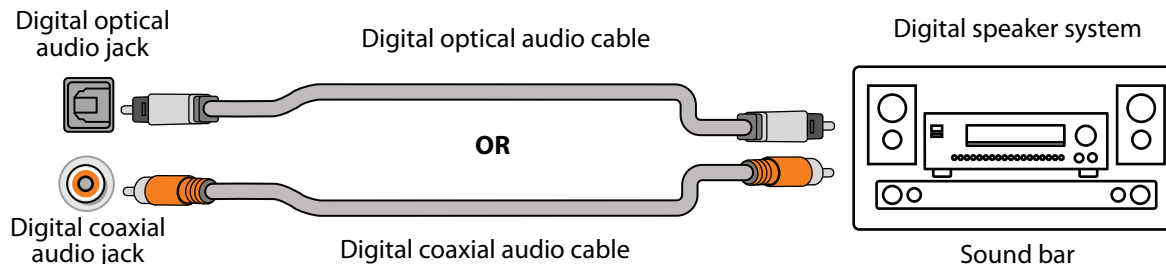

- 1 Make sure that your TV's power cord is unplugged and the digital speaker system or sound bar is turned off.
- 2 Connect a digital coaxial or digital optical audio cable (not provided) to the digital output jack on your TV and to the audio in jack on the digital speaker system or sound bar.
- 3 Plug your TV's power cord into a power outlet, then turn on your TV.
- 4 Turn on the digital speaker system or sound bar, then set it to the correct source. See the documentation that came with the digital speaker system or sound bar.
- 5 On your TV's *Audio* menu, select **Digital Audio Format / Audio Delay**, then set the **Audio Format** option to **PCM**. See the **Digital Audio Format / Audio Delay** option in [Adjusting sound settings](#) on page 29.

 
Analog audio

When you connect an analog speaker system or sound bar to the audio out jack, the TV speakers are muted.


Audio out jack



Audio cable



Analog speaker system

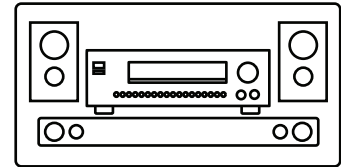

Sound bar

- 1 Make sure that your TV's power cord is unplugged and the analog speaker system or sound bar is turned off.
- 2 Connect an audio cable (not provided) to the audio out jack on your TV and to the audio in jacks on the analog speaker system or sound bar.
- 3 Plug your TV's power cord into a power outlet, then turn on your TV.
- 4 Turn on the analog speaker system or sound bar, then set it to the correct source. See the documentation that came with the analog speaker system or sound bar.
- 5 On your TV, set the **Headphones / Audio Out** option on the *Audio* menu to **Headphones/Audio Out Variable** or **Audio Out Fixed**. See the **Headphones / Audio Out** option in [Adjusting sound settings](#) on page 29.

Connecting power

- 1 If your power cord is not permanently connected to your TV, connect it to the power connector on your TV.
- 2 Connect the power cord to a power outlet.

CAUTION:

- Your TV should only be operated from the power source indicated on the label.
- Always unplug the power cord from the power outlet when you will not be using your TV for an extended period of time.
- If the power cord is permanently attached to your TV, do not try to unplug it from your TV.

Using a universal remote control

This section covers:

- Programming universal remote controls
- Viewing universal remote control codes

Programming universal remote controls

You can operate your Insignia TV with a new or existing universal remote control.

- 1 See [Viewing universal remote control codes](#) on page 19 for common codes. If you have problems programming your remote or need a different remote control code:
 - Contact the universal remote control or cable/satellite company of the remote control you are trying to program.
 - Visit www.insigniaproducts.com/remotecodes for the latest remote control code information.
 - Call the Insignia Customer Care Center at 1-877-467-4289.
- 2 Follow your universal remote control's instructions to enter the TV code you found in Step 1.

Tips:

- If your universal remote control has a code search feature, run a code search to identify a code that matches your TV. See your universal remote control's instructions for details.
- If your universal remote control has a "Learn" feature, you can manually program it using the Insignia TV remote to "teach" the commands one at a time. See your universal remote control's instructions for details.


Viewing universal remote control codes

You can view a list of universal remote control codes in the on-screen menu.

Tips:

- The brand name is often visible on the front of the universal remote control, and the model number is often visible on the back.
- If your universal remote control isn't listed on the chart, refer to your universal remote control's instructions and try codes for the brands Orion, Emerson, Memorex, Sansui, Sylvania, or Zenith. You may need to try several codes before finding a match.

- 1 Select the **HELP** menu, then select **Learn More**.

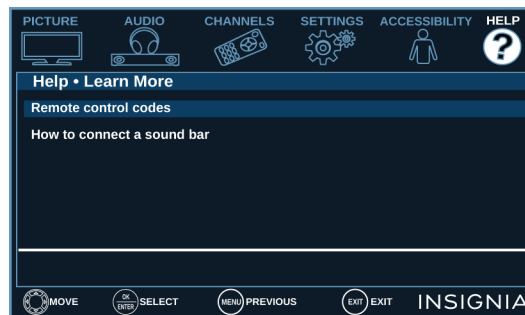

- 2 Select **Remote control codes**. Your TV displays information about the universal remote codes that you can use to make your TV work with a universal remote.
- 3 Press **ENTER** or **▶**. Your TV displays a list of remote control codes for various brands of universal remote controls.
- 4 Press **MENU** to return to the previous menu, or press **EXIT** to close the menu.

Note: You can also find codes for other remote controls at:

<http://www.insigniaproducts.com/remotecodes>

Or, check with your cable or satellite TV provider for the remote control code.


Turning on your TV for the first time

The first time you turn on your TV, the *Easy Setup* wizard opens. The wizard guides you through setting up basic settings including the menu language, time setting, picture mode, TV signal source, and the channel list.


- 1 Make sure that you have:
 - Installed the remote control batteries.
 - Connected an antenna, cable TV, or satellite TV. (See page 12 through page 13.)
- 2 Press **⏻** (power) to turn on your TV. The *Easy Setup* wizard opens.



- 3 Press **▲** or **▼** to highlight a language, then press **ENTER**.

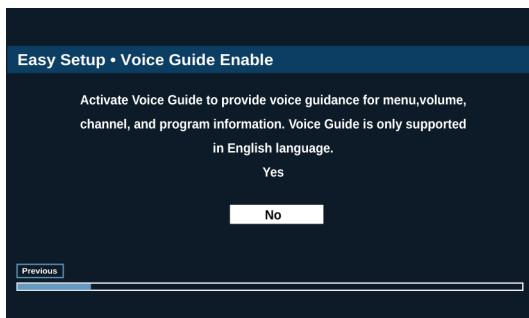

- 4 Press **▲** or **▼** to select **Yes** (to turn on the Voice Guide) or **No** (to turn off the Voice Guide), then press **ENTER**.

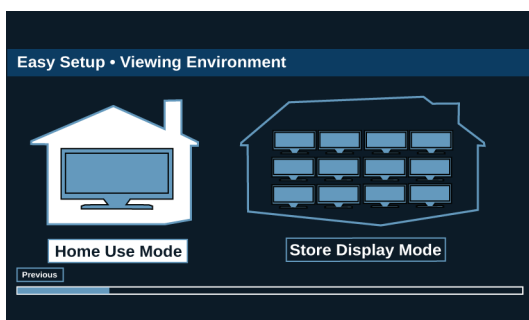


- 5 Press **◀** or **▶** to highlight **Home Use Mode** or **Store Display Mode**, then press **ENTER**.

If you selected **Store Display Mode**, a message asks if you are sure you want this mode. Select **OK** to continue using **Store Display Mode**, or select **Cancel** to change to **Home Use Mode**. **Store Display Mode** is not an energy savings mode.




- 6 Press **◀** or **▶** to highlight an option, then press **ENTER**. You can select:
 - **Watch TV** to skip the customization options. You can press **MENU** later to customize settings. Go to [Finish the wizard](#) on page 21.
 - **Customize my TV** to set options to maximize your experience. Go to [Customize my TV](#) on page 20.


Customize my TV

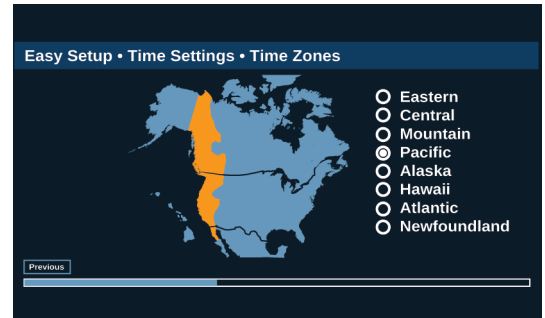


- 7 Press **▲** or **▼** to highlight a time zone, then press **ENTER**.

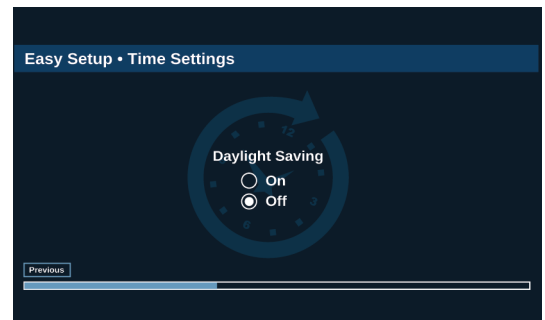


- 8 Press ▲ or ▼ to select **On** to turn on **Daylight Saving** or **Off** to turn off **Daylight Saving**, then press **ENTER**.

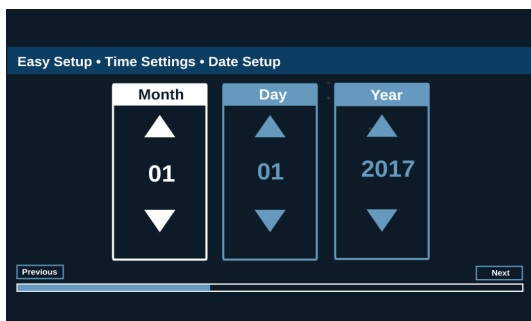

- 9 Press ◀ or ▶ to highlight **Month**, **Day**, or **Year**, press ▲ or ▼ to adjust the setting, then press **ENTER** one or more times to highlight **Next**. When **Next** is highlighted, press **ENTER** again.

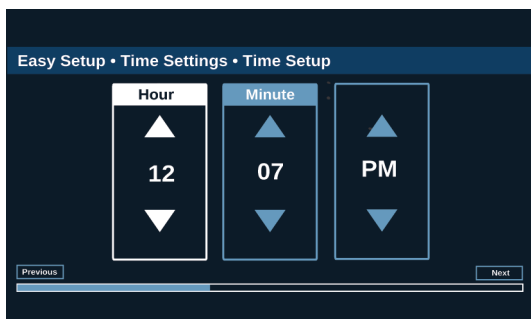

- 10 Press ◀ or ▶ to highlight **Hour**, **Minute**, or the AM/PM field, press ▲ or ▼ adjust the option, then press **ENTER** one or more times to highlight **Next**. When **Next** is highlighted, press **ENTER** again.

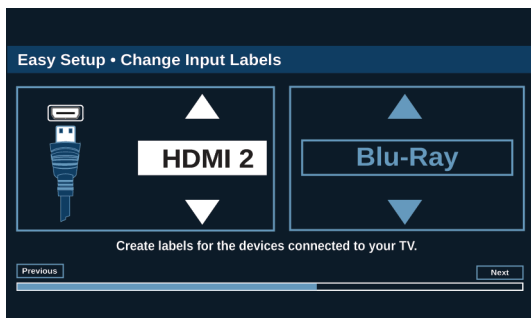

- 11 Press ▲ or ▼ to highlight a video input source, then press ▶ to move to the label area.


- 12 Press ▲ or ▼ to highlight a preset label or **Custom**.

- 13 If you select a preset label, press ▶ to select **Next**, then press **ENTER**.

OR


If you select **Custom**, press **ENTER**, then press ▲ or ▼ to enter the first character in your custom label. Press ◀ or ▶ to move to the previous or next character position. Use the arrow buttons to enter additional characters. You can enter 12 characters (letters or numbers). When you have finished creating your label, press **ENTER**, press ▶ to select **Next**, then press **ENTER** again.

Finish the wizard

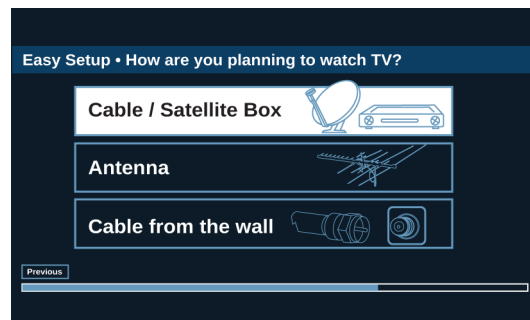


- 14 Press ▲ or ▼ to highlight **Cable/Satellite Box**, **Cable from the wall**, or **Antenna**, then press **ENTER**.

- If you select **Cable/Satellite Box**, the screen that opens shows you the ways you can connect the box.

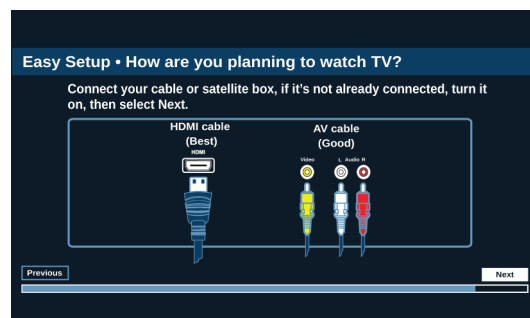


Press **ENTER**.

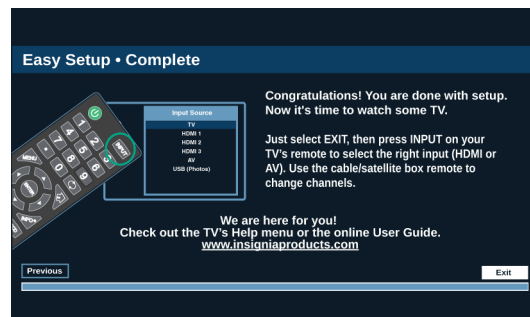

- If you select **Cable from the wall** or **Antenna** your TV starts scanning for channels and displays a progress screen.

Note: You can press **EXIT** to stop the auto channel search, but you will need to run the auto channel search again to create a channel list.

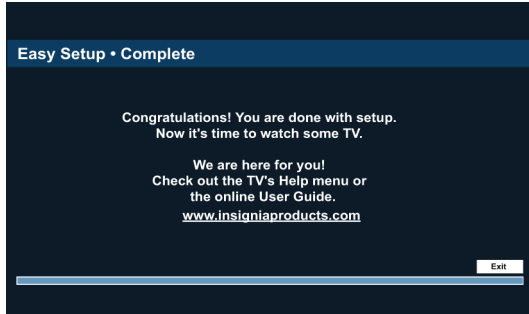

15 Press **ENTER** to close the wizard. If you selected:

- **Cable from the wall** or **Antenna**, your TV tunes to the first channel it found in the scan.
- **Cable/Satellite box**, press **INPUT** to open the *INPUT SOURCE* list, press **▲** or **▼** to select the video input (**HDMI** or **AV**) you connected the box to, then press **ENTER**. Your TV switches to the input you selected.

Understanding the basics

This section covers basic information for:

- Turning your TV on or off
- Selecting the video input source
- On-screen menu overview
- Navigating the menus
- Selecting a channel
- Adjusting the volume
- Viewing channel information

Turning your TV on or off

- 1 Make sure that the power cord is connected to a power outlet.
- 2 Press **⏻** (power) to turn on your TV. The power indicator turns off.
- 3 Press **⏻** (power) again to turn off your TV. Your TV enters standby mode, and the power indicator turns red.

WARNING: When your TV is in standby mode, it is still receiving power. To completely disconnect power, unplug the power cord.

Note: If your TV does not receive an input signal for several minutes, it automatically goes into standby mode.

Selecting the video input source

Note: Your TV automatically detects and displays which video jacks have devices connected to them when the devices are turned on. You can turn this feature off to always display all inputs. See [Adjusting menu settings](#) on page 34.


- 1 Turn on your TV.
- 2 If you want to use a device connected to a video input (such as a DVD or Blu-ray player), turn on the device.
- 3 Press **INPUT**, then select a video input source.

On-screen menu overview


Notes:

- Depending on the signal source selected, you may see different options on your screen.
- Menu items that are not selectable are grayed out.


Picture menu (TV mode)

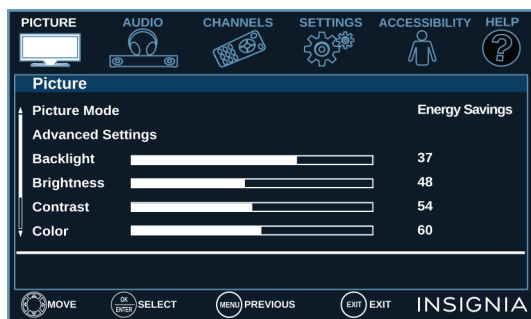

Audio menu (TV mode)

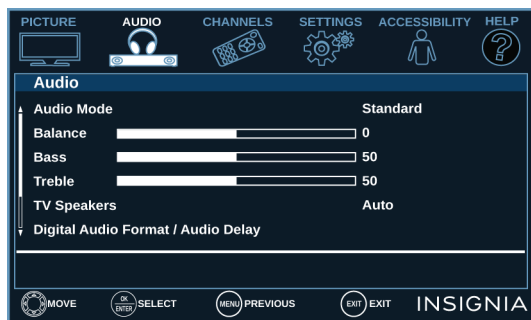


Channels menu (TV mode)

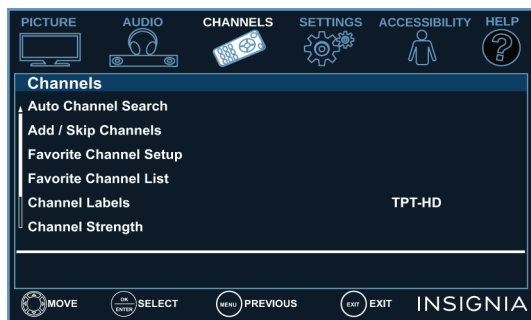


Settings menu (TV mode)




Accessibility menu

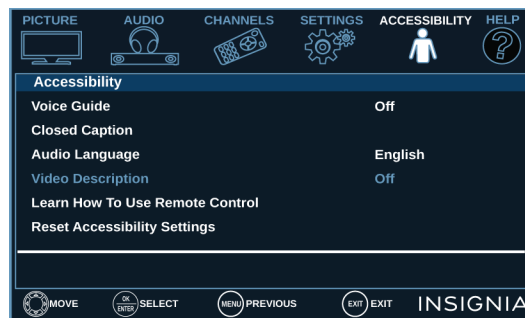

Help menu

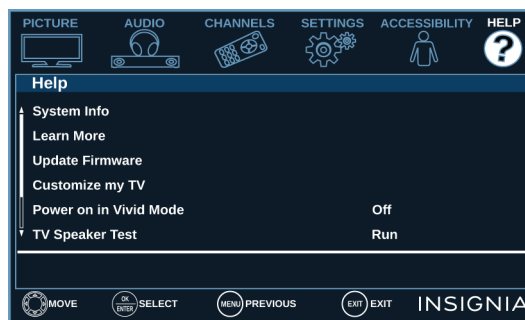

PHOTOS menu (USB mode)

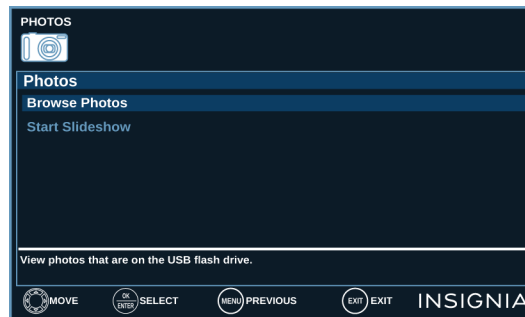

Selecting a channel

- Press **CH** \wedge or **CH** \vee to go to the next or previous channel on the memorized channel list.
- Press the number buttons to enter the channel number you want, then wait for the channel to change or press **ENTER** to immediately change the channel.
- To select a digital sub-channel, press the number buttons to select the main digital channel, press \blacksquare (sub-channel), then press the number button for the sub-channel. Wait for the channel to change, or press **ENTER** to immediately change the channel. For example, to tune to channel 5.1, press **5**, \blacksquare (sub-channel), then **1**.

Note: Button presses must be within three seconds of each other.

- Press \hookrightarrow (return) to go to the last viewed channel.


Adjusting the volume

- Press **VOL+** or **VOL-** to increase or decrease the volume.
- Press **MUTE** to turn off the sound. Press **MUTE** again to turn the sound back on.

Viewing channel information


- Press **INFO*** to view an information banner. The information banner shows the current program information, such as channel number, video input source, and resolution.
 - Digital channel information—Displays the channel number, station name, channel label, broadcast program name, TV rating, signal type, audio information, resolution, current time, signal strength, day of the week, date, and current program start and end times, if provided by the broadcaster.
 - Analog channel information—Displays channel number, channel label (if present), signal type, audio information, day of the week, date, and resolution, if provided by the broadcaster.

Navigating the menus

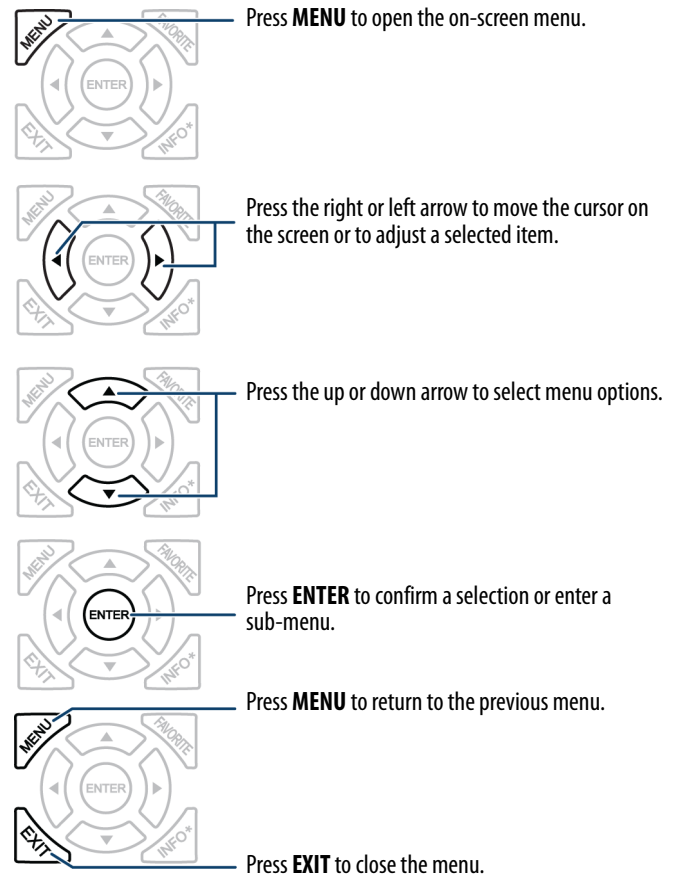

Adjusting settings

- 1 Press **MENU** to open the on-screen menu.

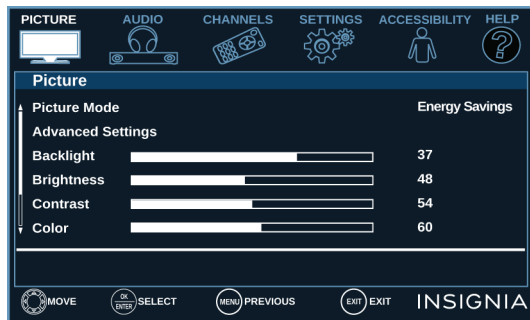

- 2 Press **◀** or **▶** to highlight a menu, then press **ENTER**.
- 3 Press **▲** or **▼** to select an option, then press **ENTER**. If the menu has more options than it can display on a screen, use the **▼** to view the other options.
- 4 If a sub-menu opens, press **▲** or **▼** to select an option, then press **ENTER**. If the menu has more options than it can display on a screen, use the **▼** to view the other options.
- 5 Use the arrow buttons to adjust the option setting, then press **ENTER**.
- 6 Press **MENU** to return to the previous menu, or press **EXIT** to close the menu.

Using INlink

INlink lets you control HDMI CEC-compatible devices connected to the HDMI jacks on your TV using the remote control that came with your TV.

Note: You can use the media buttons on your remote control to control playback.

To use INlink, you must set the **INlink Control** option on the *INlink* menu to **On**.

Notes:

- HDMI cables must be used to connect HDMI CEC-compatible devices to your TV.
- The connected device's HDMI CEC feature must be turned on.
- If you connect an HDMI device that is not HDMI CEC-compatible, none of the **INlink Control** features work.
- Depending on the connected HDMI device, some **INlink Control** features may not work.

- 1 Select the **SETTINGS** menu, then select **INlink(HDMI-CEC)**.



- 2 Select an option, then adjust the setting. You can select:
 - **INlink Control**—Turns the INlink feature on or off. You must set this option to **On** to use the other INlink options.
 - **Device Auto Power Off**—Automatically turns off HDMI CEC devices when you turn off your TV.
 - **TV Auto Power On**—Automatically turns on your TV when an HDMI CEC device is turned on, if the device has this feature.
 - **Audio Receiver**—Lets you use your TV's remote control to control the volume on an HDMI CEC-compatible audio receiver connected to your TV.
 - **INlink Device List**—Lets you display a list of HDMI CEC devices that are connected to your TV.
 - **Connect**—When you have more than one INlink-compatible device connected, lets you select the device you want to use.
 - **Root Menu**—Lets you open an INlink-compatible device's root menu, then use your TV's remote control to control the device, if the device has this feature.
- 3 Press **MENU** to return to the previous menu, or press **EXIT** to close the menu.

Using a USB flash drive

You can connect a USB flash drive to your TV to view compatible JPEG pictures.

Notes:


- Never remove the USB flash drive or turn off your TV while viewing JPEG pictures.
- The JPEG picture viewer only supports JPEG format images (with ".jpg" file extensions) and not all JPEG files are compatible with your TV.

Switching to USB mode

- 1 Make sure that you have connected the USB flash drive to the USB port on your TV.
- 2 Press **▲** or **▼** to highlight **Yes** in the message that appears, then press **ENTER**.

OR

If you connected the USB flash drive, then changed to a different video input source, press **INPUT**, select **USB(Photos)**, then press **ENTER**.

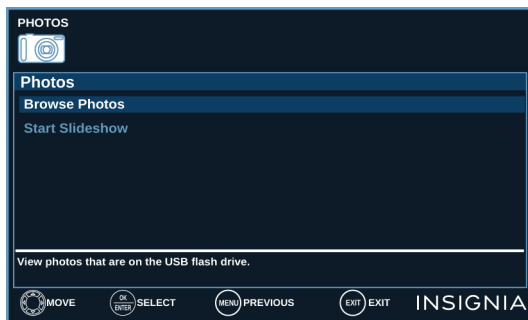

Note: To exit USB mode, press **INPUT**, then select another input source.

- 3 Select one of the following options:
 - [Browse Photos](#)
 - [Start Slideshow](#)

Browse Photos

Browse Photos displays folder names and photo files stored on the USB flash drive in a thumbnail index with the first folder or file highlighted. A control bar appears at the bottom of the screen.



Note: Photos are shown in the order they appear on the USB flash drive. They may not be listed in file name order.

To navigate the thumbnail index screen, press:

PRESS...	TO...
▲ ▼ ◀ ▶	Browse through the files and folders.
ENTER	View a highlighted photo full-screen or open a highlighted folder.
MENU or EXIT	Open the <i>PHOTOS</i> menu.

When a photo is displayed full-screen, a control bar appears at the bottom of the photo. The file name, picture resolution, size, and date are displayed on the bottom of the control bar. If you do not press a button within eight seconds, the control bar closes. Press **INFO*** to open the control bar again.



To navigate on the photo screen, press:

PRESS...	TO...
◀	Go to the previous photo.
▶	Go to the next photo.
ENTER	Rotate the photo clockwise.
ASPECT	Enlarge the image by 2x, or 4x or to select Fill (to fill the screen). You can press ▲ ▼ ◀ ▶ or ▶ to pan the photo.
EXIT	Return to the thumbnail index.
MENU	Return to the <i>PHOTOS</i> menu.

Start Slideshow

Start Slideshow displays photos in a slideshow. If the photos you want to view are in a folder on the USB flash drive, select the folder.

To control the slideshow:

PRESS...	TO...
MENU	Open the <i>PHOTOS</i> menu.
ENTER	Pause the slideshow. Press again to resume the slideshow.
EXIT	Stop the slideshow and return to the thumbnail index.

Adjusting the picture


This section covers:

- Adjusting the TV picture
- Automatically adjusting the aspect ratio
- Setting the power on picture mode

Adjusting the TV picture

You can adjust various settings to improve the quality of the TV picture. Also, you can reset all picture settings to the factory default.

- 1 Select the **PICTURE** menu.

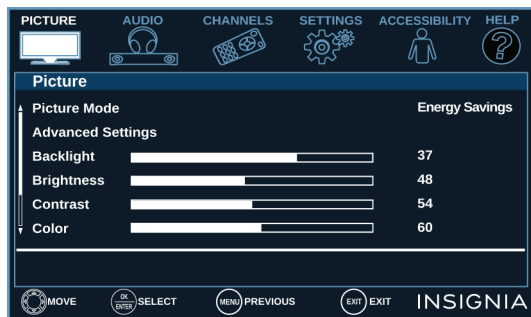

- 2 Select an option, then adjust the setting. You can select:

- **Picture Mode**—Selects the picture mode. You can select:
 - **Vivid**—(a bright and vivid picture). Significantly increases the contrast, brightness, and sharpness. This selection is good for video games, animation, and in bright light environments.
 - **Standard**—(a standard picture). Moderately increases the contrast, brightness, and sharpness. This selection is good for standard TV broadcasts.
 - **Energy Savings**—(the backlight brightness is decreased). Your TV has a backlight that provides light for displaying a picture. By reducing the amount of light, your TV uses less energy.
 - **Movie**—(a finely detailed picture). Adjusts the brightness and contrast and lowers the sharpness for a more realistic picture. This selection is good for watching the highest quality video such as Blu-ray Discs, DVDs, and HDTV.
 - **Game**—Adjusts the picture for the ultimate gaming experience.


Notes:

- You can also press **GAME** to select game mode.
- **Game** is only available when the video input is set to **HDMI** or **AV**.




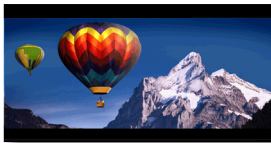

- **Custom**—(customized picture). Lets you manually adjust picture settings, such as brightness, contrast, and sharpness.

Note: You can also press **PICTURE** to select the picture mode.

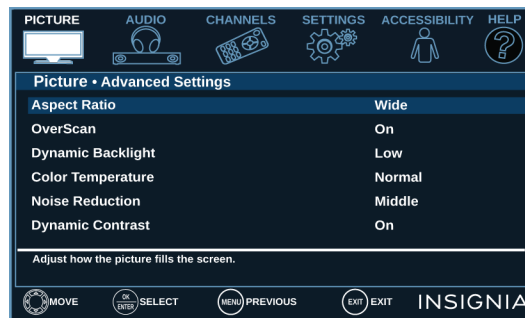- **Advanced Settings**—Opens the *Advanced Settings* menu where you can adjust additional video options.



- **Aspect Ratio**—Adjusts how the picture fills the screen. You can select:

ASPECT RATIO OPTIONS	EXAMPLE
Normal: Displays the image in the original aspect ratio. You may see black bars if the original content is not widescreen (16:9).	
Zoom: Expands the image to fill the screen. The top and bottom of the image may be cropped.	
Wide: Use this option to view content recorded in a widescreen (16:9) aspect ratio.	
Cinema: Stretches the image at the edges, but keeps a clear image in the center.	
Auto: Automatically adjusts the image based on the screen size and the TV program. Select this option if you do not know which aspect ratio to choose. Note: Auto is only available when Auto Aspect Ratio in the Channels menu is set to On .	

- **OverScan**—Extends text and images past the screen edges to hide edge artifacts. You can select **On** or **Off**.
 - **Dynamic Backlight**—Enhances the contrast ratio between light and dark areas of the picture. You can select **Off**, **Low**, or **High**.
 - **Color Temperature**—Selects the color temperature. You can select **Cool** (to enhance the blues), **Normal**, or **Warm** (to enhance the reds).
 - **Noise Reduction**—Selects the noise reduction mode to reduce picture noise (snow). You can select **Off**, **Low**, **Middle**, or **High**.
 - **Dynamic Contrast**—Automatically adjusts picture detail and brightness. You can select **On** or **Off**.
 - **Backlight**—Sets the overall brilliance of the screen.
 - **Brightness**—Adjusts the brightness of the dark areas of the picture.
 - **Contrast**—Adjusts the brightness of the light areas of the picture.
 - **Color**—Adjusts the color intensity of the picture. A low setting may make the color look faded. A high setting may make the color look artificial.
 - **Tint**—Adjusts the color balance of the picture. Use this control to make skin tones look more natural.
 - **Sharpness**—Adjusts the color detail of images. If you set this control too high, dark images may appear with light or white edges.
 - **Reset Picture Settings**—Resets all picture settings to factory mode.
- 3 Press **MENU** to return to the previous menu, or press **EXIT** to close the menu.

Automatically adjusting the aspect ratio

Auto Aspect Ratio automatically changes how the picture looks on the screen (aspect ratio) based on the TV program you are viewing.

- 1 Select the **CHANNELS** menu.




- 2 Select **Auto Aspect Ratio**, then select **On** (automatically adjust the aspect ratio) or **Off** (does not automatically adjust the aspect ratio).
- 3 Press **MENU** to return to the previous menu, or press **EXIT** to close the menu.

Setting the power on picture mode

You can set the picture mode your TV uses when you turn it on.

- 1 Select the **HELP** menu, then select **Power on in Vivid Mode**.

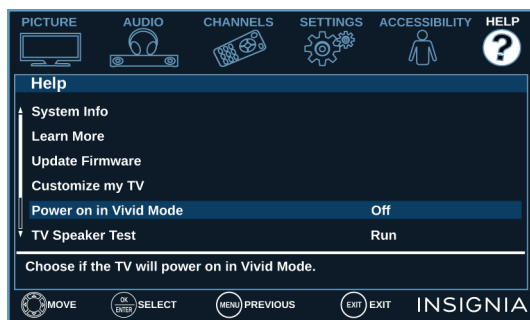

- 2 Select **On** (when you turn on your TV, it will be in **Vivid** picture mode) or **Off** (when you turn on your TV, it will be in the picture mode it was in before you turned it off).
- 3 Press **MENU** to return to the previous menu, or press **EXIT** to close the menu.

Adjusting the sound


This section covers:

- Adjusting sound settings
- Selecting the audio out mode
- Playing TV audio only

Adjusting sound settings

You can adjust sound settings to improve the sound quality. You also can reset all sound settings to the factory default.

- 1 Select the **AUDIO** menu.

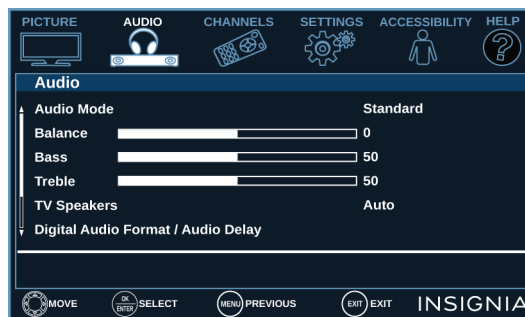


- 2 Select an option, then adjust the setting. You can select:
 - **Audio Mode**—Selects the sound mode. You can select:
 - **Standard**—Balances treble and bass. This setting is good for watching standard TV broadcasts.
 - **Theater**—Enhances treble and bass for a rich sound experience. This setting is good for watching DVDs, Blu-ray discs, and HDTV.
 - **Music**—Preserves the original sound. This setting is good for listening to music.
 - **News**—Enhances vocals for TV audio. This setting is good for watching news broadcasts.
 - **Custom**—Lets you manually adjust sound settings.


Note: You can also press **AUDIO** to select the audio mode.

- **Balance**—Adjusts the balance between the left and right audio channels.
- **Bass**—Adjusts the low sounds.
- **Treble**—Adjusts the high sounds.
- **TV Speakers**—Selects where to play TV audio. When you connect headphones to your TV, audio plays through both the headphones and the TV speakers. You can select:
 - **Auto** (default setting)—Automatically turns off the TV speakers when you connect a device to the **⏮ / AUDIO OUT** jack. When you disconnect the device, the TV speakers turn on automatically.
 - **On**—Always plays the audio through the TV speakers. If a device is connected to the **⏮ / AUDIO OUT** jack, the audio is played through both the TV speakers and the device.
 - **Off**—Turns off the TV speakers and plays the audio only through the device connected to the **⏮ / AUDIO OUT** jack. If you disconnect the device, the TV speakers remain turned off.



- **Digital Audio Format/Audio Delay**—Adjusts the digital audio sent to an external audio system. You can select:
 - **Audio Format**—Selects the digital audio format sent to an external audio system. You can select:
 - **Pass Thru** (to pass through the original digital audio sound).
 - **PCM** (to output audio in 2-channel stereo).
 - **Audio Delay**—Fine tunes the audio when it is not in sync with the video.
 - **MTS/SAP**—(Analog channels only) Selects the audio mode. You can select:
 - **Mono**—Select this option if there is noise or static on weak stereo broadcasts.
 - **Stereo**—Select this option for programs broadcast in stereo.
 - **SAP**—Select this option to listen to a secondary audio program, if available.
 - **Audio Language**—(Digital channels only) Selects an alternate audio language, if available.
 - **Headphones / Audio Out**—You can use the  / **AUDIO OUT** jack on your TV to connect headphones, a home theater system, soundbar, or external speaker system. When a device is connected to the  / **AUDIO OUT** jack, the TV speakers are muted. You can select:
 - **Headphones/Audio Out Variable**—Select this option to use the remote control that came with your TV to control the audio from headphones, a home theater system, a soundbar, or an external speaker system you connected to the  / **AUDIO OUT** jack.
 - **Audio Out Fixed**—Select this option to use the remote control that came with the home theater system, soundbar, or external speaker system you connected to the  / **AUDIO OUT** jack to control the audio.
 - **Reset Audio Settings**—Reset all audio settings to factory defaults.
- 3 Press **MENU** to return to the previous menu, or press **EXIT** to close the menu.

Selecting the audio out mode

If your TV is on when you connect a device to the  / **AUDIO OUT** jack on your TV, a screen opens where you select which audio out mode you want to use.

- 1 Connect headphones, a home theater system, soundbar, or external speaker system to the  / **AUDIO OUT** jack on your TV.





- 2 Select an audio out mode. You can select:
 - **Headphones / Audio Out Variable**—Select this option to use the remote control that came with your TV to control the audio from headphones, a home theater system, or a soundbar you connected to the  / **AUDIO OUT** jack.
 - **Audio Out Fixed**—Select this option to use the remote control that came with the home theater system, soundbar, or external speaker system you connected to the  / **AUDIO OUT** jack to control the audio.

Playing TV audio only

You can turn off the picture on your TV and listen to the program audio only.

- 1 Select the **CHANNELS** menu, then select **Audio Only**.

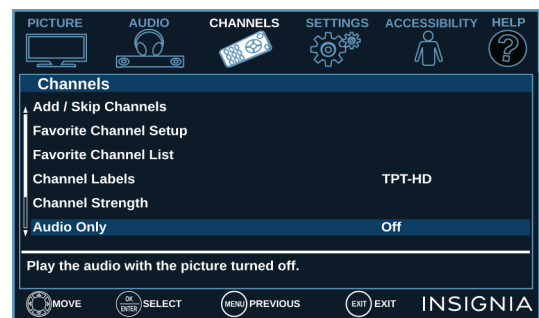

- 2 Select **On**.
- 3 Press **MENU**, **ENTER**, or  to return to the previous menu, or press **EXIT** to close the menu.


Notes:

- The picture turns off in about five seconds.
- **Audio Only** works only when the input source is TV, and your TV is receiving a broadcast signal.
- To exit audio only mode, press any button. When you exit audio only mode, the **Audio Only** option is automatically reset to **Off**.

Changing channel settings

You can scan for channels, control which channels are displayed, set up and view favorite channels, change channel labels, and check a digital channel's signal strength.

- 1 Select the **CHANNELS** menu.

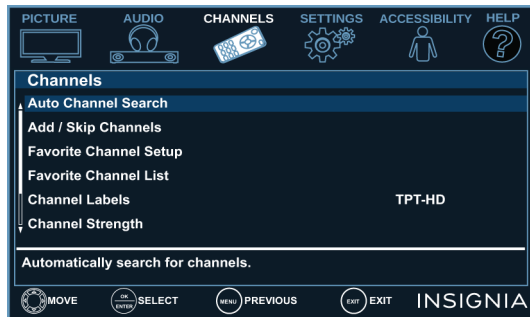

- 2 Select an option, then adjust the setting. You can select:

- **Auto Channel Search**—Lets you scan for channels with signals. Your TV stores the channel information in the channel list. When you press **CH** \wedge or **CH** \vee , your TV goes to the next or previous channel in the channel list. You should scan for channels if the TV signal source changes, for example you change from an outdoor antenna to cable TV (no box). You can select **Cable / Satellite Box**, **Cable from the wall**, or **Antenna**.

Notes:

- If you have a cable or satellite box, you do not need to scan for channels.
- You can press **EXIT** to stop the auto channel search, but you will need to run the auto channel search again to create a channel list.

- **Add/Skip Channels**—Lets you hide channels in the channel list. When you press **CH** \wedge or **CH** \vee , your TV skips the hidden channels. You can still tune to a hidden channel by pressing the number buttons for the channel.

Notes:

- If you highlight a channel in the list, your TV displays the channel in the background.
- A channel with a filled circle to the left is not hidden. A channel with an empty circle to the left is hidden.
- If the list has more than one page, press \blacktriangle or \blacktriangledown to scroll through the pages.

- **Favorite Channel Setup**—Lets you create a list of favorite channels so you can quickly browse through your favorite channels.

Notes:

- If you highlight a channel in the list, your TV displays the channel in the background.
- To remove a channel from the favorites list, highlight the channel, then press **ENTER**. The filled circle is replaced with an empty circle and the channel is removed from the list.
- If the list has more than one page, press \blacktriangle or \blacktriangledown to scroll through the pages.

- **Favorite Channel List**—Lets you select a channel from the favorite channel list.

Note: You can also press **FAVORITE** to select a channel.

- **Channel Labels**—Lets you add or change a channel label to make it easier to identify the channel.
 - **Channel Strength**—Lets you check the digital signal strength to determine if you need to adjust your antenna or digital cable input. The higher the signal strength, the less likely you are to experience picture degradation.
- 3 Press **MENU** to return to the previous menu, or press **EXIT** to close the menu.

Setting parental controls

Parental controls let you prevent your children from watching inappropriate material on TV. When set, parental controls read the rating of the program (with some exceptions, such as news and sports) and deny access to programs that exceed the ratings level you select. To watch programs that exceed the selected rating, you must enter a password.

- 1 Select the **SETTINGS** menu, then select **Parental Controls**.



- 2 Use the number buttons to enter your parental controls password. The default password is **0000**.



Notes:

- You should change the default password to a number you can remember.
- If you forget your password, enter **9999**.

- 3 Select an option, then adjust the setting. You can select:
- **Block Unrated TV**—Some TV programs, such as news and sports shows are not rated. When **Block Unrated TV** is turned on, TV programs that do not have ratings are blocked. When you try to watch a blocked program, you are prompted to enter the parental controls password.
 - **USA Parental Locks**—Lets you block U.S. TV shows based on ratings and content types and movies based on MPAA ratings.

Note: When you block a rating, that rating and all higher ratings are blocked.

U.S. TV RATINGS	
NONE	Not rated
TV-Y	All children
TV-Y7	Suitable for children 7 and older
TV-G	General audiences
TV-PG	Parental guidance suggested
TV-14	Parental guidance strongly suggested
TV-MA	Mature audiences only

U.S. TV CONTENT RATINGS

All	All ratings are blocked
FV	Fantasy violence
L	Strong language
S	Sexual situations
V	Violence
D	Suggestive dialog

U.S. MOVIE (MPAA) RATINGS

None	Movie not rated
G	General audiences
PG	Parental guidance suggested
PG-13	Suitable for children 13 and older
R	Parental guidance suggested for children under 17
NC-17	Not suitable for children under 17
X	Adults only

- **Canadian Parental Locks**—Lets you block Canadian TV shows based on ratings and content types.

Note: When you block a rating, that rating and all higher ratings are blocked.

CANADIAN ENGLISH RATINGS

E	Exempt programming
C	Suitable for all children
C8+	Suitable for children 8 and older
G	General audiences
PG	Parental guidance suggested
14+	Suitable for children 14 and older
18+	Adult only

CANADIAN FRENCH RATINGS

E	Exempt programming
---	--------------------

Locking the power button on your TV

When the button lock is turned **On**, the power button on your TV is locked, and you can only turn your TV on or off or change the video input source using the remote control.

- 1 Select the **SETTINGS** menu, then select **Button Lock**.



- 2 Select **On** (locks the power button) or **Off** (unlocks the power button).
- 3 Press **MENU** to return to the previous menu, or press **EXIT** to close the menu.

Using closed captioning

Closed captioning displays a text version of the TV program audio or displays information provided by the broadcaster.

You can turn closed captioning on or off, select the analog or digital captioning mode, and change the style of the digital captioning display.

- 1 Select the **ACCESSIBILITY** menu, then select **Closed Caption**.



- 2 Select an option, then adjust the setting. You can select:
 - **Caption Control**—Turns captioning on or off. You can select **CC Off** (turns off closed captioning), **CC On** (turns on closed captioning), or **CC on when mute** (turns on closed captioning when the sound is muted).

Note: You can also press **CC** to turn closed captioning on, off, or on when mute.

- **Analog Caption**—Lets you select the captioning mode for analog channels.

The **CC1** mode usually displays a text version of the TV program audio in a small banner. The other CC modes display information provided by the broadcaster. You can select **CC1** through **CC4**.


The **Text** modes display information in a box that covers half of the screen. You can select **Text1** through **Text4**.

- **Digital Caption**—Lets you select the captioning mode for digital channels. Digital channels usually have one or more closed captioning modes. The **CS1** mode usually displays a text version of the TV program audio in a small banner. The other **CS** modes display information provided by the broadcaster. You can select **CS1** through **CS6**.
 - **Digital CC Settings**—Lets you customize how the digital captioning appears on the screen. Set **Style** to **Custom**, then select a style and adjust the setting.
- 3 Press **MENU** to return to the previous menu, or press **EXIT** to close the menu.

Adjusting time settings

You can set the clock or turn on the sleep timer.

- 1 Select the **SETTINGS** menu, then select **Time**.

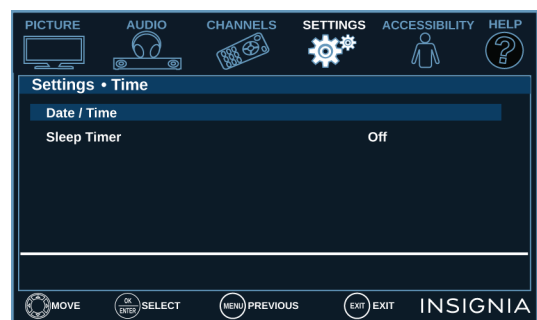

- 2 Select an option, then adjust the setting. You can select:

- **Date/Time**—Lets you set the time zone, date, and time.

If you skipped the steps in the *Easy Setup* wizard for setting the date and time or if you move your TV to a different time zone, you need to reset the clock to the correct time.

- **Sleep Timer**—Let you specify the amount of time before your TV automatically turns off. You can select **Off**, **5**, **10**, **15**, **30**, **60**, **90**, **120**, **180**, or **240** minutes.

Note: You can also press **SLEEP** to set the sleep timer.


- 3 Press **MENU** to return to the previous menu, or press **EXIT** to close the menu.

Adjusting menu settings

You can adjust how the TV menus look by:

- Selecting the menu language
- Turning the Input Sensor on or off
- Labeling an input source.

1 Select the **SETTINGS** menu.

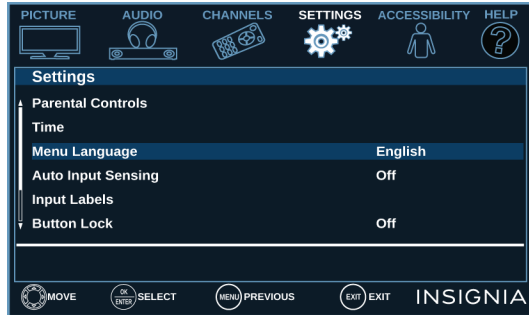

2 Select an option, then adjust the setting. You can select:

- **Menu Language**—Your TV can display the on-screen menu in English, French, or Spanish. When you set up your TV for the first time, you selected the language. You can change the menu language to a different language.
- **Auto Input Sensing**—When the Input Sensor feature is turned on, your TV automatically detects which video jacks have devices connected to them and turned on. Your TV uses this information to determine what options you can select on the **INPUT SOURCE** list when you press **INPUT**.
- **Input Labels**—You can add a label to an input source to make it easier to identify. The next time you press **INPUT**, your label appears in the **INPUT SOURCE** list.

3 Press **MENU** to return to the previous menu, or press **EXIT** to close the menu.

2 Select an option, then adjust the setting. You can select:

- **Voice Guide**—Audibly narrates menu selections and some remote control functions. You can select **On** or **Off**.

Note: The **Voice Guide** option is only available in the English language.

- **Closed Caption**—Displays a text version of the TV program audio or displays information provided by the broadcaster. See [Using closed captioning](#) on page 33 for instructions about using closed captioning features.
 - **Audio Language**—(Digital channels only) Selects an alternate audio language, if available.
 - **Video Description**—Audibly narrates key visual elements in TV programs (not available on all broadcasts). You can select **On** or **Off**.
 - **Learn How To Use Remote Control**—Provides information about using the remote control.
 - **Reset Accessibility Settings**—Resets all accessibility settings to factory mode.
- 3 Press **MENU** to return to the previous menu, or press **EXIT** to close the menu.

Notes:

- The **Voice Guide** option is only available in the English language.
- For more information about accessibility, call Customer Care at 1-877-467-4289 (U.S. and Canada) or 01-800-237-8289 (Mexico).

Maintaining

- Do not use your TV in areas that are too hot or too cold, because the cabinet may warp or the screen may malfunction. Your TV works best in temperatures that are comfortable to you.
- Storage temperatures are 32° to 122°F (0° to 50°C).
- Working temperatures are 41° to 104°F (5° to 40°C).
- Do not place your TV in direct sunlight or near a heat source.

Cleaning the TV cabinet

Clean the cabinet with a soft, lint-free cloth. If the cabinet is especially dirty, moisten a soft, lint-free cloth in a weak detergent solution, squeeze the excess moisture from the cloth, then wipe the cabinet with the cloth. Use a clean cloth to dry the cabinet.

Cleaning the TV screen

Clean the screen with a soft, lint-free cloth.

Adjusting accessibility settings

Your TV provides audio descriptions of menus and some remote control functions. Depending on the broadcaster, audio narration of key elements in programs may also be available.

1 Select the **ACCESSIBILITY** menu.



Troubleshooting

Use the following troubleshooting information to solve common problems.


Troubleshooting topics include:

- [Using the HELP menu](#)
- [Video and audio problems](#)
- [Remote control problems](#)
- [General problems](#)
- [INlink \(CEC-compatible\) device problems](#)

Using the HELP menu

The *HELP* menu provides information about frequently asked questions.

1 Select the **HELP** menu.

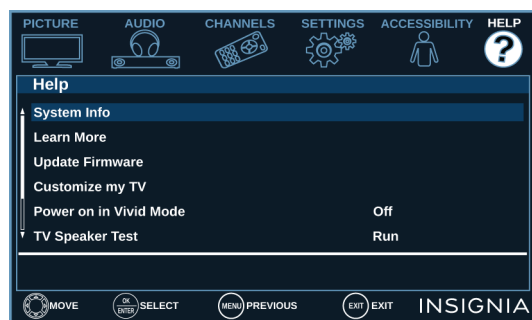

2 Select an option. You can select:

- **System Info**—Displays system information during troubleshooting. If your TV uses open source code, press **ENTER** to display the open source code information.

Video and audio

PROBLEM	SOLUTION
Picture does not fill the screen. There are black bars around the picture.	<ul style="list-style-type: none"> • Change the aspect ratio. See the Aspect Ratio option in Adjusting the TV picture on page 27.
No picture (screen is not lit) and no sound.	<ul style="list-style-type: none"> • Press ⏻ on the TV or the remote control. • Make sure that the Audio Only option is set to Off. See Playing TV audio only on page 30. • Make sure that the video cables are connected correctly and securely to your TV. • Adjust the contrast and brightness. See Adjusting the TV picture on page 27. • Make sure that the power cord is plugged into a working outlet. • Press INPUT and make sure that the correct video input source is selected. See Selecting the video input source on page 23. • Try another channel. The station may be experiencing problems. • Make sure that the incoming signal is compatible. • Make sure that the antenna or cable TV is connected correctly and securely. See Connecting a cable or satellite box on page 12 or Connecting an antenna or cable TV (no box) on page 13. • Check the closed caption settings. Some TEXT modes can block the screen. See Using closed captioning on page 33.

- **Learn More**—Displays remote control codes and information about connecting a soundbar.
- **Update Firmware**—If your TV is behaving oddly and you have tried all the solutions in the troubleshooting pages, lets you update your TV's firmware. To update the TV firmware, you need a:
 - Computer with an available USB port
 - High-speed Internet connection
 - USB flash drive

CAUTIONS:

- Make sure that you have tried all other solutions before you upgrade the firmware.
- While the firmware is updating, do not turn off your TV.

Notes:

- Firmware updates may not be available for your model.
- If you see a message that says the firmware file is incorrect, make sure that you have downloaded the correct file for your model.
- If you see a message that says the update failed or the TV screen is blank and the power LED blinks red then blue, turn your TV off and on, then run the upgrade again.

- **Customize my TV**—If you did not complete the customization part of the *Easy Setup* wizard the first time you turned on your TV, run the wizard again to customize settings.
- **TV Speaker Test**—Tests your TV's speakers to make sure that they are working correctly.
- **Reset to Default**—Resets all settings (except parental controls) to the factory defaults and runs the *Easy Setup* wizard. See [Turning on your TV for the first time](#) on page 20.

PROBLEM	SOLUTION
Dark, poor, or no picture (screen is lit), but sound is good.	<ul style="list-style-type: none"> • Try another channel. The station may be experiencing problems. • Make sure that the antenna or cable TV is connected correctly and securely. See Connecting a cable or satellite box on page 12 or Connecting an antenna or cable TV (no box) on page 13. • Adjust the brightness. See Adjusting the TV picture on page 27. • Press PICTURE to change to a different picture mode. See Adjusting the TV picture on page 27. • If you are using an antenna, the digital channel signal may be low. To check the digital channel signal strength, see the Channel Strength option in Changing channel settings on page 31. • If you are using an antenna and the signal strength is low, adjust the antenna or use a highly directional outdoor antenna or set-top antenna with a built-in amplifier. • Make sure that the video cables are connected correctly and securely to your TV. • The video cable(s) you are using may be bad. Try a new set.
No color, dark picture, or color is not correct.	<ul style="list-style-type: none"> • Try another channel. The station may be experiencing problems. • Adjust the color settings. See Adjusting the TV picture on page 27. • Make sure that the video cables are connected correctly and securely to your TV. • Make sure that the antenna or cable TV is connected correctly and securely. See Connecting a cable or satellite box on page 12 or Connecting an antenna or cable TV (no box) on page 13. • If you are using an antenna, the digital channel signal may be low. To check the digital channel signal strength, see Channel Strength option in Changing channel settings on page 31. • If you are using an antenna and the signal strength is low, adjust the antenna or use a highly directional outdoor antenna or set-top antenna with a built-in amplifier.
Only snow (noise) appears on the screen.	<ul style="list-style-type: none"> • Try another channel. The station may be experiencing problems. • Make sure that the antenna or cable TV is connected correctly and securely. See Connecting a cable or satellite box on page 12 or Connecting an antenna or cable TV (no box) on page 13. • If you are using an antenna, the digital channel signal may be low. To check the digital channel signal strength, see Channel Strength option in Changing channel settings on page 31. • If you are using an antenna and the signal strength is low, adjust the antenna or use a highly directional outdoor antenna or set-top antenna with a built-in amplifier.
Picture quality is good on some channels and poor on others. Sound is good.	<ul style="list-style-type: none"> • The problem may be caused by a poor or weak signal from the broadcaster or cable TV provider. • If you connect to cable TV without a set-top box and experience poor picture quality, you may need to install a set-top box to improve signal reception and picture quality. Contact your cable TV provider about upgrading to a set-top box.

PROBLEM	SOLUTION
Dotted lines or stripes appear on the screen.	<ul style="list-style-type: none"> Make sure that the antenna or cable TV is connected correctly and securely. See Connecting a cable or satellite box on page 12 or Connecting an antenna or cable TV (no box) on page 13. If you are using an antenna, the digital channel signal may be low. To check the digital channel signal strength, see Channel Strength option in Changing channel settings on page 31. If you are using an antenna and the signal strength is low, adjust the antenna or use a highly directional outdoor antenna or set-top antenna with a built-in amplifier. Make sure that the video cables are connected correctly and securely to your TV. The video cable(s) you are using may be bad. Try a new set. Other devices (for example, a surround sound receiver, external speakers, fans, or hair dryers) may be interfering with your TV. Try turning off one device at a time to determine which device is causing interference. After you have determined which device is causing interference, move it further from the TV to eliminate the interference.
The picture has a few bright or dark spots.	<ul style="list-style-type: none"> A few bright or dark spots on an LCD screen is normal. It does not affect the operation of your TV.
Video description or voice guide does not work.	<ul style="list-style-type: none"> Make sure that your TV is not muted and the volume is turned up. Make sure that the options listed under the Accessibility menu are turned on. See Adjusting accessibility settings on page 34. Video descriptions are not available on all broadcasts. Some remote functions are not narrated.
Good picture, but no sound.	<ul style="list-style-type: none"> Increase the volume. Make sure that the sound is not muted. Make sure that you do not have headphones connected. When headphones are connected, no sound comes from the TV speakers. Change to a different audio mode. See the Audio Mode option in Adjusting sound settings on page 29. If you are using a home theater system, soundbar, or external speaker system, make sure that it is turned on and is not muted. If you are using a home theater system, soundbar, or external speaker system, make sure that you have selected the correct output mode. If you are using a home theater system, soundbar, or external speaker system and have connected it with a digital audio cable, select Digital Audio Format/Audio Delay on the <i>Audio</i> menu, then set Audio Format to PCM. See the Digital Audio Format/Audio Delay option in Adjusting sound settings on page 29. Make sure that the audio cables are connected correctly and securely to your TV. Make sure that the antenna or cable TV is connected correctly and securely. See Connecting a cable or satellite box on page 12 or Connecting an antenna or cable TV (no box) on page 13. If you are using an antenna, the digital channel signal may be low. To check the digital channel signal strength, see Channel Strength option in Changing channel settings on page 31. If you are using an antenna and the signal strength is low, adjust the antenna or use a highly directional outdoor antenna or set-top antenna with a built-in amplifier. The audio cables you are using may be bad. Try a new set.
Poor picture.	<ul style="list-style-type: none"> Make sure that the room is not too bright. Light reflecting off the screen can make the picture difficult to see. If an S-VHS camera or a camcorder is connected while another connected device is turned on, the picture may be poor. Turn off one or more devices.
Good sound, but poor color.	<ul style="list-style-type: none"> Adjust the contrast, color, and brightness settings. See Adjusting the TV picture on page 27.

PROBLEM	SOLUTION
Audio noise.	<ul style="list-style-type: none"> Other devices (for example, a surround sound receiver, external speakers, fans, or hair dryers) may be interfering with your TV. Try turning off one device at a time to determine which device is causing interference. After you have determined which device is causing interference, move it further from the TV to eliminate the interference.
No output from one of the speakers.	<ul style="list-style-type: none"> Adjust the audio balance. See Adjusting sound settings on page 29. Test the TV's speakers. See the TV Speaker Test option in Using the HELP menu on page 35. If one or both of the speakers fails, try one of the following solutions: <ul style="list-style-type: none"> Make sure that the audio cables are connected correctly and securely to your TV. Make sure that the audio cables are connected to the AUDIO OUT jacks on the connected device. Try a different set of audio cables. Make sure that the sound on the connected device is not muted. Try connecting the device to a different TV. If you do not hear sound, the problem is with the device.
After images appear.	<ul style="list-style-type: none"> Do not display a still image, such as a logo, game, or computer image, for an extended period of time. This can cause a permanent after-image to be burned into the screen. This type of damage is not covered by your warranty.

Remote control

PROBLEM	SOLUTION
Remote control does not work.	<ul style="list-style-type: none"> Make sure that the power cord is plugged into a working outlet. Make sure that there are no obstructions between the remote control and the remote control sensor on the front of the TV. Point the remote control directly at the remote control sensor on your TV. The supplied batteries are wrapped tightly in clear plastic. Make sure that you have removed this plastic from the batteries. Make sure that the batteries are installed correctly. Replace dead batteries with new batteries.
Trouble programming your existing universal remote control.	<ul style="list-style-type: none"> See instructions in Programming universal remote controls on page 19. Codes are subject to change. For up-to-date codes, go to Viewing universal remote control codes on page 19 or visit www.insigniaproducts.com/remotecodes Replace dead batteries with new batteries. Refer to the User Guide that accompanied your universal remote control and contact the manufacturer if problems persist.

General

PROBLEM	SOLUTION
No power.	<ul style="list-style-type: none"> Make sure that the power cord is plugged into a working outlet. Unplug the power cord, wait 60 seconds, then plug the cord back in and turn on your TV. Other devices (for example, a surround sound receiver, external speakers, fans, or hair dryers) may be interfering with your TV. Try turning off one device at a time to determine which device is causing interference. After you have determined which device is causing interference, move it further from the TV to eliminate the interference.
"No signal" error message is displayed.	<ul style="list-style-type: none"> Press INPUT and make sure that you have selected the correct input for the device or service you are trying to use. If you are using a cable or satellite box, use the remote that came with that box to change channels.
After Auto Channel Search, there are no channels.	<ul style="list-style-type: none"> Reception can vary by channel depending on the broadcast power level of a given station. Contact your cable or satellite TV provider. Make sure that the antenna or cable/satellite TV is connected securely to your TV. Try replacing the cable between the antenna/cable or cable/satellite box and your TV.
When I press INPUT , I cannot select my device (it is grayed out).	<ul style="list-style-type: none"> Turn on the device. Your TV automatically detects and displays which video jacks have devices connected to them when the devices are turned on. Turn off Auto Input Sensing. See Adjusting menu settings on page 34.
One or more channels do not display.	<ul style="list-style-type: none"> Make sure that the channels are not blocked. See Setting parental controls on page 31. Make sure that the channels are not hidden. The channel may have been deleted from the channel list. You can tune to the channel by pressing the number buttons or you can add the channel back to the channel list. See the Add/Skip Channels option in Changing channel settings on page 31. If you are using a cable or satellite box, use the remote that came with that box to change channels. Press INPUT and make sure that you have selected the correct input for the device or service you are trying to use. If you are using an antenna, the digital channel signal may be low. To check the digital channel signal strength, see the Channel Strength option in Changing channel settings on page 31.
Password is lost.	<ul style="list-style-type: none"> Enter 9999 to access parental controls, then set a new password. See the Change Password option in Changing channel settings on page 31.
Some settings cannot be accessed.	<ul style="list-style-type: none"> If a setting is grayed, the setting is not available in the current video input mode (for example TV mode). Change to a different video input source. See Selecting the video input source on page 23.
TV cabinet creaks.	<ul style="list-style-type: none"> When the TV is in use, the temperature rises naturally and may cause the cabinet to expand or contract which can cause a creaking noise. This is not a malfunction.
⏻ button does not work.	<ul style="list-style-type: none"> Make sure that the Button Lock option is set to Off. See Locking the power button on your TV on page 33. Unplug the power cord, wait a few seconds, then plug the cord back in and turn on your TV.

PROBLEM	SOLUTION
TV keeps turning off.	<ul style="list-style-type: none"> Make sure that the sleep timer is not turned on. See the Sleep Timer option in Adjusting time settings on page 33.
A retail banner is displayed.	<ul style="list-style-type: none"> You selected Store Display Mode when you ran the <i>Easy Setup</i> wizard. Run the <i>Easy Setup</i> wizard and select Home User Mode on the <i>Viewing Environment</i> screen. See the Customize my TV option in Using the HELP menu on page 35.

INlink (CEC-compatible) device

PROBLEM	SOLUTION
My TV is not displaying the video from the connected CEC device.	<ul style="list-style-type: none"> Make sure that the HDMI cable is connected securely to your TV and the device. Make sure that the device is connected to your TV with an HDMI cable. Make sure that the device is a CEC device. See the documentation that came with the device for more information. Press INPUT and make sure that the correct video input source is selected. See Selecting the video input source on page 23. Make sure that the INlink feature is turned on. See the INlink Control option in Using INlink on page 25. Try adjusting the TV picture. See Adjusting the TV picture on page 27.
My TV is not playing the audio from the connected CEC device.	<ul style="list-style-type: none"> Make sure that the HDMI cable is connected securely to your TV and the device. Make sure that the device is connected to your TV with an HDMI cable. Make sure that the device is a CEC device. See the documentation that came with the device. Make sure that the TV volume is turned up and not muted. Try adjusting the TV sound. See Adjusting sound settings on page 29. Make sure that the TV speakers are turned on and not muted. See Adjusting sound settings on page 29. Make sure that the INlink feature is turned on. See INlink Control option in Using INlink on page 25. If you have connected an HDMI CEC audio receiver, adjust the volume on the receiver. When your TV detects an audio receiver, the TV speakers turn off and sound plays through receiver speakers only. If you are using a home theater system, soundbar, or external speaker system, make sure that it is turned on and is not muted. If you are using a home theater system, soundbar, or external speaker system, make sure that you have selected the correct output mode. If you are using a home theater system, soundbar, or external speaker system and have connected it with a digital audio cable, select Digital Audio Format/Audio Delay on the <i>Audio</i> menu, then set Audio Format to PCM. See the Digital Audio Format/Audio Delay option in Adjusting sound settings on page 29.

PROBLEM	SOLUTION
My TV's remote control does not control the device.	<ul style="list-style-type: none"> • Make sure that there are no obstructions between the remote control and the remote control sensors on your TV and the device. • Depending on the device, all the buttons may not work. • After you switch to an INlink device, use the remote control that came with the device to control playback. • Make sure that the INlink feature is turned on. See INlink Control option in Using INlink on page 25. • If you are trying to control the volume on an HDMI CEC audio receiver using your TV remote control, make sure that the TV Speakers option on the <i>Audio</i> menu is set to On. See Adjusting sound settings on page 29. • If you are trying to control the volume on an HDMI CEC audio receiver using your TV remote control, make sure that the Audio Receiver option on the <i>INlink</i> menu is set to On. See the Audio Receiver option in Using INlink on page 25. • The device may not support this feature. See the documentation that came with the device for more information.
The device does not show up in the INlink Device list.	<ul style="list-style-type: none"> • Make sure that the device is turned on. • Make sure that the HDMI cable is connected securely to your TV and the device. • Make sure that the device is connected to your TV with an HDMI cable. • Make sure that the INlink feature is turned on. See the INlink Control option in Using INlink on page 25. • Make sure that the device is a CEC device. See the documentation that came with the device.
My device does not turn off when I turn off my TV.	<ul style="list-style-type: none"> • Make sure that the INlink feature is turned on. See the INlink Control option in Using INlink on page 25. • Make sure that Device Auto Power Off is set to On on the <i>INlink</i> menu. See the Device Auto Power Off option in Using INlink on page 25. • The device may not support this feature. See the documentation that came with the device for more information.
My TV does not turn on when I turn on my device.	<ul style="list-style-type: none"> • Make sure that the INlink feature is turned on. See the INlink Control option in Using INlink on page 25. • Make sure that TV Auto Power On is set to On on the <i>INlink</i> menu. See the TV Auto Power On option in Using INlink on page 25. • The device may not support this feature. See the documentation that came with the device for more information.
The Audio Receiver setting on the <i>INlink</i> menu keeps turning back on after it is turned off.	<ul style="list-style-type: none"> • When Audio Receiver is set to Off and INlink Control is set to On and you make an adjustment to the audio receiver (for example, turn the volume knob or press a button), Audio Receiver is automatically set to On. To prevent this from happening, turn off the INlink feature. See the INlink Control option in Using INlink on page 25.
Two volume bars appear when adjusting the volume.	<ul style="list-style-type: none"> • When you adjust the volume on the audio receiver or with the TV remote control, a double volume bar appears, one for the TV volume and one for the audio receiver volume.
I cannot select the Root Menu option on the INlink menu. OR The device's root menu does not open when I select Root Menu on the <i>INlink</i> menu.	<ul style="list-style-type: none"> • The device may not support this feature. See the documentation that came with the device for more information.

Note: If the problem is not solved by using these troubleshooting instructions, turn off your TV, then turn it on again.

Legal notices

FCC Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Cables

Connections to this device must be made with shielded cables with metallic RF/EMI connector hoods to maintain compliance with FCC Rules and Regulations.

Canadian Notice

Analog and Digital Television Receiving Apparatus
– Appareil de réception de télévision analogique et numérique,
Canada BETS-7 / NTMR-7

IC Statement

This device complies with Industry Canada licence—exempt RSS standard(s).

Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

This equipment complies with IC radiation exposure limits set forth for an uncontrolled environment.

Dolby License Notice and Trademark Acknowledgement



Manufactured under license from Dolby Laboratories. Dolby, Dolby Audio, and the double-D symbol are trademarks of Dolby Laboratories Licensing Corporation.

HDMI



HDMI, the HDMI logo, and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC.

Open Source

Font name: Arimo

Version 1.23

Copyright 2013 Steve Matteson

Licensed under the Apache License, Version 2.0 (the "License"); you may not use this file except in compliance with the License. You may obtain a copy of the License at <http://www.apache.org/licenses/LICENSE-2.0>

Unless required by applicable law or agreed to in writing, software distributed under the License is distributed on an "AS IS" BASIS, WITHOUT WARRANTIES OR CONDITIONS OF ANY KIND, either express or implied. See the License for the specific language governing permissions and limitations under the License.

If you require additional information please call the Insignia support line at 1-877-467-4289.

Copyright

INSIGNIA is a trademark of Best Buy and its affiliated companies.

Distributed by Best Buy Purchasing, LLC

7601 Penn Ave South, Richfield, MN 55423 U.S.A.

©2022 Best Buy. All rights reserved.

ONE-YEAR LIMITED WARRANTY

Definitions:

The Distributor* of Insignia branded products warrants to you, the original purchaser of this new Insignia-branded product ("Product"), that the Product shall be free of defects in the original manufacturer of the material or workmanship for a period of one (1) year from the date of your purchase of the Product ("Warranty Period").

For this warranty to apply, your Product must be purchased in the United States or Canada from a Best Buy branded retail store or online at www.bestbuy.com or www.bestbuy.ca and is packaged with this warranty statement.

How long does the coverage last?

The Warranty Period lasts for 1 year (365 days) from the date you purchased the Product. Your purchase date is printed on the receipt you received with the Product.

What does this warranty cover?

During the Warranty Period, if the original manufacture of the material or workmanship of the Product is determined to be defective by an authorized Insignia repair center or store personnel, Insignia will (at its sole option): (1) repair the Product with new or rebuilt parts; or (2) replace the Product at no charge with new or rebuilt comparable products or parts. Products and parts replaced under this warranty become the property of Insignia and are not returned to you. If service of Products or parts are required after the Warranty Period expires, you must pay all labor and parts charges. This warranty lasts as long as you own your Insignia Product during the Warranty Period. Warranty coverage terminates if you sell or otherwise transfer the Product.

How to obtain warranty service?

If you purchased the Product at a Best Buy retail store location or from a Best Buy online website (www.bestbuy.com or www.bestbuy.ca), please take your original receipt and the Product to any Best Buy store. Make sure that you place the Product in its original packaging or packaging that provides the same amount of protection as the original packaging.

To obtain warranty service, in the United States and Canada call 1-877-467-4289. Call agents may diagnose and correct the issue over the phone.

Where is the warranty valid?

This warranty is valid only in the United States and Canada at Best Buy branded retail stores or websites to the original purchaser of the product in the country where the original purchase was made.

What does the warranty not cover?

This warranty does not cover:

- Food, beverage, and or medicine loss/spoilage.
- Customer instruction/education
- Installation
- Set up adjustments
- Cosmetic damage

- Damage due to weather, lightning, and other acts of God, such as power surges
- Accidental damage
- Misuse
- Abuse
- Negligence
- Commercial purposes/use, including but not limited to use in a place of business or in communal areas of a multiple dwelling condominium or apartment complex, or otherwise used in a place of other than a private home.
- Modification of any part of the Product, including the antenna
- Display panel damaged by static (non-moving) images applied for lengthy periods (burn-in).
- Damage due to incorrect operation or maintenance
- Connection to an incorrect voltage or power supply
- Attempted repair by any person not authorized by Insignia to service the Product
- Products sold "as is" or "with all faults"
- Consumables, including but not limited to batteries (i.e. AA, AAA, C etc.)
- Products where the factory applied serial number has been altered or removed
- Loss or Theft of this product or any part of the product
- Display panels containing up to three (3) pixel failures (dots that are dark or incorrectly illuminated) grouped in an area smaller than one tenth (1/10) of the display size or up to five (5) pixel failures throughout the display. (Pixel based displays may contain a limited number of pixels that may not function normally.)
- Failures or Damage caused by any contact including but not limited to liquids, gels or pastes.

REPAIR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS YOUR EXCLUSIVE REMEDY FOR BREACH OF WARRANTY. INSIGNIA SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR THE BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT, INCLUDING, BUT NOT LIMITED TO, LOST DATA, LOSS OF USE OF YOUR PRODUCT, LOST BUSINESS OR LOST PROFITS. INSIGNIA PRODUCTS MAKES NO OTHER EXPRESS WARRANTIES WITH RESPECT TO THE PRODUCT, ALL EXPRESS AND IMPLIED WARRANTIES FOR THE PRODUCT, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTIES OF AND CONDITIONS OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE WARRANTY PERIOD SET FORTH ABOVE AND NO WARRANTIES, WHETHER EXPRESS OR IMPLIED, WILL APPLY AFTER THE WARRANTY PERIOD. SOME STATES, PROVINCES AND JURISDICTIONS DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS, WHICH VARY FROM STATE TO STATE OR PROVINCE TO PROVINCE.

Contact Insignia:

1-877-467-4289

www.insigniaproducts.com

INSIGNIA is a trademark of Best Buy and its affiliated companies.

*Distributed by Best Buy Purchasing, LLC

7601 Penn Ave South, Richfield, MN 55423 U.S.A

©2022 Best Buy. All rights reserved.

INSIGNIA™

If the power cord is damaged, it must be replaced by the manufacturer or its service agent or qualified personnel to avoid risk.

For product inquiries or accessibility assistance, please contact us with the information below:

1-877-467-4289

www.insigniaproducts.com

INSIGNIA is a trademark of Best Buy and its affiliated companies.

Distributed by Best Buy Purchasing, LLC

7601 Penn Ave South, Richfield, MN 55423 U.S.A.

©2022 Best Buy. All rights reserved.

V5 ENGLISH
22-0203