

QUICK SETUP GUIDE

Active Stylus

NS-TS3AIEW24


PACKAGE CONTENTS

- Stylus
- USB-C cable
- Replaceable tip
- Quick Setup Guide

WARNING: Keep away from young children.
The removable tip is a swallowing hazard.

Before using your new product, please read these instructions to prevent any damage.

FEATURES

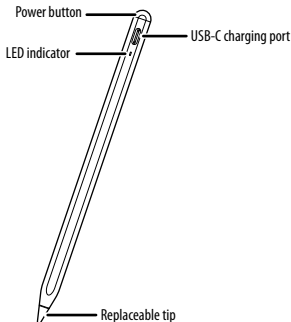

USING YOUR STYLUS

Turning on your stylus

Double-click the power button. The stylus turns on and the LED indicator lights to show the current charge level;

- White 60% or higher
- Blue 20% to 60%
- Red 20% or lower

Turning off your stylus

Double-click the power button. The stylus turns off and the indicator LED turns off.

Note: The stylus also turns off automatically after five minutes of inactivity.

Charging your stylus

Connect the stylus to a computer or other charger with the included USB-C cable. The indicator LED blinks red while charging and turns white when fully charged.

 
Note: Your stylus does not support wireless charging.



Note: Your stylus can be magnetically stored on the iPad Pro 12.9-inch (3rd generation or later), iPad Pro 11-inch, iPad Air 5, iPad Air 4, and the iPad mini 6.

REPLACING THE STYLUS TIP

Unscrew the tip counter-clockwise to remove, and screw on clockwise to replace.

**Caution:**

- Do not disassemble or modify the equipment or replace the batteries in the equipment by yourself. Use of incorrect batteries may lead to fire, explosion or other safety accidents.
- Do not expose the equipment and its batteries to high temperatures or use around heating equipment, such as sunlight, heaters, microwave ovens, ovens, or water heaters. Overheating of the battery may cause an explosion.
- If you notice that the battery is discolored, deformed, abnormally hot, or in any way different than normal, turn off your stylus and have the battery replaced.
- Handle the equipment, batteries, and other accessories according to local regulations, and do not treat them as domestic garbage. Battery explosion may occur if the battery is improperly disposed of.
- The equipment should be stored in a clean, cool and dry room, should avoid direct sunlight, to avoid contact with corrosive substance.

COMPATIBLE DEVICES

Compatible with:

iPad Pro 13-inch (M4)
iPad Pro 12.9-inch (6th Generation)
iPad Pro 12.9-inch (5th Generation)
iPad Pro 12.9-inch (4th Generation)
iPad Pro 12.9-inch (3rd Generation)
iPad Pro 11-inch (M4)
iPad Pro 11-inch (4th Generation)
iPad Pro 11-inch (3rd Generation)
iPad Pro 11-inch (2nd Generation)
iPad Pro 11-inch (1st Generation)
iPad Air 13-inch (M2)
iPad Air 11-inch (M2)
iPad Air (5th Generation)
iPad Air (4th Generation)
iPad Air (3rd Generation)
iPad (10th Generation)
iPad (9th Generation)
iPad (8th Generation)
iPad (7th Generation)
iPad (6th Generation)
iPad mini (6th Generation)
iPad mini (5th Generation)

Not compatible with:

iPad Pro 12.9-inch (1st Generation)
iPad Pro 12.9-inch (2nd Generation)
iPad Pro 10.5-inch
iPad Pro 9.7-inch

Notes:

- All iPad Models must be updated to iOS 12.2 or above.
- If your iPad was paired with an Apple pencil before, unpair it before using the stylus.

LEGAL NOTICES

FCC STATEMENT

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC CAUTION:

It is not responsible for any radio or television interference caused by using other than recommended cables and connectors or by unauthorized changes or modifications to this equipment. Unauthorized changes or modifications could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

IC STATEMENT

CAN ICES-003(B) / NMB-003(B)

ONE-YEAR LIMITED WARRANTY

Visit www.insigniaproducts.com for details.

CONTACT INSIGNIA:

For customer service, call
1-877-467-4289 (U.S. and Canada)
www.insigniaproducts.com

INSIGNIA is a trademark of Best Buy and its affiliated companies. Distributed by Best Buy Purchasing, LLC
7601 Penn Ave South, Richfield, MN 55423 U.S.A.
©2024 Best Buy. All rights reserved.