

COSTWAY
WHERE THERE IS COSTWAY THERE IS HOME

USER'S MANUAL
AIR COOLER
EP23667

THIS INSTRUCTION BOOKLET CONTAINS IMPORTANT SAFETY INFORMATION. PLEASE READ AND KEEP FOR FUTURE REFERENCE.

Please give us a chance to make it right and do better!
Contact our friendly customer service department for first
Replacements for missing or damaged parts will be shipped ASAP!

Follow Costway
Visit us: www.costway.com

COSTWAY
www.costway.com

INTRODUCTION

- Thank you for purchasing our air cooler.
- Each unit has been manufactured to ensure safety and reliability.
- Before first use, read the instructions carefully and keep them for further reference.

DIAGRAM

PERFORMANCE PARAMETERS

Model	Rating Power	Fan power	Max Water Injection Rate	Specification
EP23667	110-120V~ 60Hz	75W	4L	13.10*11.61*24.02in

FUNCTIONS

- Principle of cool humidity:** take cool water from the water tank by pump, after reaching the top, the cool water will flow through the wet pad, then blow off humid cool air around the wet pad by rotated wind wheel. Use the water evaporation principle.
- Mechanical control:** safe and durable, attractive appearance.
- Adjustable speed:** have three speeds, blow at wide angle.
- Cool function:** the ice-crystal refresher and humidifying technology, can cut down the temperature from air vent and raise relative humidity, prevent air drying.
- Deliver wind at wide angle:** swing the blades automatically, deliver wind at horizontal wide angle. Also can swing the blades vertically manually, select the direction discontinuously.

ASSEMBLING AND WATERING

1. Principle of cool humidity: take cool water from the water tank by pump, after reaching the top, the cool water will flow through the wet pad, then blow off humid cool air around the wet pad by rotated wind wheel. Use the water evaporation principle.
2. Mechanical control: safe and durable, attractive appearance.
3. Adjustable speed: have three speeds, blow at wide angle.
4. Cool function: the ice-crystal refresher and humidifying technology, can cut down the temperature from air vent and raise relative humidity, prevent air drying.
5. Deliver wind at wide angle: swing the blades automatically, deliver wind at horizontal wide angle. Also can swing the blades vertically manually, select the direction discontinuously.

THE USE OF ICE-CRYSTAL BOX

The ice-crystal box has a particular feature of keeping cool, it can absorb heat and let the water temperature below the environmental temperature.

Using methods:

- a. Put the ice-crystal boxes into the refrigerator to make sure that they are absolutely.
- b. Use the water tank, draw the water tank, then put a frozen ice-crystal box into it. And push the water tank into the unit. Then lock the water tank.
- c. There have two ice-crystal boxes, so can use circularly.

CAUTION

1. Use as per the rating voltage.
2. Do not repair or remake the appliance by yourself, it should be repaired by the repairmen.
3. Do not operate the appliance with wet hands, in order to avoid damage.
4. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or

COSTWAY
www.costway.com

INTRODUCTION

- Thank you for purchasing our air cooler.
- Each unit has been manufactured to ensure safety and reliability.
- Before first use, read the instructions carefully and keep them for further reference.

DIAGRAM

PERFORMANCE PARAMETERS

Model	Rating Power	Fan power	Max Water Injection Rate	Specification
EP23667	110-120V~ 60Hz	75W	4L	13.10*11.61*24.02in

FUNCTIONS

- ON/OFF MODE:** Connect the plug of air cooler with the power, it will be ready. Rotate the speed button at "1" Low Speed, at "2" Middle Speed, at "3" High Speed, if it 3 speeds, you can adjust the speed according to your need. At "0", it will be OFF.
- SWING:** press the key of swing, the wind swings horizontal automatically. Cancel this function when press again. Swing the blades vertically manually, select the direction discontinuously.
- Cool mode:** press the key of cool, if add frozen ice crystal box, the temperature from air can be lower than 37° after a few minutes. Cancel this function when press again.

A. COOLER MODE:

0—OFF, 1—LOW, 2—MIDDLE, 3—HIGH

B. SWING: Under the swing mode, wind can be swing automatically on left and right and choose the wind up and down by hand.

THE USE OF ICE-CRYSTAL BOX

The ice-crystal box has a particular feature of keeping cool, it can absorb heat and let the water temperature below the environmental temperature.

Using methods:

- a. Put the ice-crystal boxes into the refrigerator to make sure that they are absolutely.
- b. Use the water tank, draw the water tank, then put a frozen ice-crystal box into it. And push the water tank into the unit. Then lock the water tank.
- c. There have two ice-crystal boxes, so can use circularly.

CAUTION

1. Use as per the rating voltage.
2. Do not repair or remake the appliance by yourself, it should be repaired by the repairmen.
3. Do not operate the appliance with wet hands, in order to avoid damage.
4. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or

COSTWAY
www.costway.com

INTRODUCTION

- Pay attention to the level of water tank when add water (map 3)
- The level of water tank should not over "MAX" scale at any time, when humidifying, the total level of water tank should not below "MIN" scale.
- Put ice or ice-crystal box into the water tank if you want to strengthen the efficiency of cooling. But the total level of water tank should not over "MAX" scale.

map1 **map2** **map3**

OPERATION

- ON/OFF MODE:** Connect the plug of air cooler with the power, it will be ready. Rotate the speed button at "1" Low Speed, at "2" Middle Speed, at "3" High Speed, if it 3 speeds, you can adjust the speed according to your need. At "0", it will be OFF.
- SWING:** press the key of swing, the wind swings horizontal automatically. Cancel this function when press again. Swing the blades vertically manually, select the direction discontinuously.
- Cool mode:** press the key of cool, if add frozen ice crystal box, the temperature from air can be lower than 37° after a few minutes. Cancel this function when press again.

A. COOLER MODE:

0—OFF, 1—LOW, 2—MIDDLE, 3—HIGH

B. SWING: Under the swing mode, wind can be swing automatically on left and right and choose the wind up and down by hand.

THE USE OF ICE-CRYSTAL BOX

The ice-crystal box has a particular feature of keeping cool, it can absorb heat and let the water temperature below the environmental temperature.

Using methods:

- a. Put the ice-crystal boxes into the refrigerator to make sure that they are absolutely.
- b. Use the water tank, draw the water tank, then put a frozen ice-crystal box into it. And push the water tank into the unit. Then lock the water tank.
- c. There have two ice-crystal boxes, so can use circularly.

CAUTION

1. Use as per the rating voltage.
2. Do not repair or remake the appliance by yourself, it should be repaired by the repairmen.
3. Do not operate the appliance with wet hands, in order to avoid damage.
4. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or

COSTWAY
www.costway.com

5. Similarly qualified persons in order to avoid a hazard.

6. When the appliance is not in use, unplug and unplug it.

7. Do not insert foreign things to the outlet and inlet, in order to avoid damage.

8. Do not use the appliance near explosive and combustible gas. Avoid long-term direct solar radiation.

9. Use the appliance only on a flat surface.

10. The level of water tank should not over "MAX" scale at any time, when humidifying, the total level of water tank should not below "MIN" scale.

11. Do not turn over the appliance. If it is turned over and there is some water in the body, should unplug the power supply first. Then send it to repair department or after-sale service and overturn.

12. Clean the appliance with a damp cloth lightly. Do not use any type of detergents or solutions.

13. Do not rinse the appliance.

14. Do not knock or shake the body when using, otherwise it may cause stop automatically.

15. The water of tank will easily metamorphose and has odor in summer, please renew the water frequently.

16. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.

17. Children should be supervised to ensure that they do not play with the appliance.

18. To avoid the risk caused by instability of unit, you must fix the unit firmly according to manual book.

19. Do not use this appliance in the immediate surroundings of a bath, a shower or a swimming pool.

20. Should it be necessary to move the unit after the water has been added, roll gently to the required position and activate the bracket the casters.

21. WARNING: Ensure that the fan is switched off from the supply mains before removing the air filter screen.

22. Attention: cut off the power supply when clean the appliance.

ELECTRIC PRINCIPLE DIAGRAM

4

COSTWAY
www.costway.com

CLEANING AND MAINTENANCE

mp1 **mp2** **mp3**

WARNING: Before cleaning the fan, the fan is switched off from the supply mains before removing the air filter screen.

1. Cut off the power supply, unscrew the screw on the top edge of air filter screen, pull the handle of air filter screen, remove it from appliance. Clean the air filter screen with neutral detergent and brush, then clean it with clear water. Finally, reinstall to the appliance. Attention: the screw for the air filter screen must be installed horizontally.
2. Clean the wetted pad (mp1, mp2)

Cut off the power supply, unscrew the screw on the top edge of air filter screen, the air filter screen can be taken out and then take it out, then pull the screw, then clean the wetted pad with neutral detergent and brush, then clean it with clear water. Finally, reinstall the air filter and lock the support with wetted pad. Then screw the screw on the top edge of the air filter screen.

3. Clean with neutral detergent and soft cloth.

Attention: cut off the power supply when clean the appliance, there are a high pressure in the body. Do not leave any water on the surface of control panel.

MALFUNCTION AND MAINTENANCE

Malfunction	Causes	Solution
No action	1. Power is off or poor connection 2. Not rotate the "SPEED" on the control panel.	1. Plug the power cord and make sure it connects 2. Rotate the "SPEED" on the control panel.
Poor effect of dehumidifying	1. Block the air filter screen with dust. 2. Block the air inlet with corpus alienum	1. Breathe the air filter screen 2. Remove the corpus alienum from the air inlet

Repair the appliance under the situation as follows:

1. Abnormal action or no action, it is invalid by the above approach.
2. Abnormal action caused by ingress of water or corpus breakdown.

5

COSTWAY
www.costway.com

Welcome to visit our website and purchase our quality products!

Your suggestions and comments for COSTWAY are really important to us! We sincerely solicit you to go back to our shop and leave a good rating in just a simple click. It would be quite encouraging if you could kindly do so like below:

★★★★★ Great products so far

February 24, 2019
Great product as described. Fast delivery, easy setup, and working without any issues.

With your inspiring support, COSTWAY will be more consistent to offer you EASY SHOPPING EXPERIENCE, GOOD PRODUCTS and EFFICIENT SERVICE!

US office: Fontana, California
UK office: Ipswich

Reward Points

- * Exclusive Customer Service
- * Personalized Recommendations
- * Permanent Shopping Cart
- * Order History

5 Star Rating

We would like to extend our heartfelt thanks to all of our customers for taking time to assemble this product and giving us valuable feedbacks.

THANK YOU

7